

ASSEMBLY INSTRUCTIONS

CVFDR1311

NOT SUPPLIED


PARTS

S.NO.	DESCRIPTION	QNT
A	 BODY	01
B	 LEG	02
C	 STRETCHER	01

HARDWARE


S.NO.	DESCRIPTION	QNT
D	 WASHER	10
E	 SPRING WASHER	10
F	 JCBC M6 x 40 mm	08
G	 JCBC M6 x 20 mm	02
H	 ALLEN KEY	01
I	 HANDLE KNOB	04
J	 JCMC 35 mm	04

STEP - 1

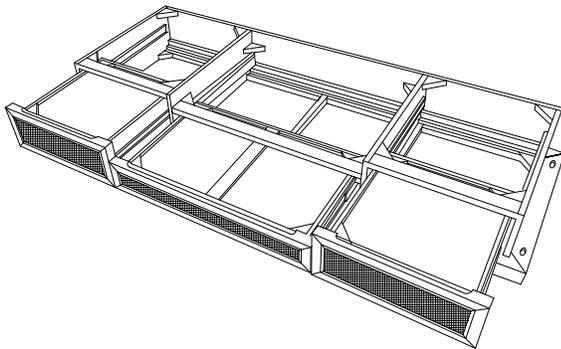


Position body (a) as shown above, with the drawer pulled out

STEP - 2

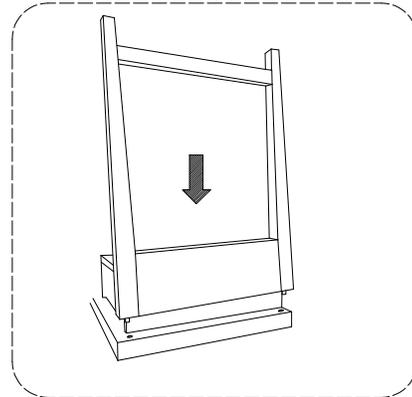

Install the legs as shown in the picture, position the dowel in the hole located on the body top


STEP - 3

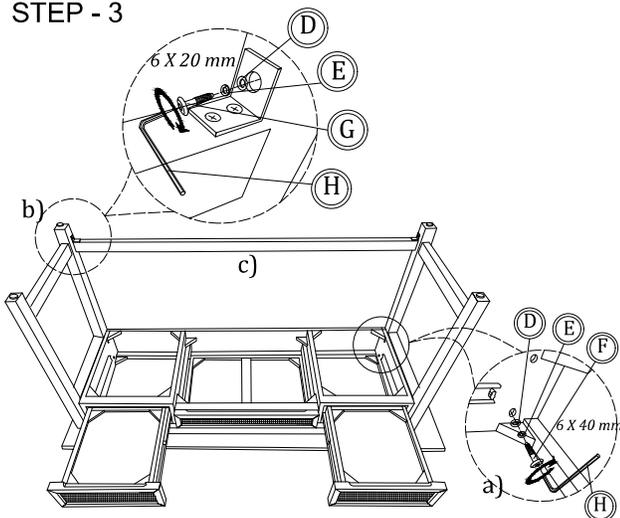

- Install the stretcher (c) , then lock it between the body and legs using Washer (A) , Spring Washer (B) , JCBC M6x40 (C) , Then tighten with allen key (E)
- Lock the stretcher with the legs using Washer (A) , Spring Washer (B) , JCBC M6x20 (D) , Then tighten with allen key (E)

STEP - 4

Install the knob (I) on the drawer, lock it with a JCMC (J) screw and tighten with a screwdriver

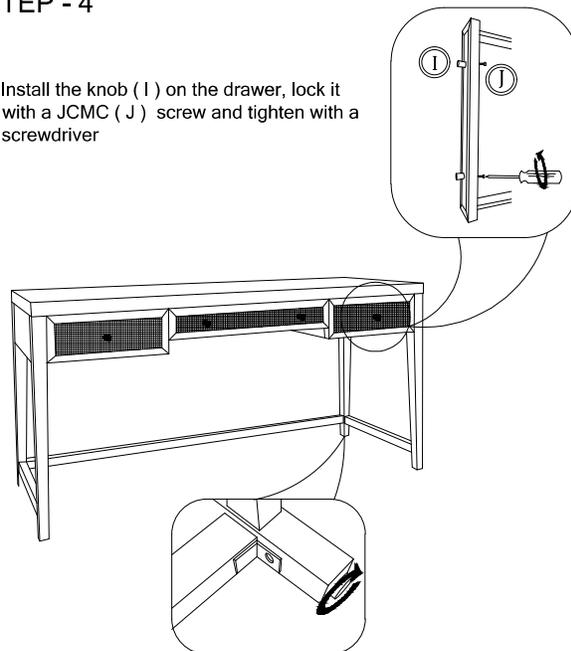

Leveller are provided at the bottom to the balance on uneven surface

MADE IN INDONESIA