

ASSEMBLY INSTRUCTION FOR CHAIR WITH KIDNEY PILLOW

U-13830-11240-100C/U-13830-11241-100C/U-13830-11242-100C

CAUTION: Please read instruction thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assembly your newly purchased product correctly and efficiently.

PART LIST			
NO.	PART DESC	CODE	Q'TY
A	SEAT		1
B	BACKREST		1
C	PILLOW	PU-13830-11240-PIL/PU-13830-11241-PIL/ PU-13830-11242-PIL	1
D1	ARM FRAME-LSF	PU-13830-100C-ARML	1
D2	ARM FRAME-RSF	PU-13830-100C-ARMR	1
E	STRETCHER	PU-13830-100C-STR	1

HARDWARE LIST				
NO.		HARDWARE DESC	CODE	Q'TY
1		BOLT Ø5/16**60	PU-13830-HW	12
2		FLAT WASHER Ø5/16**Ø19		2
3		Ø5/16" x 1.5CM		5
4		ALLEN KEY M5*65		1
5		ANTI SLIDING Ø25*2MM	PU-13830-100C-BUT	4
6		WOODEN BUTTON Ø15x10MM		10

 Only tighten all bolts when all bolts aligned with bolt inserts


Step 1

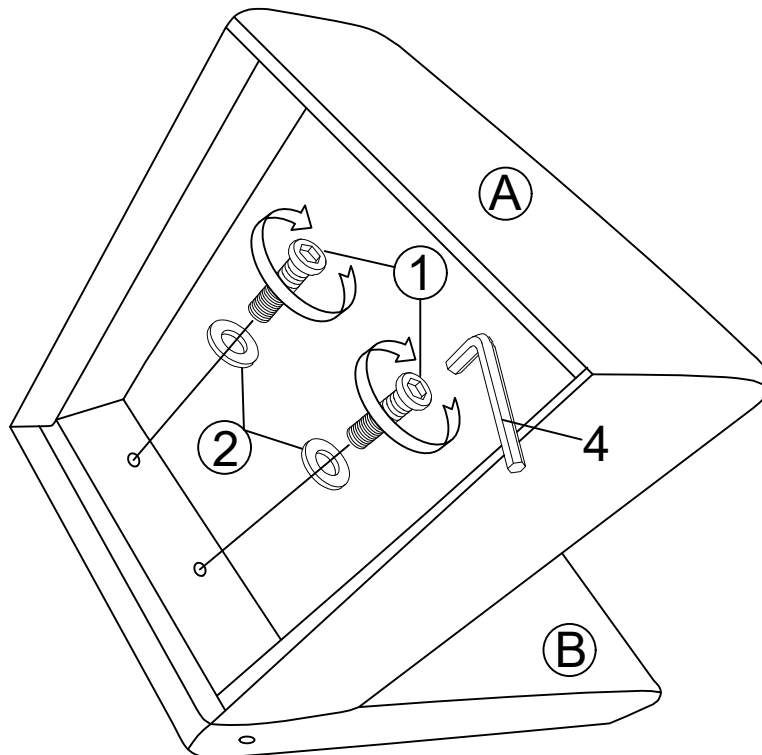


MADE IN VIETNAM

ASSEMBLY INSTRUCTION FOR
CHAIR WITH KIDNEY PILLOW
U-13830-11240-100C/U-13830-11241-100C/U-13830-11242-100C


STEP 2

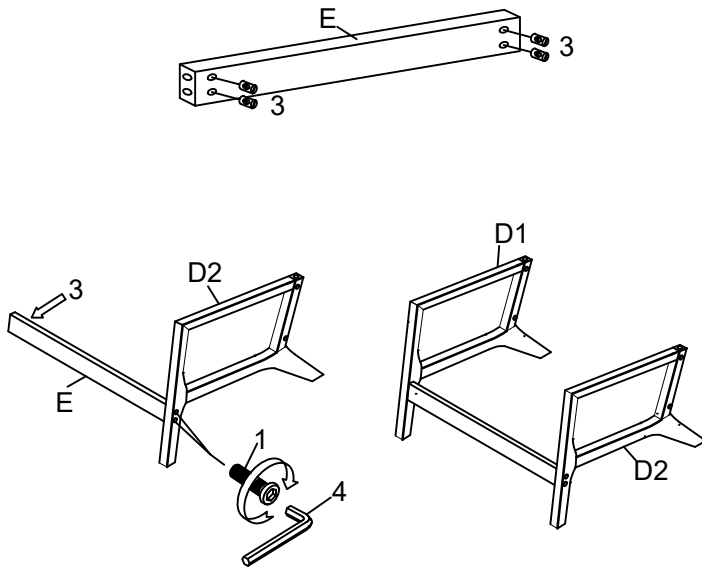

STEP 3

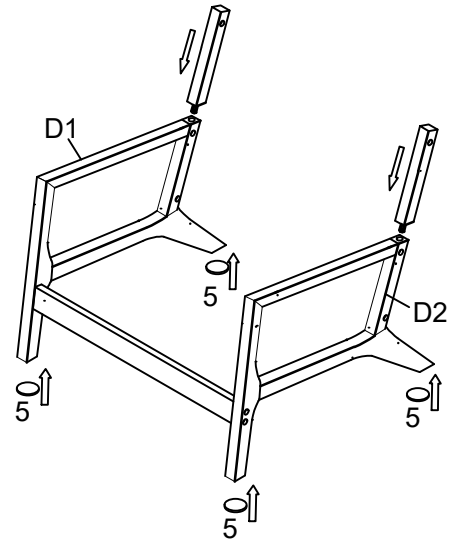

STEP 4

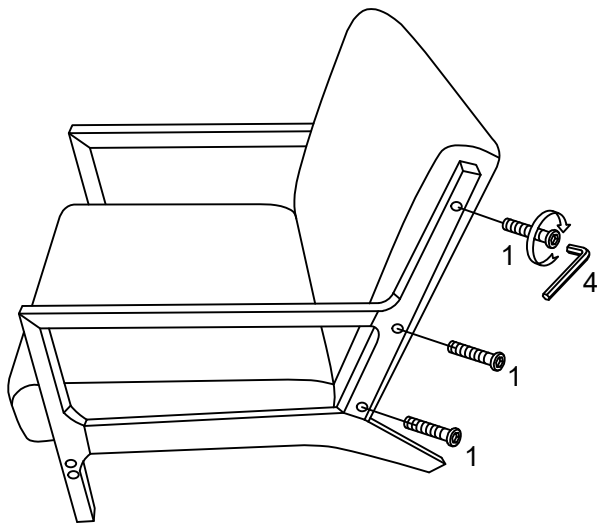

COMPLETE

