



①

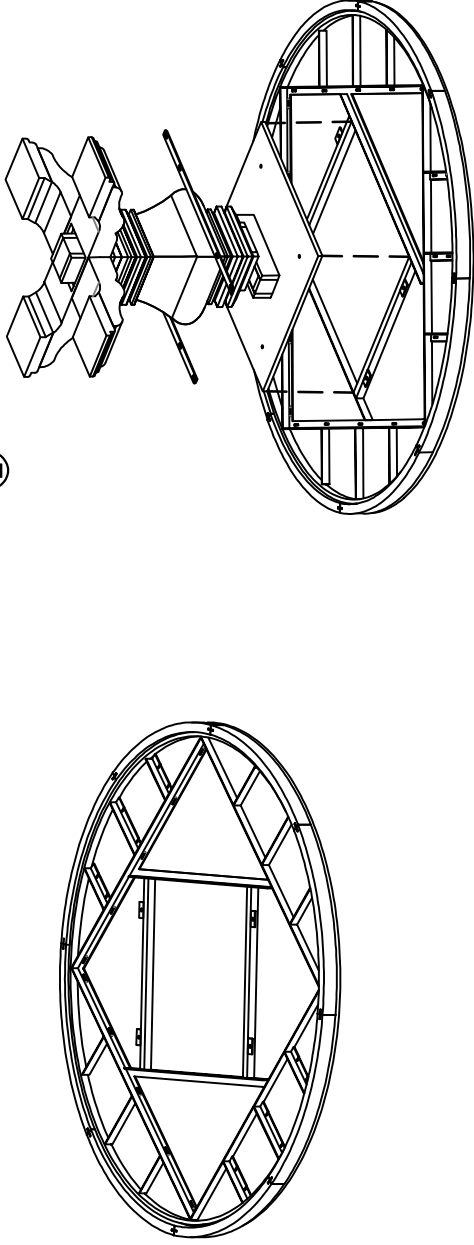

INSTRUCTIONS

- 1.- The top should be placed as shown on diagram, applying force to splice the leg to the top. The top and the legs must be completely spliced. Then use the security bars as shown in the diagram.
- 2.- Insert the screws as show in the diagram (1 1/2 inches screw is used for the internal part and 1 inch screw is used for external part).

Tighten the screws firmly.

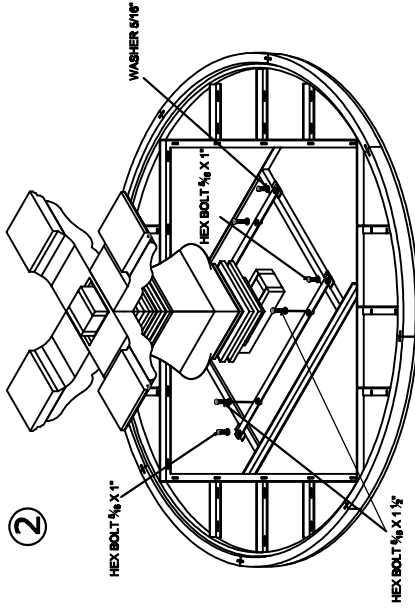

HARDWARE	# PCS
DESCRIPTION	
HEX BOLT 5/16 X 1-1/2"	4
HEX BOLT 5/16 X 1"	4
WASHER 5/16"	8

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT



ASSEMBLY INSTRUCTIONS

I-RND-C003-BK