## ASSEMBLY INSTRUCTIONS

 $Model: {\tt Emma-Natural/White/Black/Gray-KB-HB\ W/LED\ /\ USB}$ 

Emma-Natural/White/Black/Gray-KB-HB Base

Emma-Natural/White/Black/Gray-KB-FB W/Drawer & Shelf

Emma-Natural/White/Black/Gray-KB/KB-SR DWR 1 Emma-Natural/White/Black/Gray-KB/KB-SR DWR 2 **Description:** King Bed Headboard W/LED & USB,

King Bed Headboard Base King Bed Footboard With 2 Drawers & 1 Shelf

Queen/King Bed Siderail Drawer1 Queen/King Bed Siderail Drawer2


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

	RT LIST : UPPER HEADBO	HARDWARE LIST						
No	Description	Diagram	Quantity		CKED IN UPPER HEADBOARD BOX			
A	Headboard		1 pc	No 1	Description  JCBC Bolt	Diagram	Size M6 x 30mm	Quantity 8 pcs
В	Headboard Leg Left		1 pc	2	JCBC Bolt	0	M6 x 80mm	3 pcs
С	Headboard Leg Right		1 pc	3	Spring Washer	0	Spring Washer 1/4" Blk	8 pcs
PART LIST : STORAGE FOOTBOARD BOX				4	Flat Washer		Flat Washer 1/4" ID 19mm OD Blk	8 pcs
No	Description	Diagram	Quantity	5	Flat Head Chipboard Screw	<b>+</b> mmm>	CSK M4 x 32mm	48 pcs
D	Storage Footboard		1 pc	6	Pan Head Chipboard Screw	O-202000>	Pan Head Screw M3.5 x 16 blk	32 pcs
Е	Chrome Metal Leg		4 pcs	7	Flat Head Chipboard Screw	<del>()</del> 200200>	CSK M4 x 25mm	12 pcs
F	Footboard BottomCenter Leg		2 pcs	8	Barrel Nut		M6 x 15mm	3 pcs
G	Bed Slat		14 pcs	9	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
Н	Center Slat		1 pc	10	Adaptor Led			1 pc
I	Slat Support		3 pcs	11	Adaptor Usb	200		1 pc

No	Description	Diagram	Quantity	
J	Storage Side Rail		2 pcs	
K	Chrome Metal Leg		4 pcs	
L	Side Rail Bottom Back Leg	S. S	4 pcs	
М	Side Rail Bottom Center Leg		4 pcs	




1 OF 5

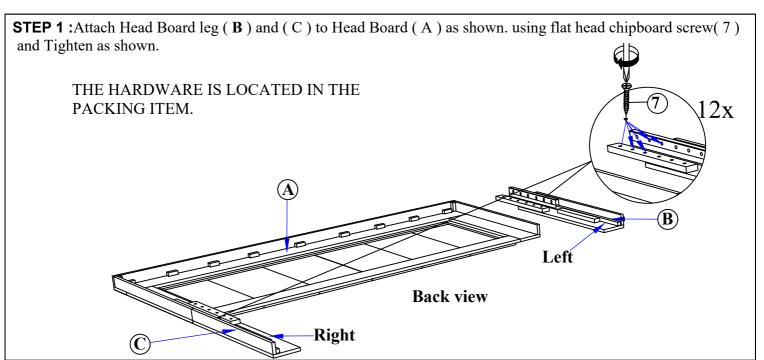


**STEP 2.1**: Pull the drawer and take out the Leg (E) & (F). Attach the Chrome metal leg (E) at the bottom Storage footboard (D). Used Pan head chipboard screw(6) and Tighten as shown.


**STEP 2.2**: Attach the Footboard bottom leg (F) at the bottom Storage footboard (D). Used flat head chipboard screw(5) and Tighten as shown. Remark: Align the leg follow marking line 16x  $(\mathbf{E})$ 2.1

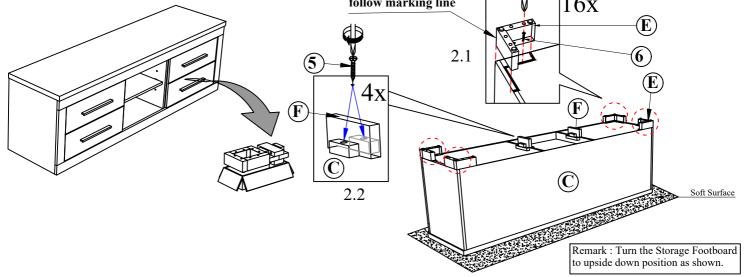


**STEP 3.1**: Pull the drawer and take out the Leg (K), (L)&(M). Attach the Chrome metal leg (K) at the bottom Storage side rails ( J ). Used Pan head chipboard screw( 6 ) and Tighten as shown.

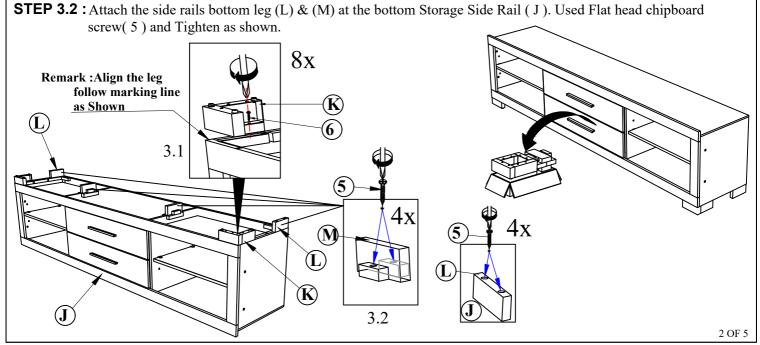

**STEP 4**: Attach Storage Side Rails (J) to Headboard assembly(A) and Storage Footboard (D) as shown. using JCBC BOLT (1) with Spring Washer (3), Flat washer (4) and securing with ALLEN KEY (9) as shown.

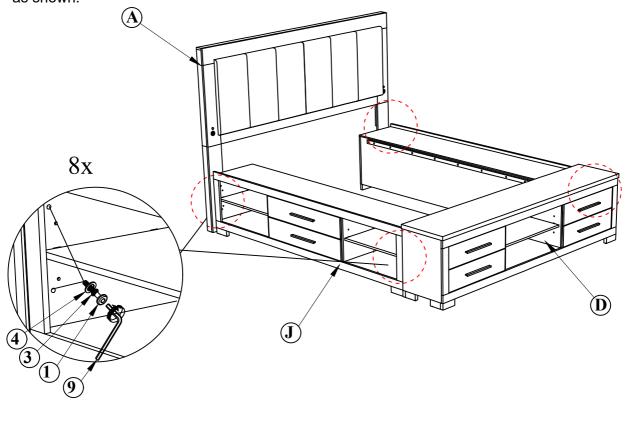

STEP 5: Attach slat support (I) and center slat (H)to bed slat (G)as shown. Using JCBC BOLT (2) and insert barrel nut (8)at slat support hole(H) then securing with ALLEN KEY (9).

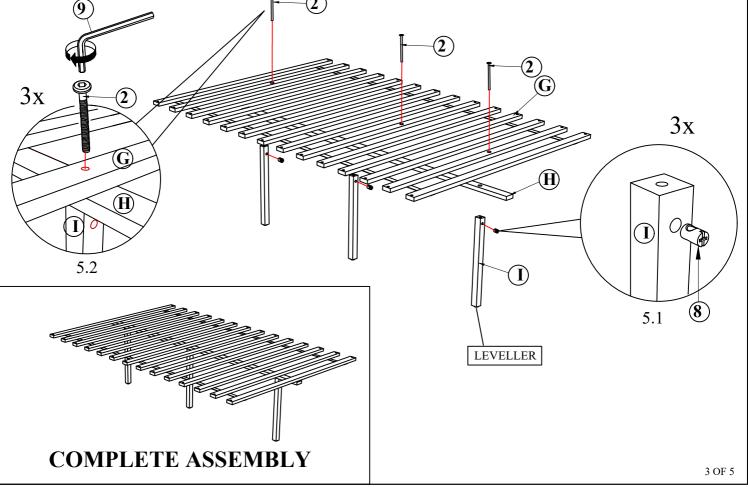

**STEP 6**: Attach and align Assembly slat (G) on into a bed frame as shown.

