


Item # : BR58OSW6D

Assembly Instructions

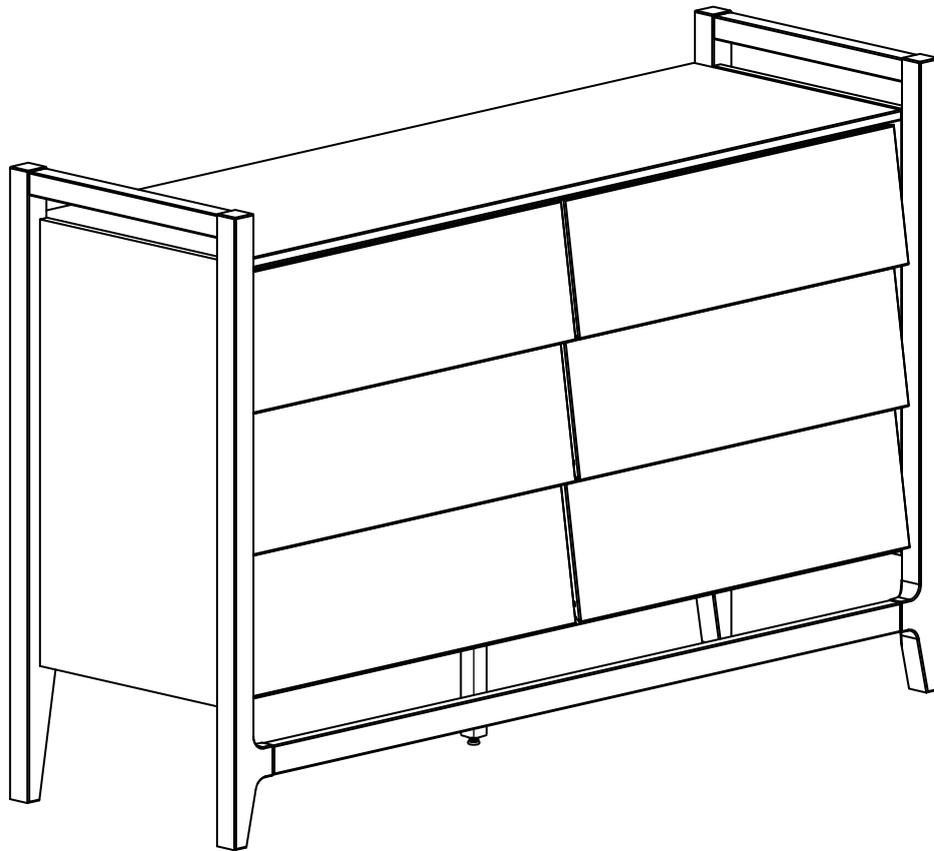


Please visit our website for the most current instructions, assembly tips, to report damage or request parts. www.walkeredison.com

Revised 12/2022


General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.
- V. **ATTENTION**, keep the box and its internal protections


-Use for protection when assembling

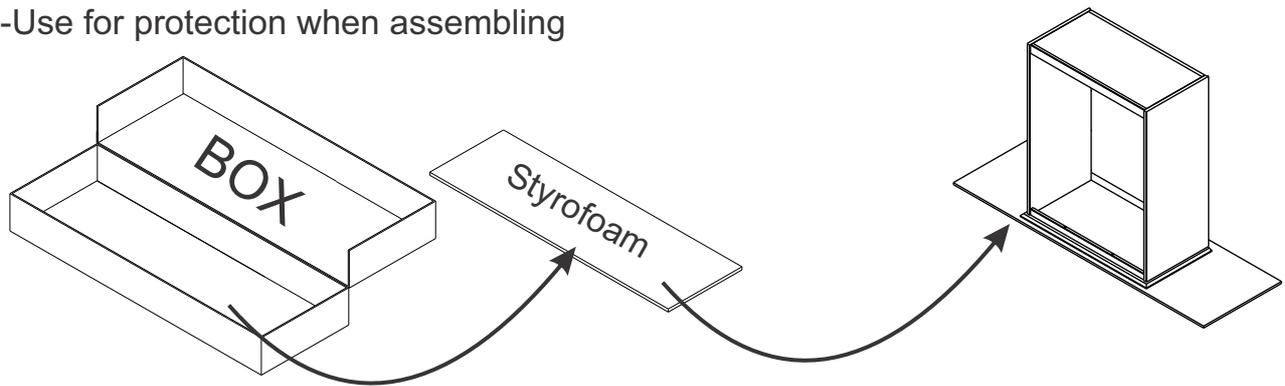


- VI. A Phillips head screwdriver and hammer is required for the assembly of this product.

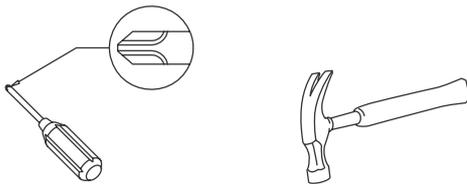

- VII. Power tools should not be used to assemble this product.

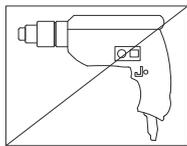

Parts List












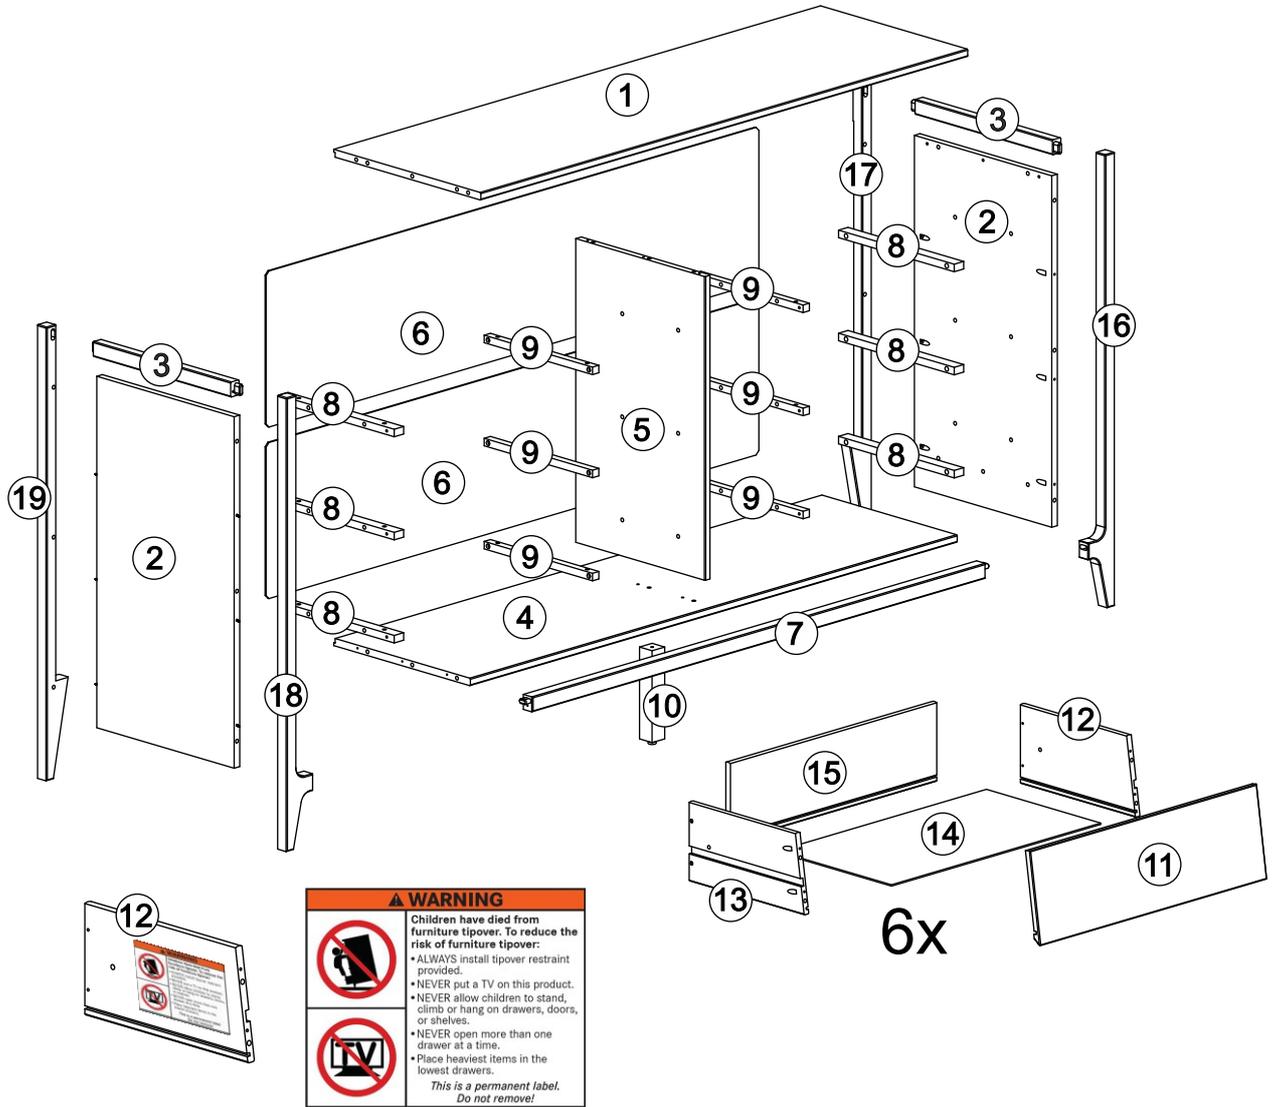



The side drawer with WARNING LABEL, should be mounted in highest drawer.

Part#	Description	Qty
1	Top panel	01 pcs
2	Side panel	02 pcs
3	Top crossbeam	02 pcs
4	Base	01 pcs
5	Division	01 pcs
6	Back panel	02 pcs
7	Bottom front crossbeam	01 pcs
8	Larger drawer runner	06 pcs
9	Smaller drawer runner	06 pcs
10	Center foot	01 pcs



Part#	Description	Qty
11	Front drawer	06 pcs
12	Right side drawer	06 pcs
13	Left side drawer	06 pcs
14	Drawer bottom	06 pcs
15	Drawer back	06 pcs
16	Right front foot	01 pcs
17	Right back foot	01 pcs
18	Left front foot	01 pcs
19	Left back foot	01 pcs

Hardware List

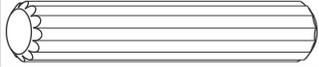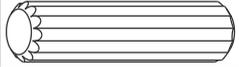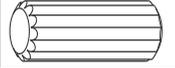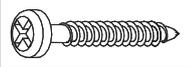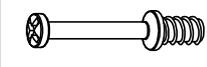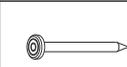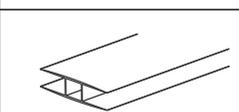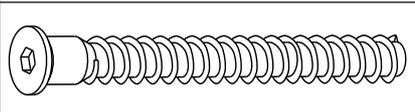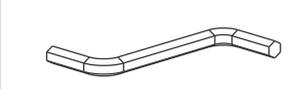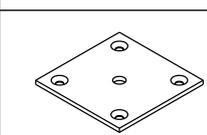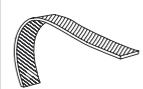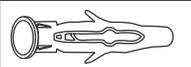A		Ø8*40mm	Wooden dowel	24 pcs
B		Ø8*30mm	Wooden dowel	52 pcs
C		Ø8*20mm	Wooden dowel	24 pcs
D		Ø4,0*40mm	Screw	03 pc
E		Ø4,0*30mm	Screw	75 pcs
F		Ø4,0*20mm	Screw	24 pcs
G		Ø3,5*16mm	Screw	04 pcs
H			Cam bolt	06 pcs
I		Ø15*09mm	Cam lock	06 pcs
J		Ø8*8	Nail	28 pcs
K		1390 mm	"H" Profile	01 pc
L		Ø7,0*50mm CB 10	Screw	03 pc
M			Hex key	01 pc
N			Foot support	01 pc
O			Wall anchor	01 pc
P			Washer	02 pc
Q		Ø6mm		01 pc

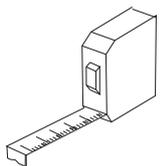


Tape measure and hammer recommended for assembly (not included)

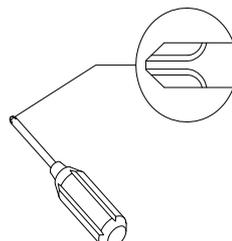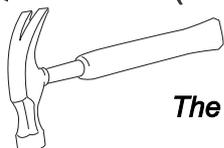

Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

Step 1

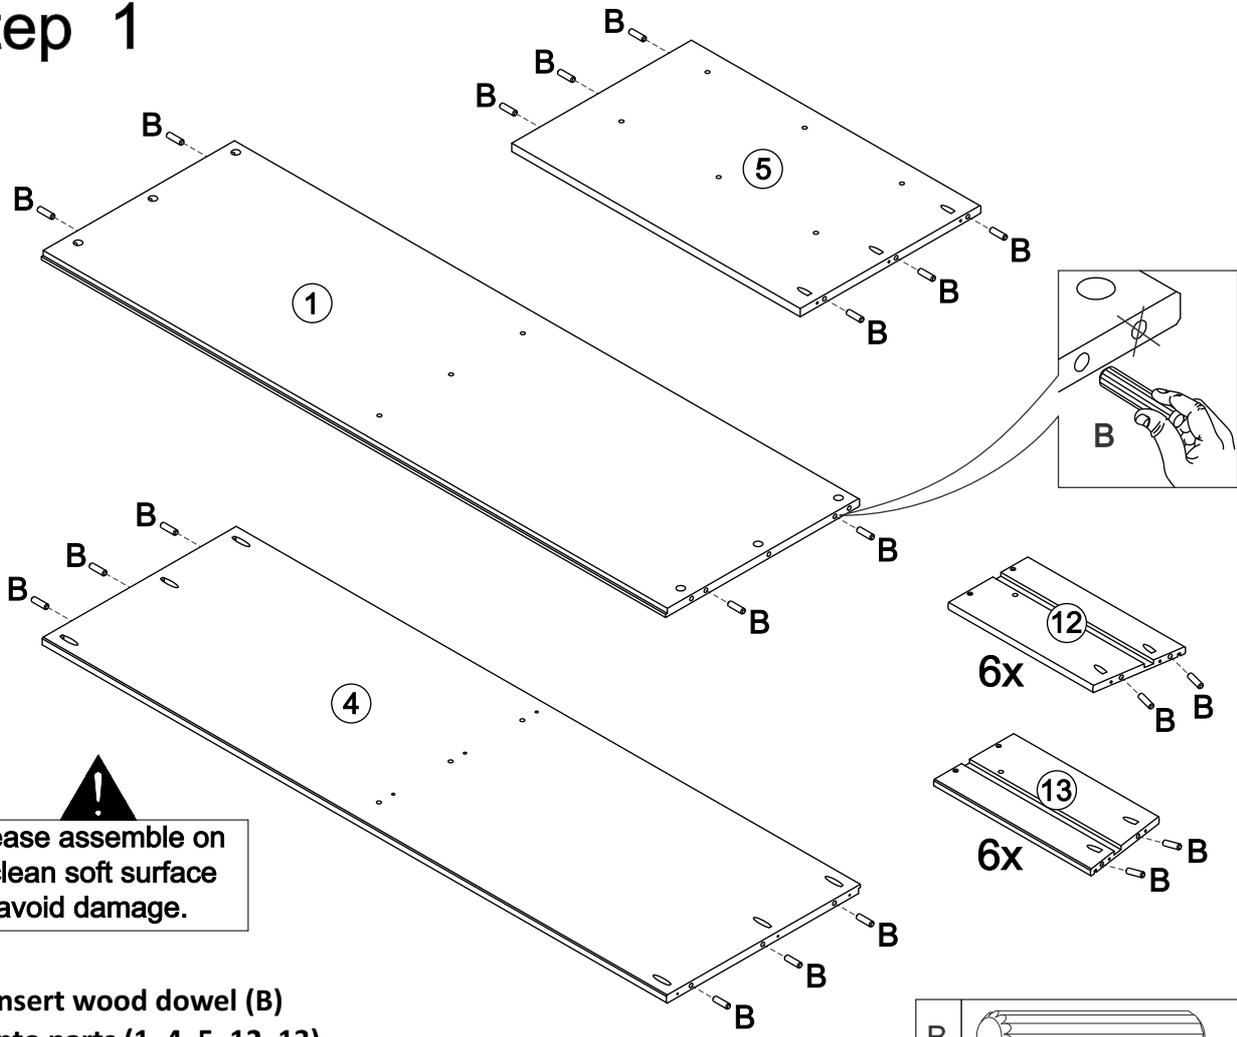

!
Please assemble on a clean soft surface to avoid damage.



Insert wood dowel (B) into parts (1, 4, 5, 12, 13).



Step 2




Attention to the dowel size:
Ø8*20mm

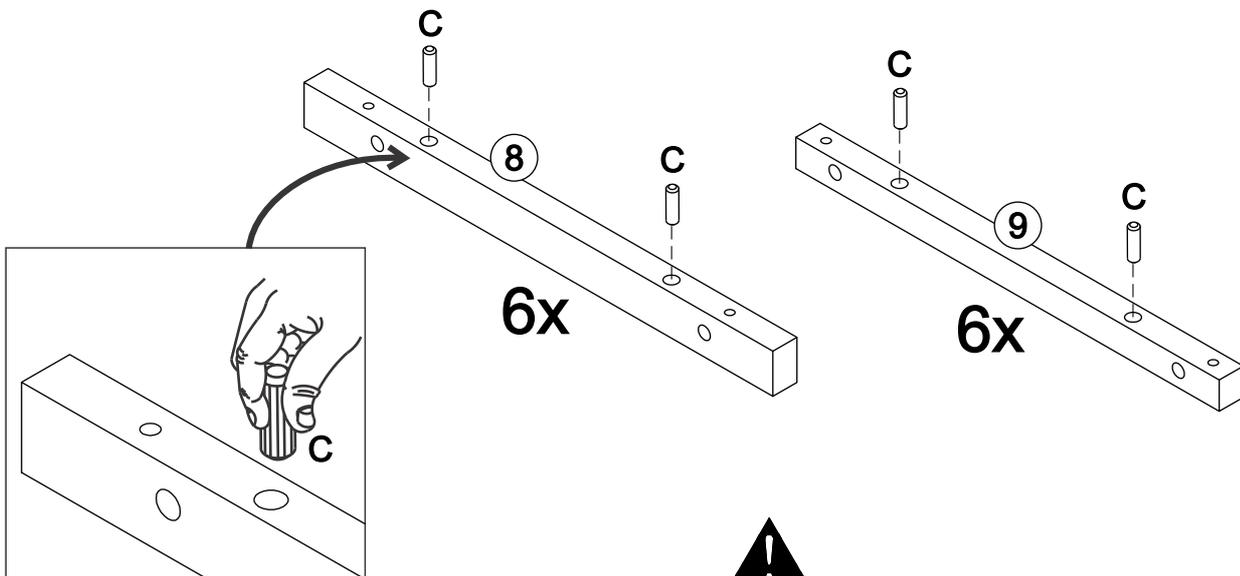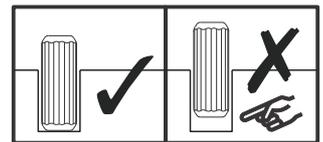


Insert wood dowel (C) into part (8,9).

!
Please assemble on a clean soft surface to avoid damage.

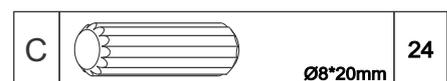


Step 3

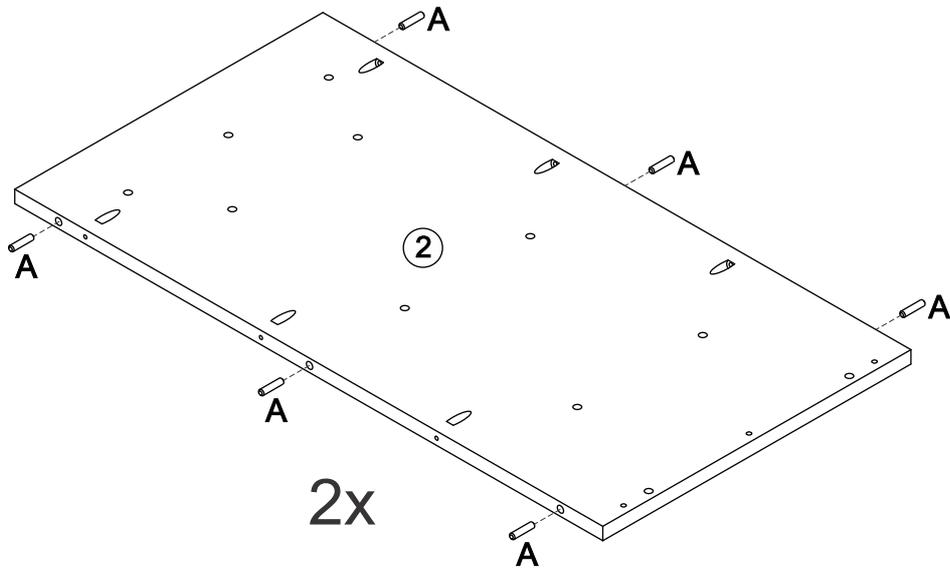


Insert wood dowel (A)
into part (2).



Please assemble on
a clean soft surface
to avoid damage.

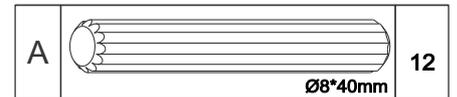


Step 4

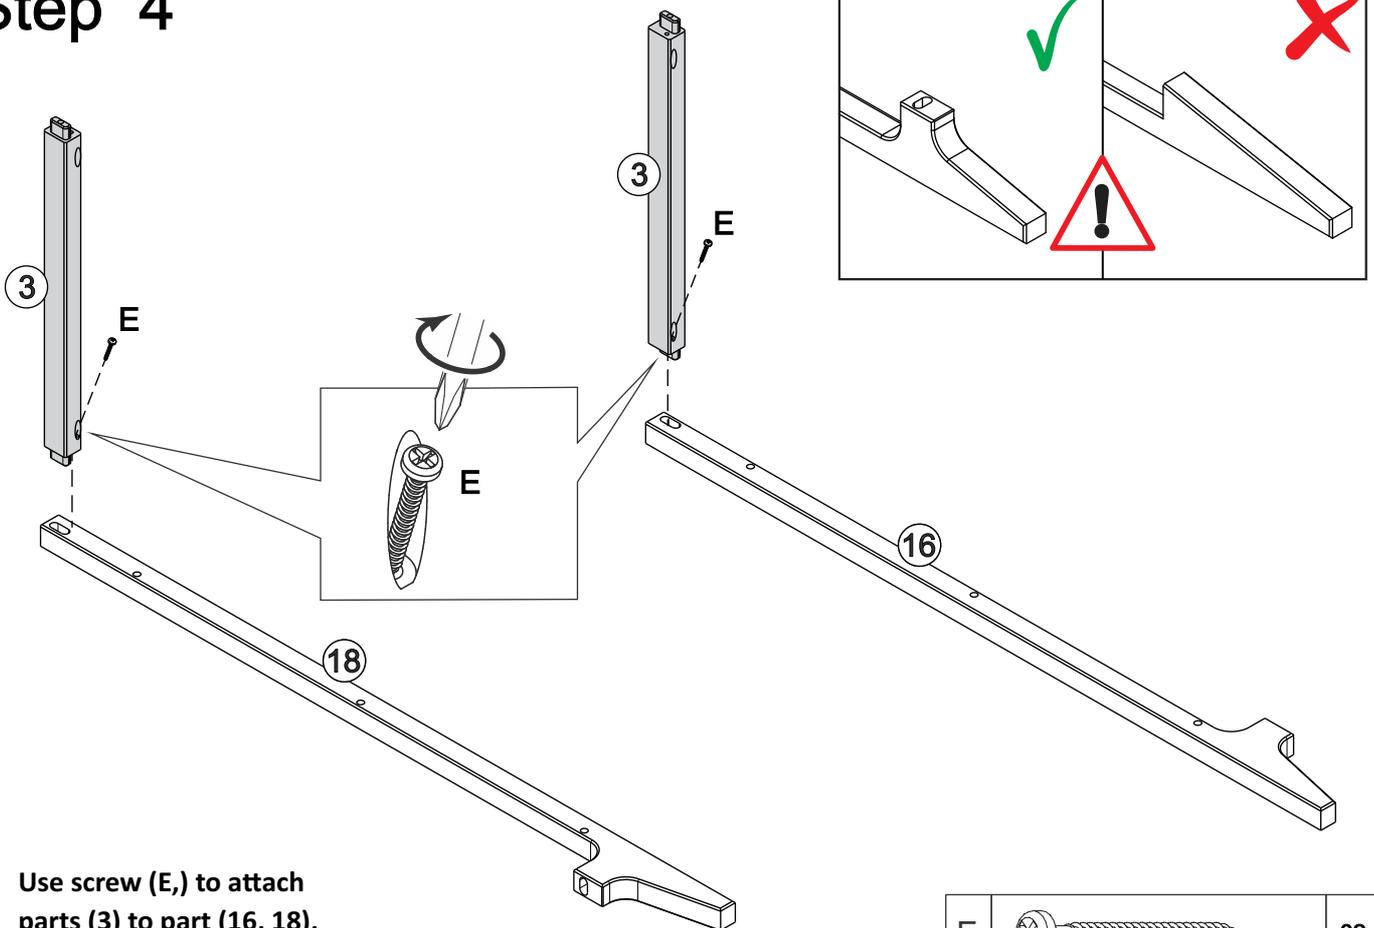

Use screw (E,) to attach
parts (3) to part (16, 18),
with Phillips head screwdriver.

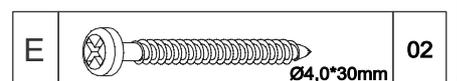


Step 5

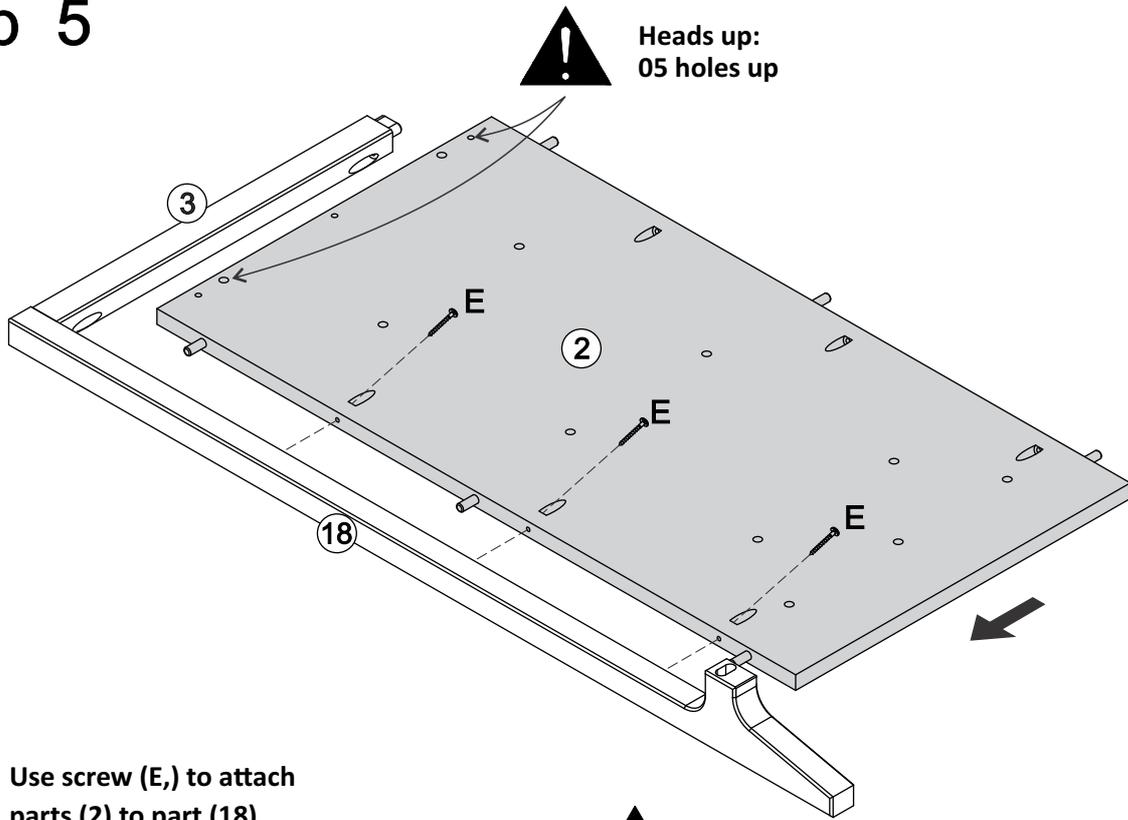


Use screw (E,) to attach parts (2) to part (18). with Phillips head screwdriver.

! Please assemble on a clean soft surface to avoid damage.

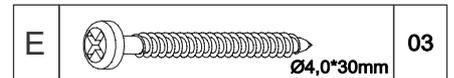


Step 6

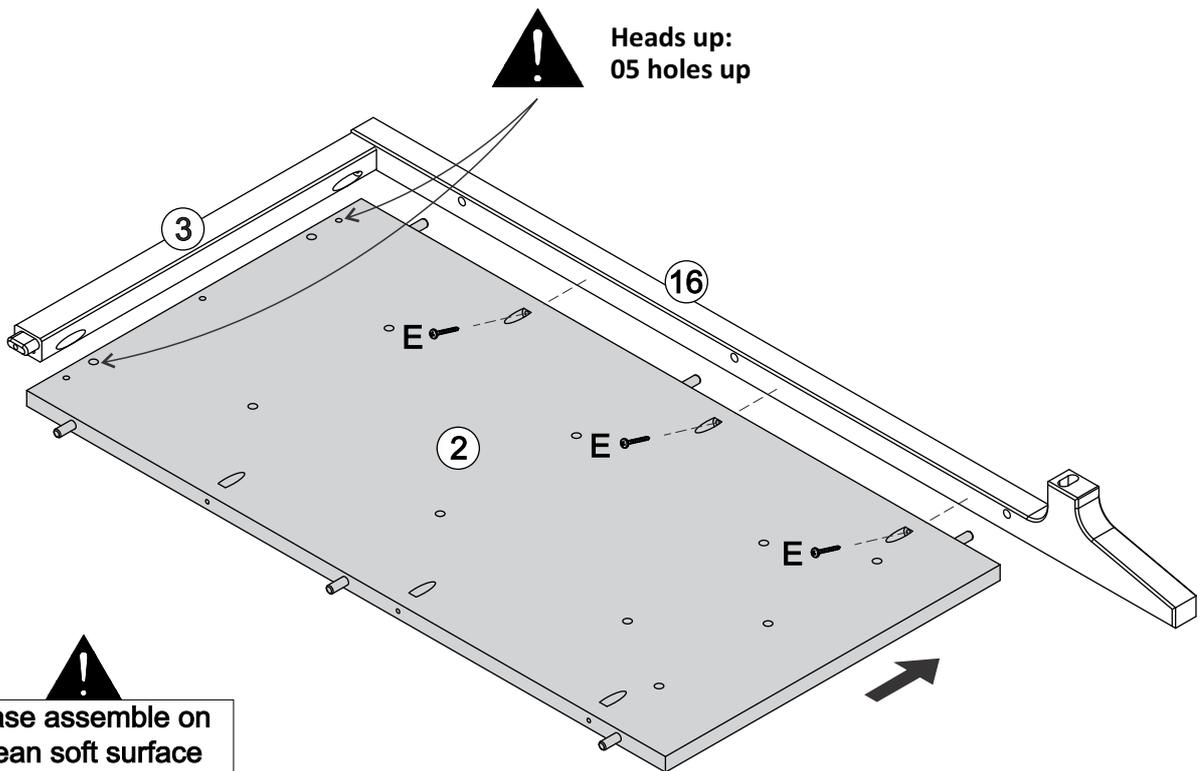


! Please assemble on a clean soft surface to avoid damage.

Use screw (E) to attach parts (2) to part (16), with Phillips head screwdriver.

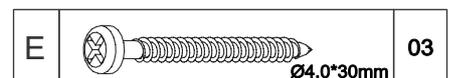

Step 7


Please assemble on a clean soft surface to avoid damage.

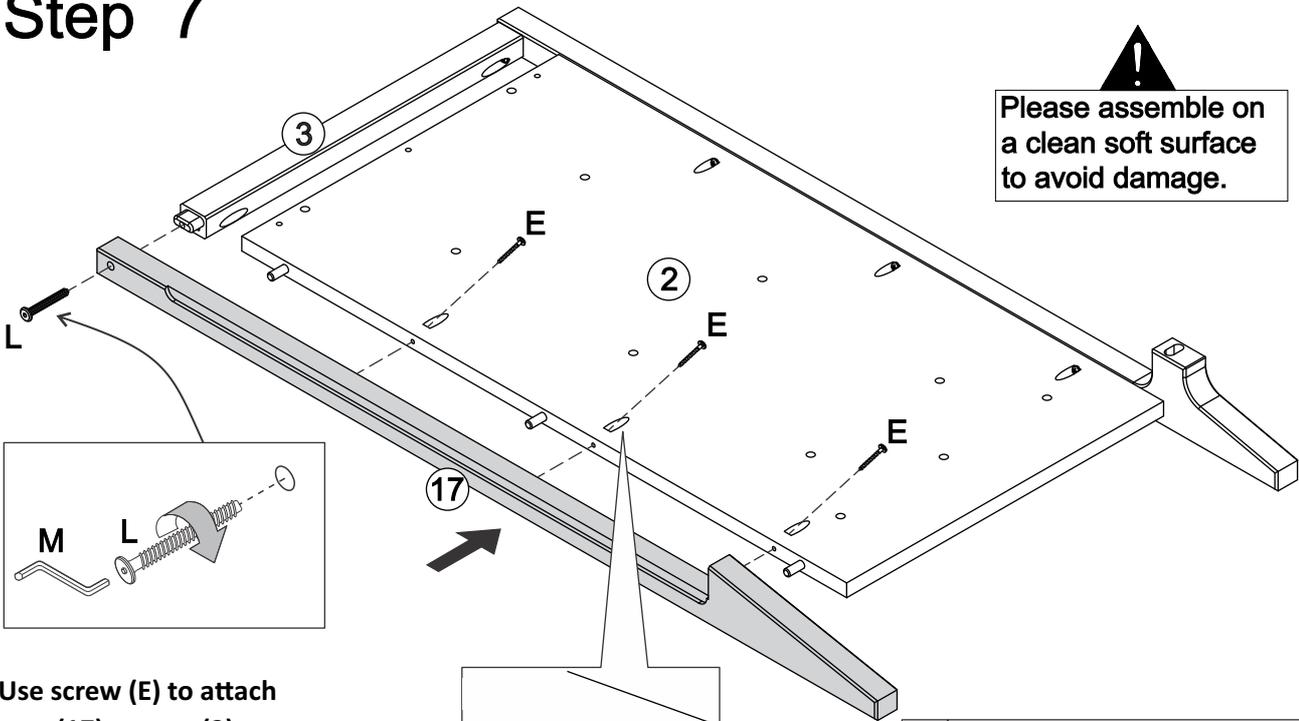

Use screw (E) to attach part (17) to part (2), with Phillips head screwdriver, making it the right side (20). Use screw (M) to attach parts (17) to part (3) with Hex Key (M)

E		Ø4,0*30mm	03
L		Ø7,0*50mm cb 10	01
M			01

Step 8

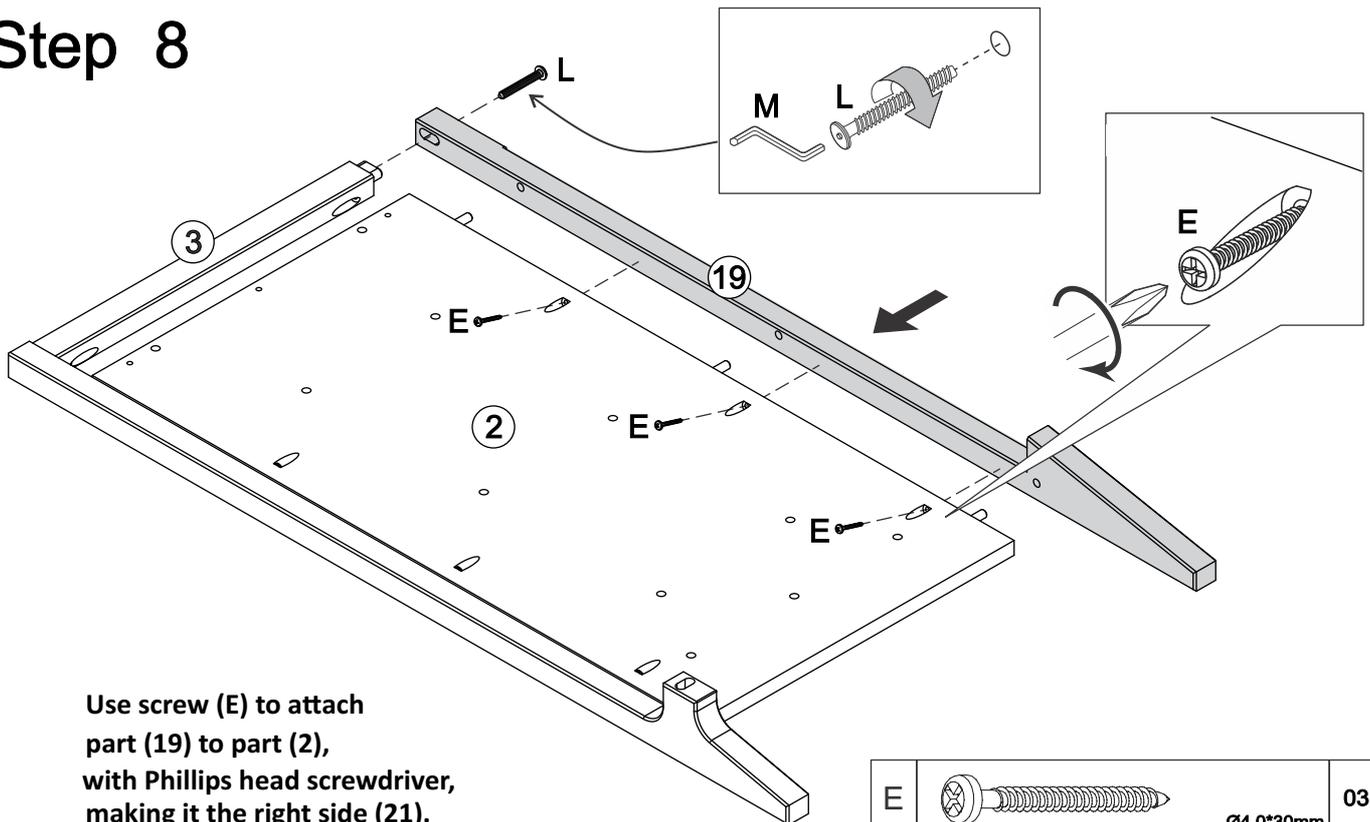


Use screw (E) to attach part (19) to part (2), with Phillips head screwdriver, making it the right side (21). Use screw (M) to attach parts (19) to part (3) with Hex Key (M)

Please assemble on a clean soft surface to avoid damage.


E		Ø4,0*30mm	03
L		Ø7,0*50mm cb 10	01
M			01

Step 9

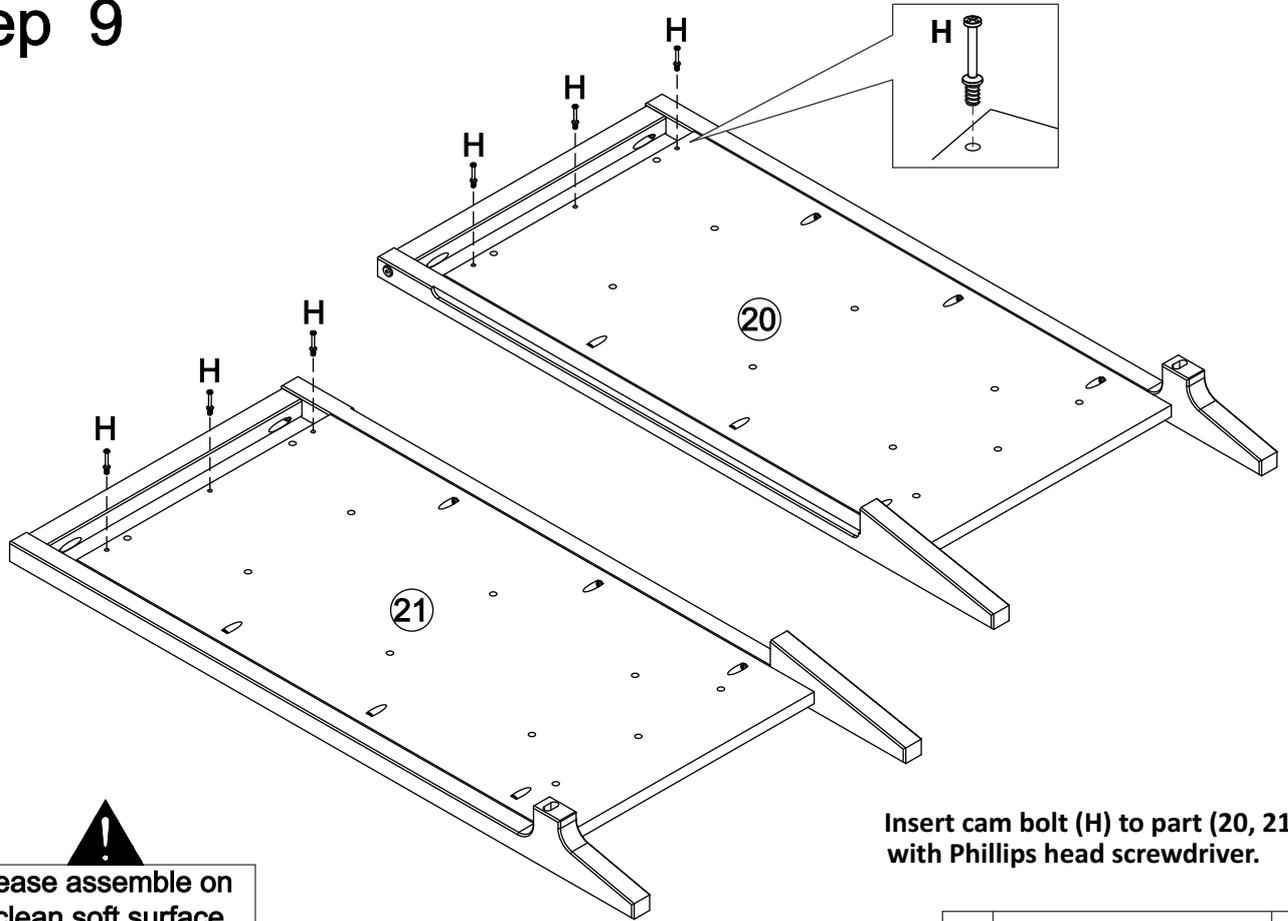



Please assemble on a clean soft surface to avoid damage.

Insert cam bolt (H) to part (20, 21).
with Phillips head screwdriver.


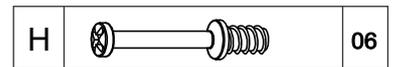


Step 10



NOTE: The extra holes in part (8) should face the top of parts (20,21)

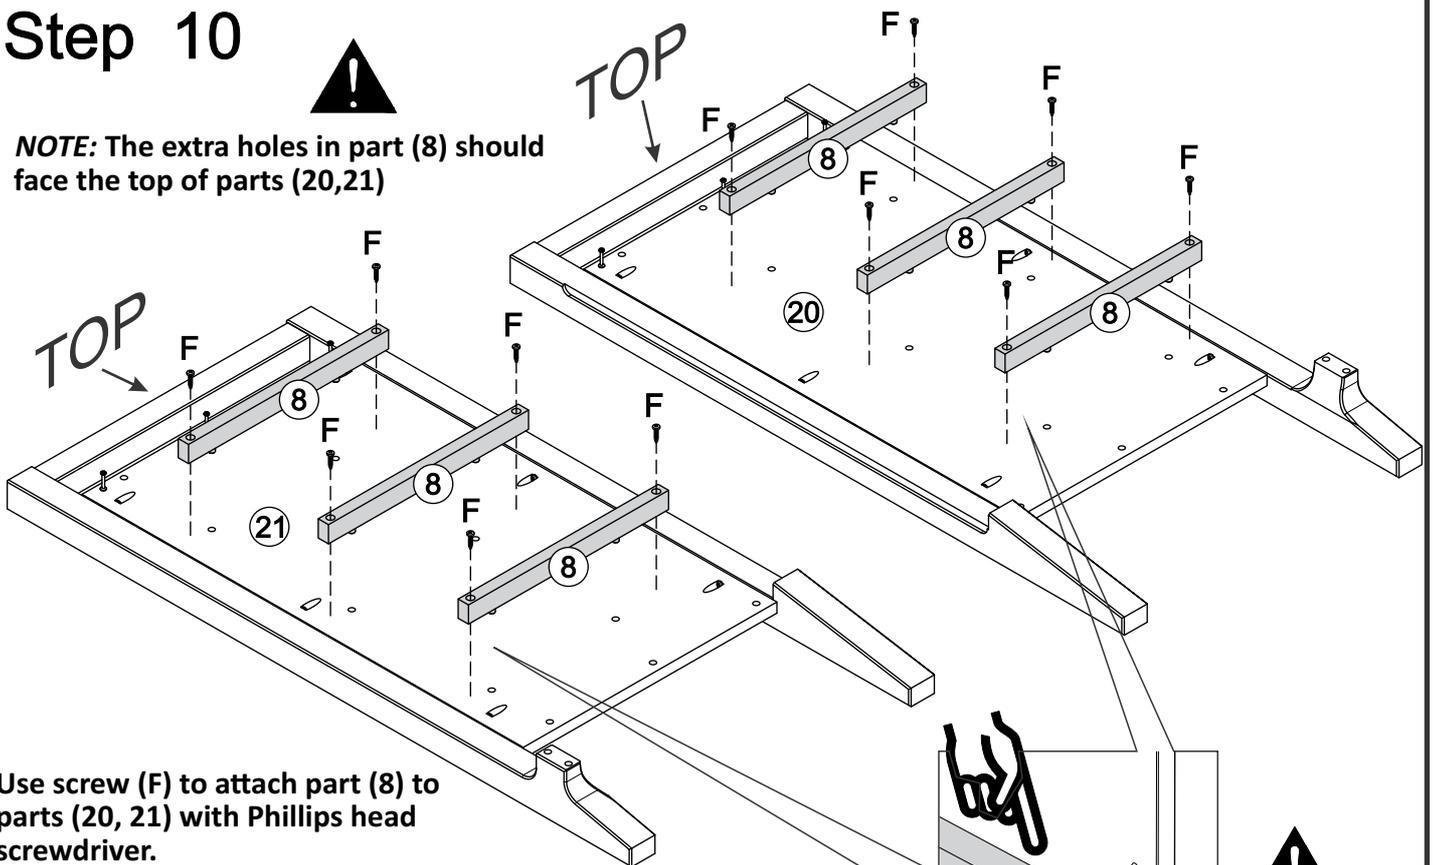

Use screw (F) to attach part (8) to parts (20, 21) with Phillips head screwdriver.

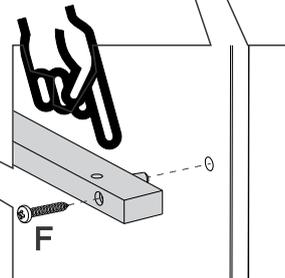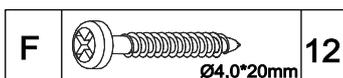


Step 11

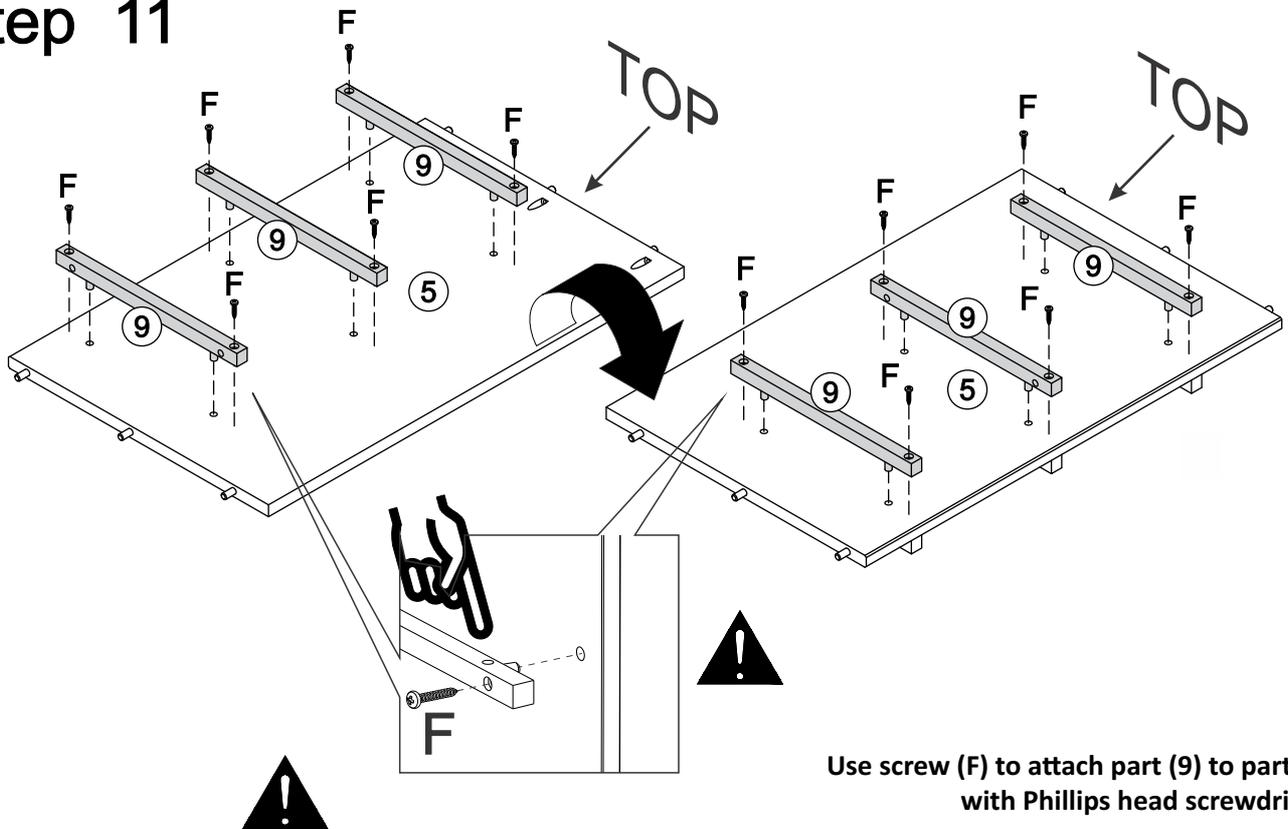


Use screw (F) to attach part (9) to part (5) with Phillips head screwdriver.

NOTE: The extra holes in part (5) should face the top of parts (20,21)

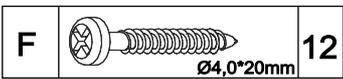


Step 12


Put protection so that no damage occurs

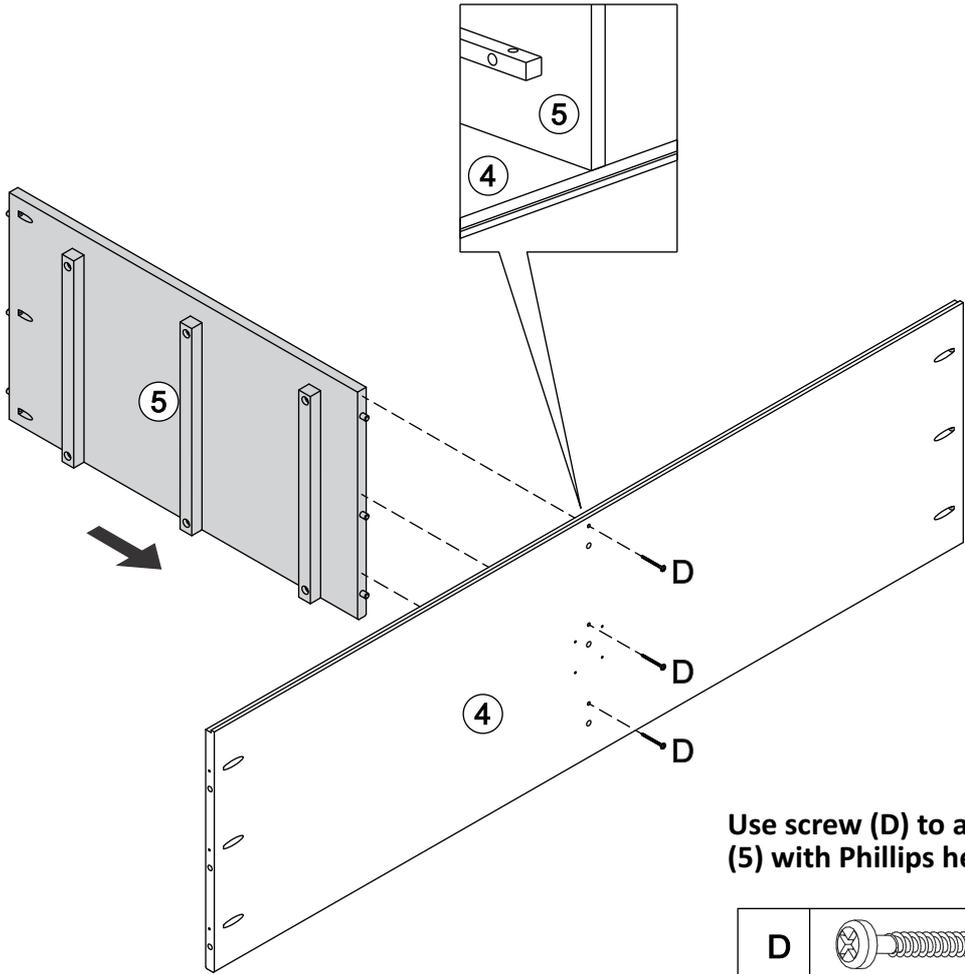


Use screw (D) to attach part (4) to part (5) with Phillips head screwdriver.

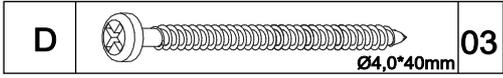

Step 13

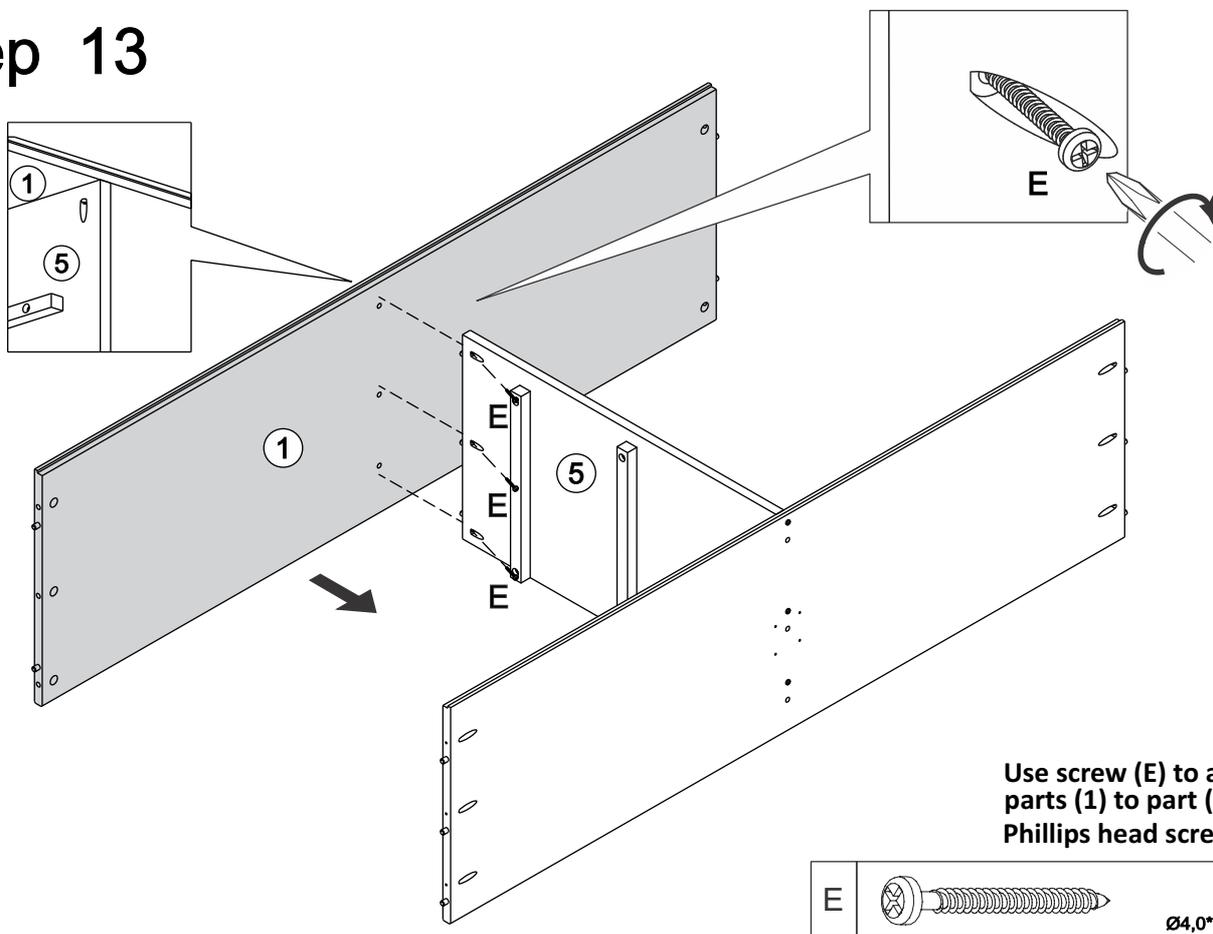


Use screw (E) to attach parts (1) to part (5) with Phillips head screwdriver.

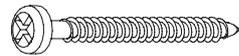E		Ø4,0*30mm	03
---	---	-----------	----

Step 14

Put protection so that no damage occurs

Secure parts (1) to part (20).
Insert cam locks (I) into part (1) and tighten with a phillips head screwdriver.

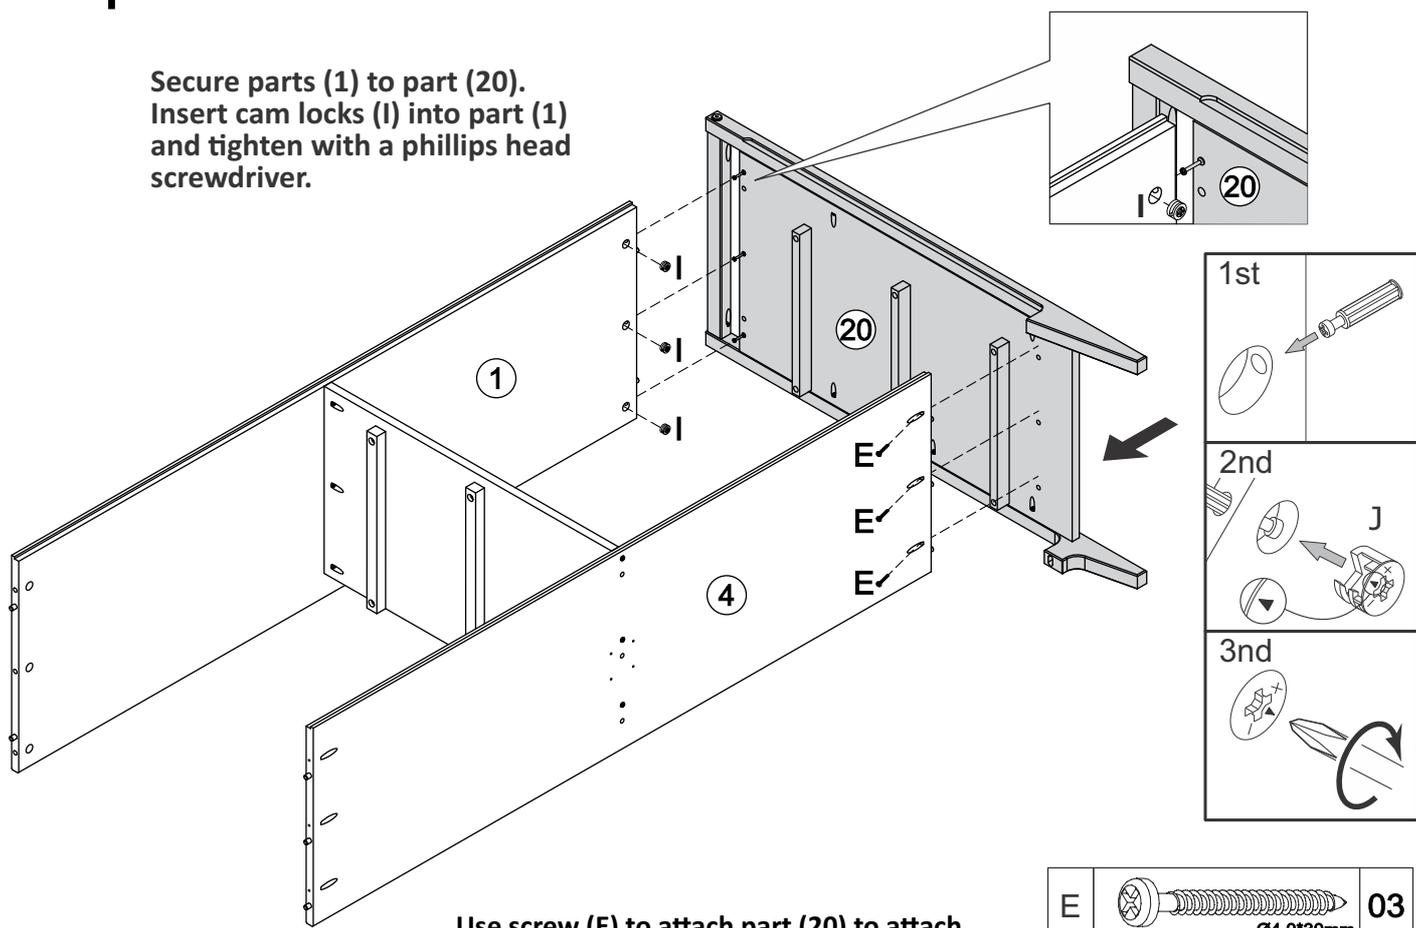



Use screw (E) to attach part (20) to attach part (4) to part with a phillips head screwdriver

E		Ø4,0*30mm	03
I		Ø15*09mm	03



Step 15

Use screw (E) to attach part (7) to part (20) with a phillips head screwdriver.

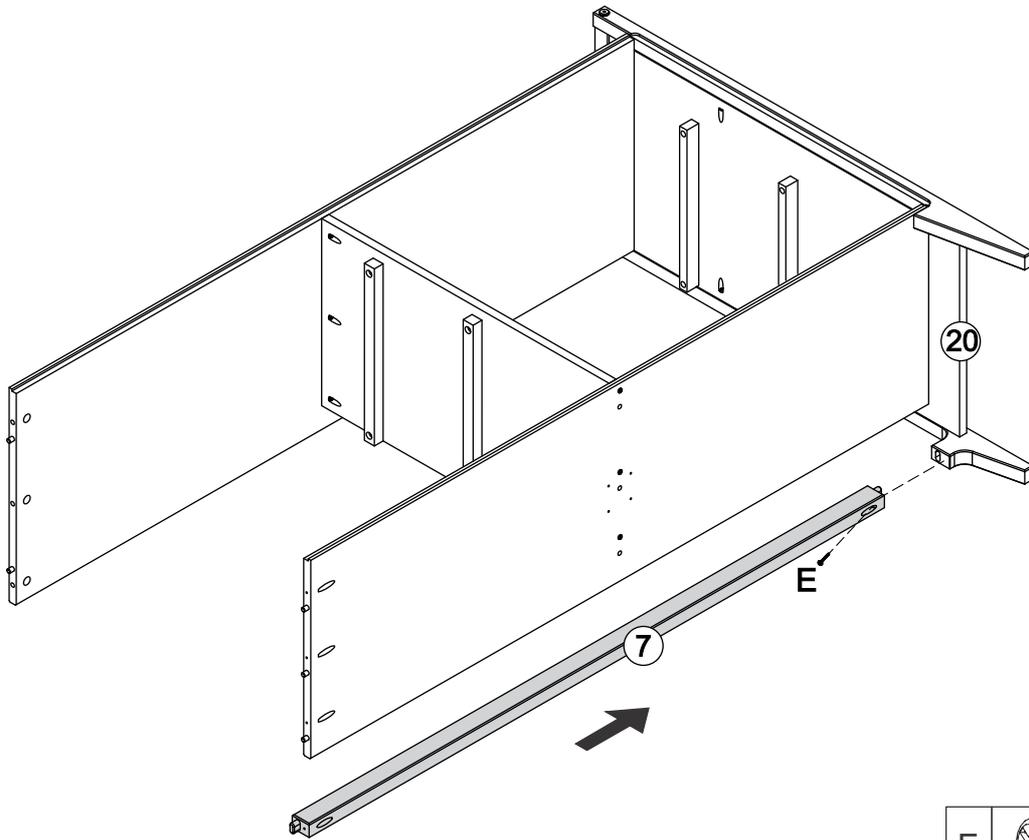

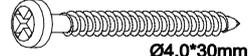E		03
<small>Ø4,0*30mm</small>		

Step 16

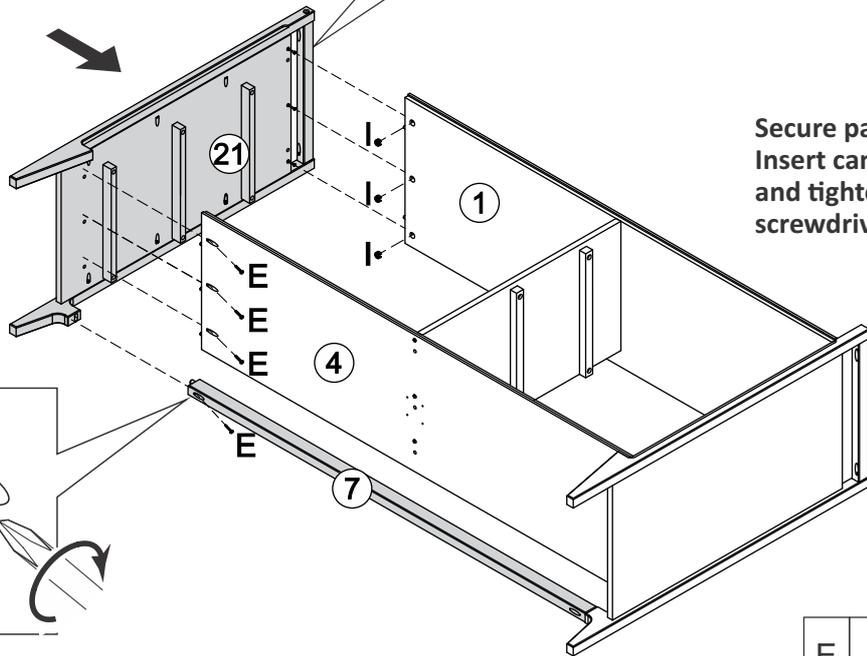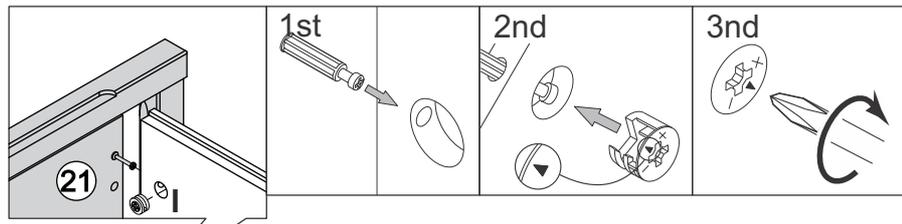


Secure parts (1) to part (21).
Insert cam locks (I) into part (1)
and tighten with a phillips head
screwdriver

E		03
<small>Ø4,0*30mm</small>		
I		03
<small>Ø15*09mm</small>		


Use screw (E) to attach part (7) to part (21) tighten with a phillips head screwdriver
Attach part (4) to part (21) with a phillips head screwdriver


Step 17

Put protection so that no damage occurs

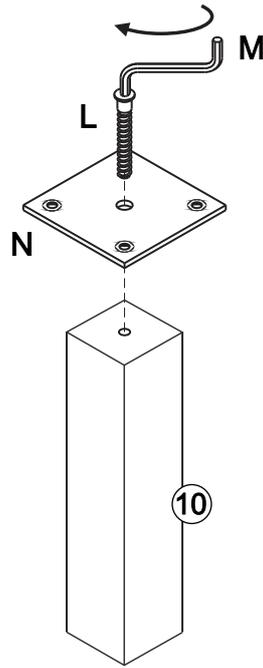


Use the screw (L) to attach the foot support (O) to the center foot (10). Use the hex key (N) for this.

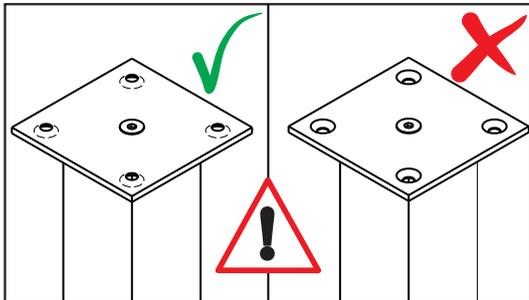

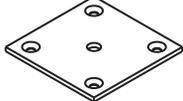L		01
M		01
N		01

Step 18

Put protection so that no damage occurs

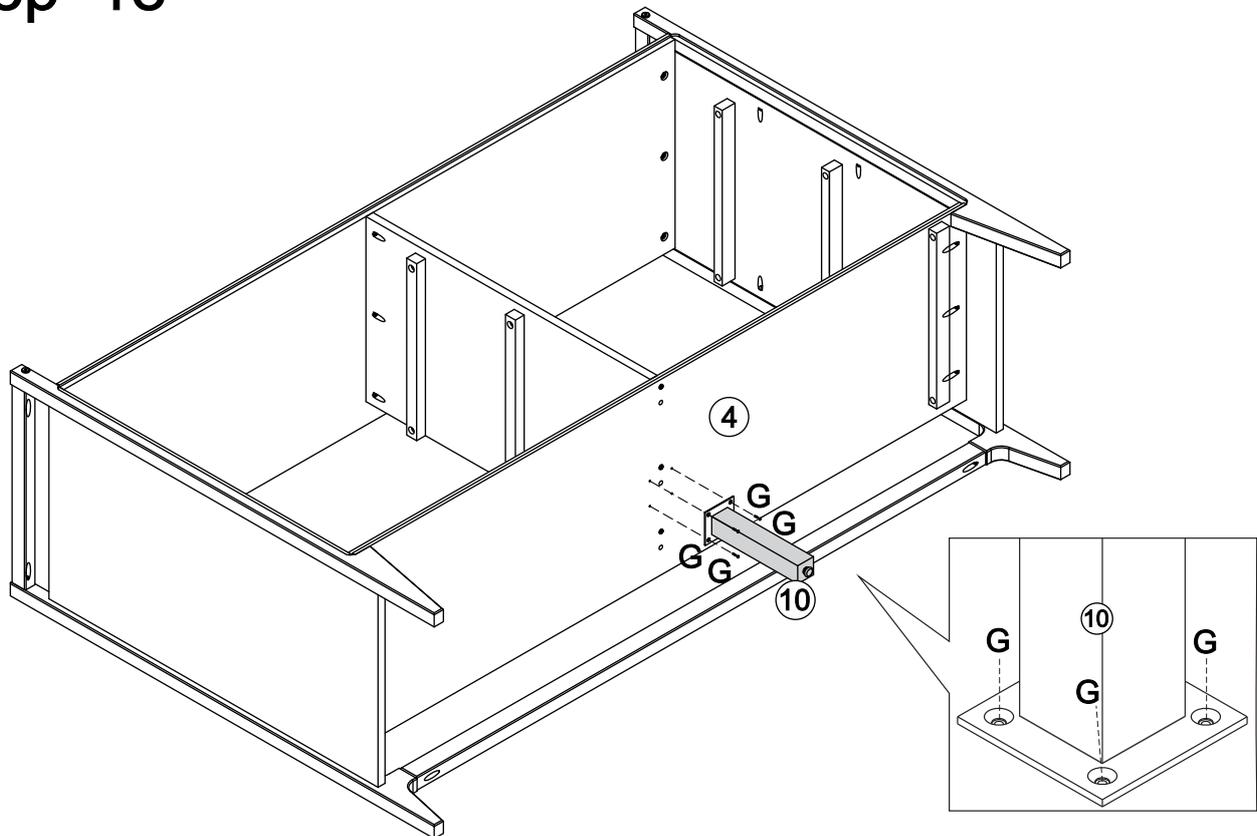


Use screw (G) to attach part (10) to part (4)

G		04
---	---	----

Step 19

Name and address of the supplier and date of production.


Put protection so that no damage occurs

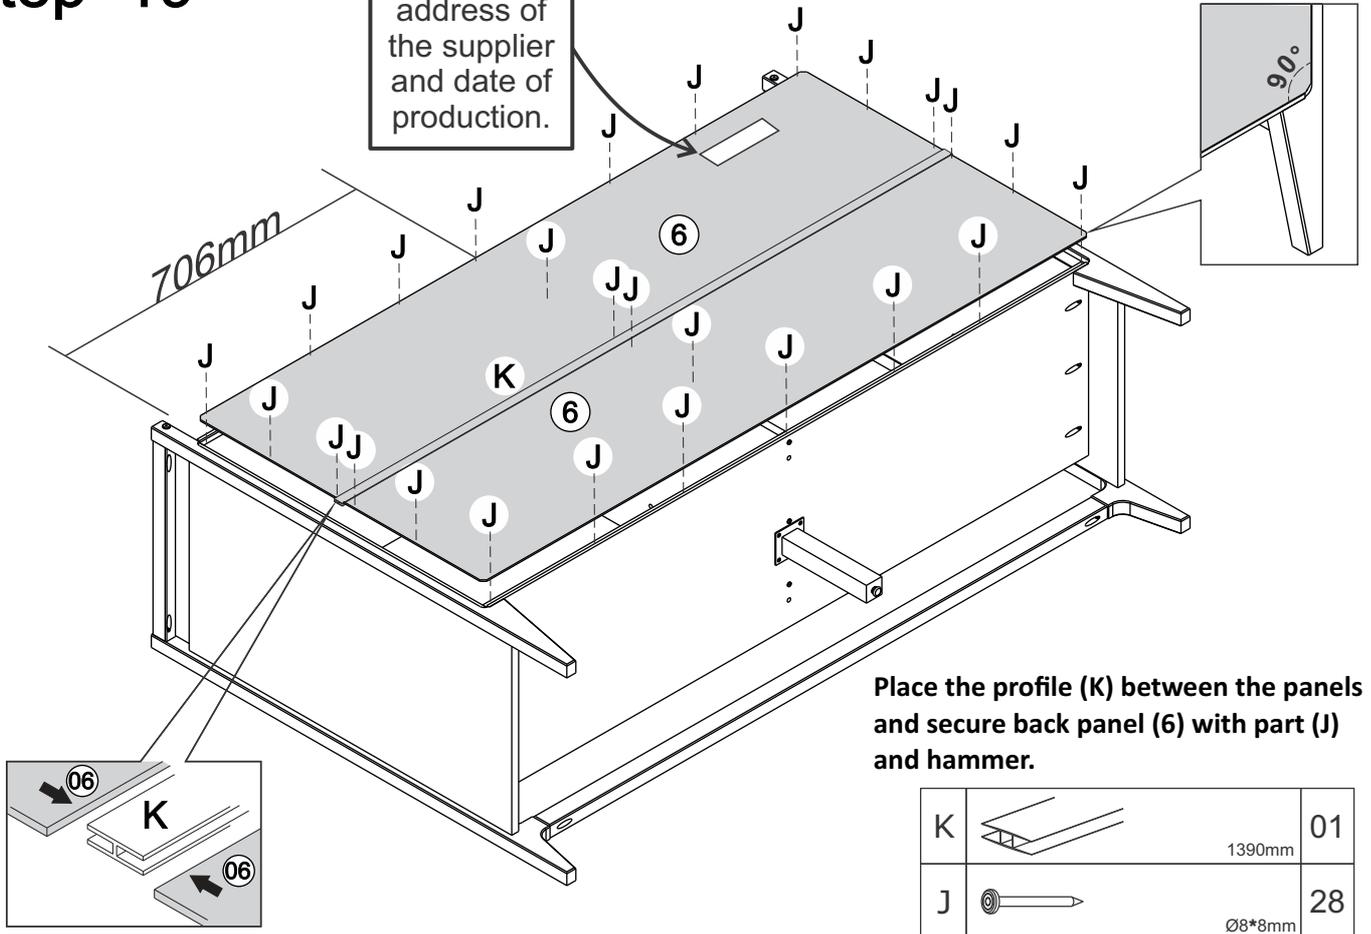


Place the profile (K) between the panels and secure back panel (6) with part (J) and hammer.

K		1390mm	01
J		Ø8*8mm	28

Step 20

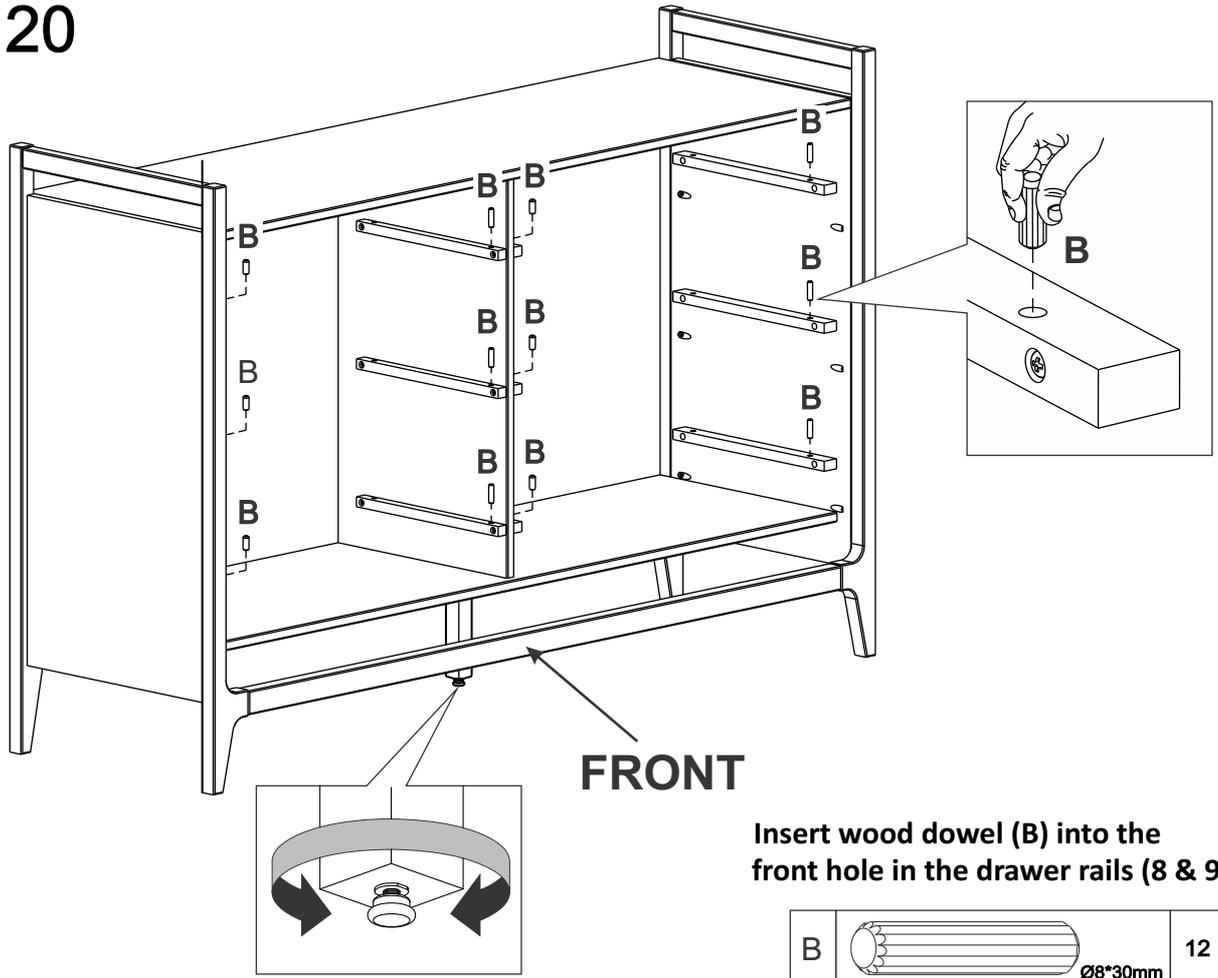


Insert wood dowel (B) into the front hole in the drawer rails (8 & 9)

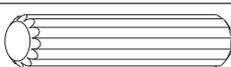
B		Ø8*30mm	12
---	---	---------	----

Step 21

Put protection so that no damage occurs

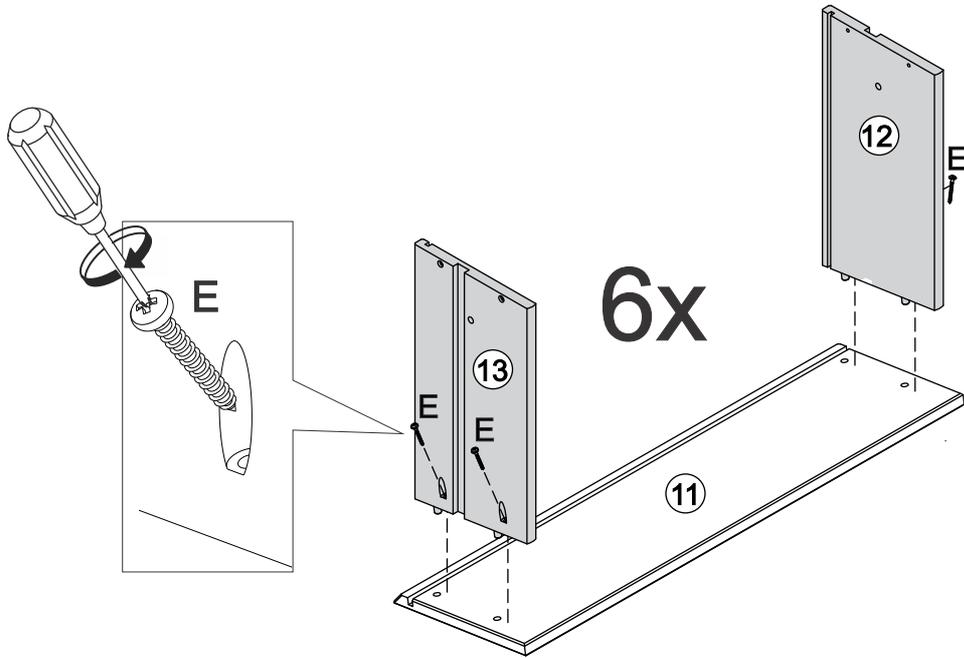


Attach parts (12,13) to part (11), with screws(E) and philips head screwdriver.

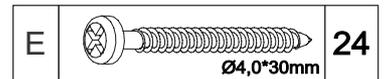


Step 22

Put protection so that no damage occurs

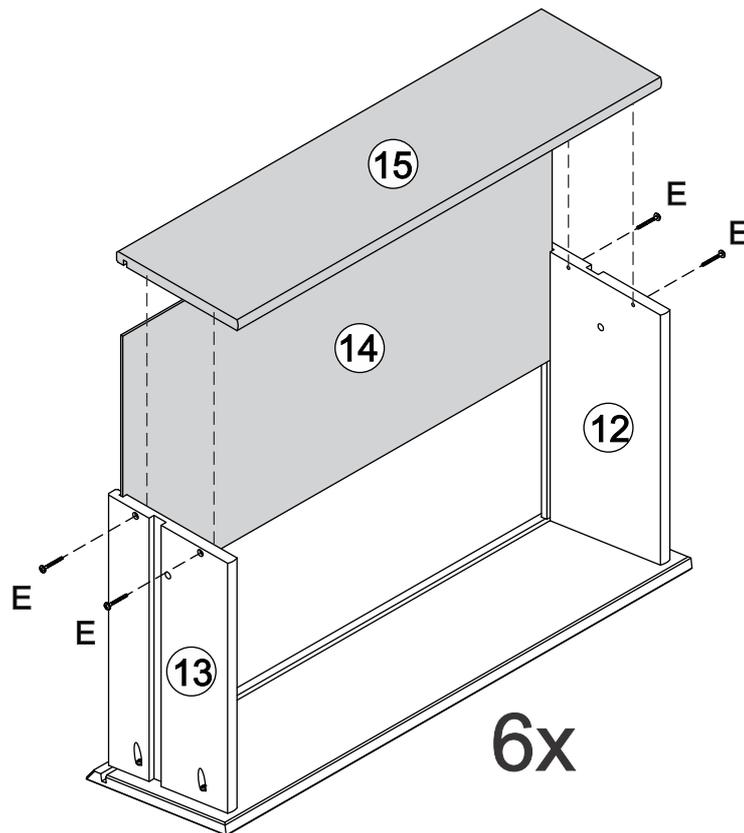


Insert panel (14) into parts (12, 13). Secure part (15) to part (12, 13) with a philips head screwdriver.

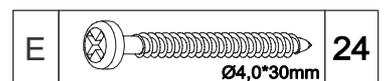

Step 23

Put protection so that no damage occurs

The assembled drawer with this warning must be placed on top of the unit.

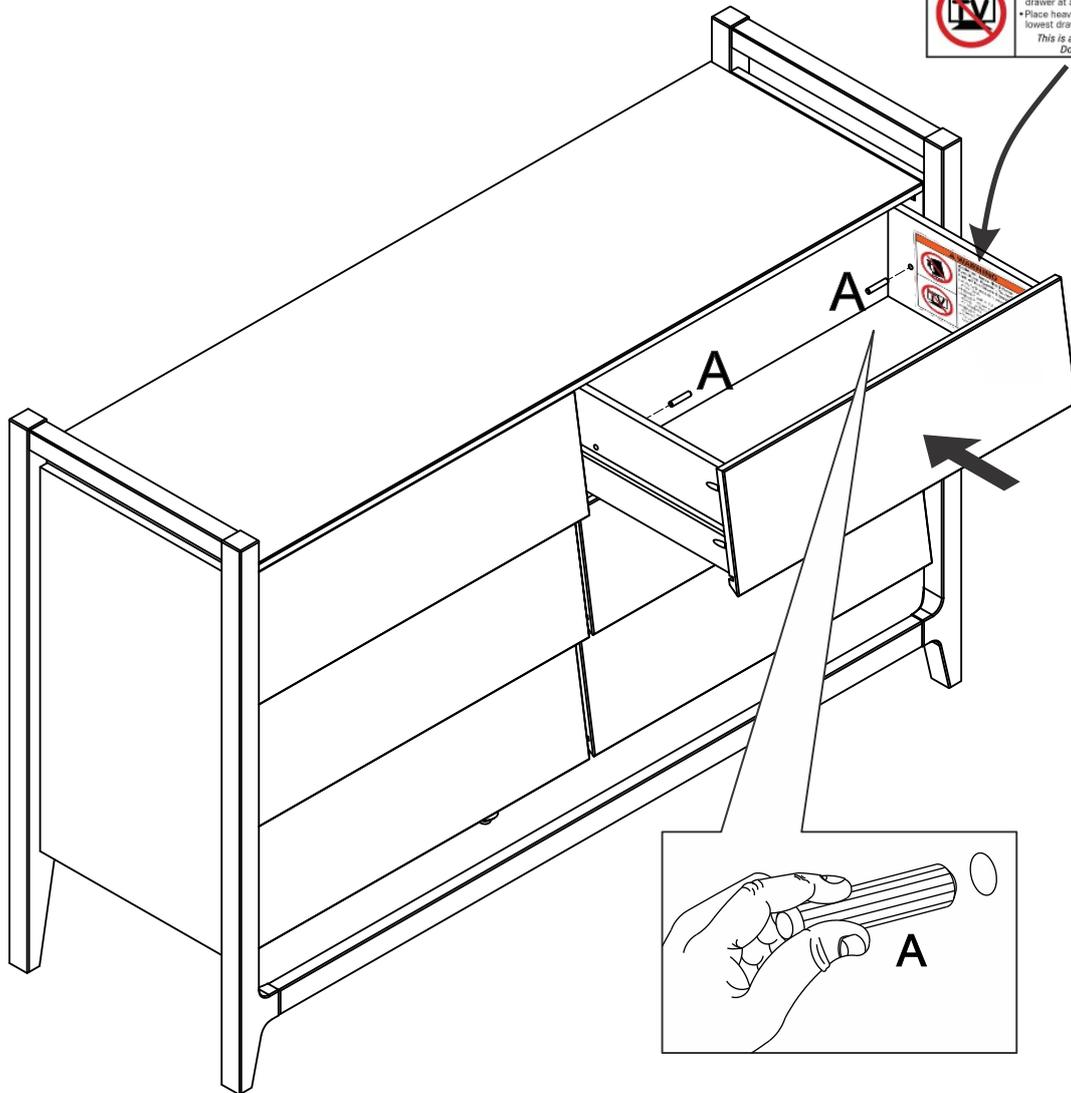

Insert wood dowel (A) on the inside of all drawers, with the drawer inside the unit, after having passed the wood dowel that is in the runner.



Step 24

WARNING





Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall anchor and hardware are included with this product.

Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Attach screw (G) into washer (P), securing wall anchor (M) at the top middle part (1).


Drill your wall with a 6mm drill (not included) and insert hardware (Q), securing wall anchor (O) with washer (P) and screw (E) in the wall.

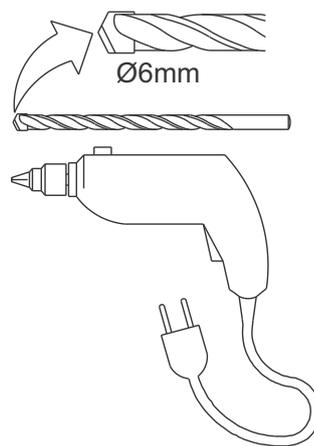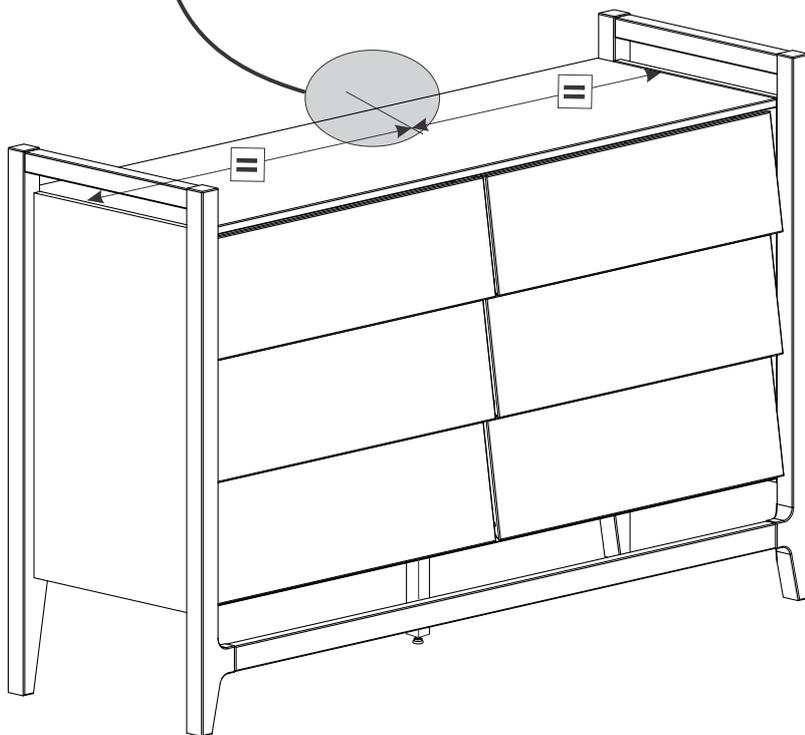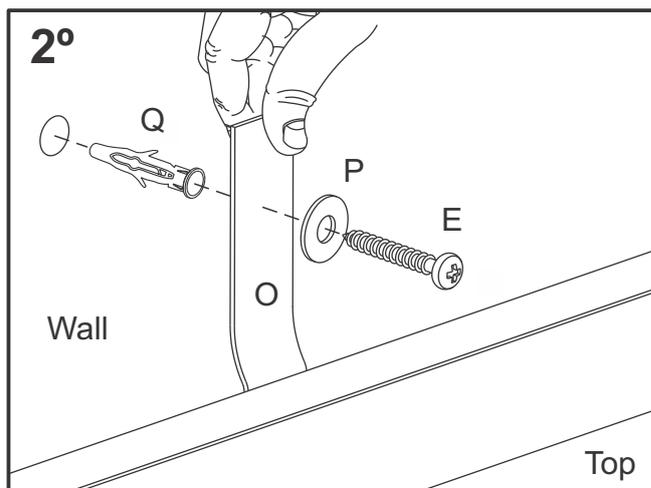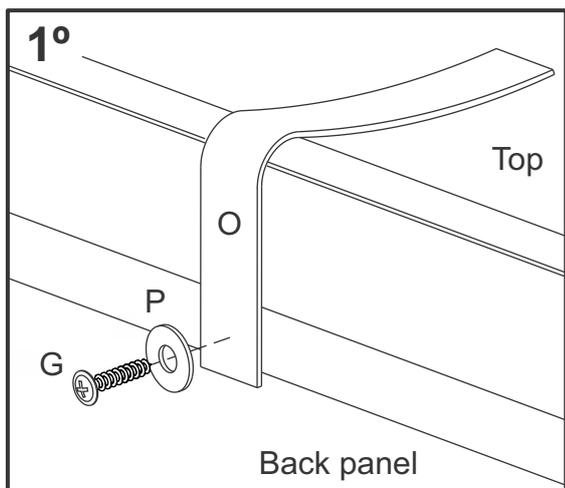

E	Ø4,0*30mm	01
G	Ø3,5*16mm	01
Q		01
P		02
O		01

Name and address information for the manufacturer responsible for the anti-tip hardware and date of production can be found on the label on the back of the furniture.

Step 25

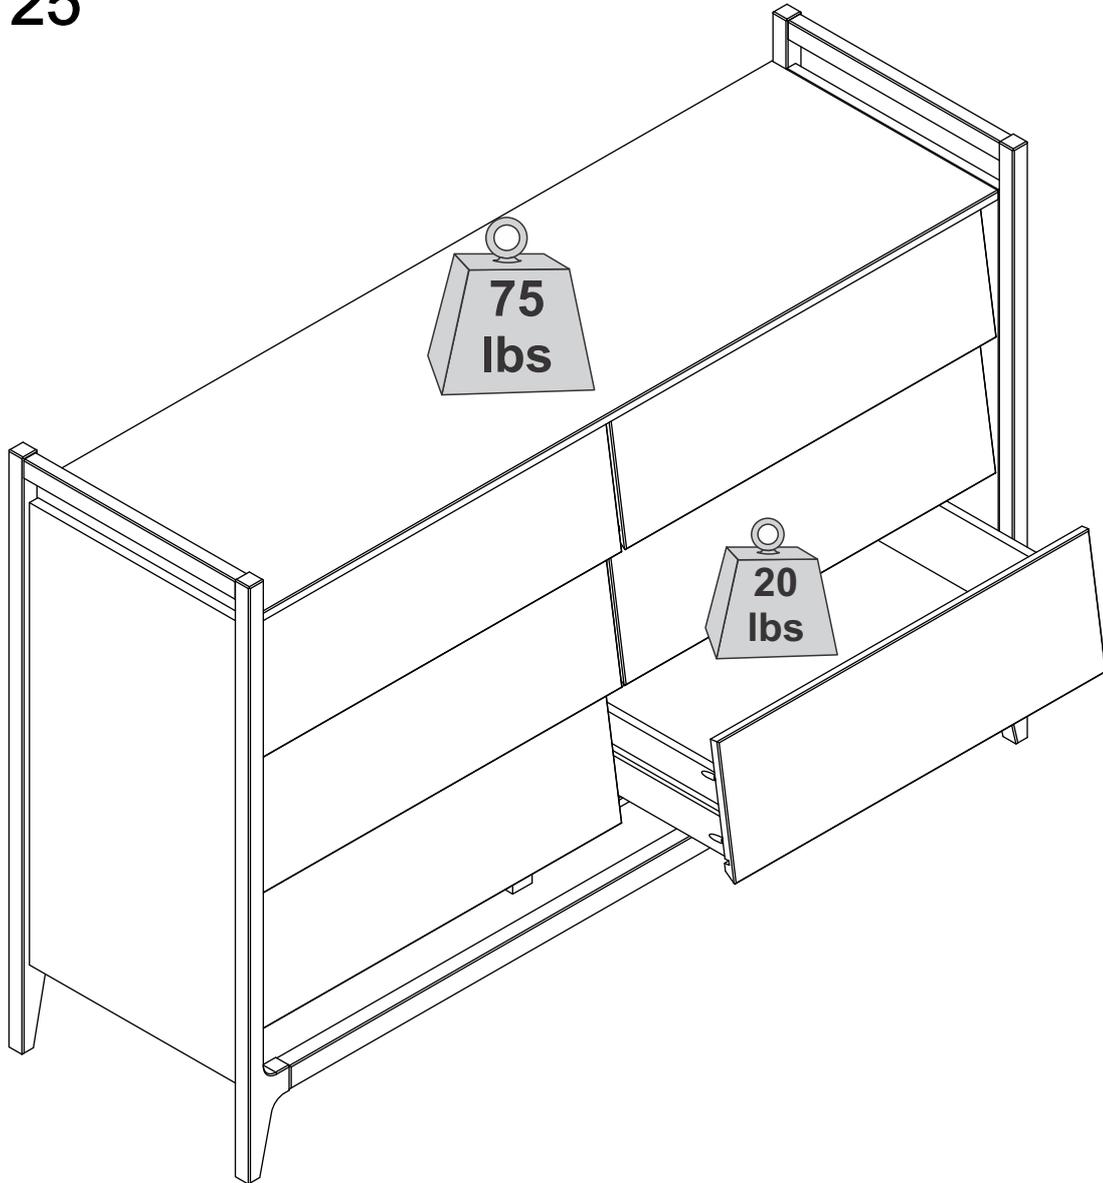

Assembly Complete!

Maintenance Guide

To maintain long term performance and easy gliding of your solid wood drawers, we recommend applying wax to the wooden guide rails.

1. Bee's wax is recommended or Paraffin wax from a standard candle can be used.
2. Apply the wax by rubbing it on the wooden guide rails where there is wood-on-wood contact when opening and closing the drawer. (Wax should be room temperature, do not melt the wax onto the wood)
3. Wax should be applied every few months for the first year and then only when needed after that to keep the drawers sliding smoothly.