

ASSEMBLY INSTRUCTION FOR

MODULAR OTTOMAN

U-8540-9440-000 / U-8540-9442-000 / U-8540-9443-000

U-8540-9444-000 / U-8540-9446-000 / U-8540-10471-000

CAUTION: Please read instruction thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assembly your newly purchased product correctly and efficiently.

PART LIST


| NO. | PART DESC | CODE | Q'TY |
|-----|-----------|-------------|------|
| A | CHAIR | | 1 |
| B | LEGS | PU-8540-LEG | 4 |

HARDWARE LIST


| NO. | | HARDWARE DESC | CODE | Q'TY |
|-----|---|--------------------------|--------------|------|
| 1 |  | BOLT Ø5/16"*70 | PU-8540-HW | 4 |
| 2 |  | LOCK WASHER Ø9*Ø14 | | 4 |
| 3 |  | FLAT WASHER Ø5/16"*Ø19 | | 4 |
| 4 |  | ALLEN KEY M5*65 | | 1 |
| 5 |  | ANTI SLIDING PAD Ø50*2MM | PU-8540-CLIP | 4 |

 Only tighten all bolts when all bolts aligned with bolt inserts


Step 1

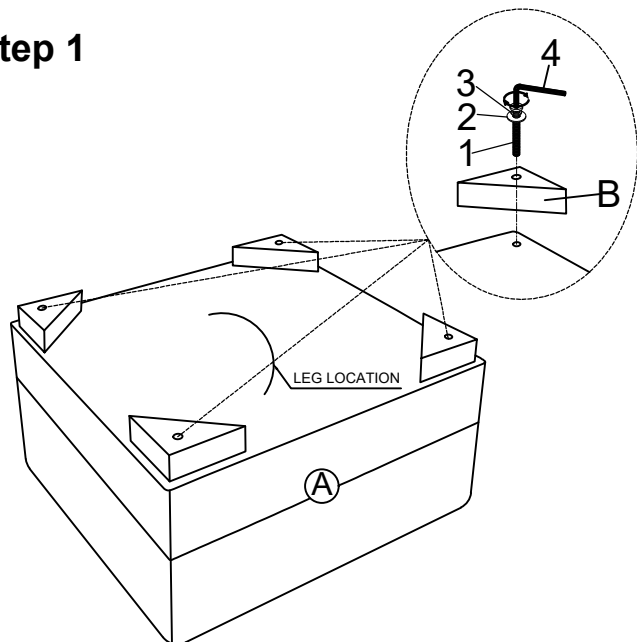

Step 2

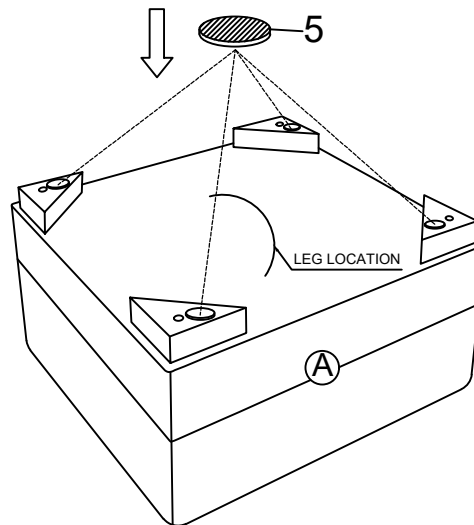

COMPLETE

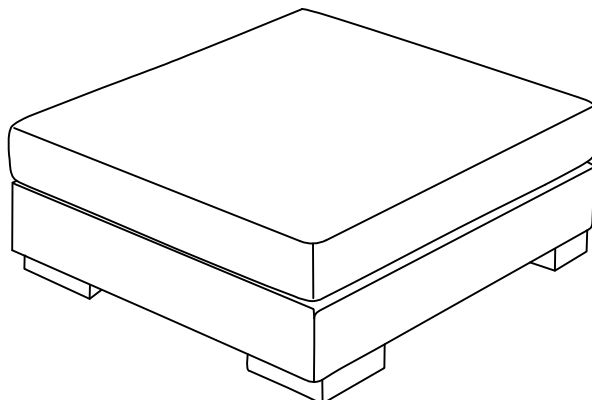






MADE IN VIETNAM



ASSEMBLY INSTRUCTION FOR

MODULAR OTTOMAN

U-8540-9440-000 / U-8540-9442-000 / U-8540-9443-000

U-8540-9444-000 / U-8540-9446-000 / U-8540-10471-000

| PART | QTY |
|--|-----|
|  LHF CHAIR | x1 |
|  ARMLESS CHAIR | x3 |
|  WEDGE | x1 |
|  RHF CHAISE | x1 |
|  OTTOMAN | x1 |

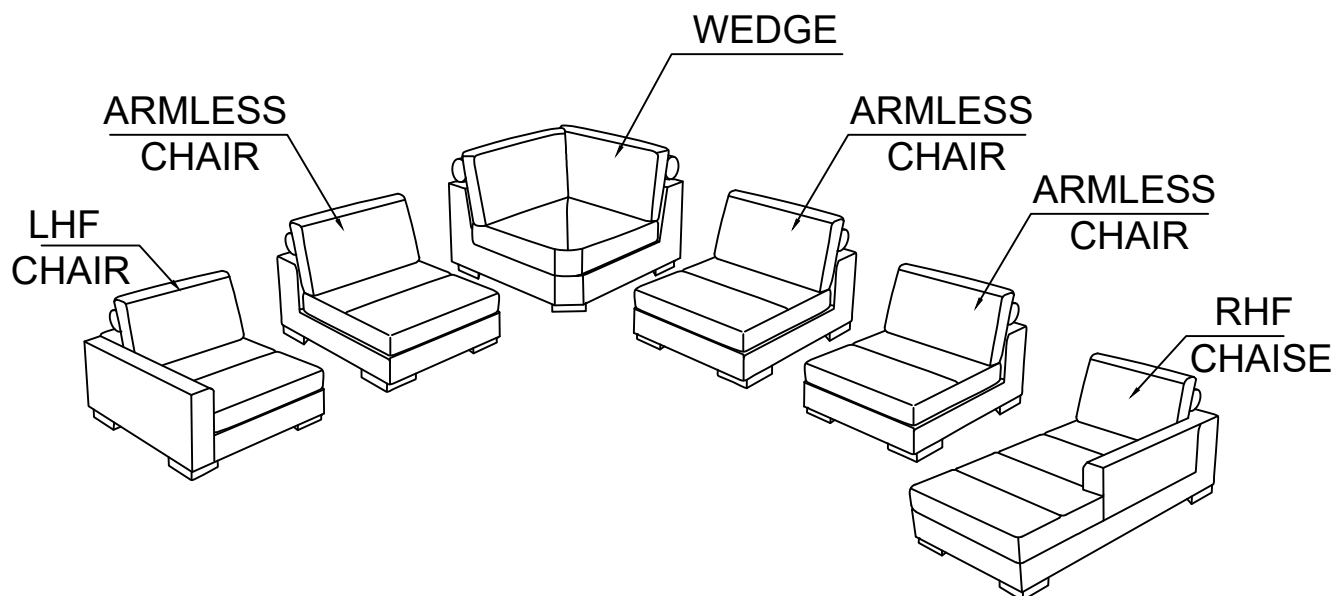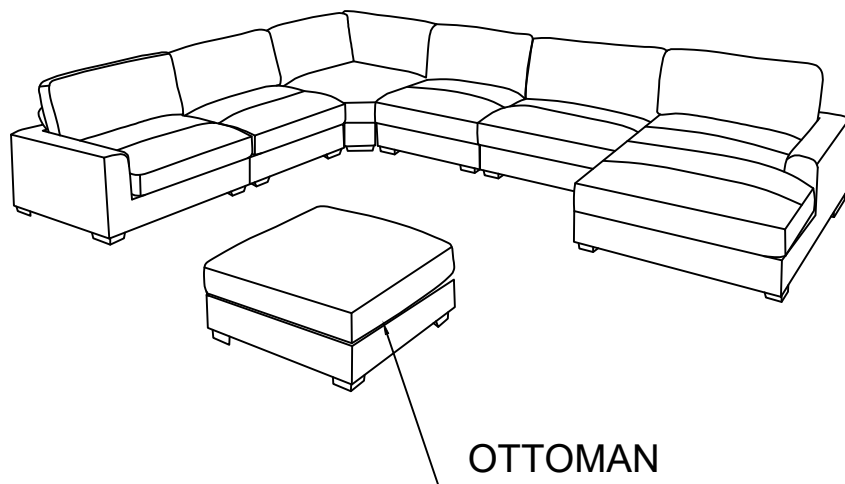






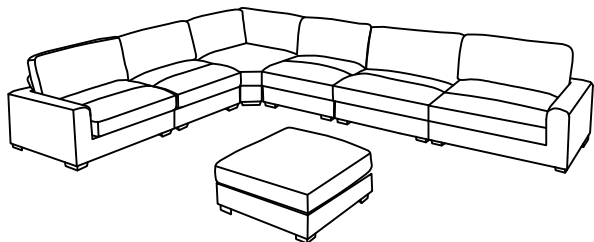
ASSEMBLY INSTRUCTION FOR






MODULAR OTTOMAN


U-8540-9440-000 / U-8540-9442-000 / U-8540-9443-000





U-8540-9444-000 / U-8540-9446-000 / U-8540-10471-000


| | | | | | |
|--|---------------|----|---|-----------|----|
|  | LHF CHAIR | x1 |  | WEDGE | x1 |
|  | ARMLESS CHAIR | x3 |  | RHF CHAIR | x1 |
|  | OTTOMAN | x1 | | | |

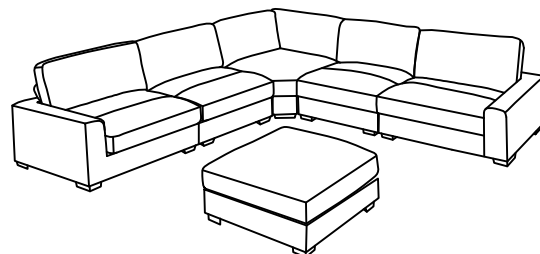






| | | | | | |
|---|---------------|----|---|-----------|----|
|  | LHF CHAIR | x1 |  | WEDGE | x1 |
|  | ARMLESS CHAIR | x2 |  | RHF CHAIR | x1 |
|  | OTTOMAN | x1 | | | |

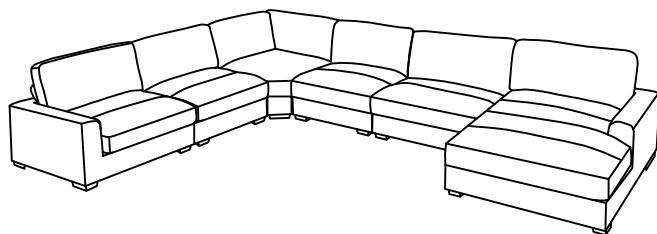






| | | | | | |
|--|---------------|----|---|-----------|----|
|  | LHF CHAIR | x1 |  | WEDGE | x1 |
|  | ARMLESS CHAIR | x3 |  | RHF CHAIR | x1 |

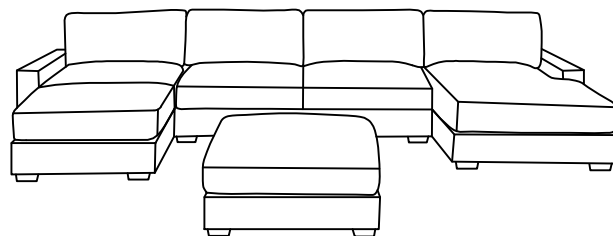


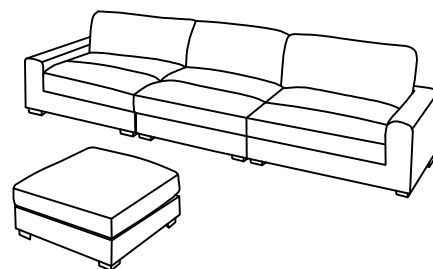
| | | | | | |
|---|---------------|----|---|-----------|----|
|  | LHF CHAIR | x1 |  | RHF CHAIR | x1 |
|  | ARMLESS CHAIR | x2 |  | OTTOMAN | x2 |



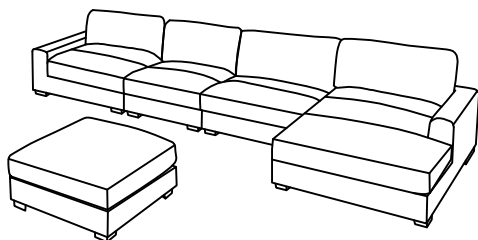


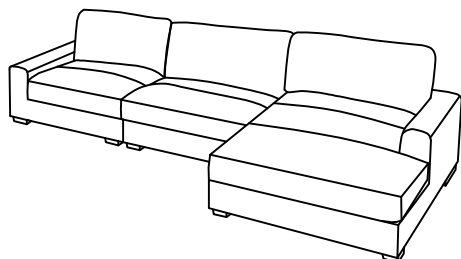
| | | | | | |
|--|---------------|----|---|-----------|----|
|  | LHF CHAIR | x1 |  | RHF CHAIR | x1 |
|  | ARMLESS CHAIR | x2 |  | OTTOMAN | x1 |





| | | | | | |
|---|---------------|----|---|-----------|----|
|  | LHF CHAIR | x1 |  | RHF CHAIR | x1 |
|  | ARMLESS CHAIR | x1 |  | OTTOMAN | x1 |



| | | | | | |
|--|---------------|----|---|-----------|----|
|  | LHF CHAIR | x1 |  | RHF CHAIR | x1 |
|  | ARMLESS CHAIR | x1 | | | |



| | | | | | |
|---|-----------|----|---|-----------|----|
|  | LHF CHAIR | x1 |  | RHF CHAIR | x1 |
|---|-----------|----|---|-----------|----|

