

Universal Bed Frame Assembly

USE WITH MODEL UTKG6, I-3976B

NEED HELP?

1-800-444-8444

warranty@risehome.com

INCLUDED PARTS

FOR ALL MODELS

Side Rail Assembly with Cross Arm
2 pcs

Center Rail
(not used for Twin)
1 pcs

End Caps
2 pcs

Keyhole Plug Locks
(not used for Twin)
4 pcs

Nuts

Screws

King Extenders
(used for King & Cal-King only)
2 pcs

FOR MODEL UTKG6


Glides
6 pcs

FOR MODEL I-3976B

Plastic Sockets
4 pcs

Rug Rollers
4 pcs

Glides
2 pcs

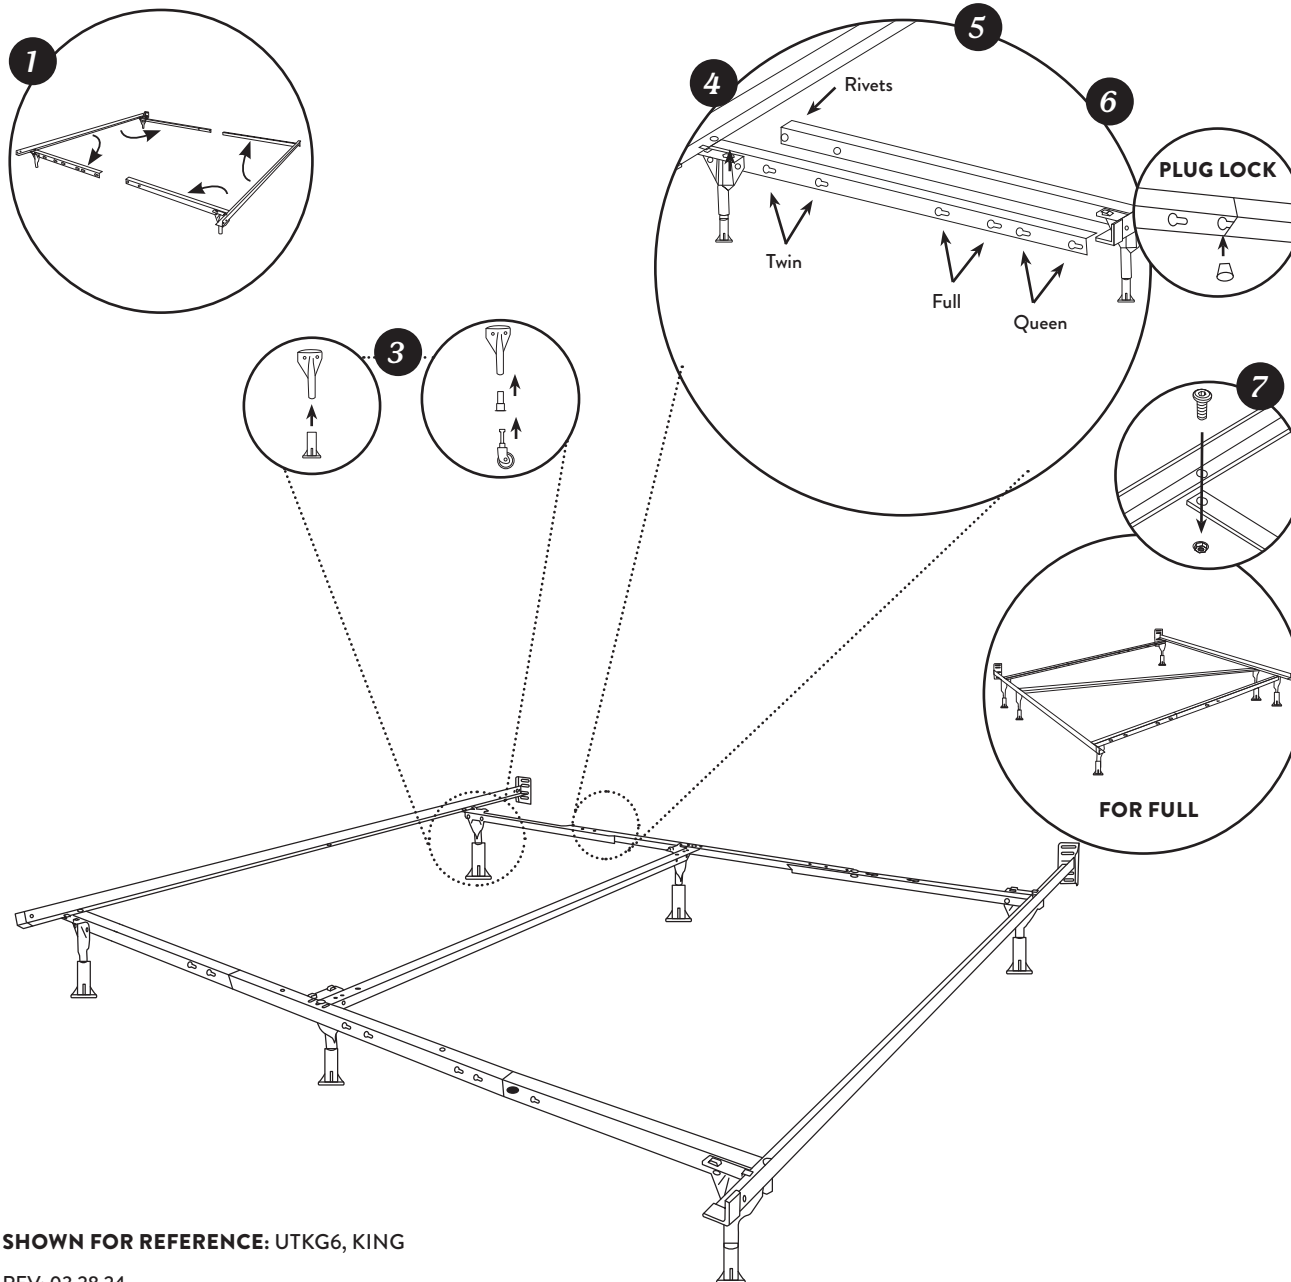

1. Swing out cross arms from the side rails to 90° angles.
2. Depending on the model purchased, install glides over the 4 legs on the cross arms **OR** 4 plastic sockets with rug rollers on the cross arms. The locking rollers should be at the foot end.
3. Locate the key hole slots that correspond to the bedding size you need.

FOR TWIN:

4. Insert rivets into key hole slots, then slide to lock in place. Your Twin bed is ready to use.

FOR FULL:

6. Insert rivets into key hole slots, then slide to lock in place. Insert plug locks at end of overlap to secure.
7. Align the center rail's holes with the holes to the right of the middle of the side rail. Center rail should be diagonal. Secure with screws and nuts. Continue to Step #14.

CONTINUE TO NEXT PAGE →

SHOWN FOR REFERENCE: UTKG6, KING

REV: 03.28.24

Universal Bed Frame Assembly

USE WITH MODEL UTKG6, I-3976B

NEED HELP?

1-800-444-8444

warranty@risehome.com

INCLUDED PARTS

FOR ALL MODELS

Side Rail Assembly with Cross Arm
2 pcs

Center Rail
(not used for Twin)
1 pcs

End Caps
2 pcs

Keyhole Plug Locks
(not used for Twin)
4 pcs

Nuts

Screws

King Extenders
(used for King & Cal-King only)
2 pcs

FOR MODEL UTKG6


Glides
6 pcs

FOR MODEL I-3976B

Plastic Sockets
4 pcs

Rug Rollers
4 pcs

Glides
2 pcs

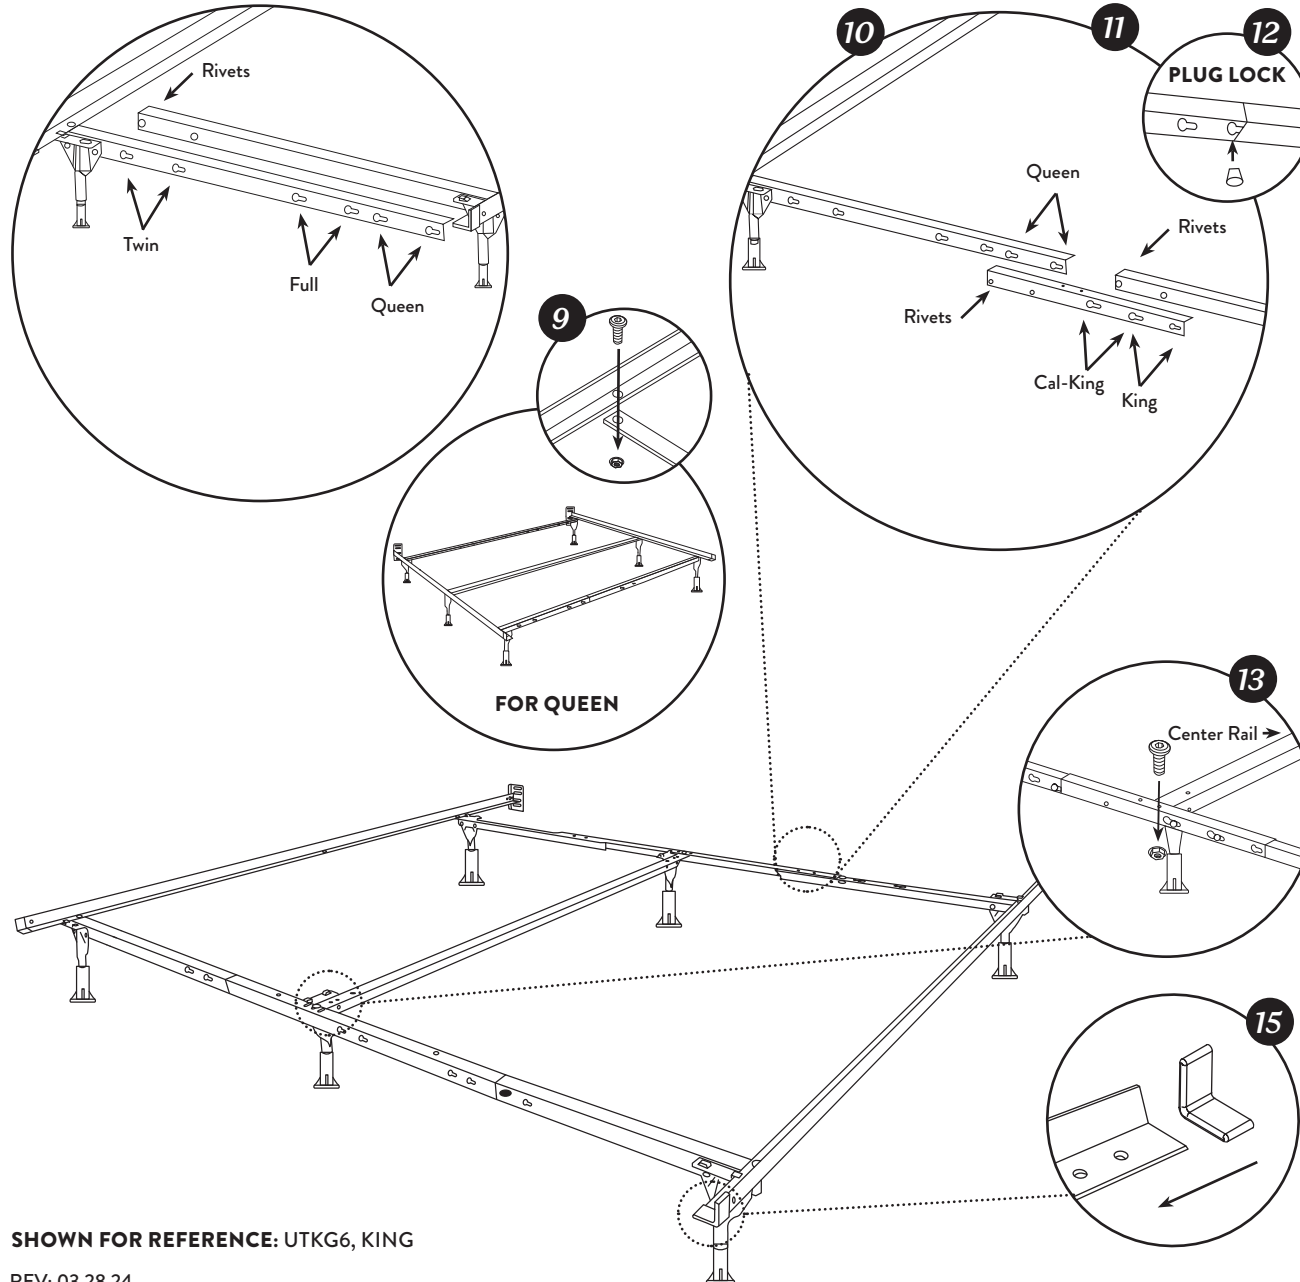

FOR QUEEN:

8. Insert rivets into key hole slots, then slide to lock in place.
9. Align the center rail's holes with the middle of the side rails. Secure with screws and nuts. Continue to Step #14.

FOR KING AND CAL-KING:

10. Insert rivets on the king extender into the queen keyhole setting.
11. Locate keyhole slots on the king extender for king or cal-king size, and insert rivets on the cross arm into the selected keyholes and slide to lock.
12. Insert plug locks to secure the overlap. Repeat on the other end.
13. Attach the center rail parallel to the side rails, in the middle of the king extenders. Secure the center rail with screws and nuts.
14. Insert glides over the legs on the center rail.
15. Place end caps on frame corners.