



INSTRUCTIONS:


PLACE THE LEGS (LEFT OR RIGHT) ON EACH SIDE OF THE HEADBOARD MAKING SURE TO PLACE THEM ON THE CORRECT SIDE.
AT THE BACK OF THE HEADBOARD AND THE BACK OF EACH LEG THERE IS A COLORED LABEL.
EACH LEG MUST BE ASSEMBLED TO THE SIDE OF THE HEADBOARD WITH ITS MATCHING COLOR.

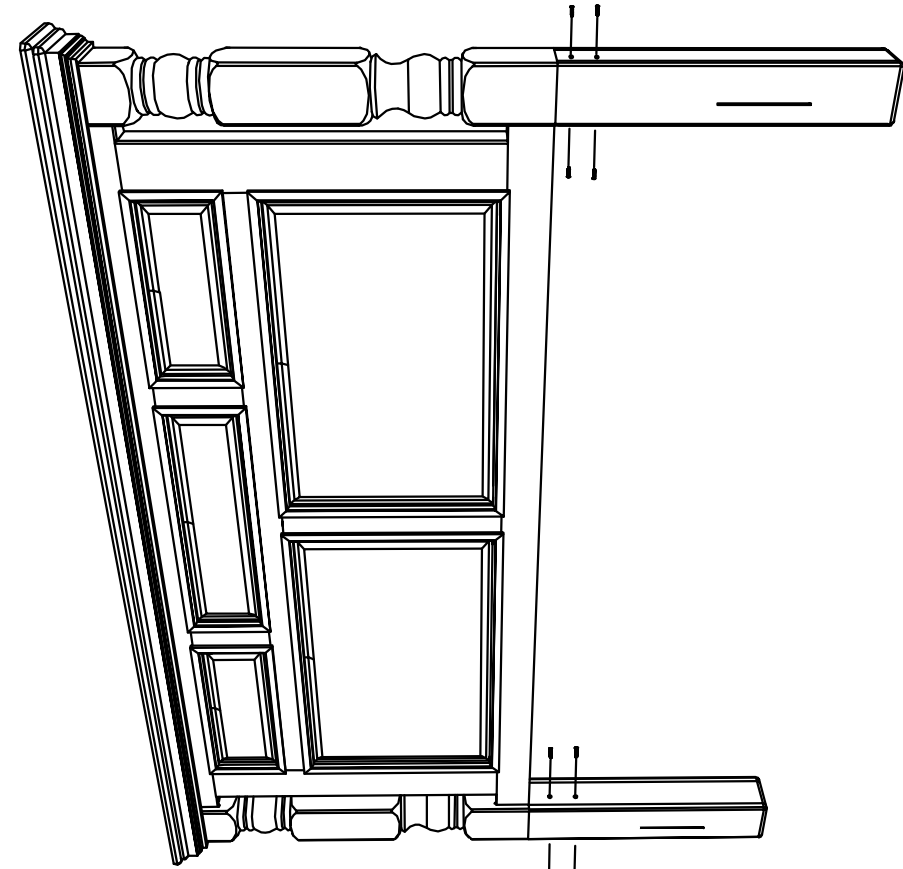

THE LEG SHOULD BE PLACED AS SHOWN ON DIAGRAM, APPLYING FORCE IN THE CORRECT DIRECTION.

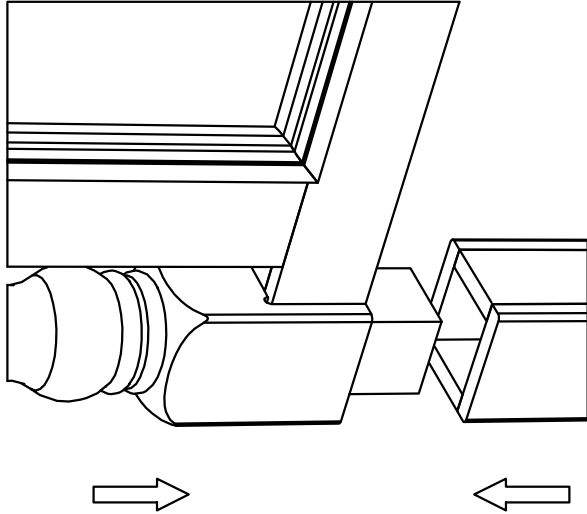

ONCE THE LEG IS INSTALLED, IT MUST BE COMPLETELY ALIGNED AND SIT FLUSH WITH THE HEADBOARD.

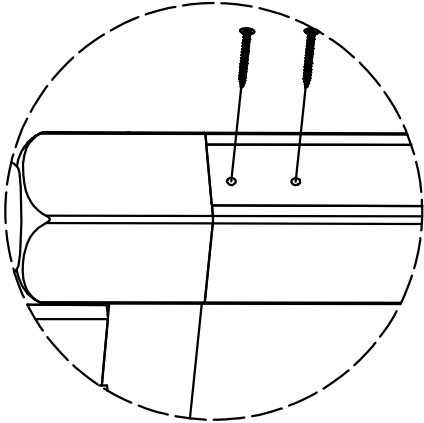

INSERT THE SCREWS AS SHOWN IN THE DIAGRAM

HARDWARE		
DESCRIPTION	#PCS	
FLAT HEAD SCREW 12 X 2-1/2"	8	

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT



ASSEMBLY INSTRUCTIONS

I-HBD-C002