




Assembly Instructions





1951-6 Mirror


Caution: Please wipe all drawer interiors thoroughly with a smooth rag before use.
there may be some residual dust from the production process

PARTS LIST

No	DESCRIPTION	Q'TY
P1	DRESSER 	1 pc
P2	MIRROR 	1 pc
P3	SUPPORT RAILS 	2 pcs

HARDWARE LIST

No	DESCRIPTION	Q'TY
H1	 JCBC BOLT 1/4" -18x1 3/8"	8 pcs
H2	 SPRING WASHER 1/4"x11/32"x15/32"x1/21	8 pcs
H3	 FLAT WASHER 1/4"x11/32"x15/32"x1/21	8 pcs
H4	 ALLEN KEY M4	1 pc

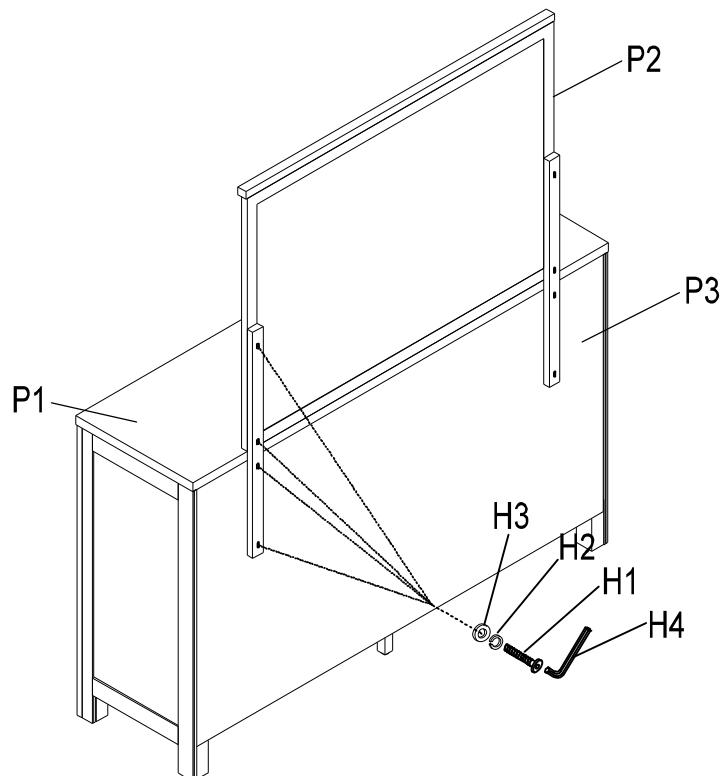

Made In Vietnam