
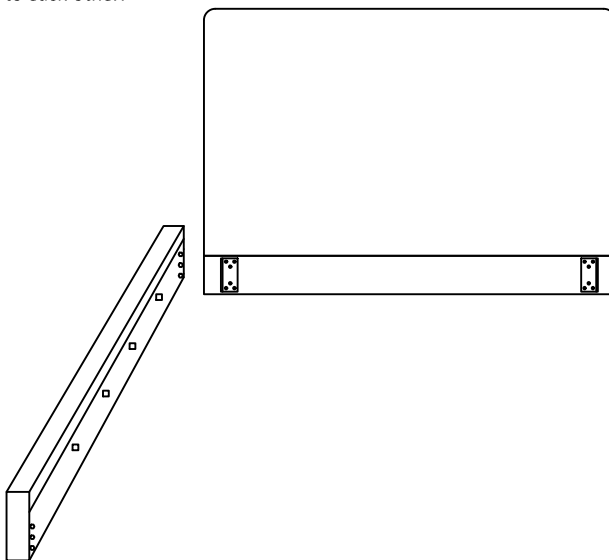


**1.**

Position the bed's headboard and position the bed's left-rail so that both the headboard's bolder and left-rail's holder are next to each other.


**2.**

Align and connect the side rail's holder to the headboard's bolts.

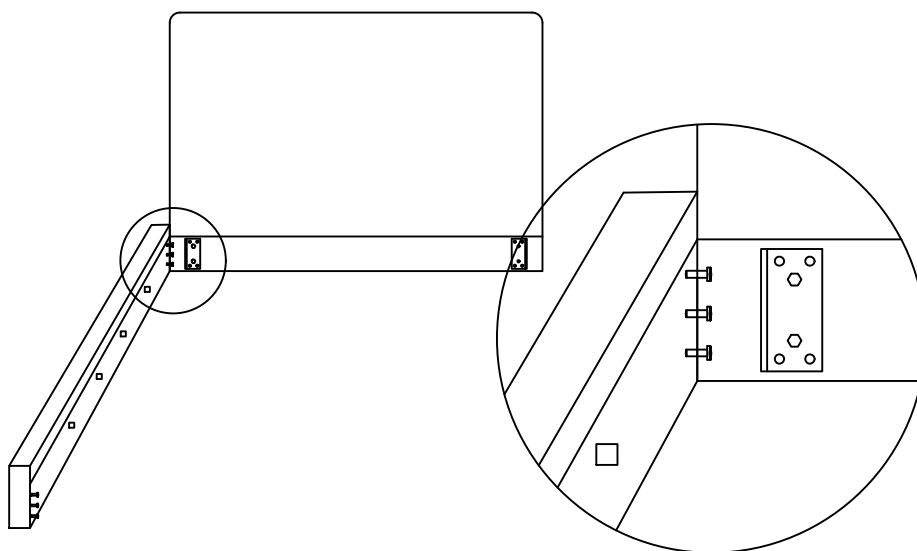


**3.**

Secure the left-rail's holder to the headboard's bolts by tightening the bolts.

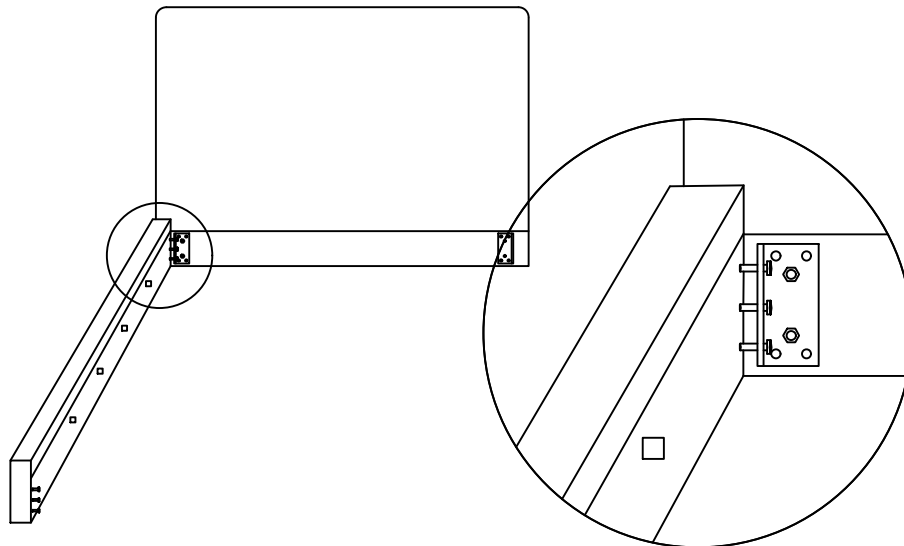
**4.**

Tools can be used to tighten bolts and ensure that side rail is firmly connected to the headboard.

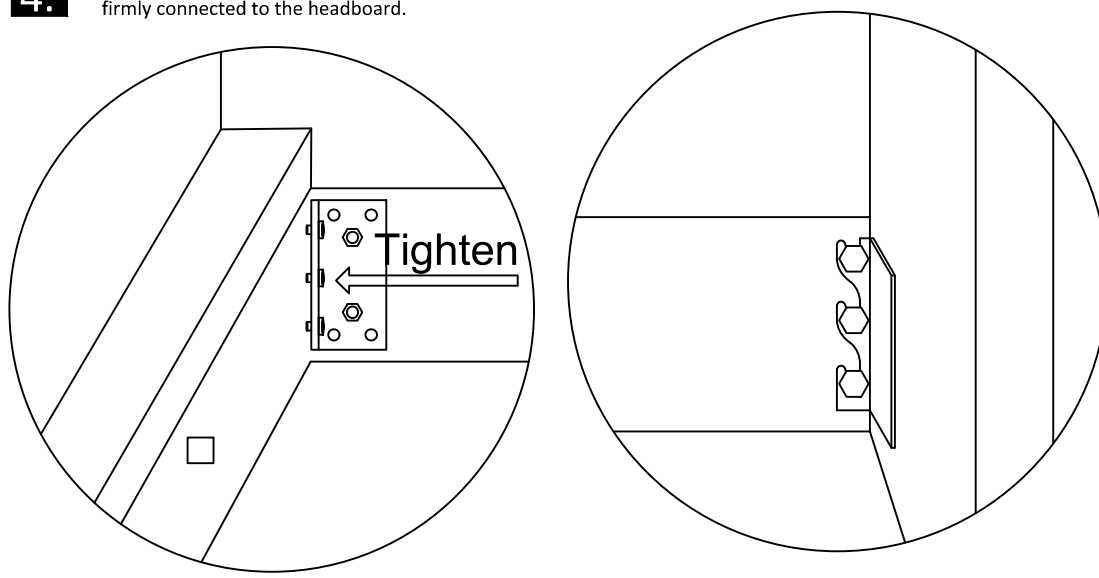


**5.**

Position the bed's headboard and position the bed's left-rail so that both the headboard's bolder and left-rail's holder are next to each other.

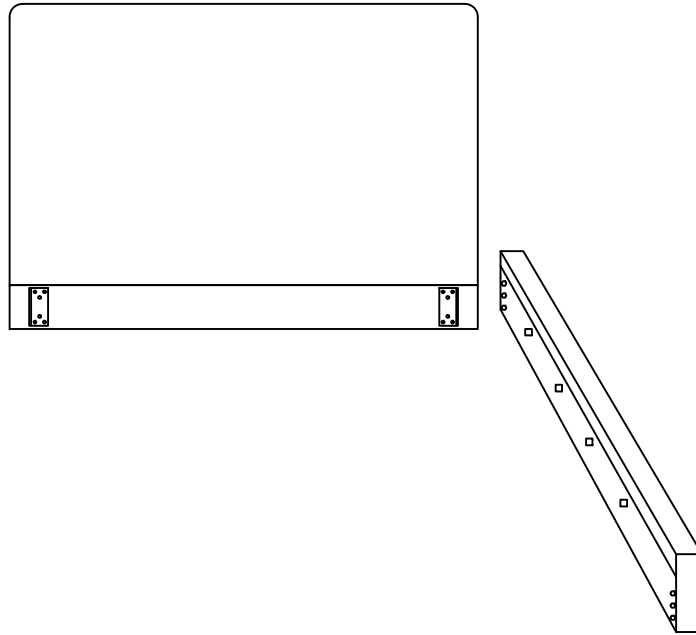
**6.**

Align and connect the side rail's holder to the headboard's bolts.

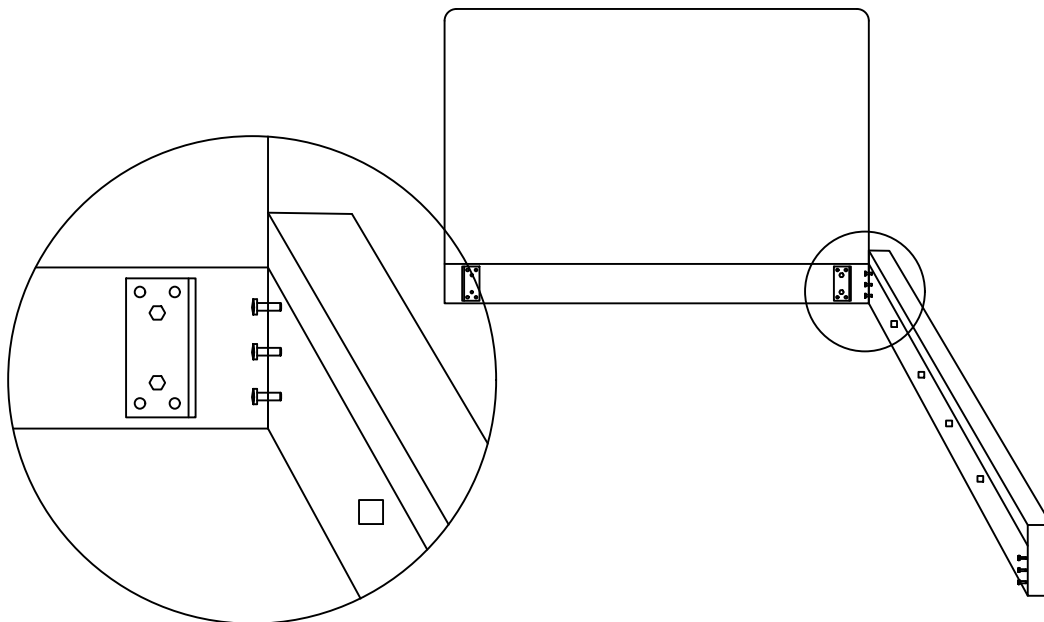


**7.**

Secure the left-rail's holder to the headboard's bolts by tightening the bolts.

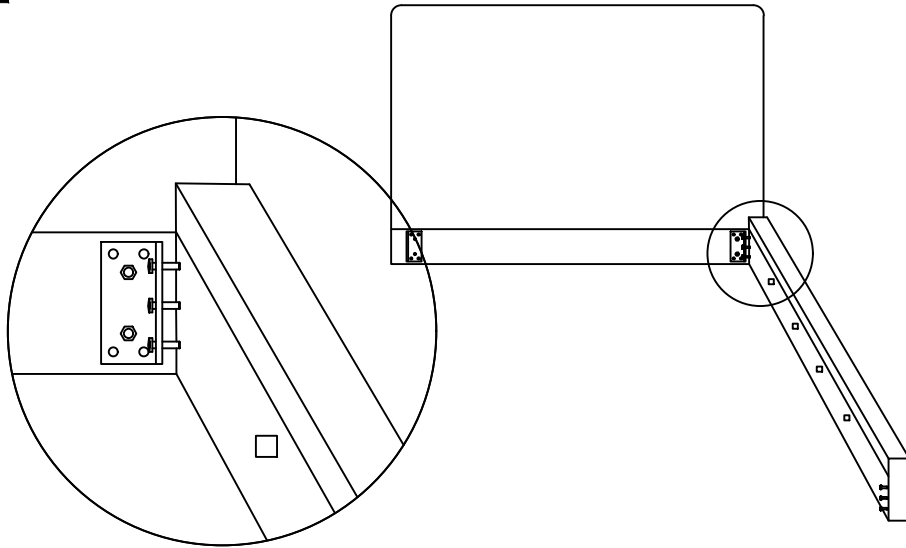


**8.**

Tools can be used to tighten bolts and ensure that side rail is firmly connected to the headboard.

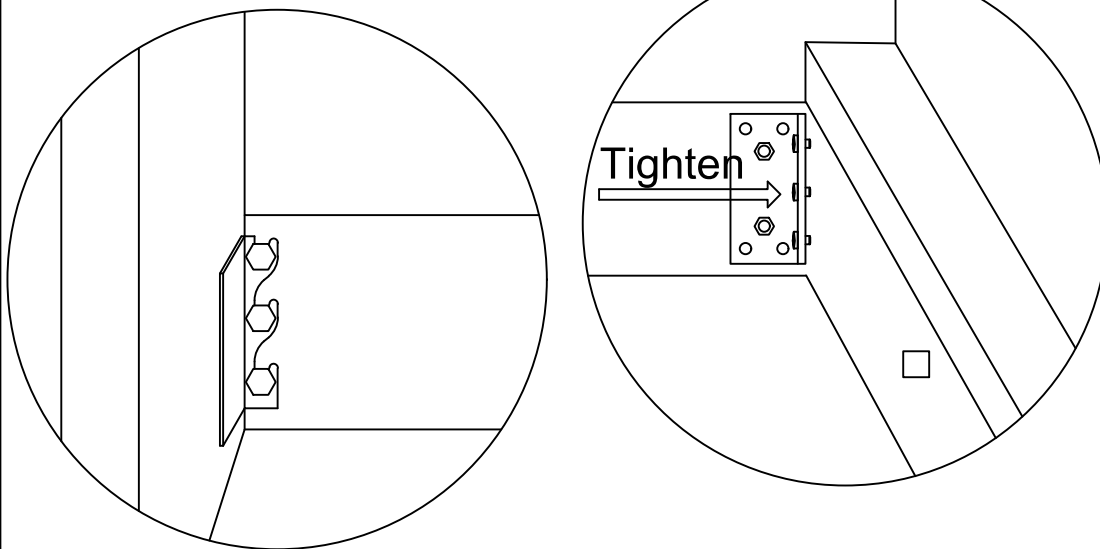


**9.**

Align and attach the footboard's holders to the side rails' bolts.

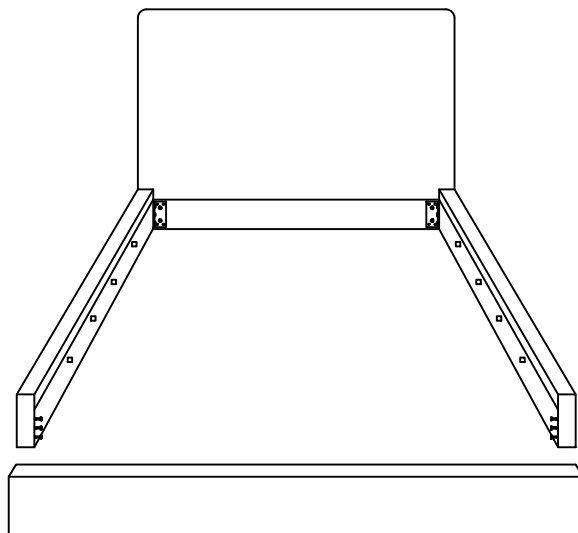
**10**

Tools can be used to tighten bolts and ensure that side rail is firmly connected to the headboard.

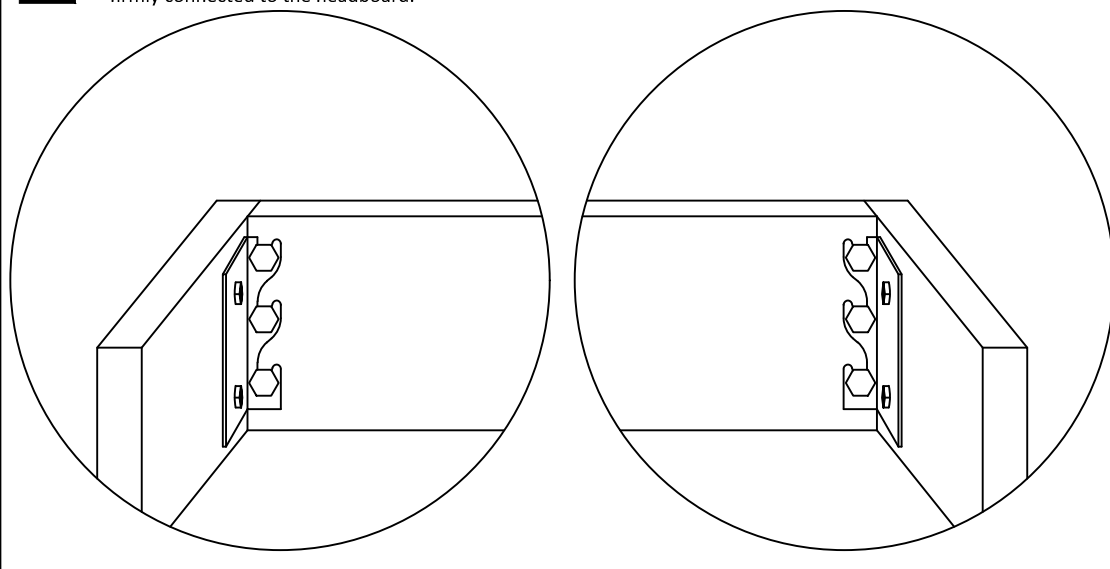


**11**

Insert a wooden slat into the first bracket, identifiable with added metal braces.

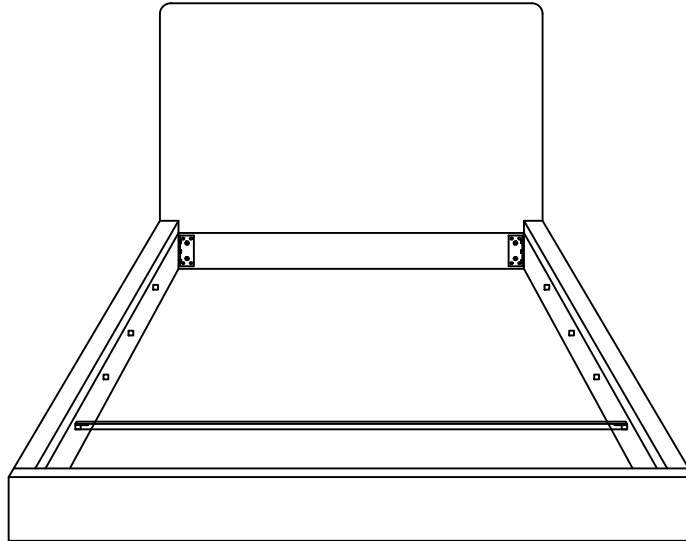

**12**


Insert two square-headed screws into the metal braces of the first slots, securing the first slat.

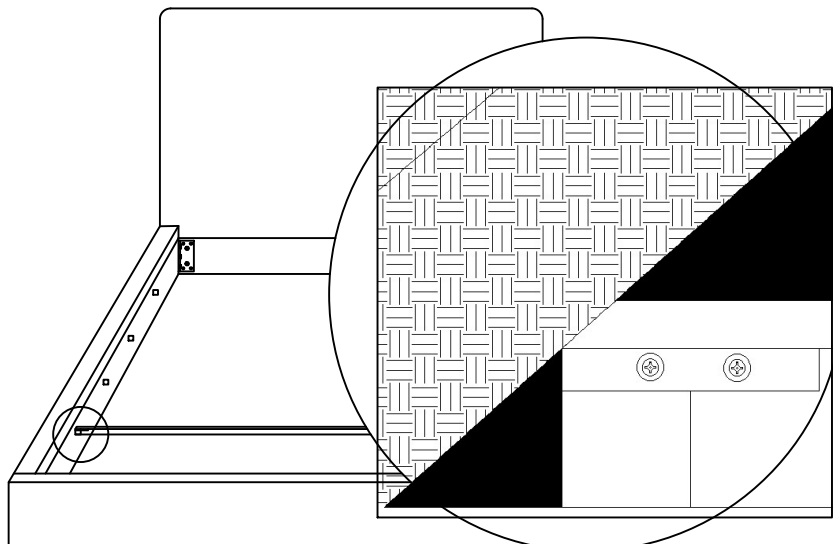




13

Repeat for the other end of the wooden slat and secure with two square-headed screws.

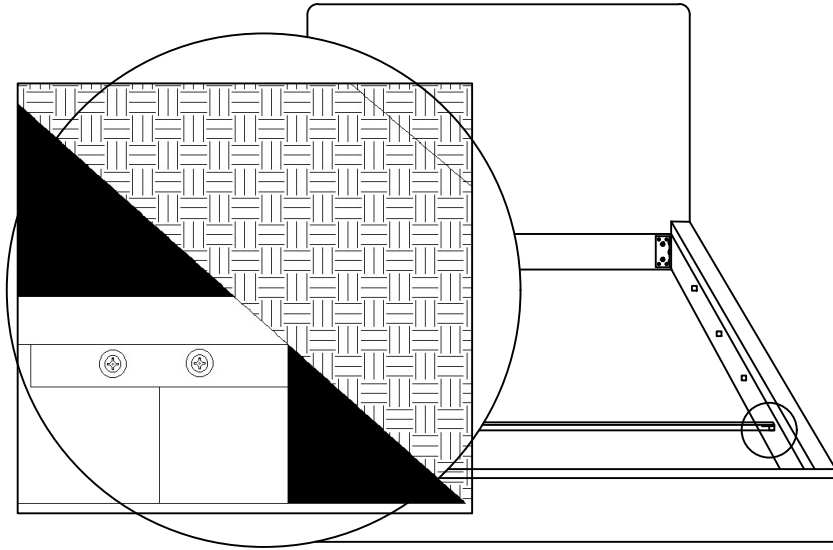


14

Insert remaining wooden slats. Unlike the first slat, these do not have to be screwed in to be secured.

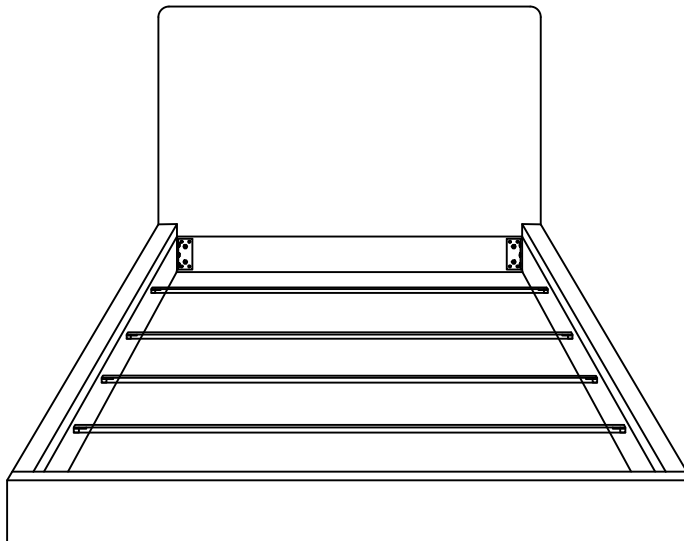

**13** Position both Bunkie boards to lay atop the exposed wooden slats.

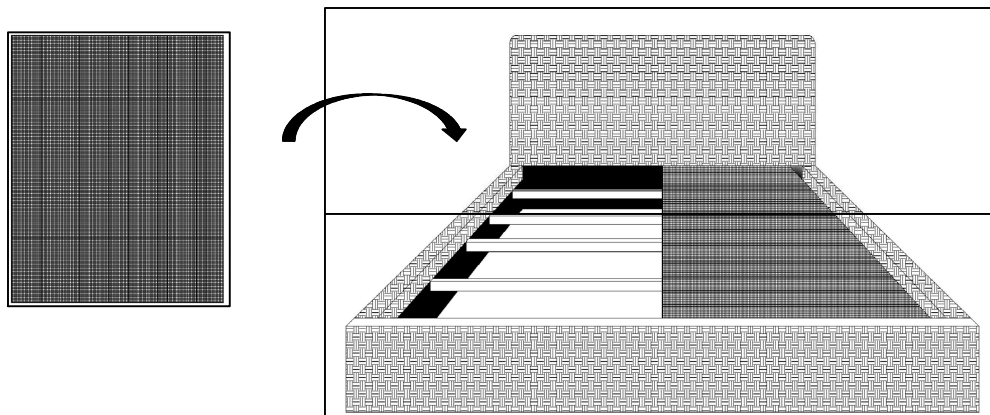

**14** Enjoy your newly assembled bed!

