






# ASSEMBLY INSTRUCTION


MODEL NO: RILEY

| ITEM | DRAWING   | DESCRIPTION             | QTY |
|------|---|-------------------------|-----|
| A    |  | MIRROR                  | 1   |
| B    |  | DRESSER                 | 1   |
| C    |  | MIRROR BACK SUPPORT     | 2   |
| D    |  | CB SCREW<br>(M4 x 32mm) | 8   |
| E    |  | SCREW<br>DRIVER (*)     | 1   |

(\*) The manufacturer does not provide item E

## COMPLETED DRESSER & MIRROR ASSEMBLY

### Step 1

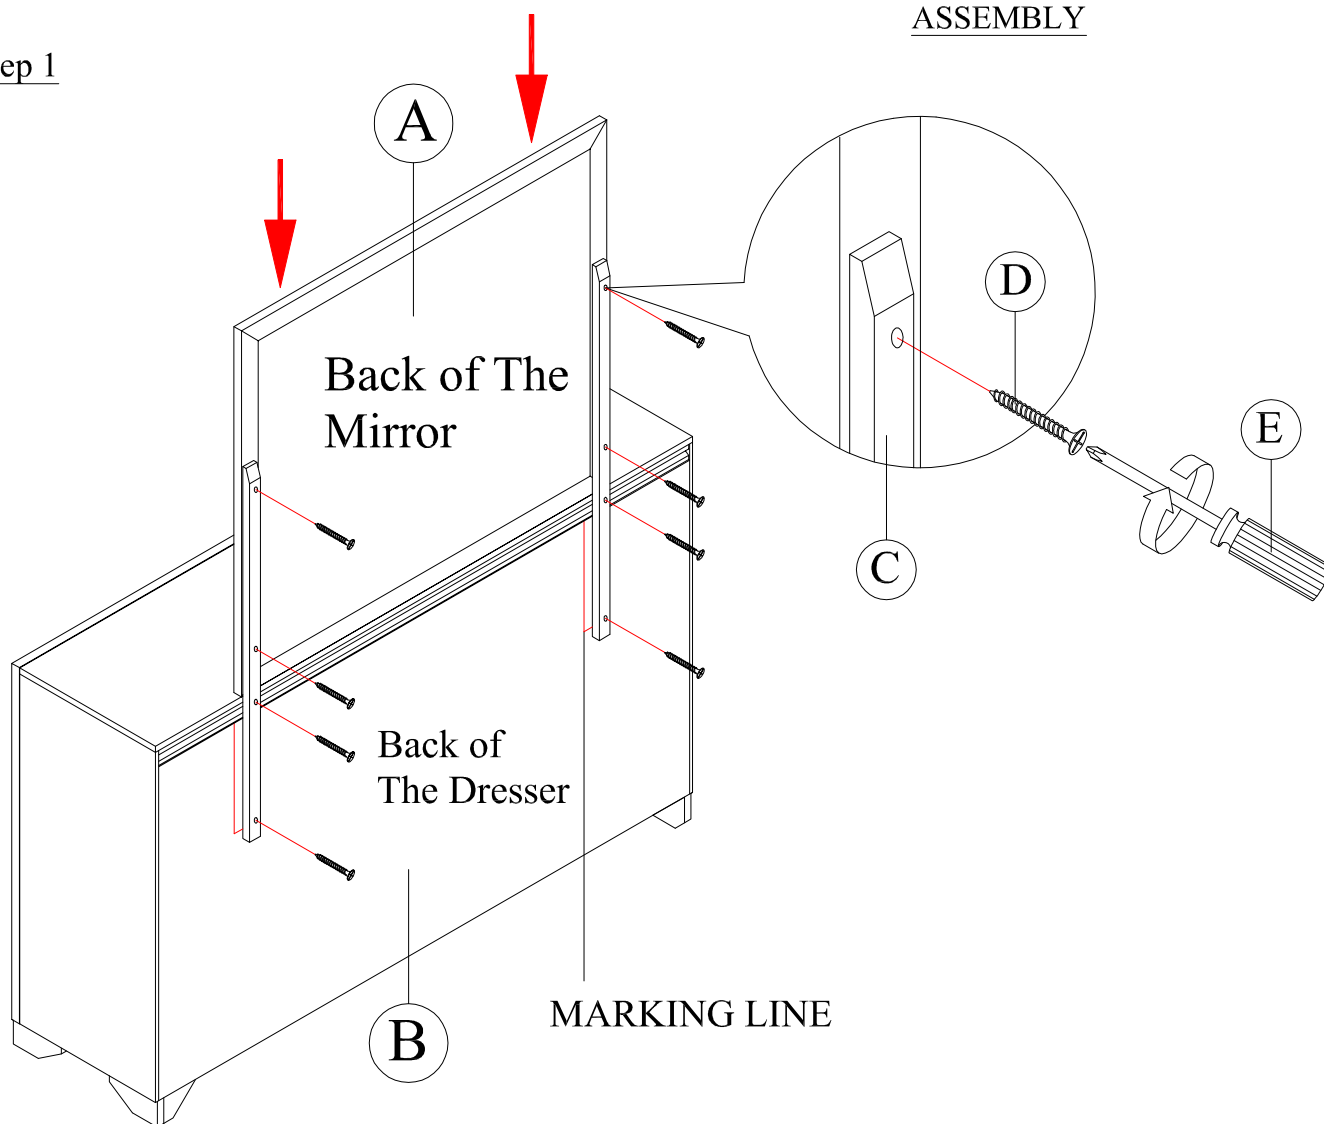

NOTE : MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREWS MAY BECOME LOOSE.  
CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

### CLEANING INSTRUCTION

After assembled, clean & polish the completed parts if necessary with soft cloth and industrial recognized furniture polish