

Assembly Instructions









ITEM NO. D1719-52S
CORI 5PC COUNTER DINING SET

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.








Caution: Please read the instructions thoroughly before assembly.

1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST

NO.	COMPONENT	SKETCH	QTY.
A	CHAIR BACK		4 PCS
B	SEAT FRAME		4 PCS
C	CUSHION SEAT		4 PCS
D1	FRONT LEG (RSF) RIGHT SIDE FACING		4 PCS
D2	FRONT LEG (LSF) LEFT SIDE FACING		4 PCS
E1	SIDE STRETCHER (RSF) RIGHT SIDE FACING		4 PCS
E2	SIDE STRETCHER (LSF) LEFT SIDE FACING		4 PCS
F	FRONT STRETCHER		4 PCS

HARDWARE LIST

NO.	COMPONENT	SKETCH	QTY.
1	FLAT WASHER 5/16" DIA.		44 PCS
2	SPRING WASHER 5/16" DIA.		44 PCS
3	NUT 5/16" DIA.		16 PCS
4	ALLEN WRENCH 5/16" DIA.		1 PC
5	SHORT BOLT 1/4" x 1 9/16"		12 PCS
6	LONG BOLT 1/4" x 3"		16 PCS
7	WOOD SCREW #8 x 1 1/2" L		48 PCS

Assembly Instructions


ITEM NO. D1719-52S
CORI 5PC COUNTER DINING SET

To assemble the chairs, please follow the following steps and repeat for each chair:

STEP 1

Lay the chair back on soft clean surface and install the seat frame.


*Attention: DO NOT TIGHTEN THE BOLTS.

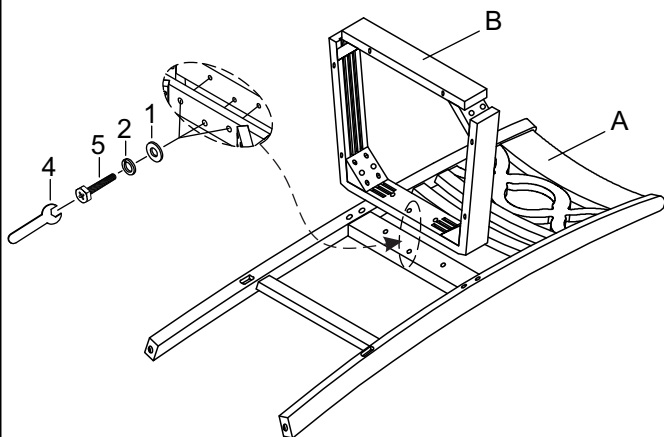

STEP 2


Install the Seat frame (B) with the back legs of the chair back (A) using Open - End Wrench (4) with hardware 1, 2, and 6

*Attention: DO NOT TIGHTEN THE BOLTS.

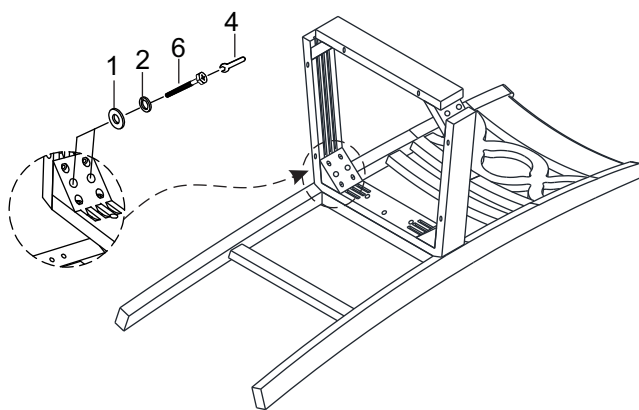



STEP 3

Insert side stretchers with wood screws.

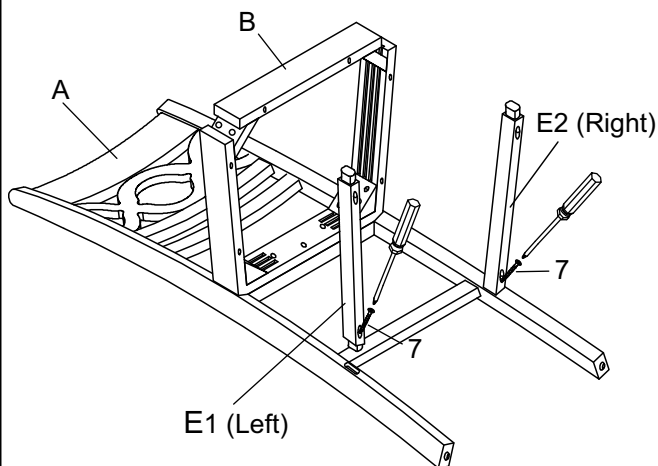

STEP 4

Install front stretcher into the holes of the front legs then attached to the seat frame.

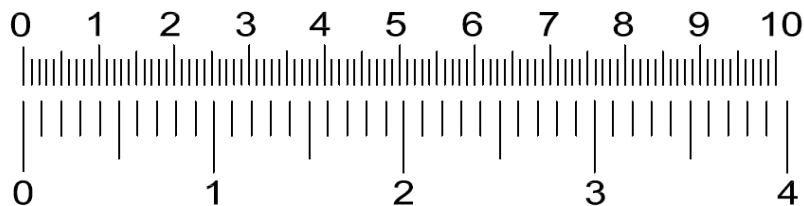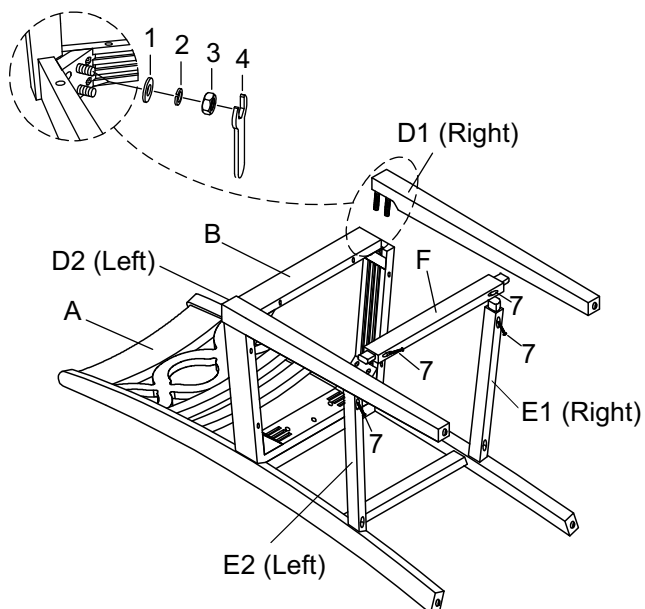


Assembly Instructions

ITEM NO. D1719-52S
CORI 5PC COUNTER DINING SET

To assemble the chairs, please follow the following steps and repeat for each chair:


STEP 5

Place the assembled seat frame on the cushion seat
and attach with wood screws.

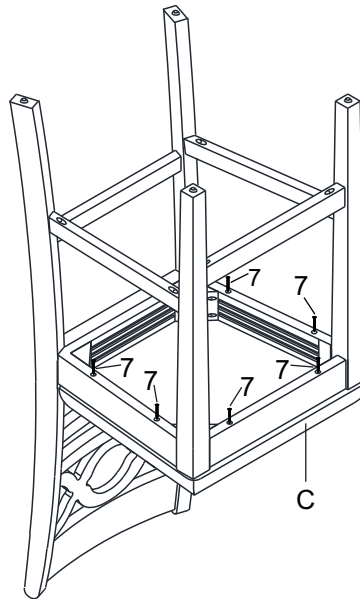

STEP 6

Complete.

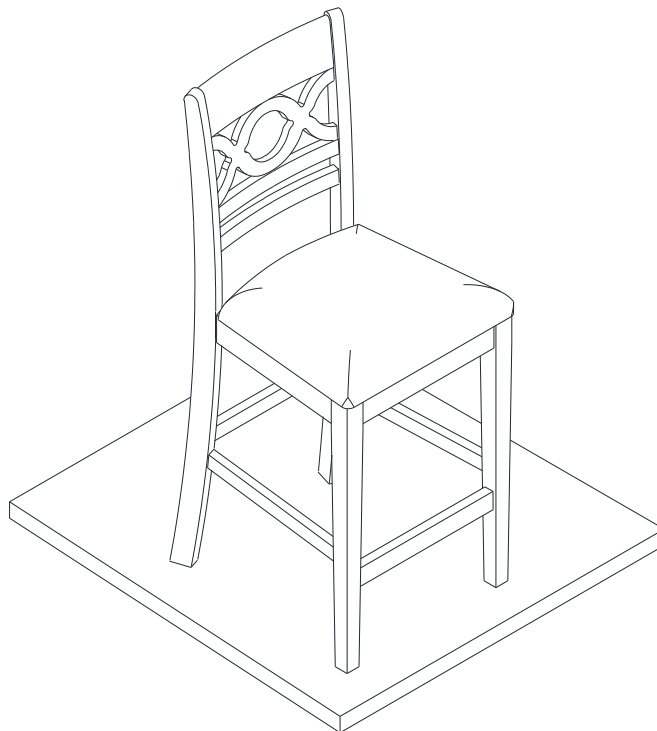




Fully Assembled Chair





Assembly Instructions

ITEM NO. D1719-52S
CORI 5PC COUNTER DINING SET

PARTS LIST

NO.	COMPONENT	SKETCH	QTY.
G	TABLE TOP		1 PC
H	TABLE LEG		4 PCS
I	TABLE SHELF		2 PCS


HARDWARE LIST

NO.	COMPONENT	SKETCH	QTY.
8	BOLT 5/16" x 2 1/2"		12 PCS
9	SPRING WASHER 5/16" DIA.		12 PCS
10	FLAT WASHER 5/16" DIA.		12 PCS
11	ALLEN KEY M4		1 PC

To assemble the table, please follow the following steps but do not tighten all bolts:


STEP 1

Attached the table shelves to two of the table legs.

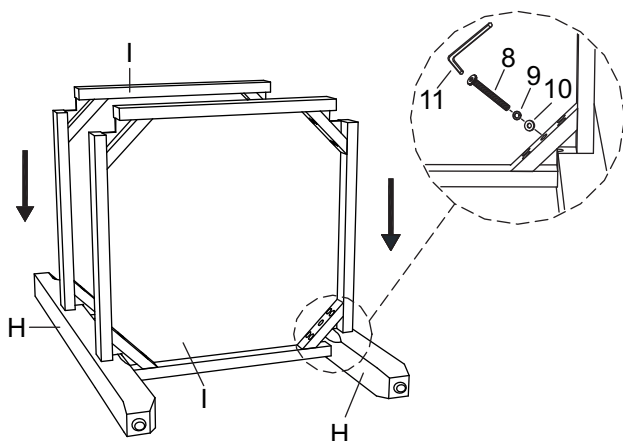


STEP 2

Attached the two other legs.

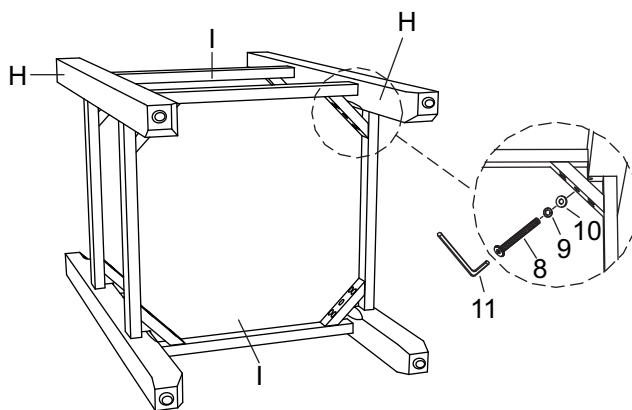

STEP 3

Turn the assembly upright and place the table top on the assembled unit.

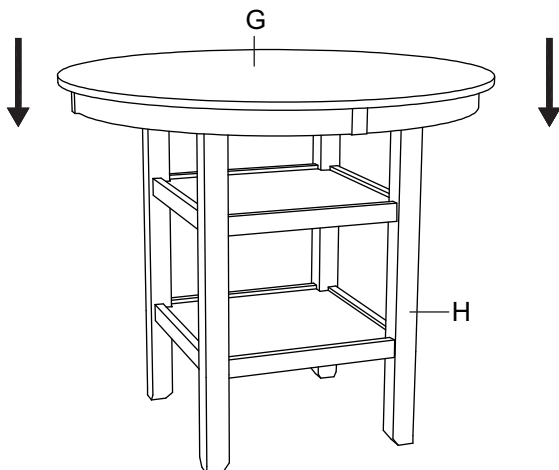

STEP 4

Secure the table top with bolts. Make sure the table is level, then tighten all bolts.

