


ASSEMBLY INSTRUCTION

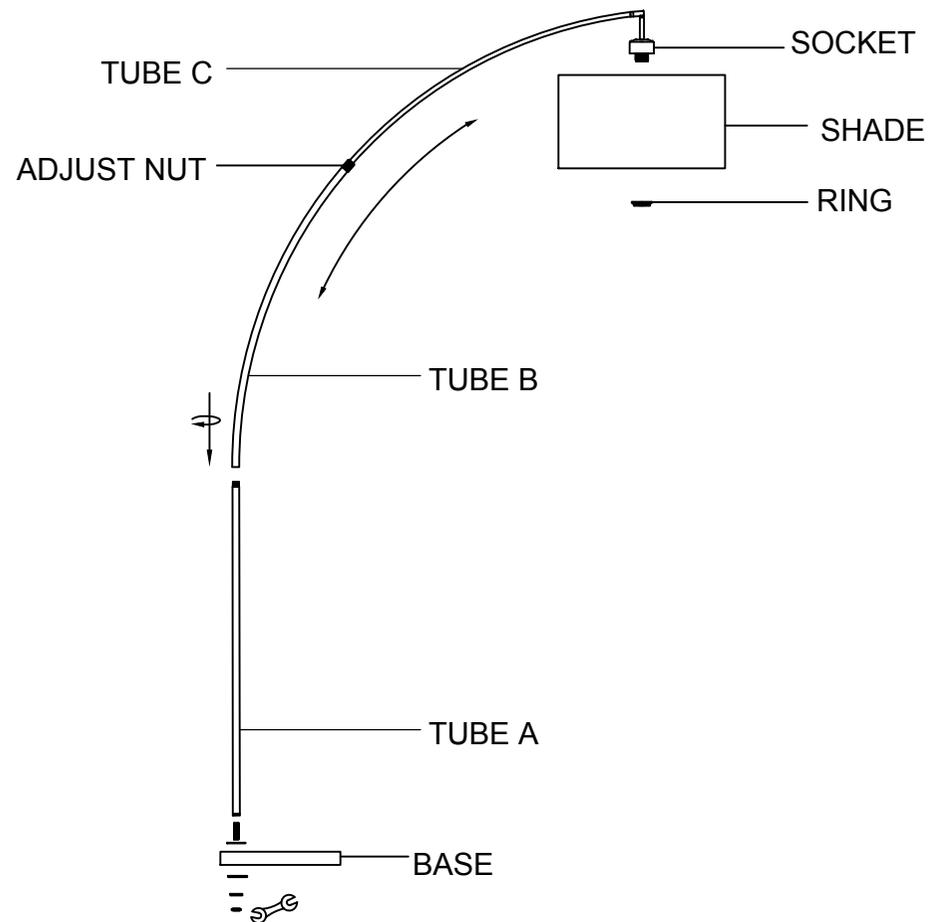

1. INSERT THE POLE(A) INTO LAMP BASE(B) AND TIGHTEN IT WITH WASHER&NUTS BY WRENCH
2. INSERT THE TUBE B INTO TUBE A AND TIGHTEN WITH THE SCREW.
3. STRETCH THE TUBE C TO PROPER LENGTH THEN TIGHTEN WITH THE ADJUST NUT.
4. PLACE THE SHADE A ONTO THE SOCKET WITH THE RING.