

ASSEMBLY INSTRUCTION

MADE IN MALAYSIA


B372-10HB/10FB/10R

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

Before you start assembly : Please read all instructions carefully before beginning the assembly process. It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

Caution: For your safety, this product requires two people to lift.

Assembled Dimensions

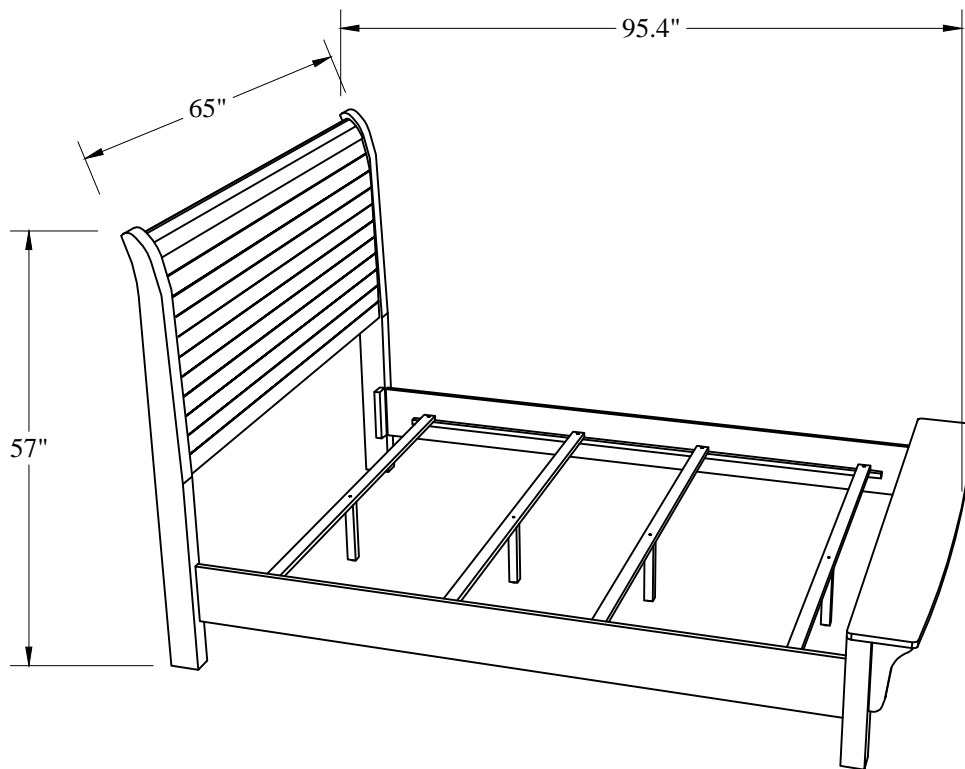

20 MINUTE

APPROXIMATE ASSEMBLY TIME




2 PERSONS



REQUIRED ASSEMBLY SPACE

REQUIRED ASSEMBLY TOOLS

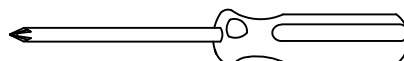








NOT PROVIDED

Need Assistance? Call us at 1-855-343-7378 from 8:00 am to 5:00pm PST Monday - Friday

B372-10HB/10FB/10R

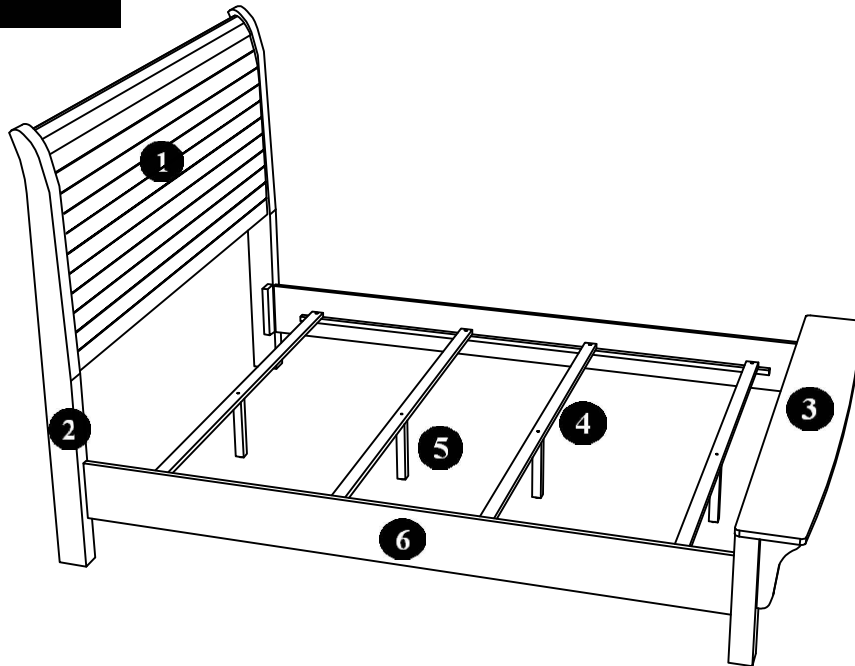PART LIST




NO.		PART LIST	QTY
(1)		HEADBOARD	1
(2)		HEADBOARD LEG	2
(3)		FOOTBOARD	1
(4)		SLAT	4
(5)		SLAT SUPPORT	4
(6)		SIDE RAIL	2


Need Assistance? Call us at 1-855-343-7378 from 8:00 am to 5:00pm PST Monday - Friday

B372-10HB/10FB/10R

HARDWARE LIST



4x
M6 x 40mm
JCBC BOLT



2x
M6 x 80mm
JCBC BOLT



4x
1/4"
SPRING WASHER




4x
1/4" ID x 19mmOD
FLAT WASHER




2x
10mm x 30mm
WOOD DOWEL

F




1x
m4x110mm
ALLEN KEY
WITH BALL

G



8x
m4x32mm
CSK SCREW


STEP 1:

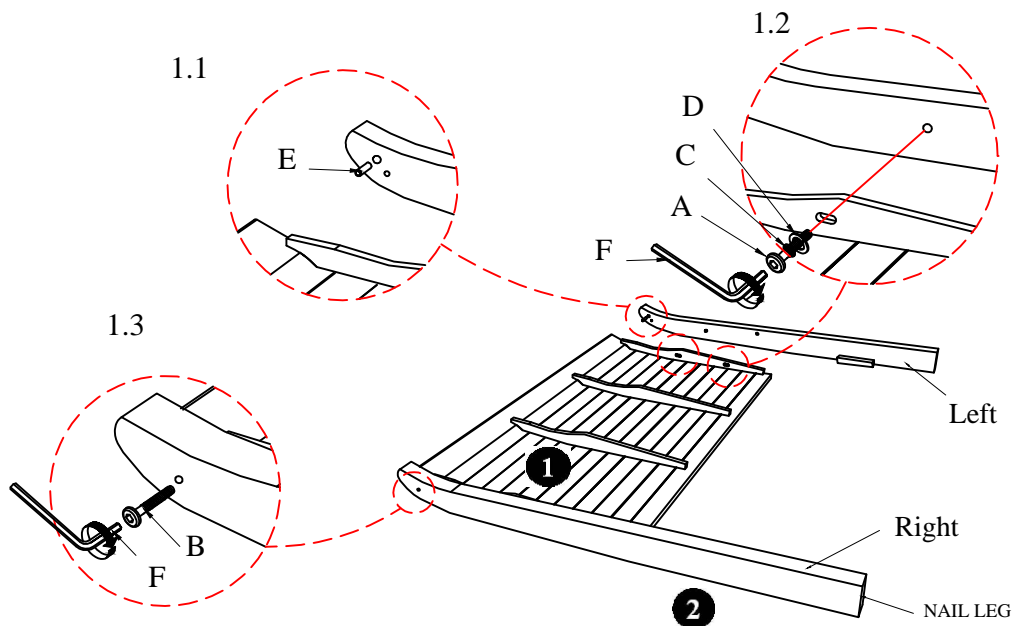

Need Assistance? Call us at 1-855-343-7378 from 8:00 am to 5:00pm PST Monday - Friday

B372-10HB/10FB/10R

STEP 2:

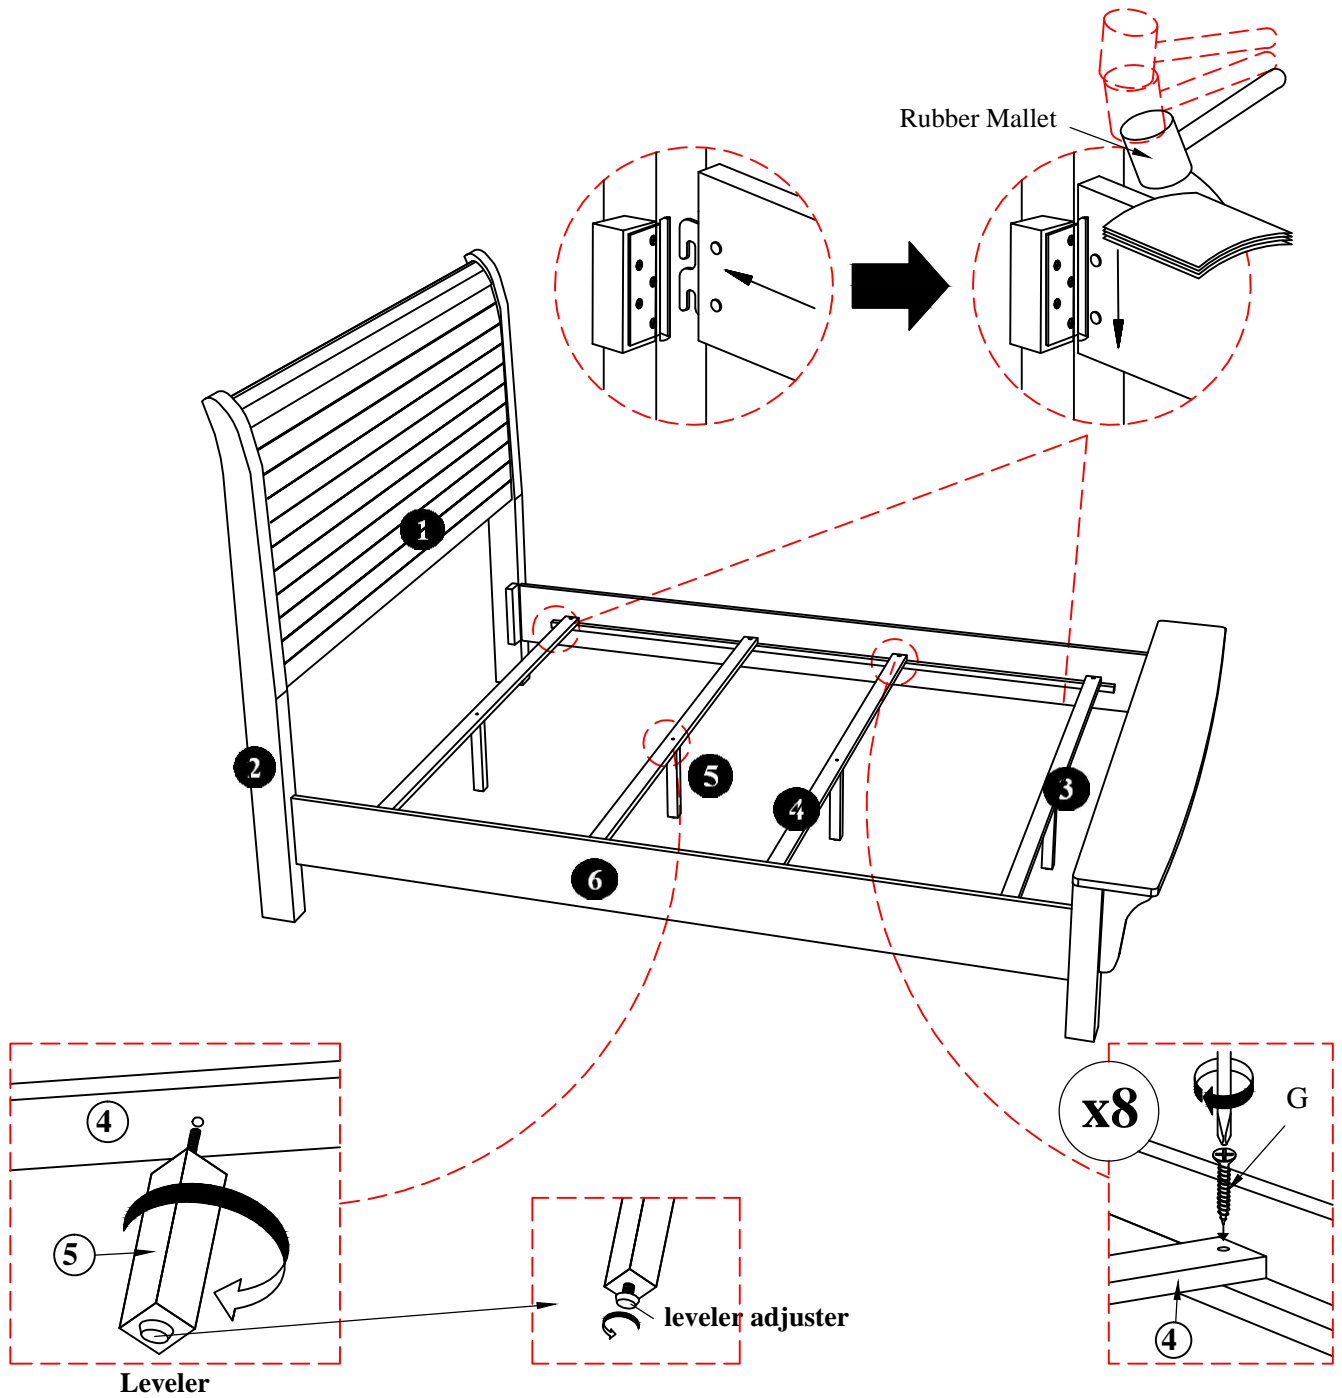

Need Assistance? Call us at 1-855-343-7378 from 8:00 am to 5:00pm PST Monday - Friday