



9300128

ASSEMBLY INSTRUCTIONS

KEVIN KD PU
DINING SIDE
CHAIR

HARDWARE

A6

Bx2



M6



M8X35MM



MEYER


Dx1




M6

PARTS


1x1

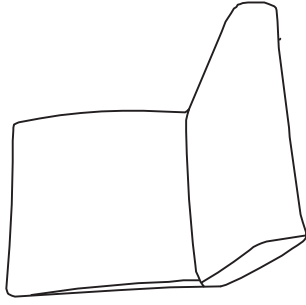



2x1

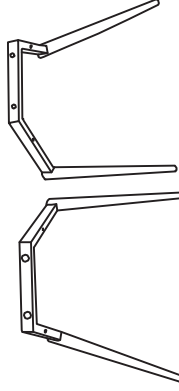

(1)

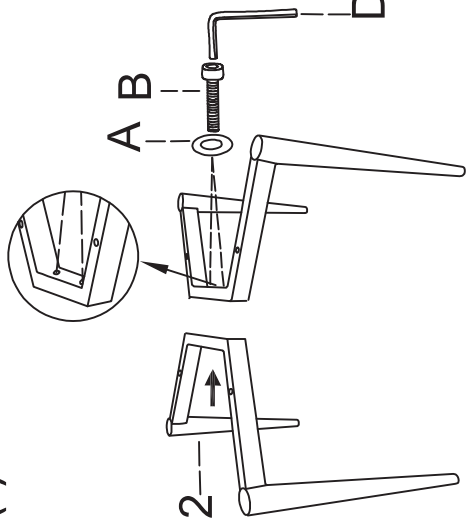

(2)

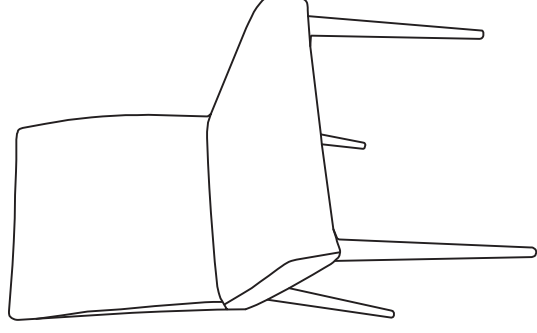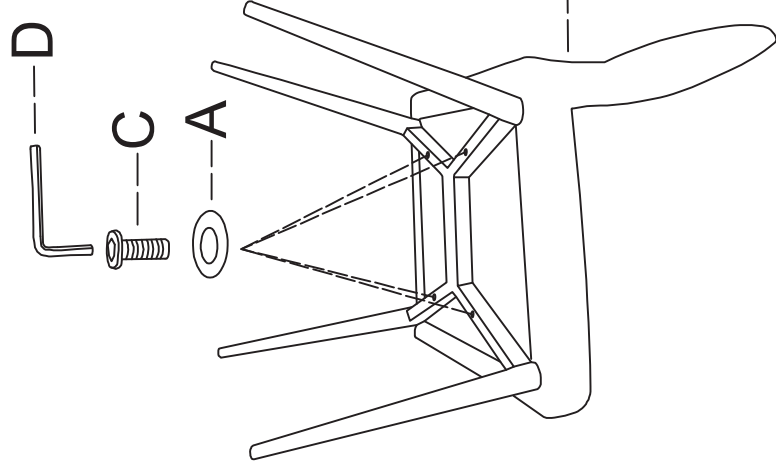

(3)

The more vertical and higher legs are front legs and more slanted legs are rear legs. Make sure to screw the straight part of seat to front legs and the curved part of seat to the rear legs.