





# ASSEMBLY INSTRUCTION

## ITEM : 5267GY-F / 5267GY-Q


<p>1. HEADBOARD CUSHION</p>  <p style="text-align: center;">x 1PC</p>	<p>2. HEADBOARD LEG (LEFT)</p>  <p style="text-align: center;">x 1PC</p>	<p>3. HEADBOARD LEG (RIGHT)</p>  <p style="text-align: center;">x 1PC</p>	<p>4. FOOTBOARD CUSHION</p>  <p style="text-align: center;">x 1PC</p>	<p>5. FOOTBOARD LEG</p>  <p style="text-align: center;">x 2PCS</p>
<p>6. SIDE RAIL</p>  <p style="text-align: center;">x 2PCS</p>	<p>7. SIDE RAIL</p>  <p style="text-align: center;">x 2PCS</p>	<p>8. SIDE RAIL SUPPORT LEG</p>  <p style="text-align: center;">x 2PCS</p>	<p>9. SLAT</p>  <p style="text-align: center;">x 4PCS</p>	<p>10. SUPPORT LEG with adjustable feet</p>  <p style="text-align: center;">x 4PCS</p>
<p>A. JCBB SCREW M8 x 20mm</p>  <p style="text-align: center;">x 8PCS</p>	<p>B. JCBC SCREW M6 x 25mm (with washer)</p>  <p style="text-align: center;">x 8PCS</p>	<p>C. JCBC SCREW M6 x 35mm (with washer)</p>  <p style="text-align: center;">x 6PCS</p>	<p>D. JCBC SCREW M6 x 35mm</p>  <p style="text-align: center;">x 4PCS</p>	<p>E. JCBB SCREW M8 x 35mm</p>  <p style="text-align: center;">x 4PCS</p>
<p>F. JCBC SCREW M6 x 70mm</p>  <p style="text-align: center;">x 2PCS</p>	<p>G. WOOD DOWEL M8 x 30mm</p>  <p style="text-align: center;">x 2PCS</p>	<p>H. WOOD DOWEL M10 x 30mm</p>  <p style="text-align: center;">x 4PCS</p>	<p>I. SCREW M4 x 32mm</p>  <p style="text-align: center;">x 8PCS</p>	<p>J. L-KEY M4 x 100mm</p>  <p style="text-align: center;">x 1PC</p>
<p>K. L-KEY M5 x 65mm</p>  <p style="text-align: center;">x 1PC</p>				

# ASSEMBLY INSTRUCTION


## STEP 1

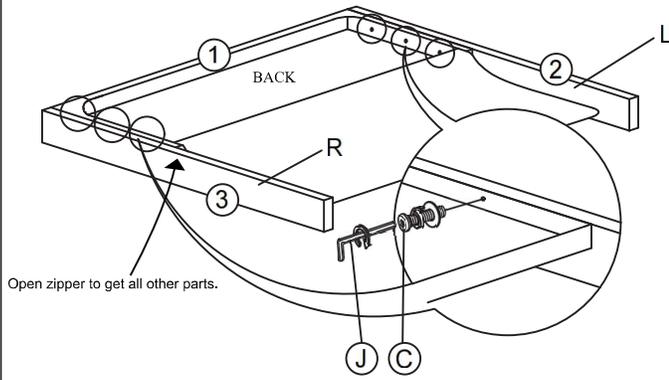


## STEP 2

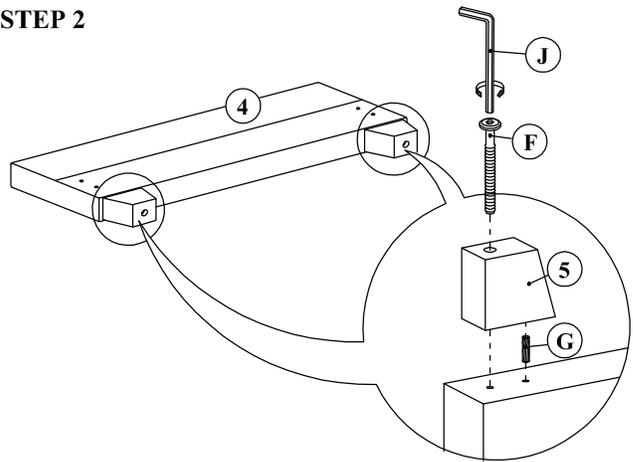


## STEP 3

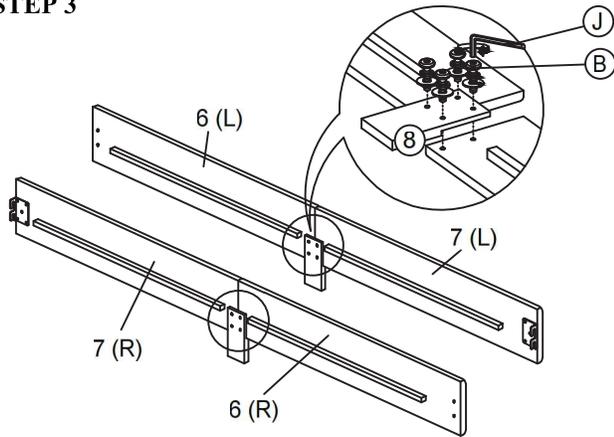


## STEP 4

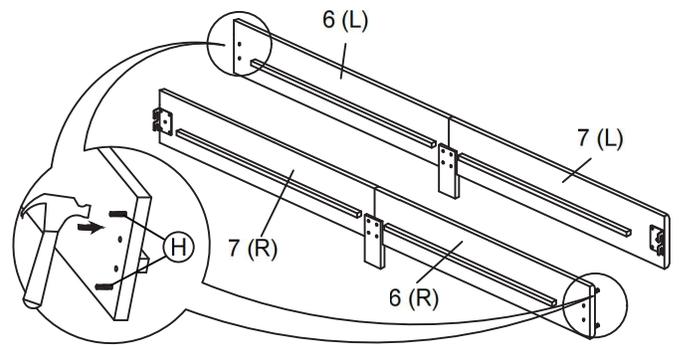


## STEP 5

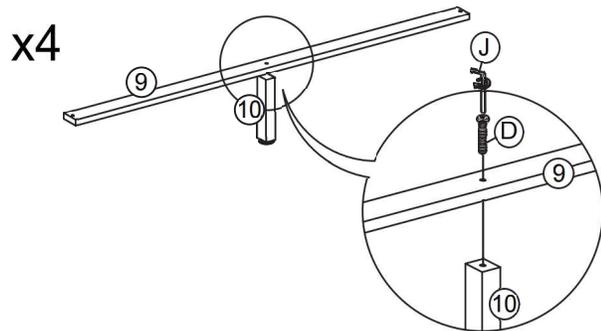

## STEP 6

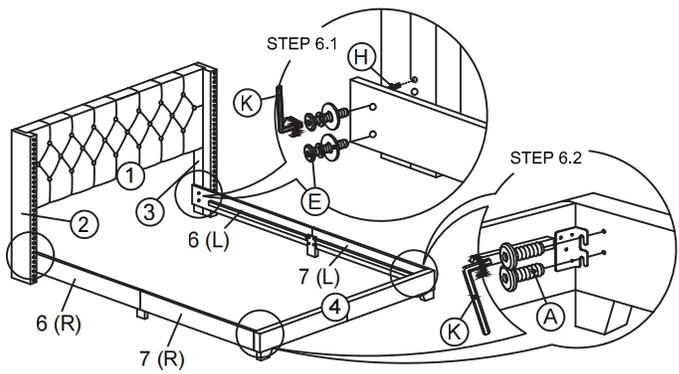

## STEP 7

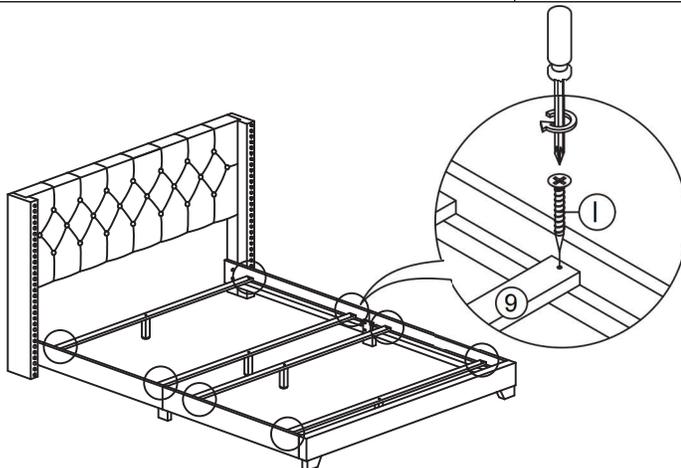

ASSEMBLY  
COMPLETE