
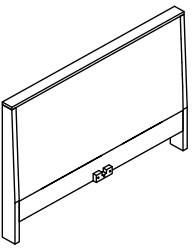
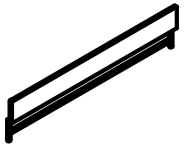
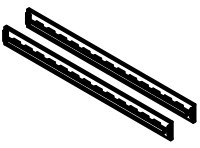

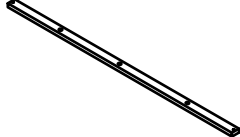


Product Assembly Instructions


BUSH-KB202

 A: Headboard x1	 B: Footboard x1	 C: Side Rall (L+R) x2	 G: Bolt M6*10mm x12
			 H: Allen key M5 x1
			 I: M6*60mm x3
			 J: Allen key M4 x1
 D: Middle Rall x1	 E: Center Leg x3	 F: Slat Frame x15	 K: Screw M4*30mmx32
			 L: Washer x3


STEP 1

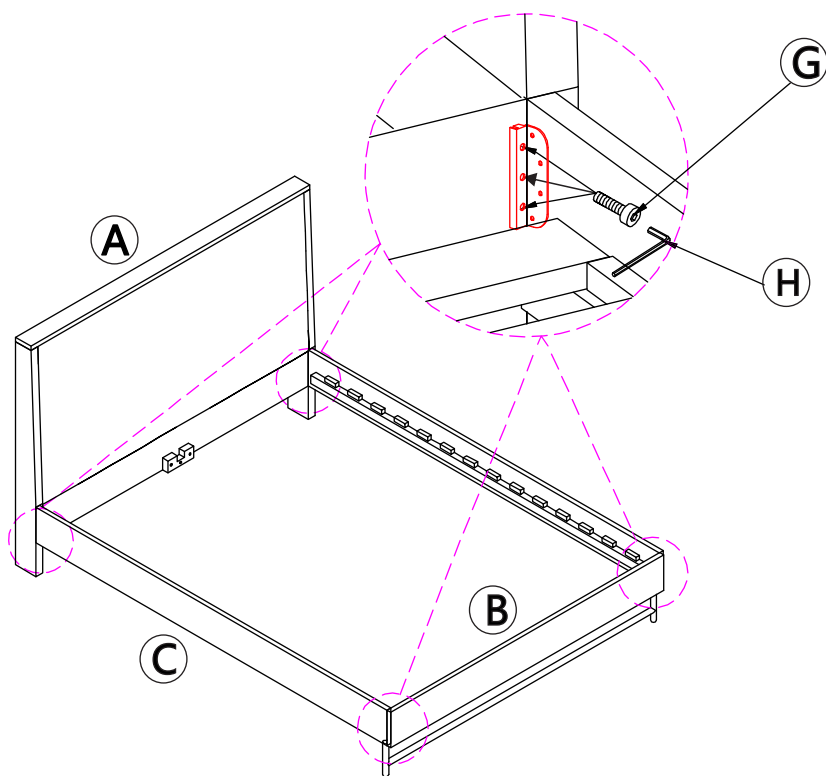

STEP 2

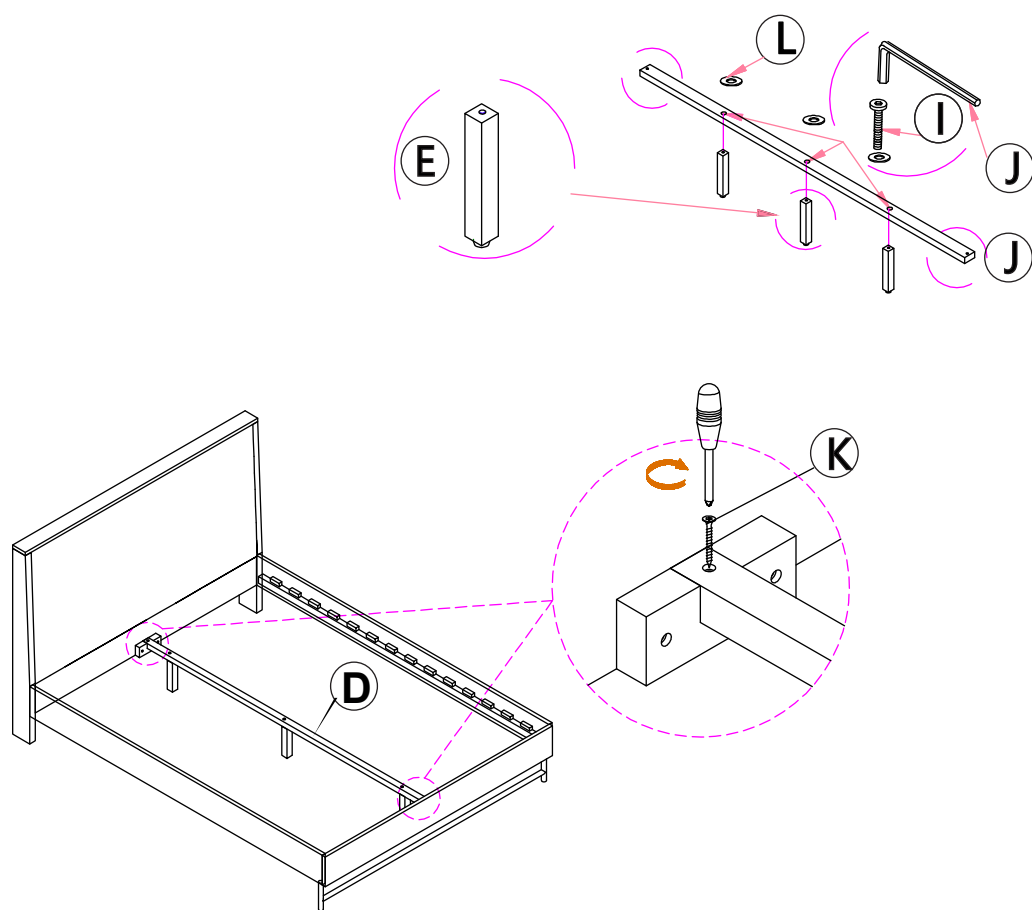


STEP 3

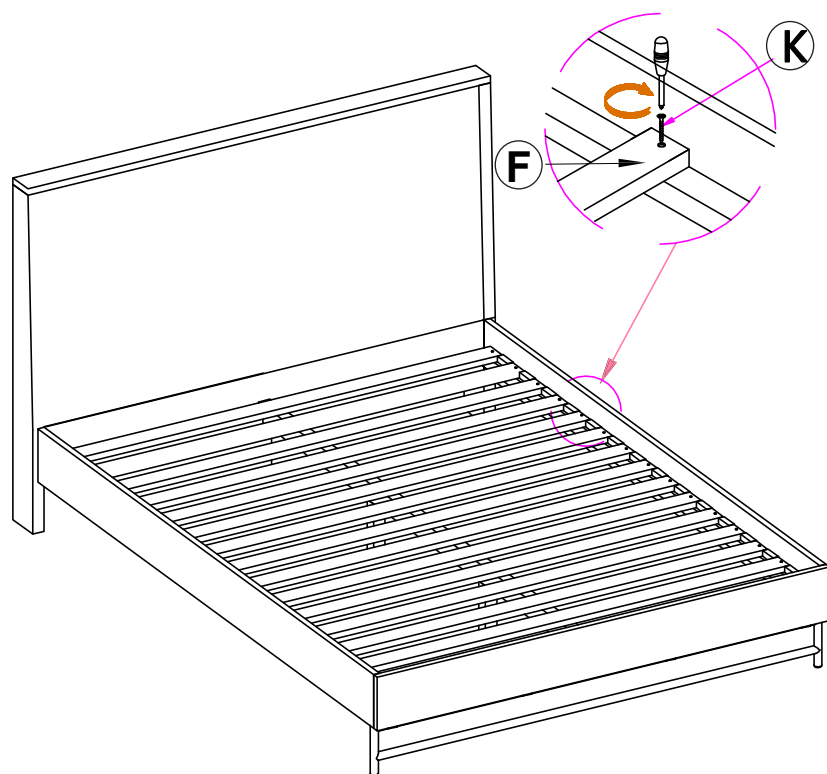


Product Assembly Instructions

BUSH-SB 145

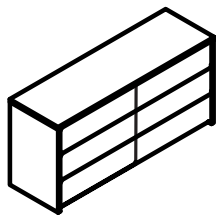

A: Chest x1

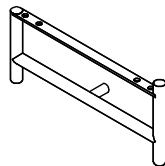

B: Left Leg x1




E: Washer x8




F: Bolt M6*25mm x8



G: Allen key x1

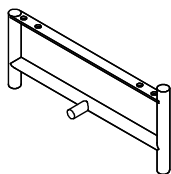

C: Right Leg x1

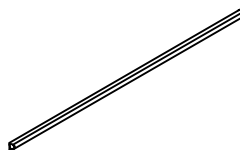


D: Bracing Between x1



H: Bolt M6*15mm x2


STEP 1

Please, untight the bolts out about 1/4" for rails

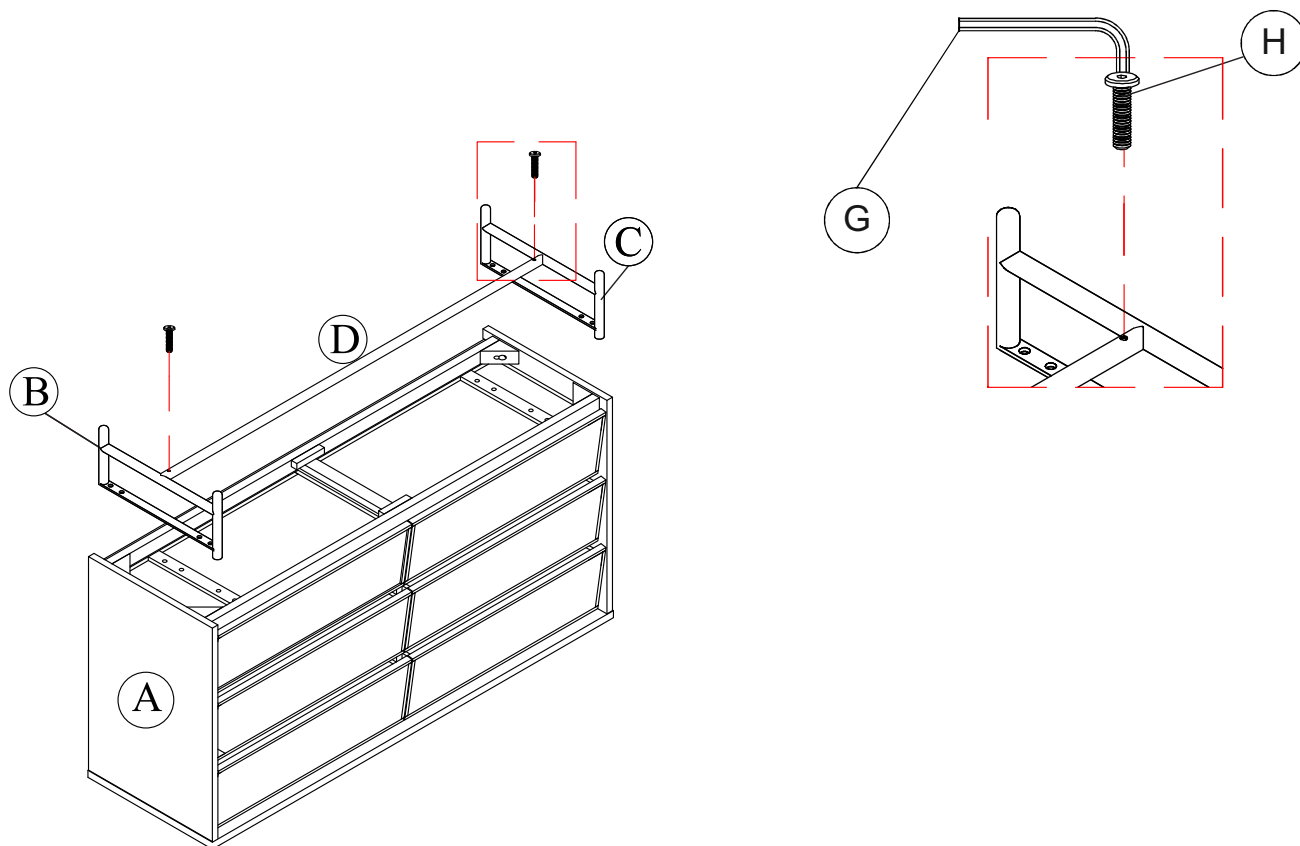


STEP 2

Put and tighten the bolts on the right position.





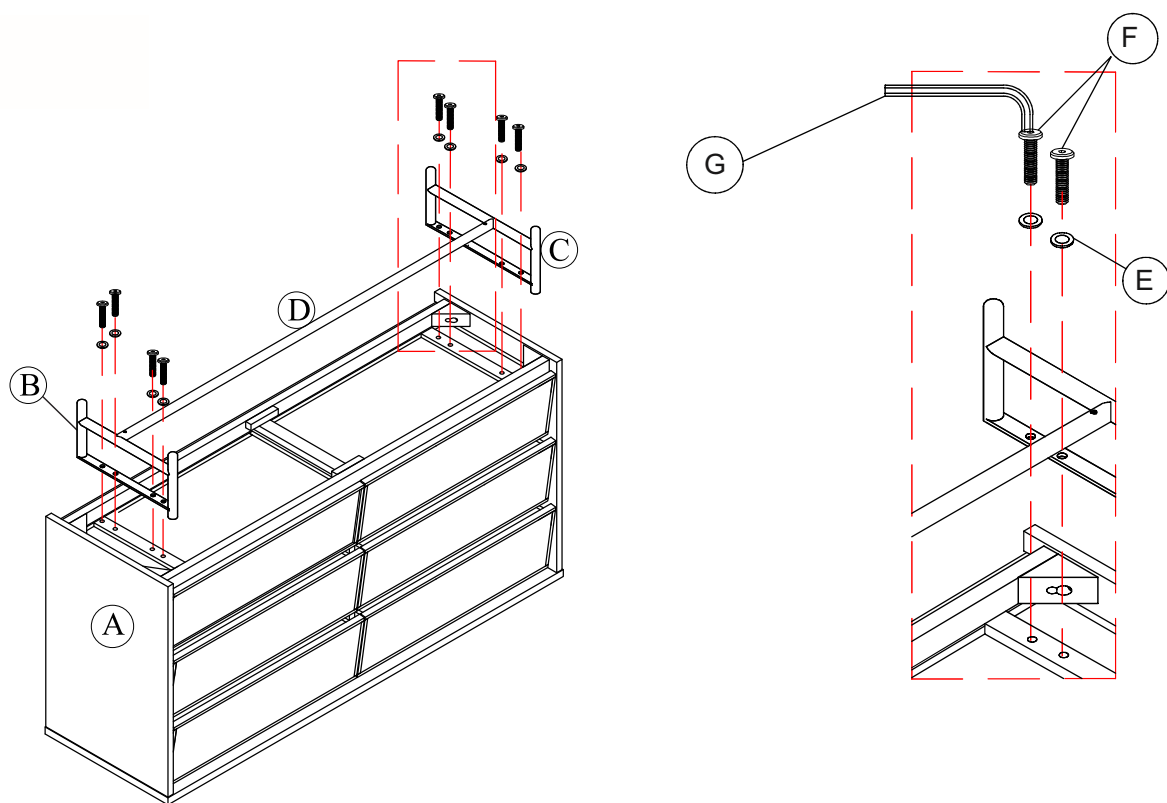


STEP 3

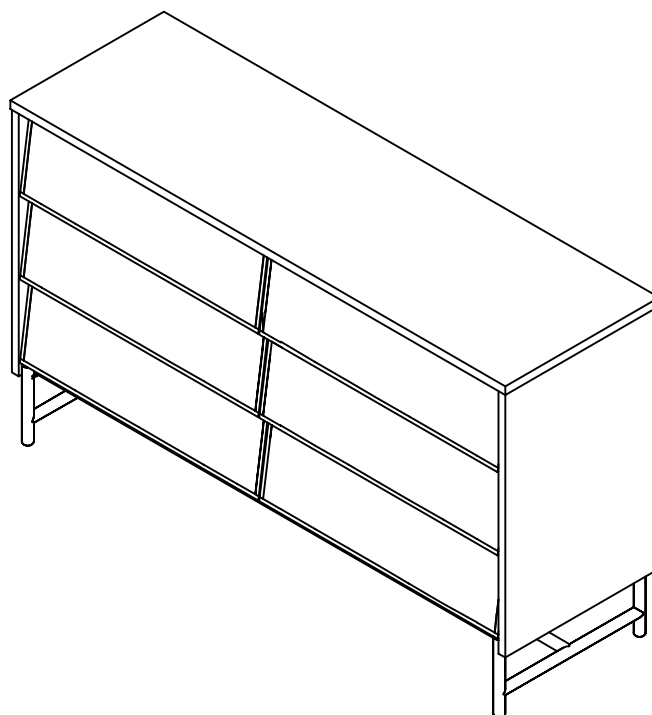


Product Assembly Instructions


BUSH-QB163

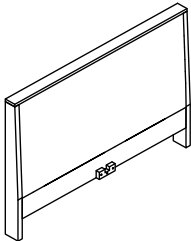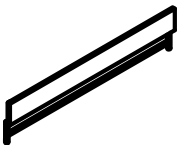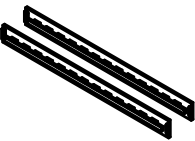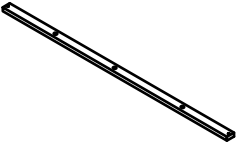 A: Headboard x1	 B: Footboard x1	 C: Side Rail (L+R) x2	 G: Bolt M6*10mm x12  H: Allen key M5 x1  I: M6*60mm x3  J: Allen key M4 x1  K: Screw M4*30mmx32  L: Washer x3
 D: Middle Rail x1	 E: Center Leg x3	 F: Slat Frame x15	

STEP 1

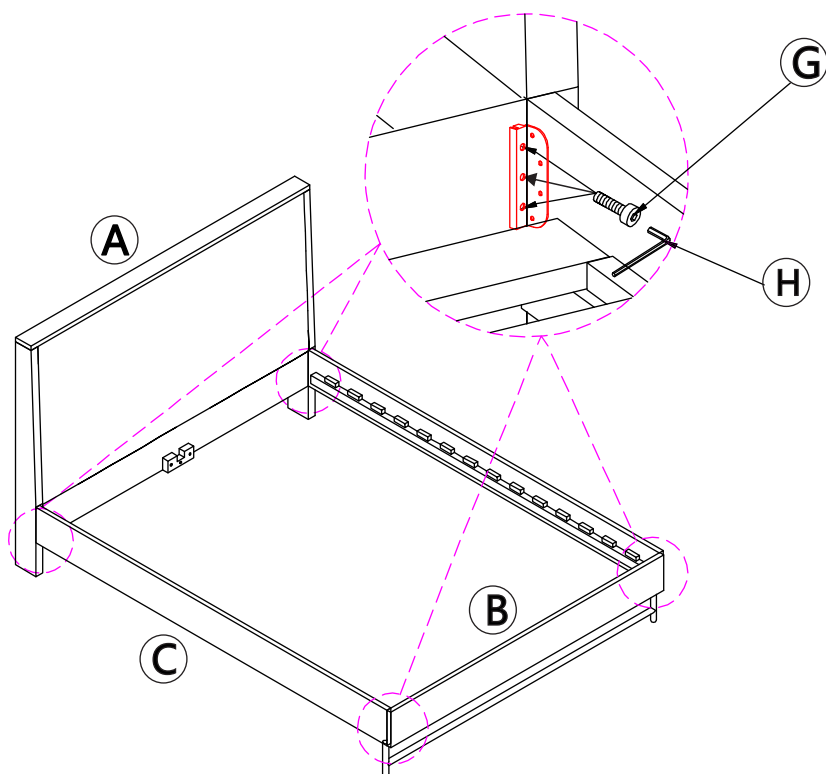

STEP 2

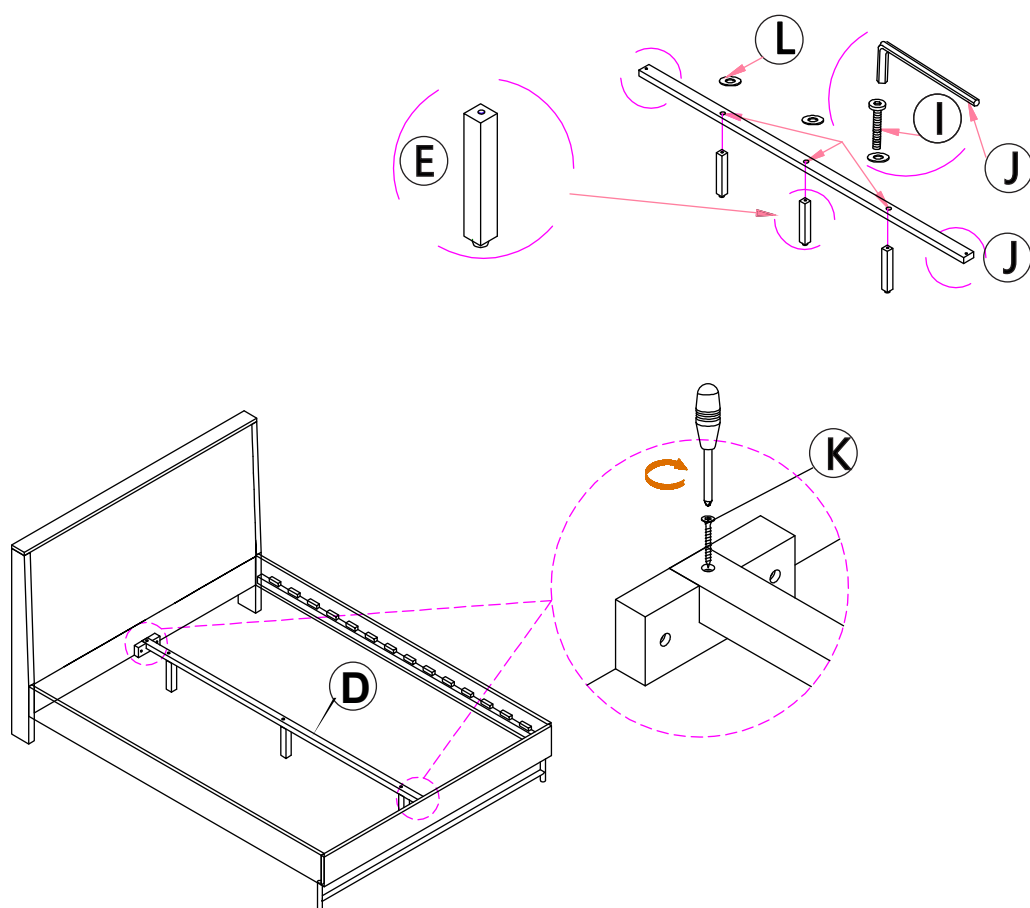

STEP 3

