


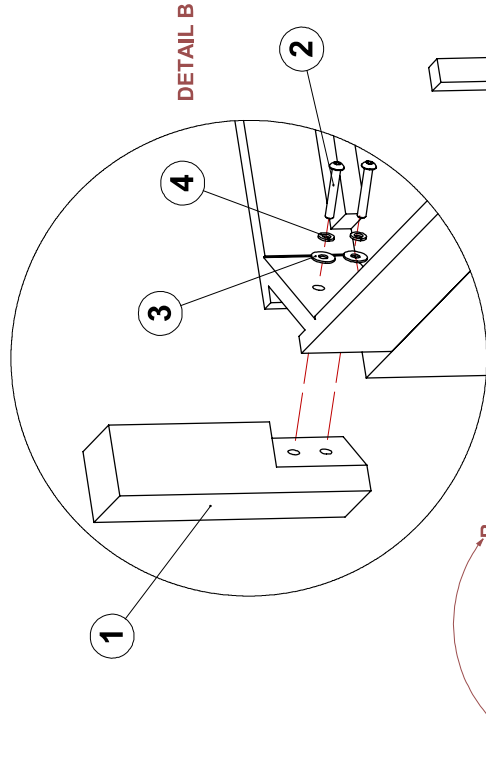

DETAIL B

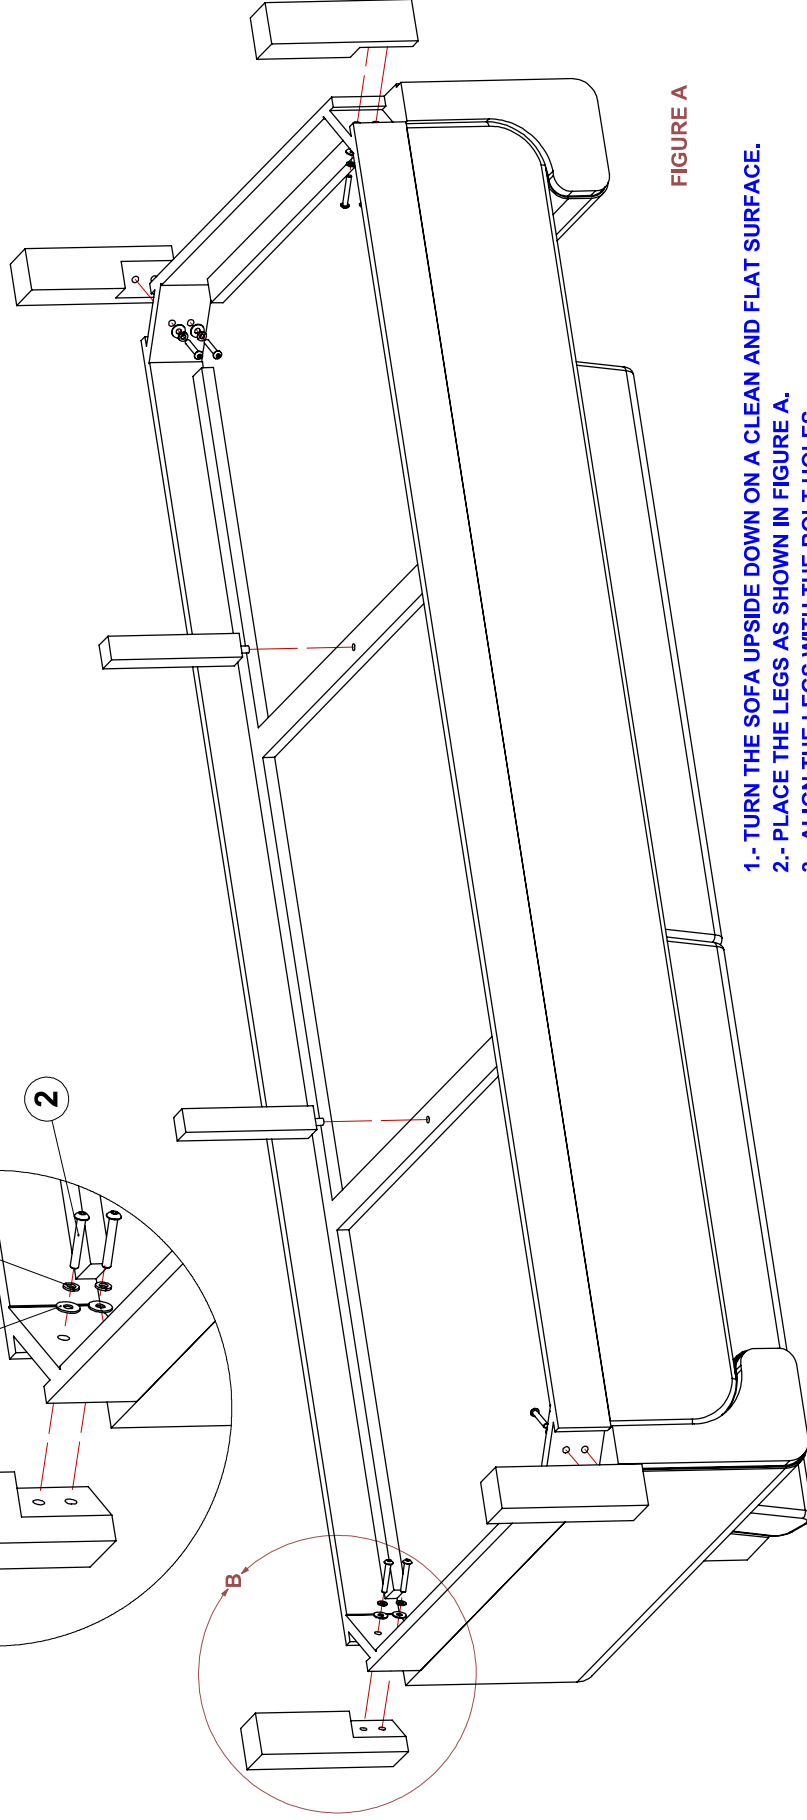


FIGURE A

- 1.- TURN THE SOFA UPSIDE DOWN ON A CLEAN AND FLAT SURFACE.
- 2.- PLACE THE LEGS AS SHOWN IN FIGURE A.
- 3.- ALIGN THE LEGS WITH THE BOLT HOLES.
- 4.- INSERT TWO BOTTOM SOCKET SCREWS WITH LOCK WASHERS & FLAT WASHERS, AS SHOWN IN DETAIL B.
- 5.- WITH THE ALLEN KEY 3/16", TIGHTEN THE SCREWS UNTIL THE LEGS FEELS FIRM.
- 6.- ONCE THE LEGS ARE INSTALLED, MOVE THE SOFA BACK TO ITS ORIGINAL POSITION.

ASSEMBLING INSTRUCTIONS

I-IUP-966

ITEM #	DESCRIPTION	#
1	LEGS	4
2	BUTOM SOCKET SCREW 5/16" x 2"	8
3	FLAT WASHER 5/16"	8
4	LOCK WASHER	8
5	ALLEN KEY 3/16"	1



IUP966-ACH

ITEM	DESCRIPTION	#
1TOR004	TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO	8
1RON003	RONDANA PLANA 5/16" x 1" GALV	8
1RON011	RONDANA DE PRESION 5/16" NEGRA	8
1HER251	LLAVE ALLEN 3/16 (MUEBLE)	1

IUP966-LOV

ITEM	DESCRIPTION	#
1TOR004	TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO	8
1RON003	RONDANA PLANA 5/16" x 1" GALV	8
1RON011	RONDANA DE PRESION 5/16" NEGRA	8
1HER251	LLAVE ALLEN 3/16 (MUEBLE)	1

IUP966-SOF

ITEM	DESCRIPTION	#
1TOR004	TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO	8
1RON003	RONDANA PLANA 5/16" x 1" GALV	8
1RON011	RONDANA DE PRESION 5/16" NEGRA	8
1HER251	LLAVE ALLEN 3/16 (MUEBLE)	1



ASSEMBLING INSTRUCTIONS

I-IUP-966

- IUP966-ACH
- IUP966-LOV
- IUP966-SOF