



Product Assembly Instructions

BUSH-SB 145

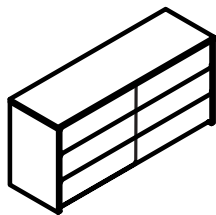

A: Chest x1

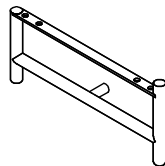

B: Left Leg x1




E: Washer x8




F: Bolt M6*25mm x8



G: Allen key x1

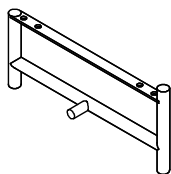

C: Right Leg x1

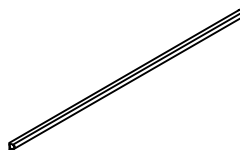


D: Bracing Between x1



H: Bolt M6*15mm x2


STEP 1

Please, untight the bolts out about 1/4" for rails

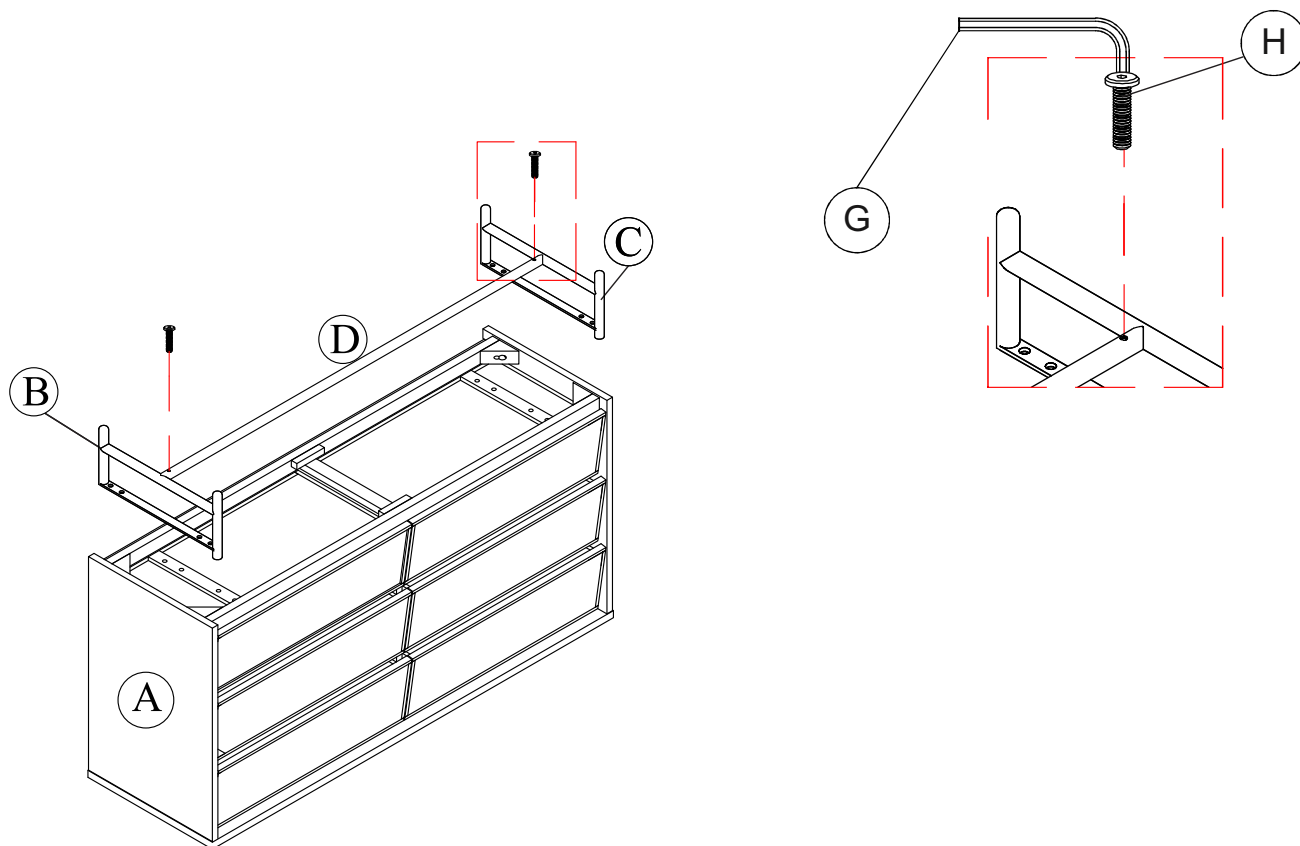

STEP 2

Put and tighten the bolts on the right position.

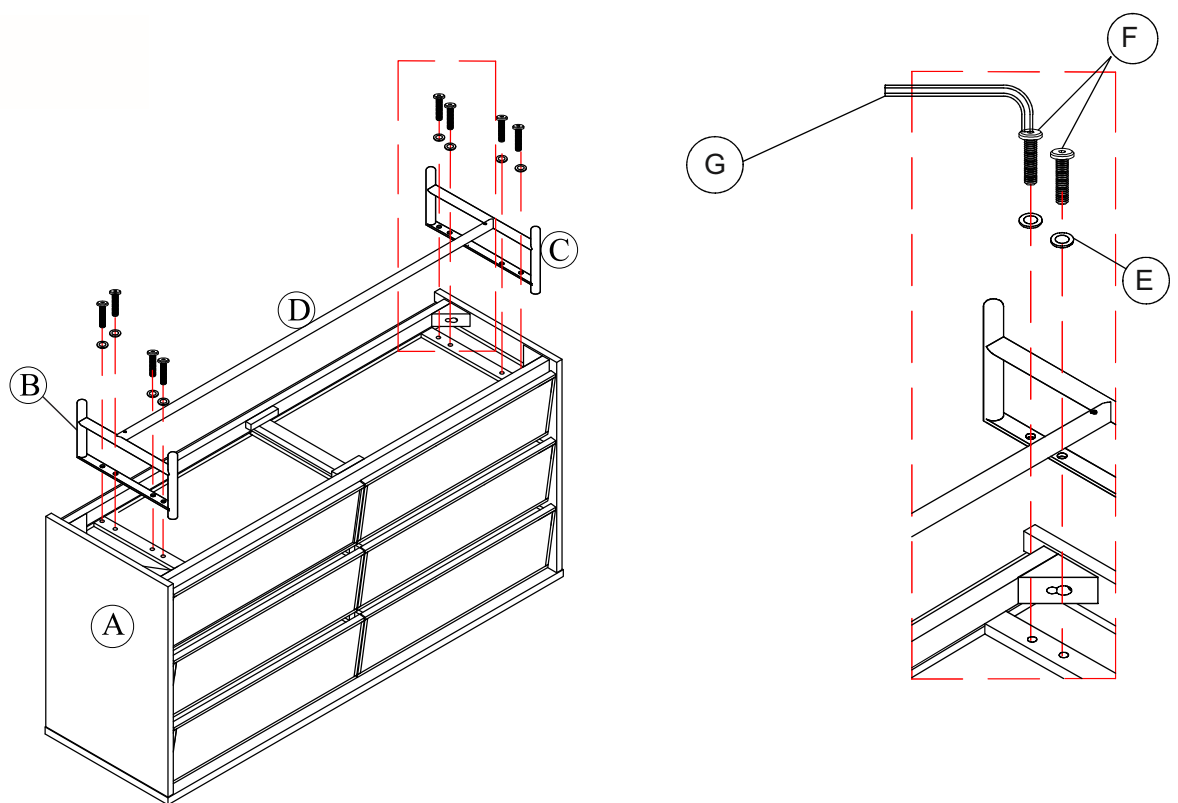

STEP 3

