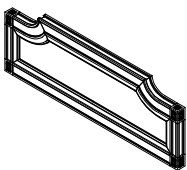
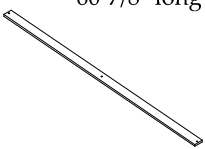
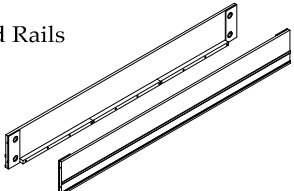


Hardware and Parts packed with the Footboard

Footboard Panel  (F-A) 1 pc.	Bun feet  (F-B) 2 pcs.	5/0 Wood Slat 60-7/8" long  (F-C) 4 pcs.	Slat Support Leg 6-7/8" long with leveler  (F-D) 4 pcs.	Ø8 x 25mm Wood Screw  (F-E) 8 pcs.
---	---	--	---	---

Hardware and Parts packed with the Bed Rails

#10276 5/0-6/6 Bed Rails  (R-A) 2 pcs.	Ø5/16" Half moon washer  (R-B) 8 pcs.	Ø5/16"x14mm Spring washer  (R-C) 8 pcs.	Ø5/16" Hexagonal Nut  (R-D) 8 pcs.	12 mm Open Wrench  (R-E) 1 pc.
	Ø5/16"-18 x 82mm Long All-thread Bolt  (R-F) 8 pcs.			

5/0 Queen Standard Bed


10270 -- 4/6-5/0 Carved Headboard

10271 -- 4/6-5/0 Carved Footboard w/Slats


10276 -- 5/0-6/6 Carved Bed Rails

ASSEMBLY STEPS :



1. Insert hanger bolt on Bun feet (F-B) into metal connector on bottom of Footboard as shown. Tighten all align Bun foot.(see Detail C).
2. Install the Ø5/16" x 82mm Long All-Thread Bolts (R-F) to the threaded inserts of the Headboard and Footboard (see Detail D) .

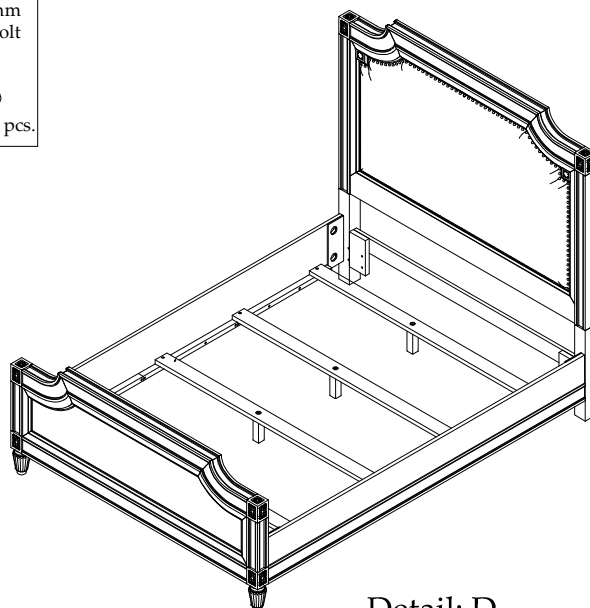

Detail: C

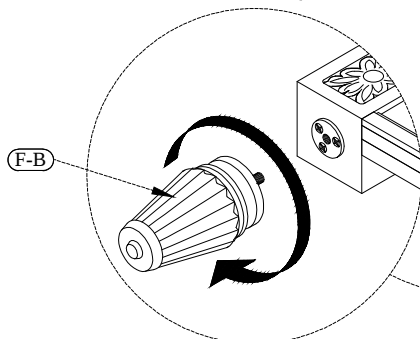

Detail: D

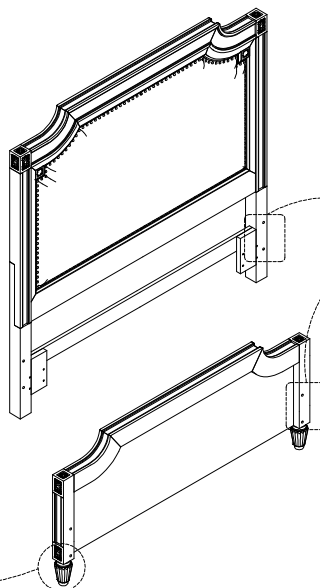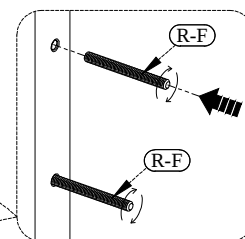

ASSEMBLY STEPS :

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.

3. Carefully position one end of one Bed Rail (R-A) onto the All-thread Bolts installed on the Headboard and connect using the Half moon washers (R-B), Spring washer (R-C) & Hexagonal Nuts (R-D). Only partially tighten the Nuts until the Footboard has been connected. Repeat for other Bed Rail.
4. Position and connect the Footboard (F-A) to the other end of the Bed Rails, attaching as in the previous Steps.
5. Carefully align the Footboard to be 'square' with the Headboard. Using the Open Wrench (R-E) tighten all Hex Nuts attaching the Side Rails to the Headboard and Footboard. (See Detail E).
6. Attach the four Support Legs (F-D) to the bottom side of four Wood Slats (F-C). (See Detail F).
7. Position and attach the Slats to the Bed Rails using the Wood Screws (F-E) and your Phillips Screwdriver. (See Detail G).

The levelers located at the bottom of the Support Legs can be adjusted if necessary to help support the Slats.

