

ASSEMBLY INSTRUCTION




Description : FULL BED

Model : SANTORINI-METALLIC WHITE-FB-HB / FB & SLATS / SR


METALLIC WHITE/MARBLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


PART LIST :

No.	Description	Diagram	Quantity
A	HEADBOARD		1
B	FOOTBOARD		1
C	SIDE RAIL		2
D	WOODEN SLAT		3
E	WOODEN SUPPORT		3

HARDWARE LIST :

No.	Description	Diagram	Size	Quantity
F	CB SCREW		M4 x 32mm	6
G	SCREW DRIVER (*)			1

(*) The manufacturer does not provide item G.

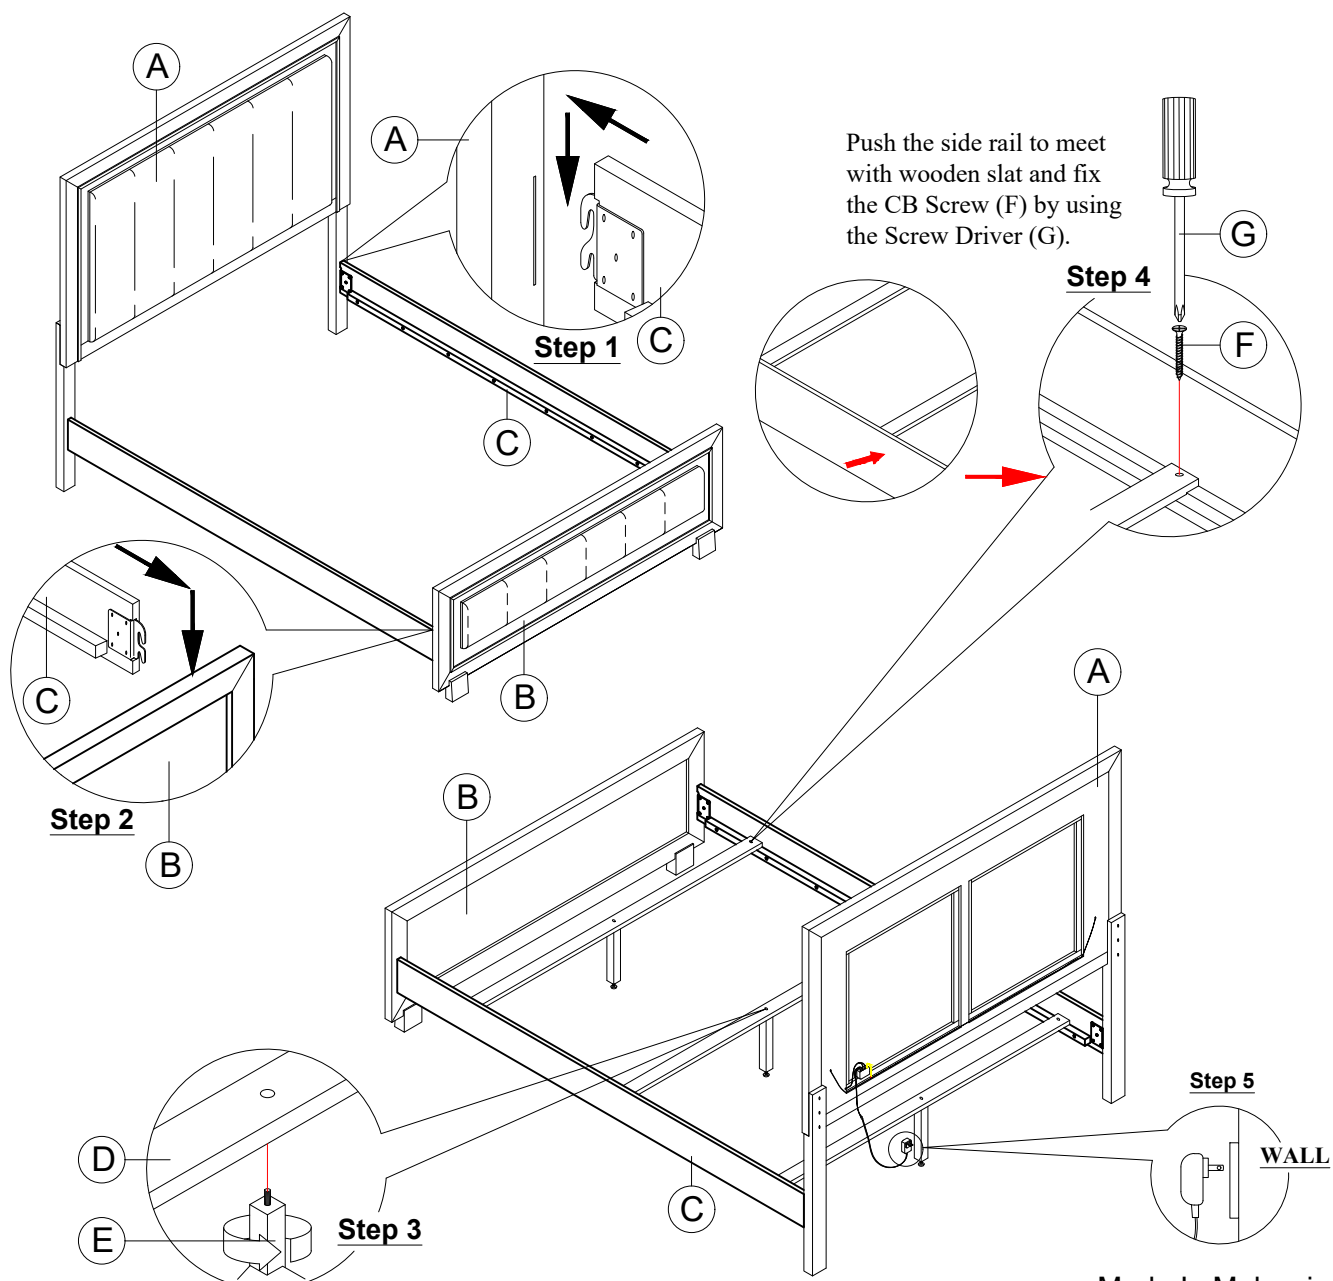

Made In Malaysia


1856WCS GLO FULL BED

ASSEMBLY INSTRUCTION

Model : SANTORINI-METALLIC WHITE-DR & MR

Description : MIRROR & DRESSER
METALLIC WHITE MARBLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

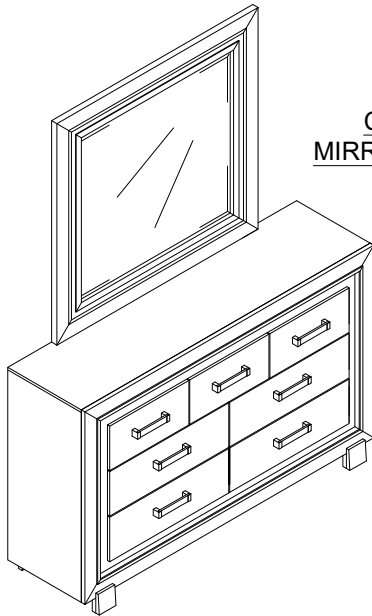

**COMPLETED
MIRROR & DRESSER
ASSEMBLY**


PART LIST :

No.	Description	Diagram	Quantity
A	MIRROR		1
B	DRESSER		1
C	MIRROR SUPPORT		2

HARDWARE LIST :

No.	Description	Diagram	Size	Quantity
D	CB SCREW		M4 x 32mm	8
E	SCREW DRIVER (*)			1
F	ADAPTOR			1

(*) The manufacturer does not provide item E.

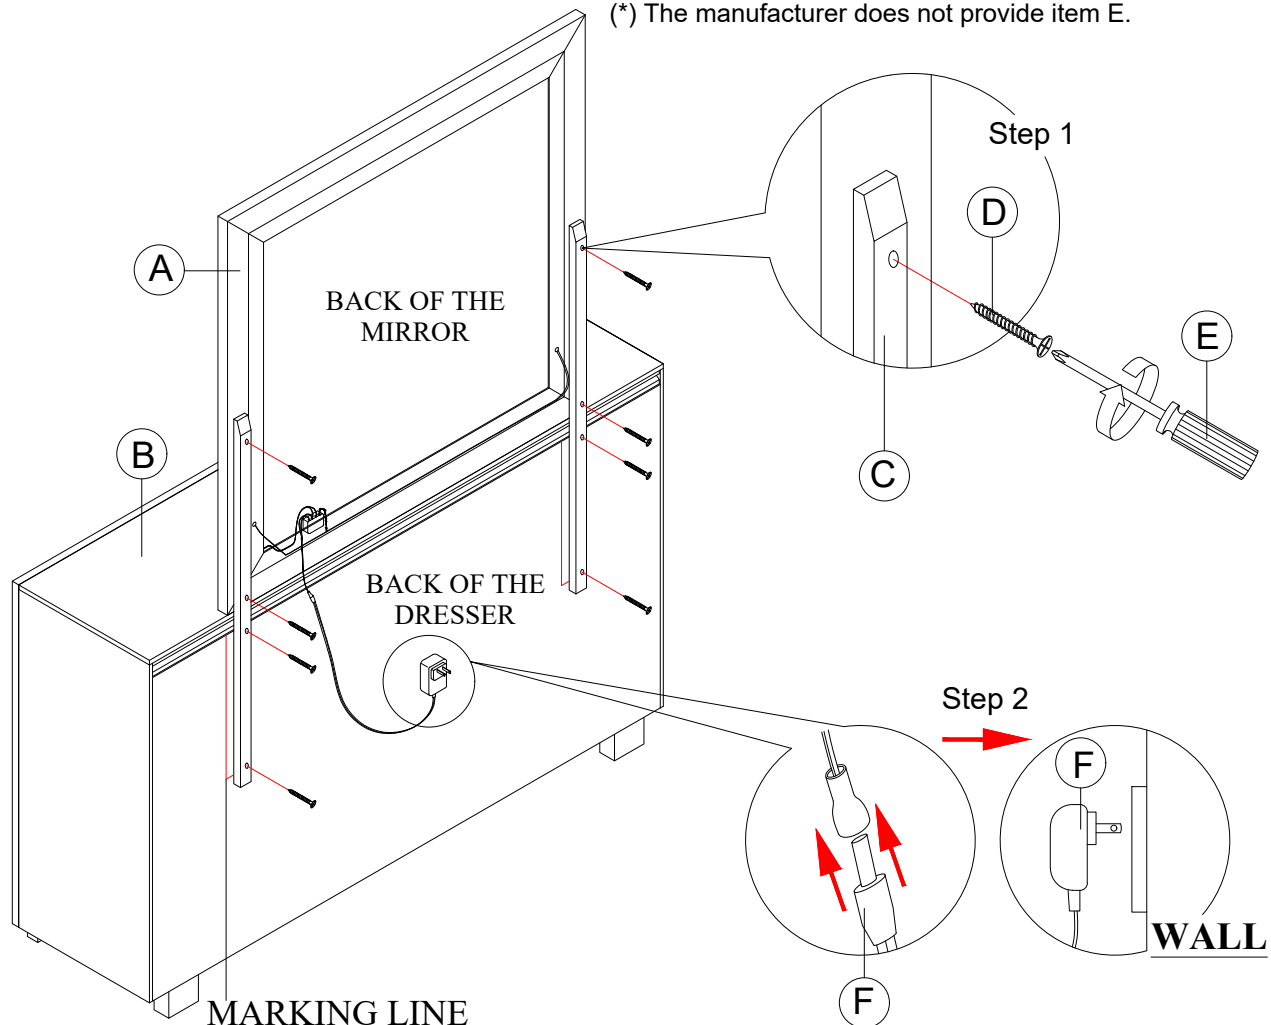

Made In Malaysia

1856WCS GLO MIRROR & DRESSER

ASSEMBLY INSTRUCTION

Model : SANTORINI - METALLIC WHITE - CH

Description : CHEST

METALLIC WHITE/MARBLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


PART LIST :

No.	Description	Diagram	Quantity
1	CHEST		1
A	BUN FOOT FRONT		2
B	BUN FOOT BACK		2


HARDWARE LIST :

No.	Description	Diagram	Size	Quantity
C	JCBC SCREW		M6 x 45mm	8
D	SPRING WASHER		M6 x 13mm	8
E	FLAT WASHER		M6 x 13mm	8
F	ALLEN KEY (LONG)		M4	1


Step 1

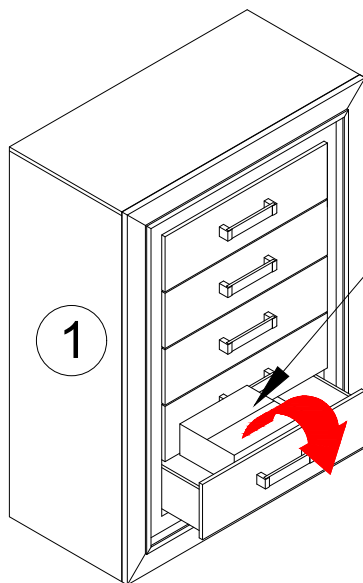


Bun Foot's Box

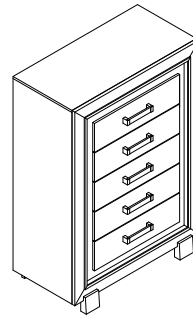

COMPLETED CHEST
ASSEMBLY

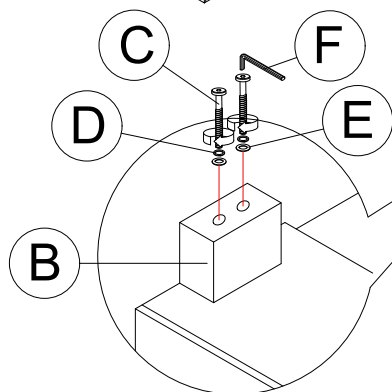

Step 2.1

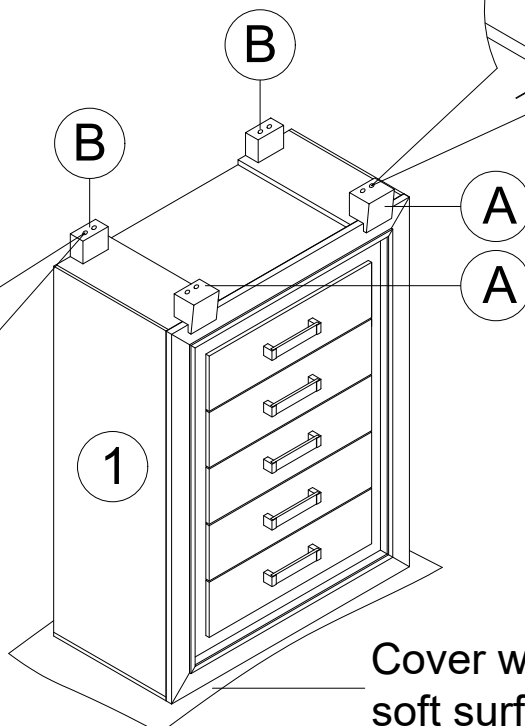

Cover with flat &
soft surface

Step 2

Made In Malaysia

1856WCS GLO CHEST

ASSEMBLY INSTRUCTION

Model : SANTORINI - METALLIC WHITE - DR

Description : DRESSER
METALLIC WHITE/MARBLE


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PART LIST :

No.	Description	Diagram	Quantity
1	DRESSER		1
A	BUN FOOT FRONT		2
B	BUN FOOT BACK		2
C	CENTER SUPPORT		1


HARDWARE LIST :

No.	Description	Diagram	Size	Quantity
D	JCBC SCREW		M6 x 45mm	8
E	JCBC SCREW		M6 x 35mm	4
F	SPRING WASHER		M6 x 13mm	12
G	SPRING WASHER		M6 x 13mm	8
H	FLAT WASHER		M6 x 19mm	4
I	ALLEN KEY (LONG)		M4	1

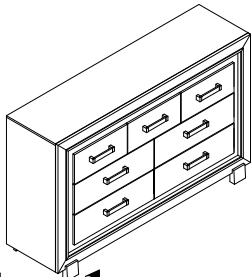


**COMPLETED
DRESSER
ASSEMBLY**

Step 1

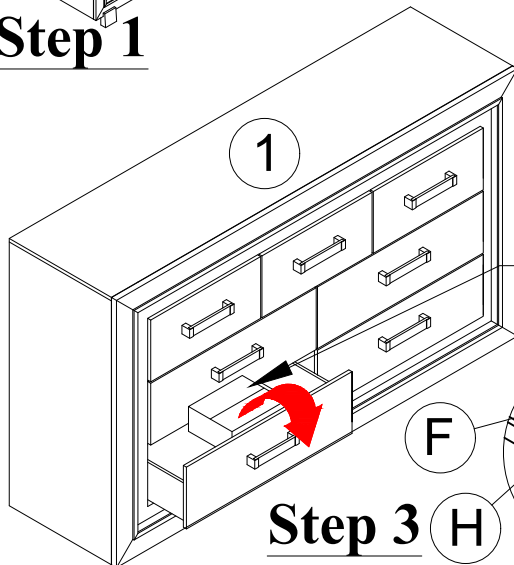


Bun Foot's
Box &
Center Support


Step 3

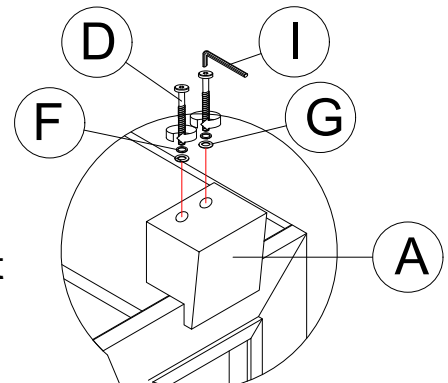

Step 2

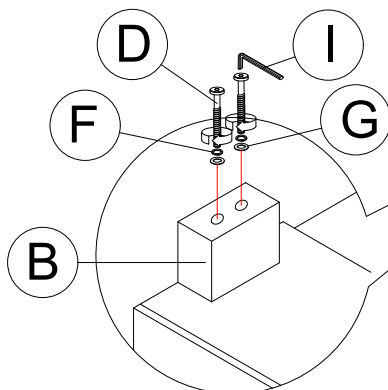

Step 2.1

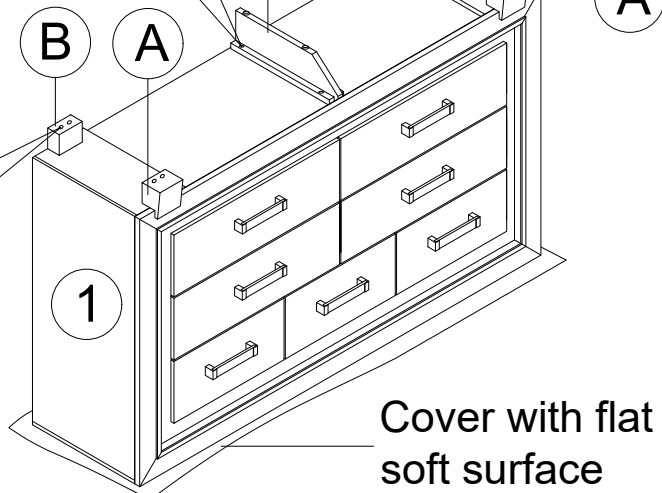

Cover with flat &
soft surface

Made In Malaysia

1856WCS GLO DRESSER

ASSEMBLY INSTRUCTION

Model : SANTORINI - METALLIC WHITE - NS

Description : NIGHTSTAND
METALLIC WHITE/MARBLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


PART LIST :

No.	Description	Diagram	Quantity
1	NIGHT STAND		1
A	BUN FOOT FRONT		2
B	BUN FOOT BACK		2

HARDWARE LIST :


No.	Description	Diagram	Size	Quantity
C	JCBC SCREW		M6 x 45mm	8
D	SPRING WASHER		M6 x 13mm	8
E	FLAT WASHER		M6 x 13mm	8
F	ALLEN KEY (LONG)		M4	1

Step 1

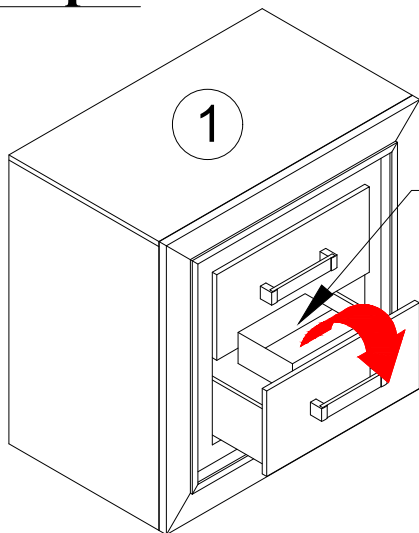

Bun Foot's Box

COMPLETED CHEST ASSEMBLY

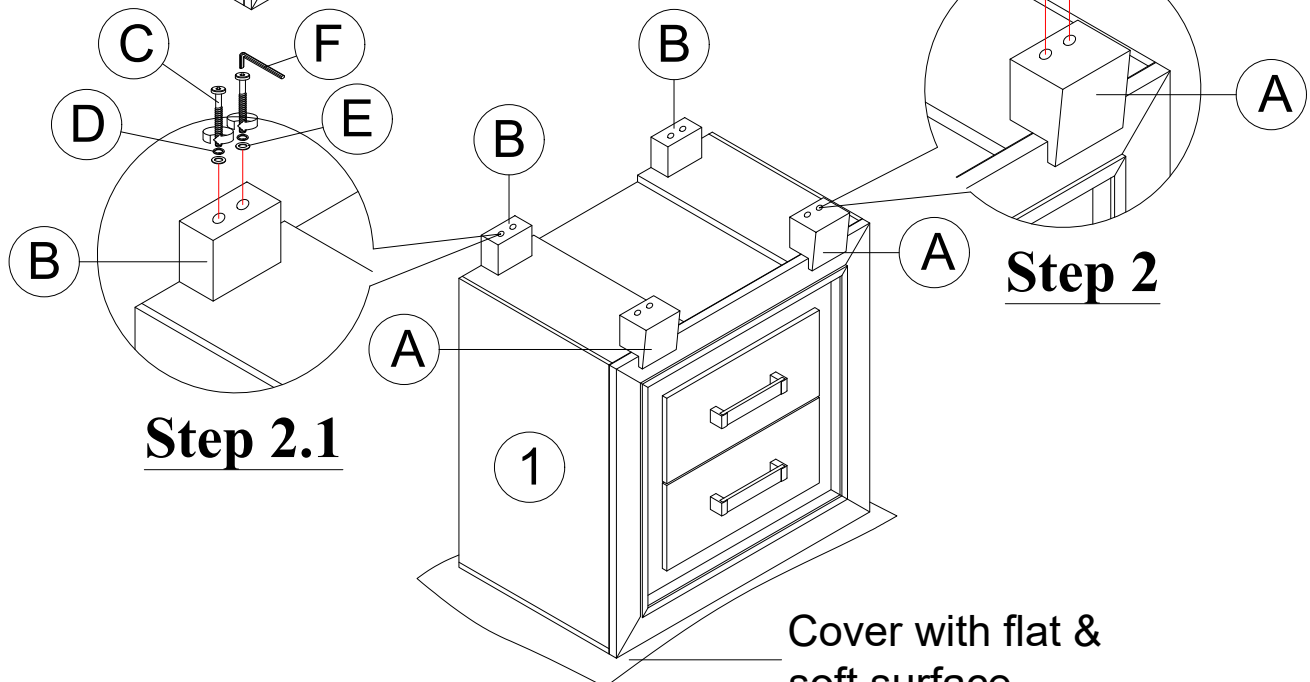

Step 2.1

Step 2

Cover with flat & soft surface

Made In Malaysia

1856WCS GLO NIGHT STAND