


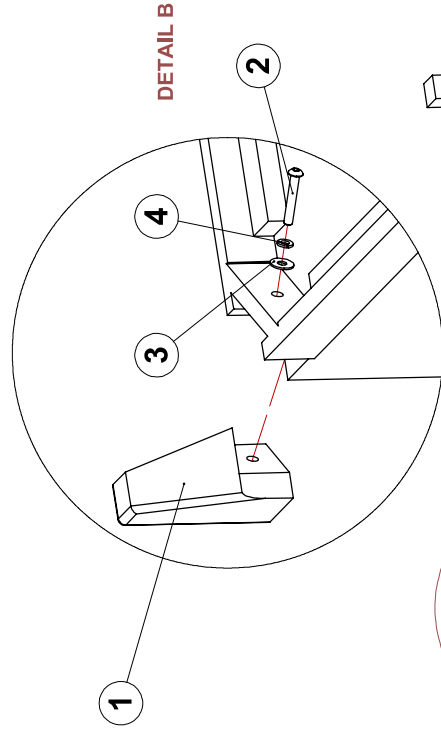

DETAIL B

FIGURE A

- 1.- TURN THE SOFA UPSIDE DOWN ON A CLEAN AND FLAT SURFACE.
- 2.- PLACE THE LEGS AS SHOWN IN FIGURE A.
- 3.- ALIGN THE LEGS WITH THE BOLT HOLES.
- 4.- INSERT ONE BOTTOM SOCKET SCREW WITH A LOCK WASHER & A FLAT WASHER, AS SHOWN IN DETAIL B.
- 5.- WITH THE ALLEN KEY 3/16", TIGHTEN THE SCREWS UNTIL THE LEGS FEELS FIRM.
- 6.- ONCE THE LEGS ARE INSTALLED, MOVE THE SOFA BACK TO ITS ORIGINAL POSITION.



ASSEMBLING INSTRUCTIONS

I-IUP-541

ITEM #	DESCRIPTION	#
1	LEGS	4
2	BOTTOM SOCKET SCREW 5/16" x 2"	4
3	FLAT WASHER 5/16"	4
4	LOCK WASHER	4
5	ALLEN KEY 3/16"	1

IUP541-ACH

ITEM	DESCRIPTION	#
1TOR004	TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1RON011	RONDANA DE PRESION 5/16" NEGRA	4
1HER251	LLAVE ALLEN 3/16 (MUEBLE)	1

IUP541-LOV

ITEM	DESCRIPTION	#
1TOR004	TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1RON011	RONDANA DE PRESION 5/16" NEGRA	4
1HER251	LLAVE ALLEN 3/16 (MUEBLE)	1

IUP541-SOF

ITEM	DESCRIPTION	#
1TOR004	TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1RON011	RONDANA DE PRESION 5/16" NEGRA	4
1HER251	LLAVE ALLEN 3/16 (MUEBLE)	1

IUP541-ALC

ITEM	DESCRIPTION	#
1TOR004	TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1RON011	RONDANA DE PRESION 5/16" NEGRA	4
1HER251	LLAVE ALLEN 3/16 (MUEBLE)	1

IUP541-ALS

ITEM	DESCRIPTION	#
1TOR004	TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1RON011	RONDANA DE PRESION 5/16" NEGRA	4
1HER251	LLAVE ALLEN 3/16 (MUEBLE)	1

IUP541-CSE-LF / RT OTT

ITEM	DESCRIPTION	#
1TOR004	TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1RON011	RONDANA DE PRESION 5/16" NEGRA	4
1HER251	LLAVE ALLEN 3/16 (MUEBLE)	1



ASSEMBLING INSTRUCTIONS

IUP541-ACH IUP541ALC
IUP541-LOV IUP-ALS
IUP541-SOF IUP-CSE-LF / RT Y OTT

I-IUP-541