


# INSTALLING THE TOE KICK

INTEGRATED COLUMNS (Refrigerator & Freezer, Refrigerator-Freezer & Wine Cabinet)

US CA NZ AU BI EU SG HK CN

## PARTS SUPPLIED

Included in installation kit supplied with every product.




Magnets (4x)



8x16 mm Mushroom washer screws (4x)

## TOOLS REQUIRED

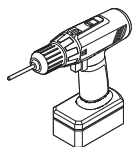


Powered driver

## STAINLESS STEEL TOE KICK




Not supplied and can be purchased separately through an authorised Fisher and Paykel dealer. Visit [fisherpaykel.com](http://fisherpaykel.com) for more information.

## CUSTOM TOE KICK




Must be supplied by customer to match their cabinetry.

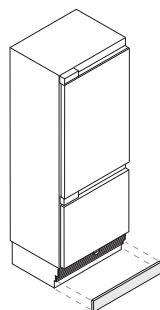



Single installation

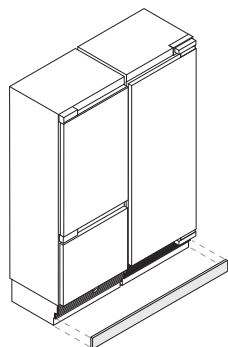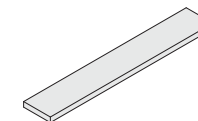




Dual installation

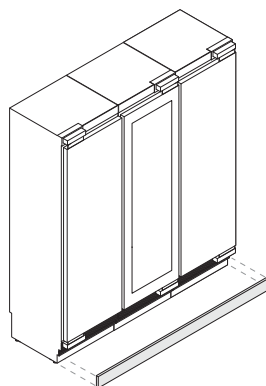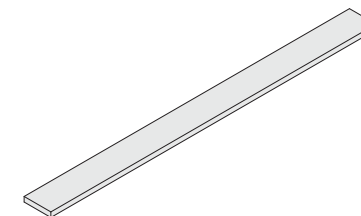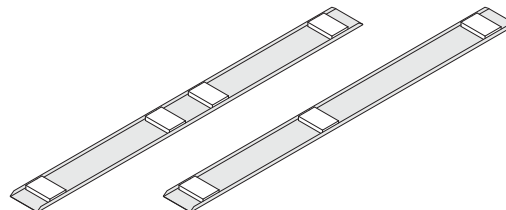

Triple installation

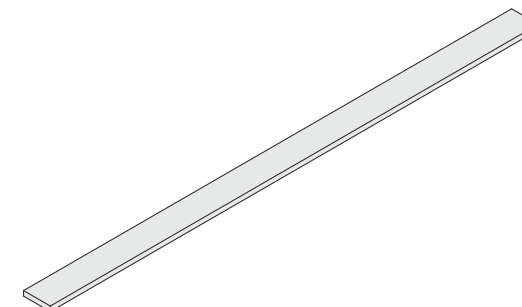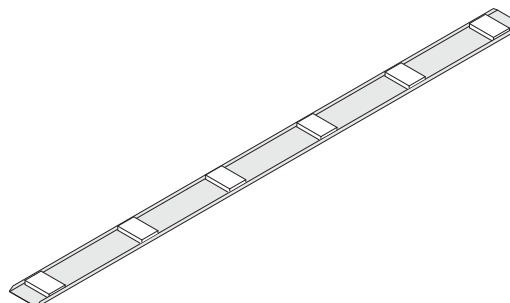

## STAINLESS STEEL TOE KICK

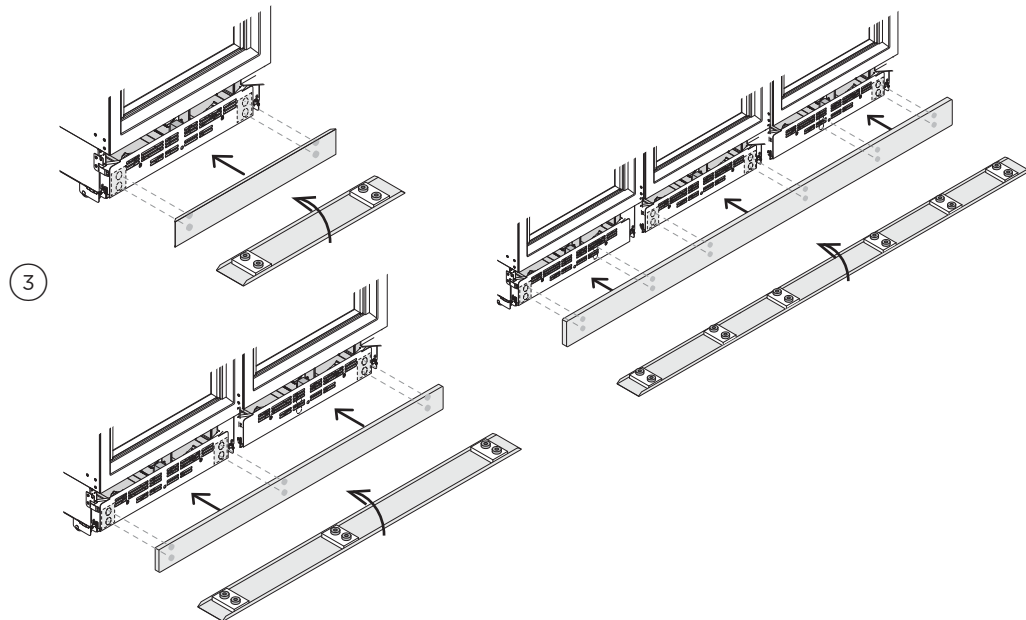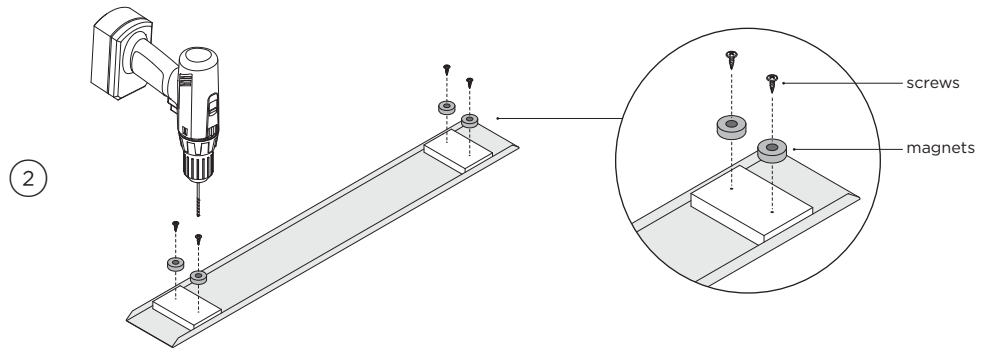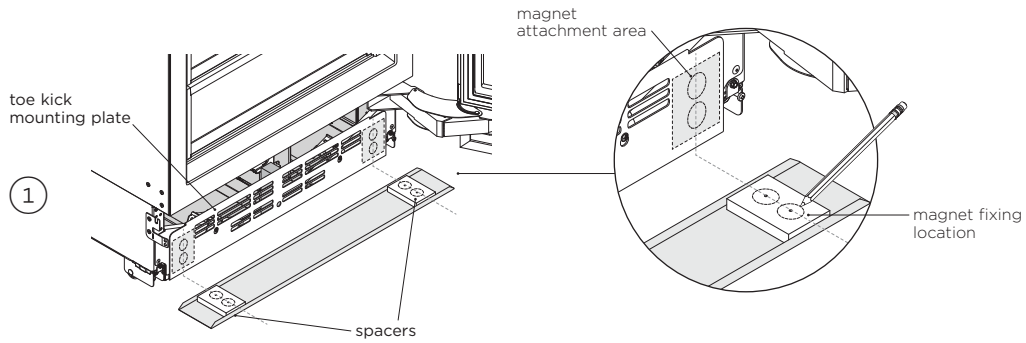

## CUSTOM TOE KICK

