


ASSEMBLY INSTRUCTION

MODEL : TALIA

Description : Head Board with LED

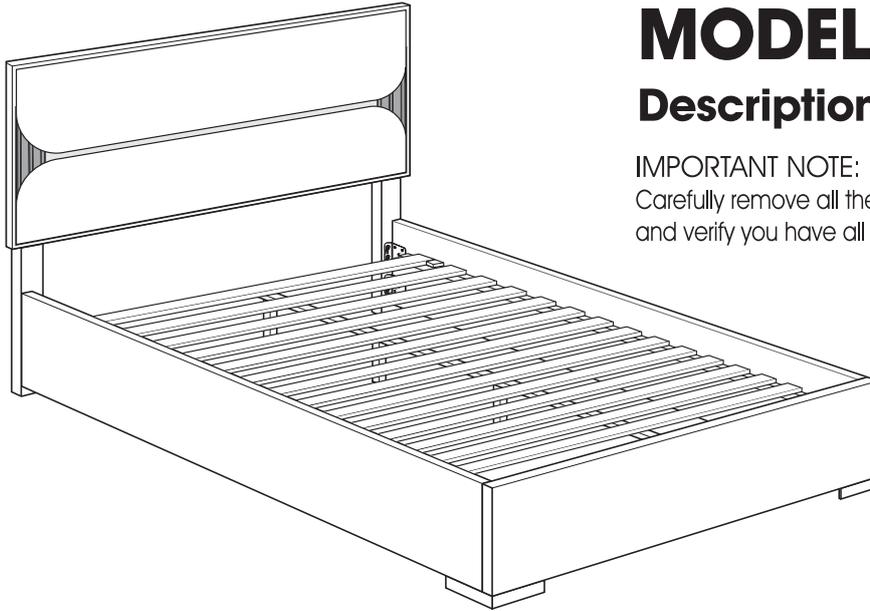


IMPORTANT NOTE:


Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.

PARTS LIST

A. Headboard (1 pc)

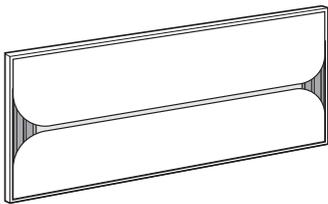

B. Headboard Post (L/R) 2pcs

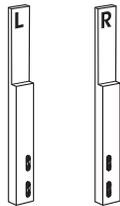


No HARDWARE LIST

1	Bolt M8 40mm (6pcs)	
2	Flat Washer (6 pcs)	
3	Spring Washer (6 pcs)	
4	M8 Hex Key (1 pc)	
5	AC/DC Adapter (1 PC)	

Hardware Located in Headboard Box

F. Headboard Post (L/R) 2pcs

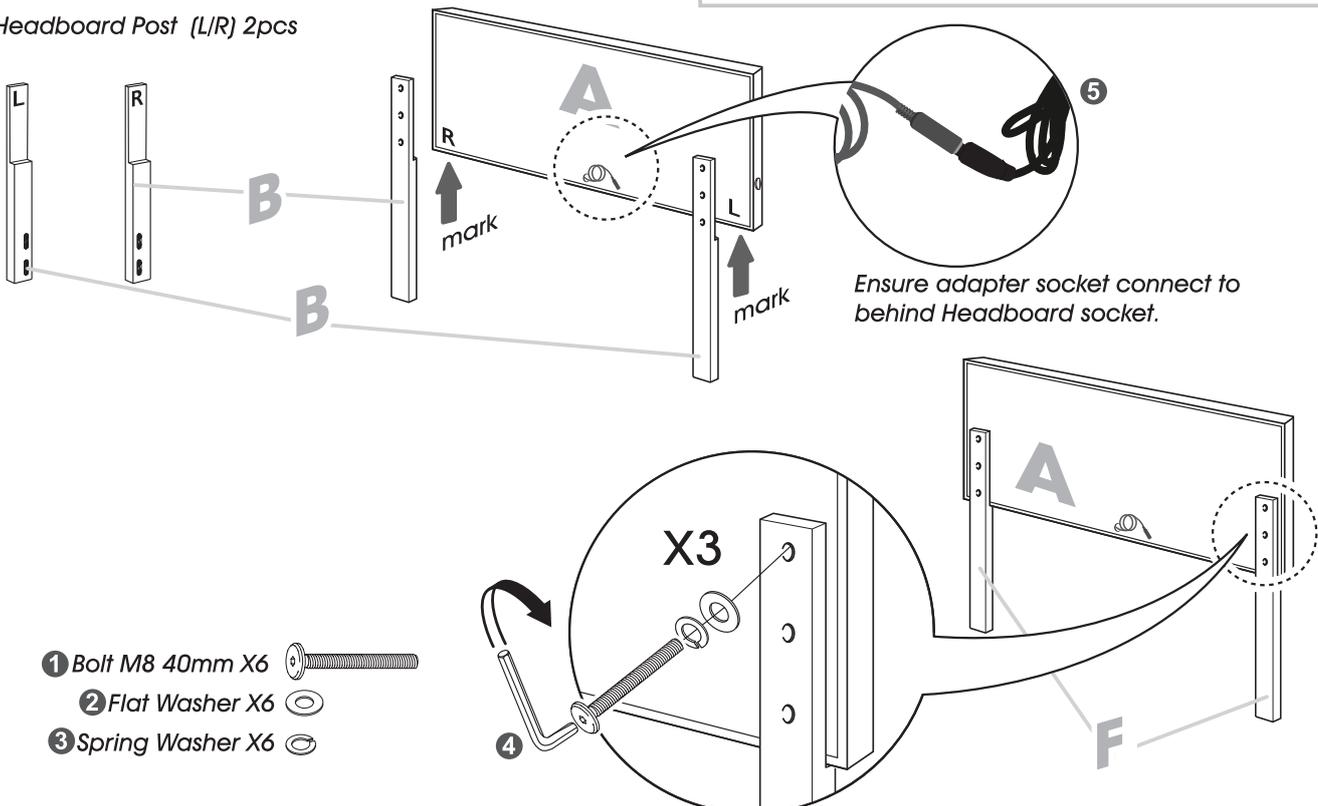

- ① Bolt M8 40mm X6
- ② Flat Washer X6
- ③ Spring Washer X6

ASSEMBLY INSTRUCTION


MODEL : TALIA

Description :

KING BED FOOTBOARD SIDERAILS


IMPORTANT NOTE:

Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.

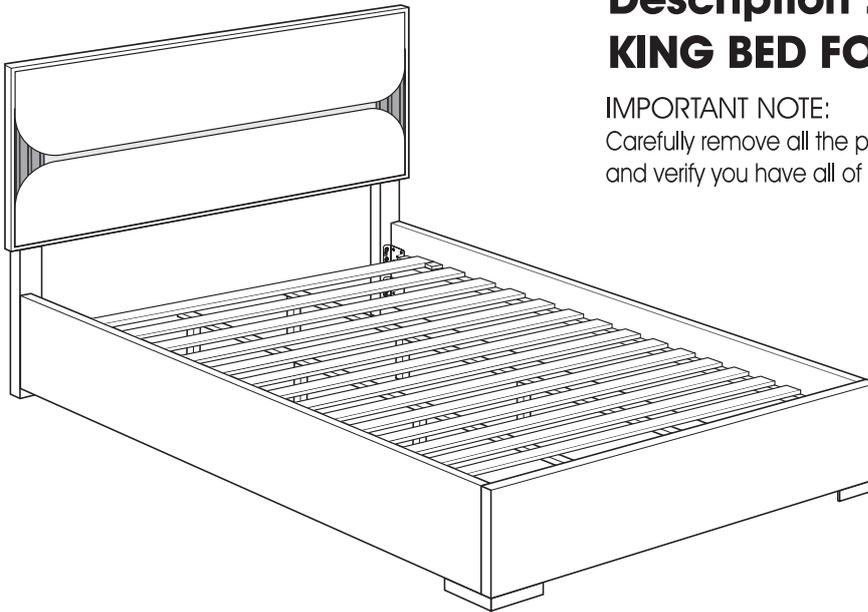


PARTS LIST

A. Side Rails (L/R) 2pcs

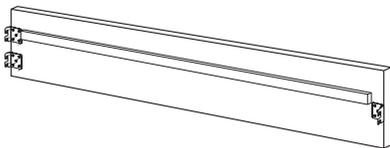

B. Footboard (1 pc)

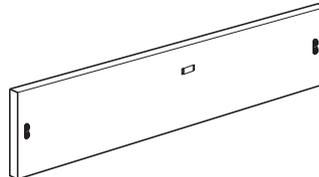

C. Center Support (2 pc)



D. Footboard Leg (4 pcs)



Sticker A, B, C, D

E. Center Leg (8 pcs)




No		HARDWARE LIST		No	
1	Bolt M6 30mm(16 pcs)		5	Screw 32mm (10 pcs)	
2	Bolt M8 20mm(4 pcs)		6	Adjuster (8 pcs)	
3	Flat Washer (16 pcs)		7	M6 Hex Key (1 pc)	
4	Spring Washer (16 pcs)				


Hardware Located in Footboard Box

Step 1

A. Side Rails (L/R) 2pcs

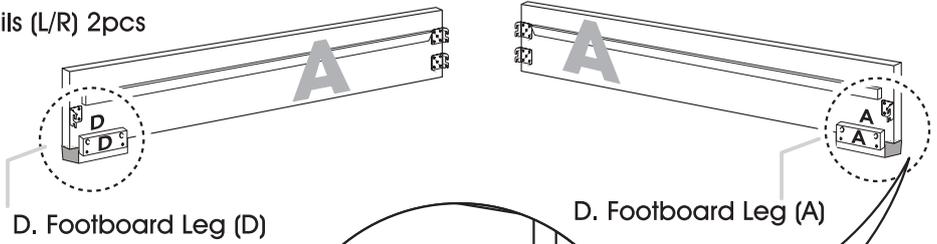


- 1 Bolt M6 30mm X4 
- 3 Flat Washer X4 
- 4 Spring Washer X4 

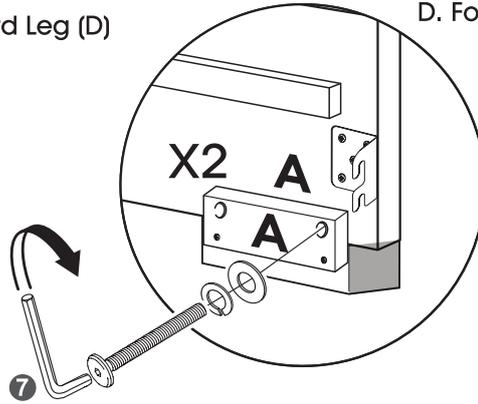


Step 2


B. Footboard

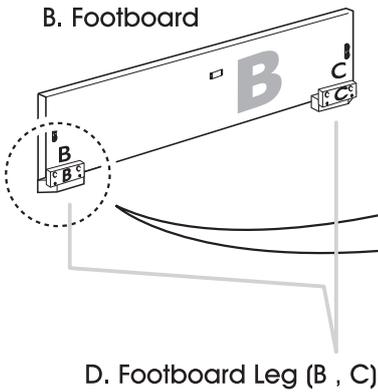


- 1 Bolt M6 30mm X4 
- 3 Flat Washer X4 
- 4 Spring Washer X4 

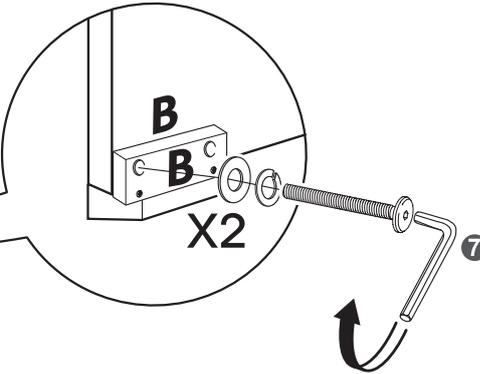


Step 3

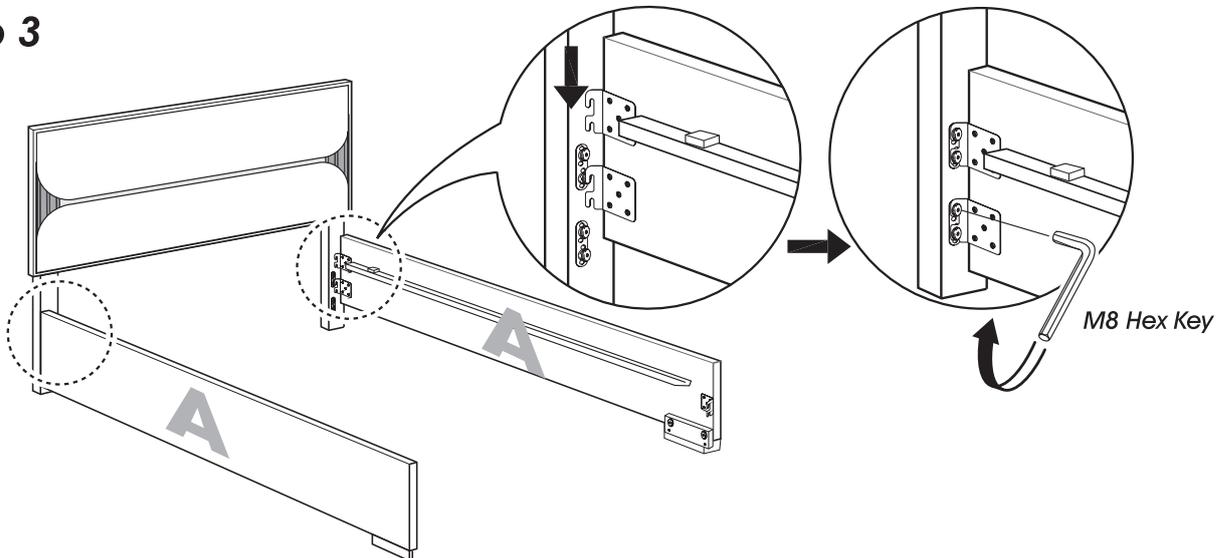

Step 4

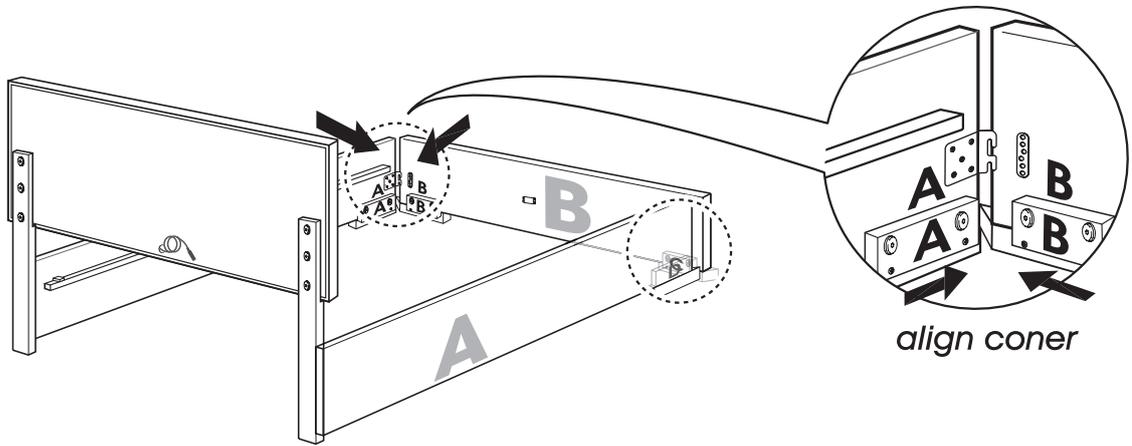


Step 5

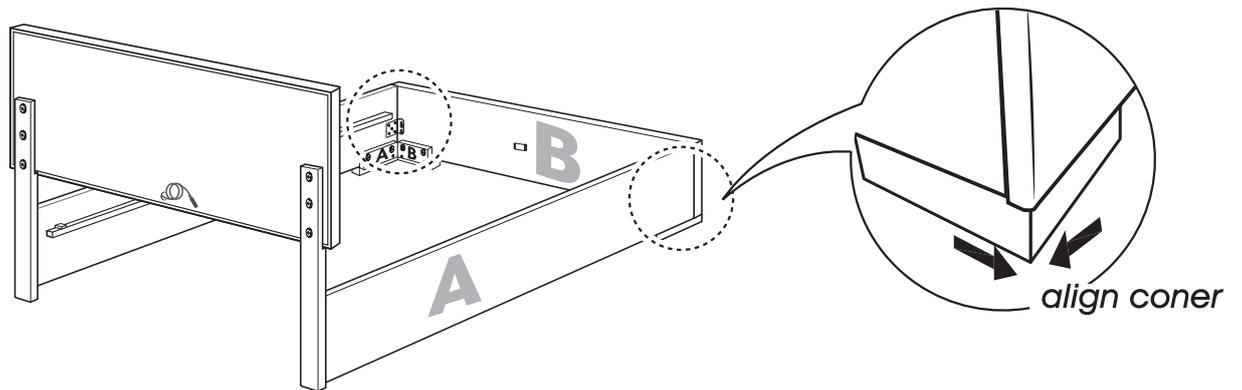


Make sure the coner are aligned and locked.


Step 6

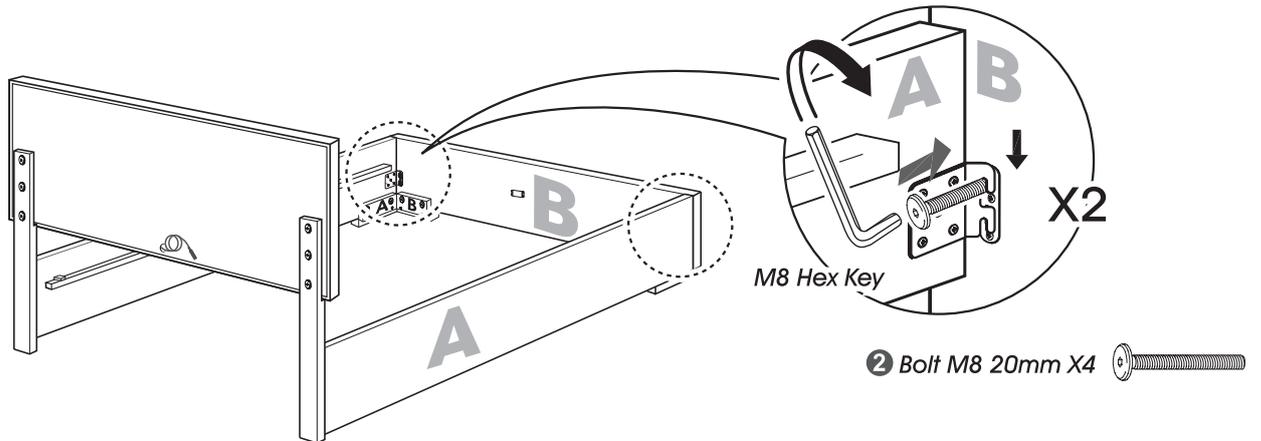


Step 7

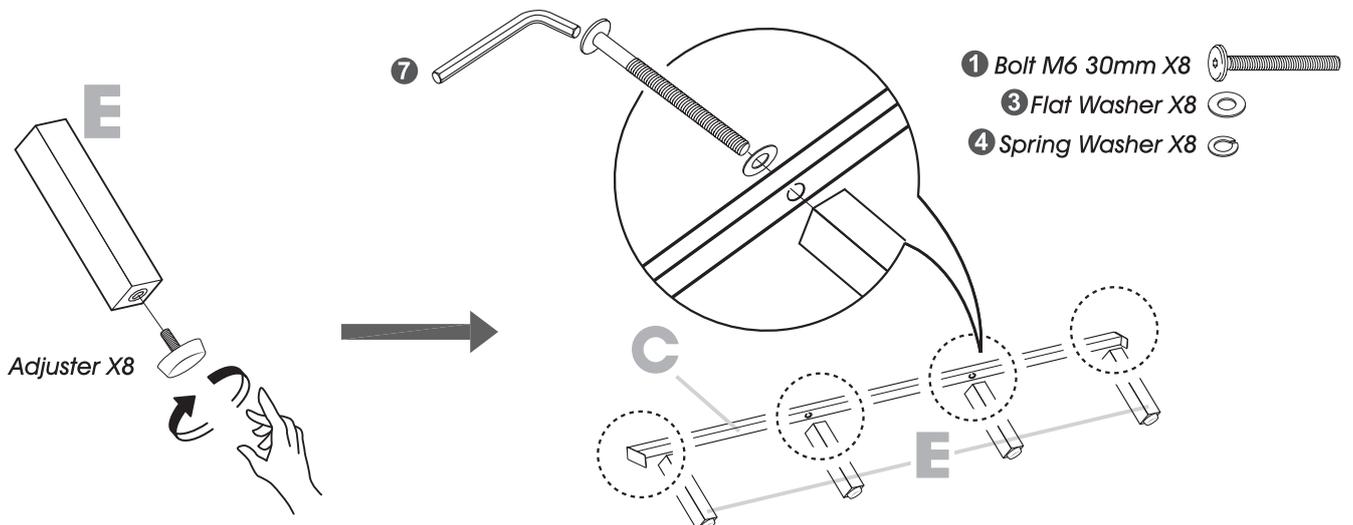

Step 8

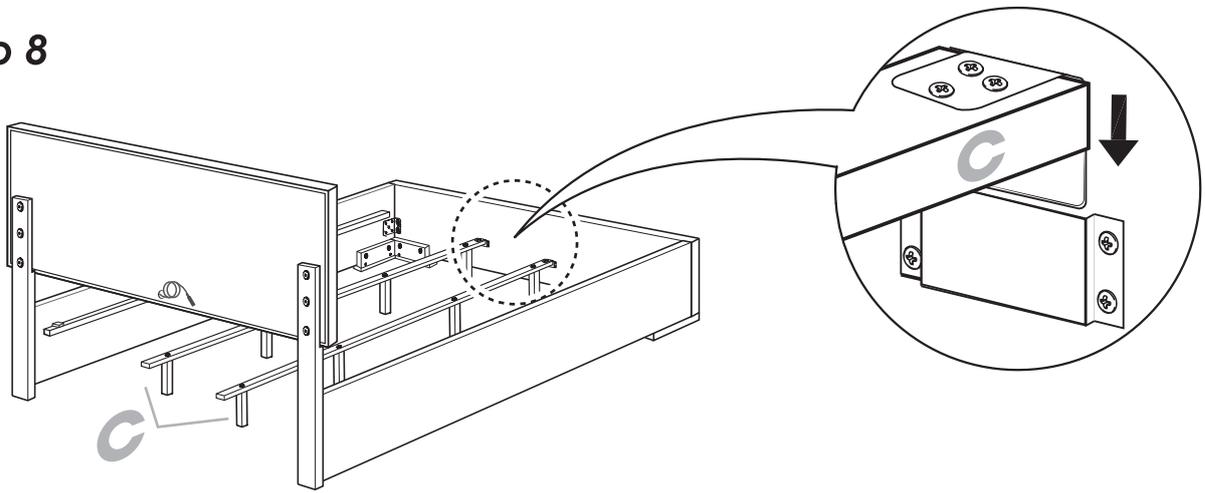

Step 9

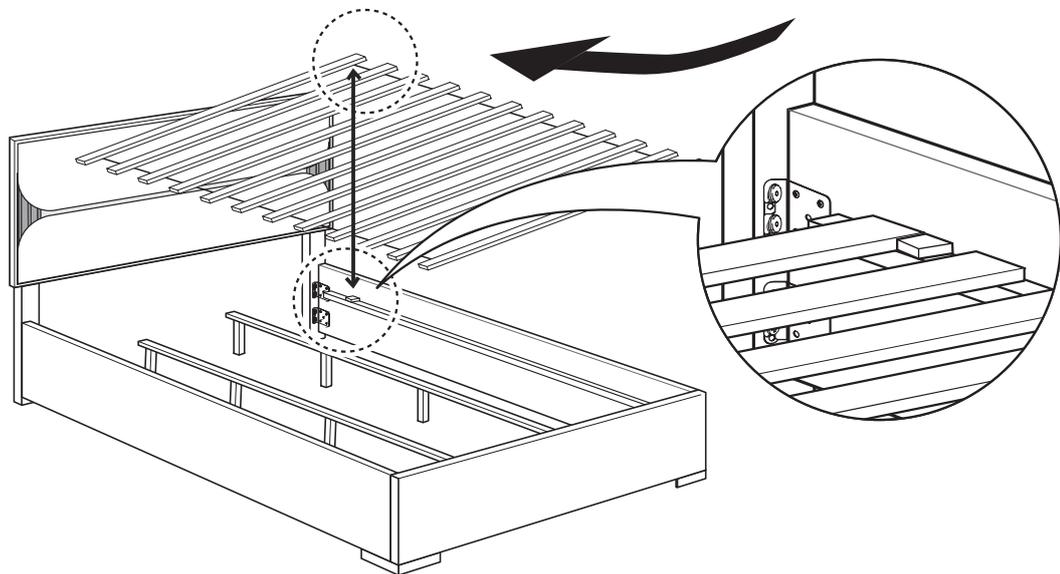

Step 10

