N&D 0809

## **↑** SAFETY WARNING

- 1. Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
- Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- 3. Surface of mattress must be at least 5 in. (127 mm) below the upper edge of guardrails.
- 4. Do not allow children under 6 years of age to use the upper bunk.
- 5. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- 6. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- 7. Prohibit more than one person on upper bunk.
- 8. Always use the ladder for entering and leaving the upper bunk.
- 9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
- 10. Use of a night light may provide added safety precaution for a child using the upper bunk.
- 11. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
- 12. The use of water or sleep flotation mattresses is prohibited.
- 13. STRANGULATION HAZARD—Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to hooks, belts and jump ropes.
- 14. Keep these instructions for future reference.

## SIZE OF MATTRESS AND FOUNDATION:

Use only mattress, which is 37 1/2" - 38 1/2" width and 74"-75" long on upper bunk (twin size.) Ensure that the thickness of the mattress does not exceed 6" and that the mattress surface is at least 5" (127mm) below upper edge of guardrails.

## WARNING:

Adult Assembly Required. This package contains small parts. Keep away from children.

## **Replacement Parts:**


Replacement parts, including additional guardrails may be obtained from any Night & Day Furniture Dealer.


## Certified:

This bunk bed conforms to all applicable consumer product safety standards 16 CFR PARTS 1213, 1500, 1513 and ASTM F-1427





Parts in Box 1

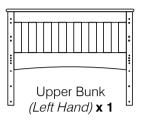

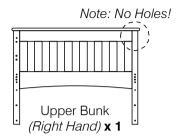


Parts in Box 2

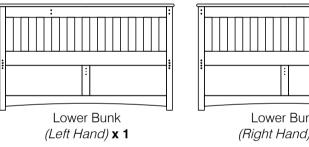

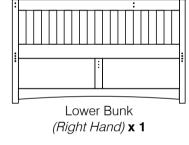





Parts in Box 3

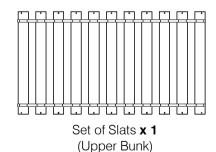


Parts in Box 4

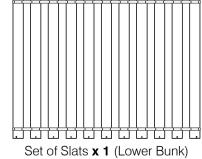



Parts in Box 5













Rear Guard Rail x 1



Front Guard Rail x 1

Hardware in this Box.

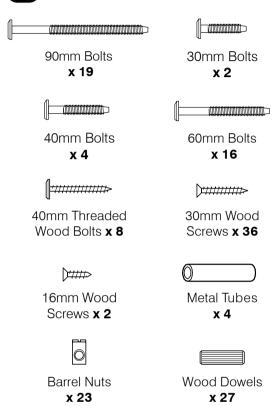


Note:


Tools required for assembly:


- Allen Key (provided)
- Phillips Screwdriver (not provided)


Long Allen Key x 1

N&D 0808

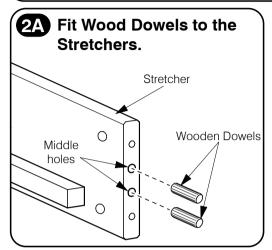

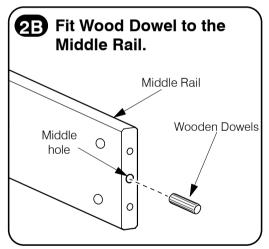

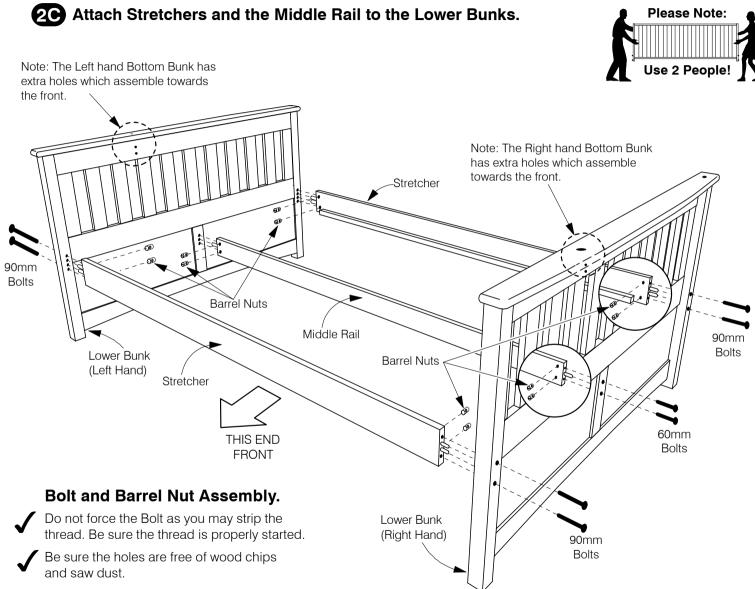

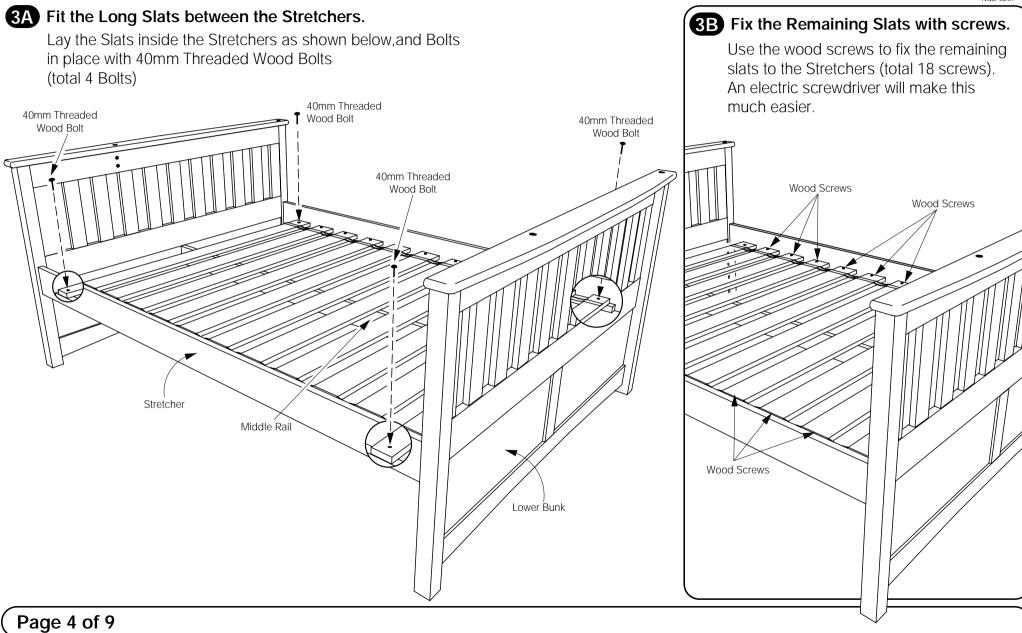


N&D 0808

## 4A Attach the Stretchers and Rear Guard Rail to the Upper Bunks.

Tap Wooden Dowels into the ends of the Stretchers and Rear Guard Rail. Using 90mm Bolts and Barrel Nuts, attach these to the Upper Bunk, carefully noting Left and Right hand sides.

## **Bolt and Barrel Nut Assembly.**


- Do not force the Bolt as you may strip the thread. Be sure the thread is properly started.
- Be sure the holes are free of wood chips and saw dust.

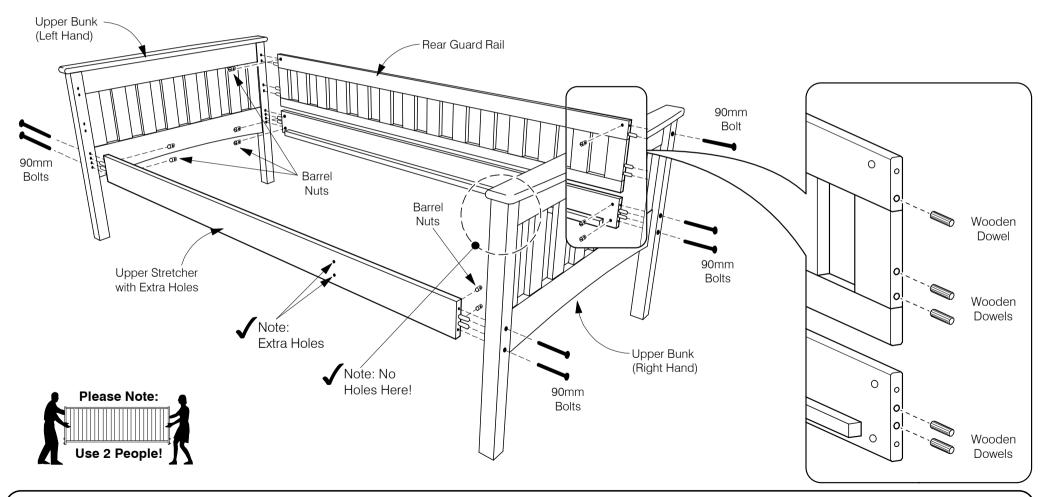

N&D 0808


**5A** Attach the Front Guard Rail to the Upper Bunk.


Tap Wooden Dowels into the ends of the Front Guard Rail. Use the 90mm Bolts and Barrel Nuts fix it in place. The Front Guard Rail attaches to the Stretcher using the 30mm Bolts.

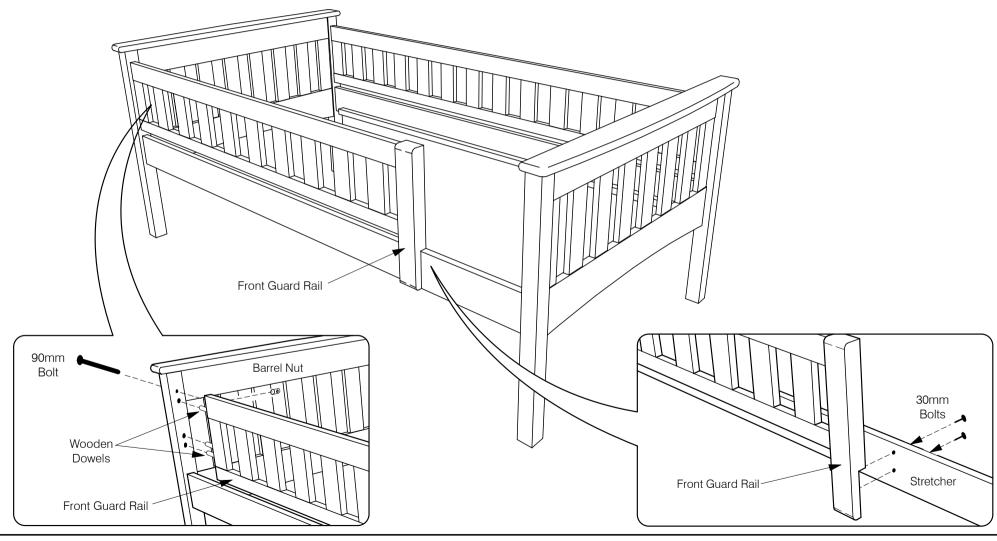



Lay the Slats inside the Stretchers as shown below, and Bolt in place with the 40mm Threaded Wood Bolts (total 4 Bolts.)

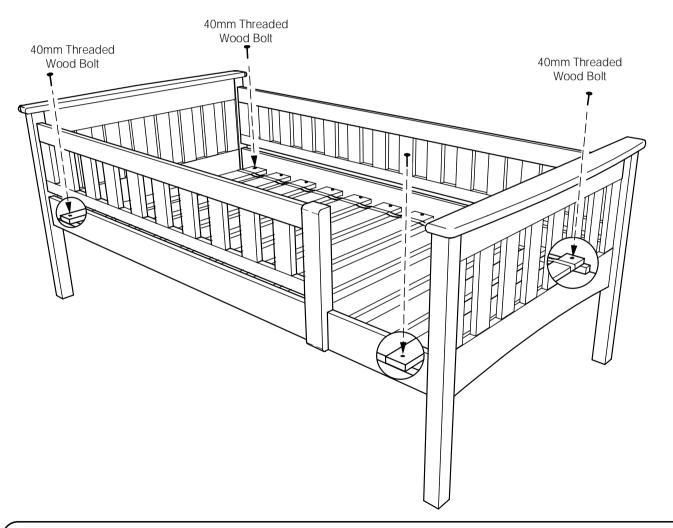

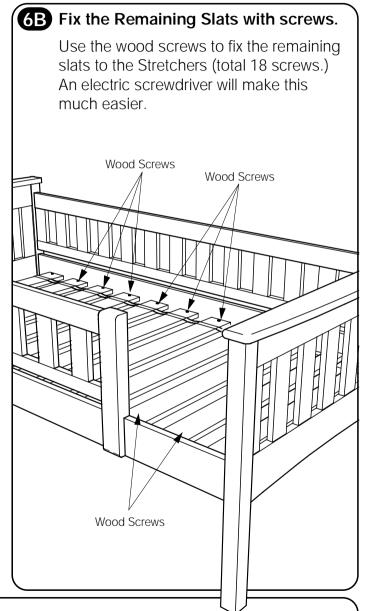

7A Fit the Upper Bunk onto the Lower Bunk. **7B** Fit the Brackets to the Legs. Fit the Metal Tubes into the holes on the top of the Upper Bunk. Use the 60mm Bolts to fix the Brackets to the Carefully Lift the Top Bunk onto the Lower Bunk. Uppper Bunk and 40mm Bolts to the Lower Bunk. 60mm Bolts Metal Tubes 60mm Bolts Metal Tubes 60mm Bolts 40mm Bolts Please Note: Lower Bunk Use 2 People!

Page 8 of 9

## 8A Attach the Ladder to the Upper Stretcher.

Finally, hook on the Ladder onto the Upper Stretcher. Use the 16mm Wood Screws to fix the Ladder in place.

• Please take note of the warnings shown on page one of these instructions, printed on the carton box and on stickers on the Bunk bed.

