


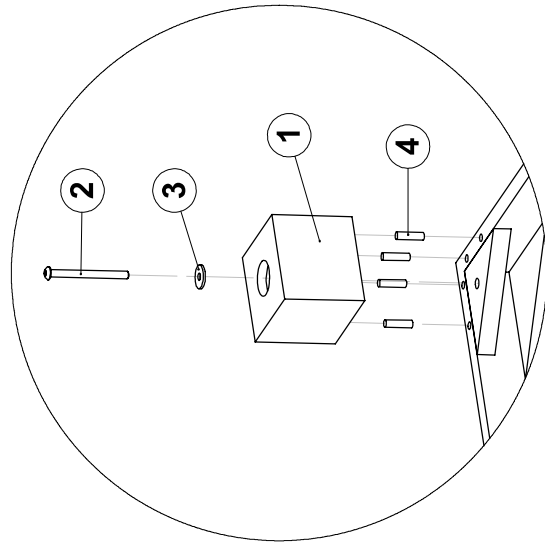

DETAIL B

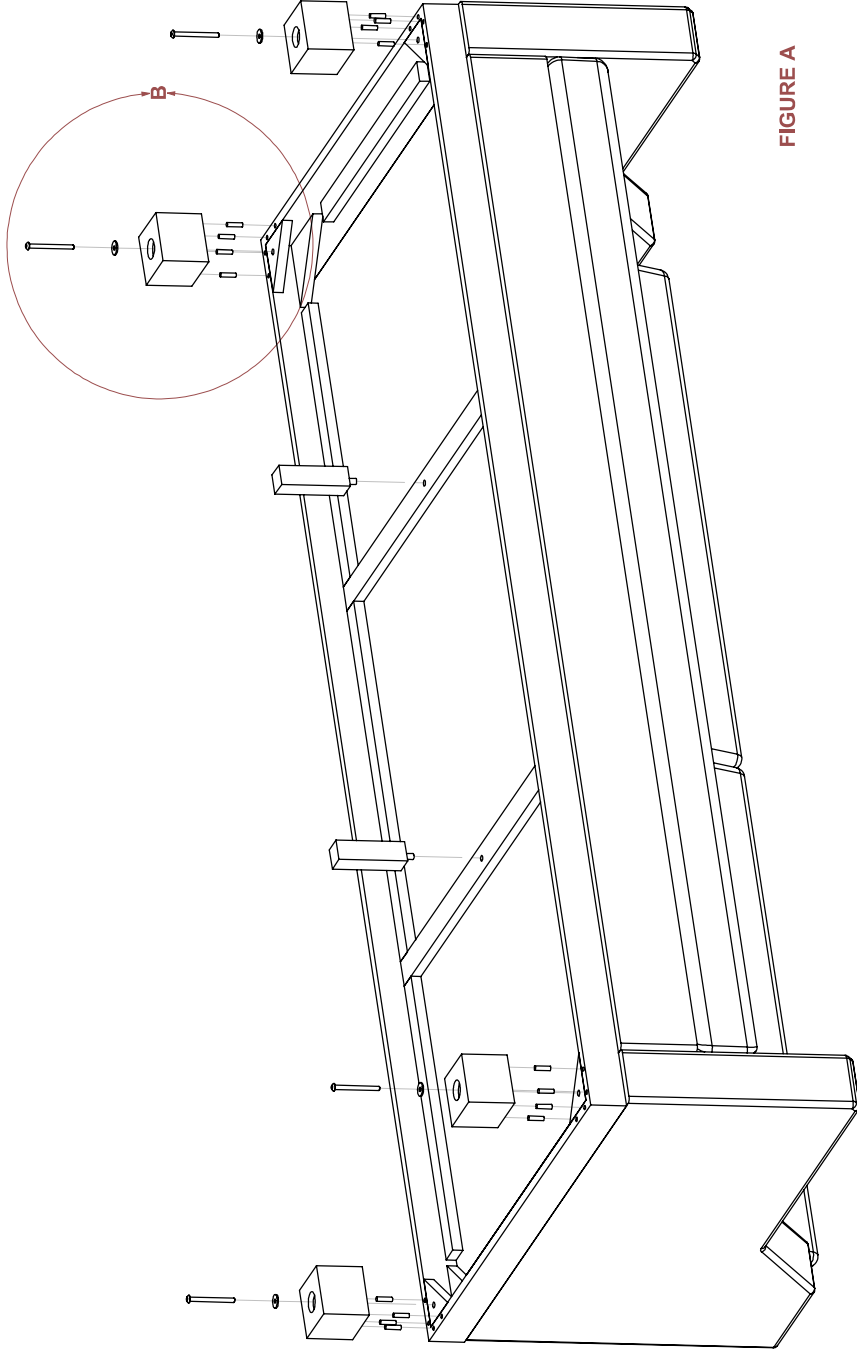


FIGURE A

- 1.- TURN THE SOFA UPSIDE DOWN ON A CLEAN AND FLAT SURFACE.
- 2.- PLACE 4 WOOD DOWELS IN EACH LEG.
- 3.- ALIGN EACH CORNER WITH THE DOWELS HOLES AND PRESS THEM IN THE HOLES ON EACH LEG.
- 4.- PLACE A FLAT WASHER ON EACH SCREW AND ALIGN THEM IN THE HOLES ON EACH LEG.
- 5- THIGHTEN THE SCREWS UNTIL THE LEG FEELS FIRM.
- 6- ONCE THE LEGS ARE INSTALLED, MOVE THE SOFA BACK TO ITS ORIGINAL POSITION.



## ASSEMBLING INSTRUCTIONS

### I-IUP-MIX

| ITEM # | DESCRIPTION                        | #  |
|--------|------------------------------------|----|
| 1      | LEGS                               | 4  |
| 2      | BOTTOM SOCKET SCREW 5/16" x 3 1/2" | 4  |
| 3      | FLAT WASHER 5/16"                  | 4  |
| 4      | WOODEN DOWELS 8 x 30 mm            | 16 |
| 5      | ALLEN KEY 1/4"                     | 1  |

## IUP298-ACH / IUP117-ACH

| ITEM    | DESCRIPTION                                    | #  |
|---------|------------------------------------------------|----|
| 1TOR106 | TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO | 4  |
| 1RON003 | RONDANA PLANA 5/16" x 1" GALV                  | 4  |
| 1PER001 | PERNO DE MADERA 8 x 30                         | 16 |
| 1HER383 | LLAVE ALLEN 1/4 (MUEBLE)                       | 1  |

## IUP298-LOV / IUP117-LOV

| ITEM    | DESCRIPTION                                    | #  |
|---------|------------------------------------------------|----|
| 1TOR106 | TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO | 4  |
| 1RON003 | RONDANA PLANA 5/16" x 1" GALV                  | 4  |
| 1PER001 | PERNO DE MADERA 8 x 30                         | 16 |
| 1HER383 | LLAVE ALLEN 1/4 (MUEBLE)                       | 1  |

## IUP298-SOF / IUP117-SOF

| ITEM    | DESCRIPTION                                    | #  |
|---------|------------------------------------------------|----|
| 1TOR106 | TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO | 4  |
| 1RON003 | RONDANA PLANA 5/16" x 1" GALV                  | 4  |
| 1PER001 | PERNO DE MADERA 8 x 30                         | 16 |
| 1HER383 | LLAVE ALLEN 1/4 (MUEBLE)                       | 1  |

## IUP298-CSE-LF / IUP117-CSE-LF

| ITEM    | DESCRIPTION                                    | #  |
|---------|------------------------------------------------|----|
| 1TOR106 | TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO | 4  |
| 1RON003 | RONDANA PLANA 5/16" x 1" GALV                  | 4  |
| 1PER001 | PERNO DE MADERA 8 x 30                         | 16 |
| 1HER383 | LLAVE ALLEN 1/4 (MUEBLE)                       | 1  |

## IUP298-LOV-RT / IUP117-LOV-RT

| ITEM    | DESCRIPTION                                    | #  |
|---------|------------------------------------------------|----|
| 1TOR106 | TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO | 4  |
| 1RON003 | RONDANA PLANA 5/16" x 1" GALV                  | 4  |
| 1PER001 | PERNO DE MADERA 8 x 30                         | 16 |
| 1HER383 | LLAVE ALLEN 1/4 (MUEBLE)                       | 1  |

## IUP298-ALC / IUP117-ALC

| ITEM    | DESCRIPTION                                    | #  |
|---------|------------------------------------------------|----|
| 1TOR106 | TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO | 4  |
| 1RON003 | RONDANA PLANA 5/16" x 1" GALV                  | 4  |
| 1PER001 | PERNO DE MADERA 8 x 30                         | 16 |
| 1HER383 | LLAVE ALLEN 1/4 (MUEBLE)                       | 1  |

## IUP298-OTT / IUP117-OTT

| ITEM    | DESCRIPTION                                    | #  |
|---------|------------------------------------------------|----|
| 1TOR106 | TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO | 4  |
| 1RON003 | RONDANA PLANA 5/16" x 1" GALV                  | 4  |
| 1PER001 | PERNO DE MADERA 8 x 30                         | 16 |
| 1HER383 | LLAVE ALLEN 1/4 (MUEBLE)                       | 1  |



## ASSEMBLING INSTRUCTIONS

### I-IUP-MIX