


### Warning :
















- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

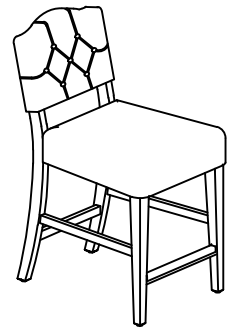


92635 / 36 / 37

Button Tuft Uph Stool


### Components and Hardware List

<b>Chair Back</b>  <b>(A)</b> 1 pc.	<b>Seat Frame</b>  <b>(B)</b> 1 pc.	<b>Front Leg (Left)</b>  <b>(C)</b> 1 pc.	<b>Front Leg (Right)</b>  <b>(D)</b> 1 pc.	<b>Front Stretcher</b> 15-7/8" x 1-1/4" x 3/4"  <b>(E)</b> 1 pc.		
<b>Side Stretcher (Left)</b> 18-7/8" x 1-1/4" x 3/4"  <b>(F)</b> 1 pc.	<b>Side Stretcher (Right)</b> 18-7/8" x 1-1/4" x 3/4"  <b>(G)</b> 1 pc.	<b>Allen Head Bolt</b> Ø5/16" x 18 x 3-3/8"  <b>(H)</b> 4 pcs.	<b>Allen Head Bolt</b> Ø5/16" x 18 x 2-1/8"  <b>(I)</b> 4 pcs.	<b>Allen Head Bolt</b> Ø5/16" x 18 x 1-3/4"  <b>(J)</b> 2 pcs.	<b>Ø5/16" Spring Washer</b>  <b>(K)</b> 10 pcs.	<b>Ø5/16" Flat Washer</b>  <b>(L)</b> 10 pcs.
<b>4mm Allen Key</b>  <b>(M)</b> 1 pc.	<b>Wood Screw</b> Ø4x45 mm  <b>(N)</b> 6 pcs.	<b>Screw Driver</b> not included 				


**STEP 1: Remove Velcro strips on the seat frame to assemble the chair back and front legs.**

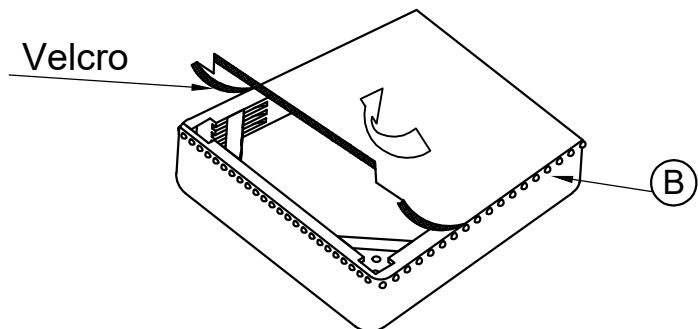


**STEP 2: Do not fully tighten the bolts.**

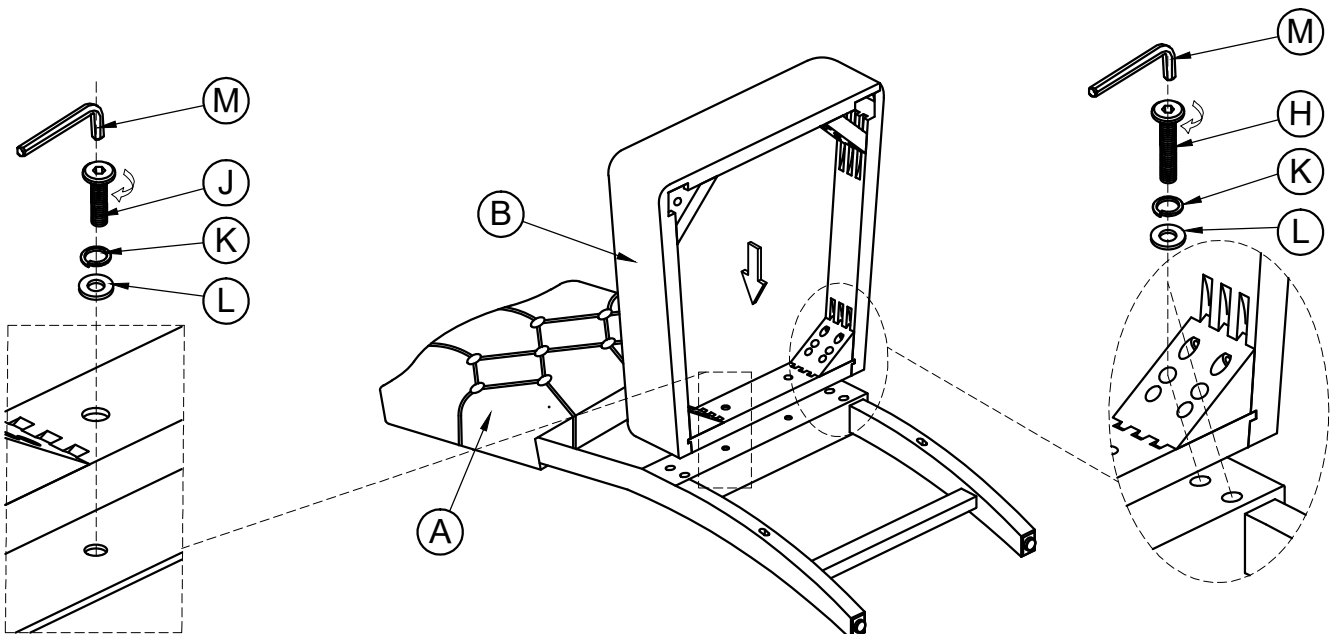


STEP 3: Do not fully tighten the screws.

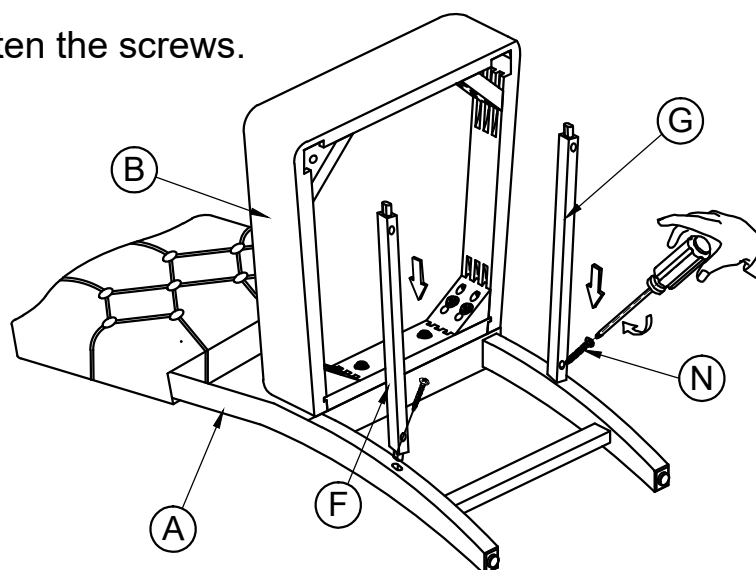

STEP 4: Do not fully tighten the screws.

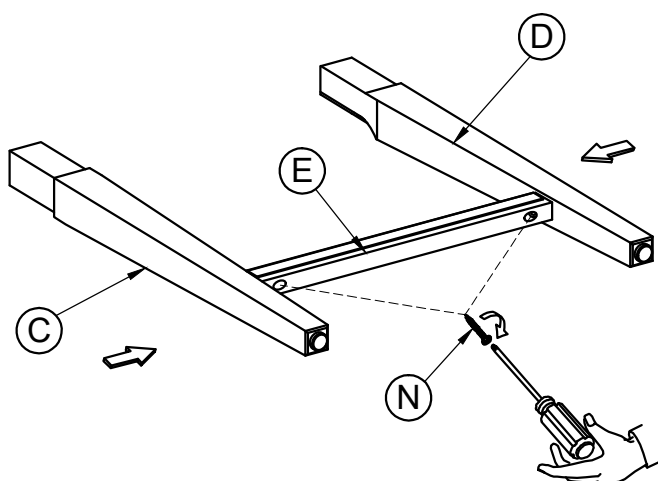


STEP 5: Using the Allen Key to tighten all bolts.

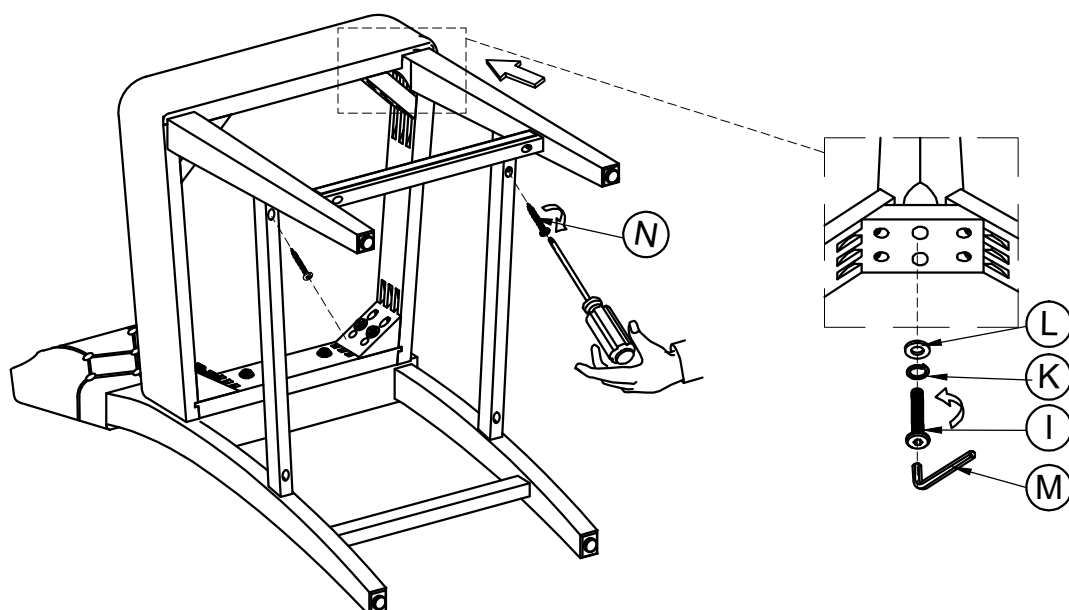

STEP 6: Using the Philips Head Screw driver to tighten all screws.

STEP 7: Attach all Velcro strips to the seat frame.

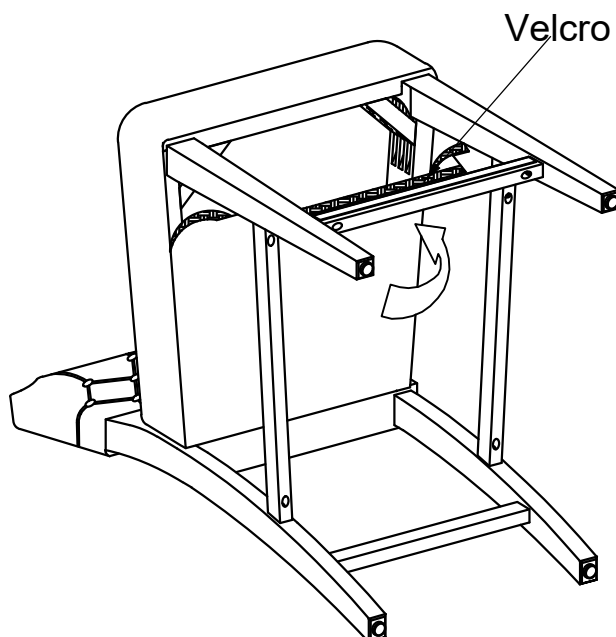

COMPLETE

