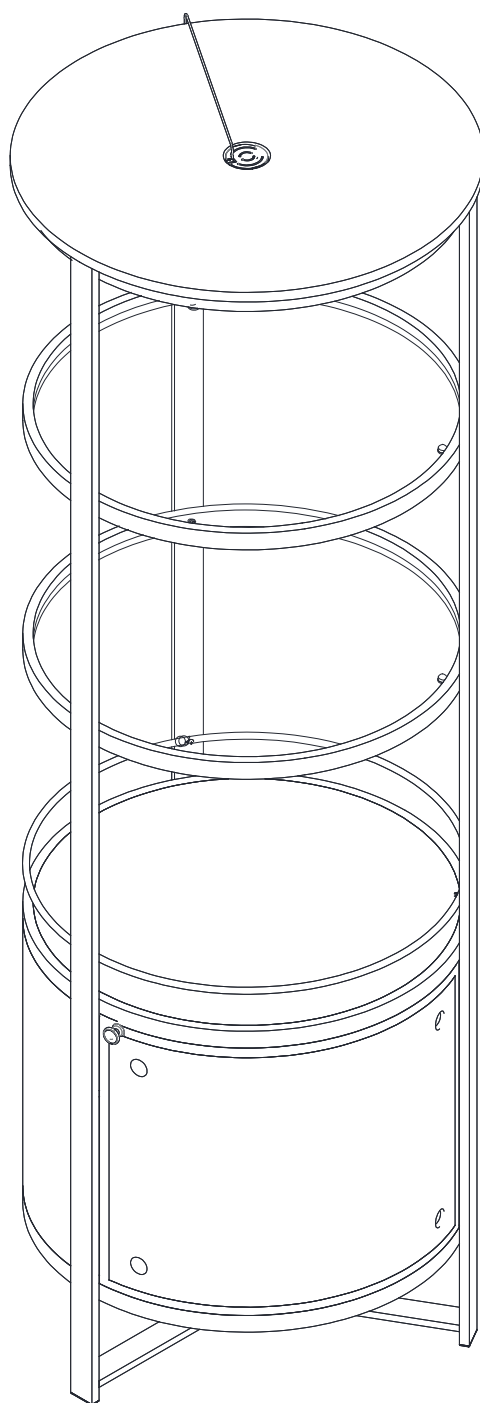


# Assembly Instruction

## Lalia Wine Rack with LED

ITEM# DA-16360-3-WR (Grey)  
DA-16360-7-WR (White)  
DA-16360-8-WR (Black)

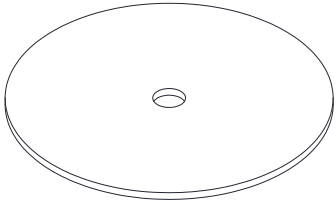
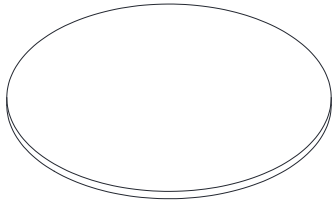
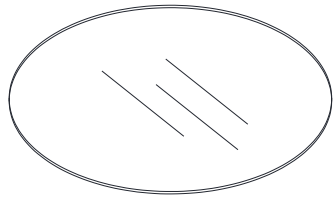
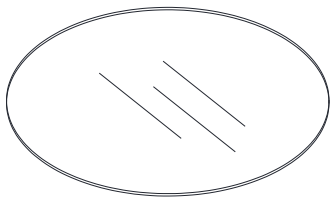
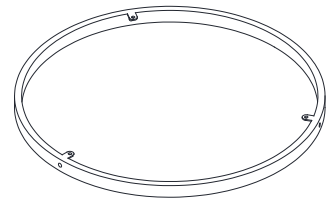


# Assembly Instruction for








Item: DA-16360-3-WR/ DA-16360-7-WR/ DA-16360-8-WR

**CAUTION:** Please read instructions thoroughly before unpacking assembly parts.






1. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
2. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.
3. Please do not tighten screws or bolts until each step is completed or instructed.
4. Please do not over tighten screws or bolts.












PART LIST				
No.	SKETCH	PART DESC	CODE	
1		TOP PANEL	PDA-16360-3-WRPNLT PDA-16360-7-WRPNLT PDA-16360-8-WRTPNT	1
2		BOTTOM PANEL	PDA-16360-3-WRPNLB	2
			PDA-16360-7-WRPNLB PDA-16360-8-WRPNLB	1
3		CLEAR GLASS	PDA-16360-WRGLS	2
4		BOX TOP GLASS <i>(Not Applicable for DA-16360-3-WR)</i>	PDA-16360-7-WRGLS PDA-16360-8-WRGLS	1
5		SHELF FRAME	PDA-16360-WRFRM1	3

# PART LIST

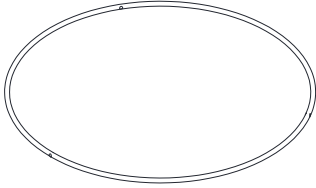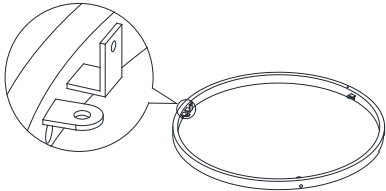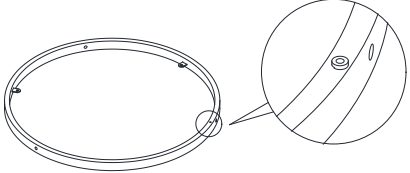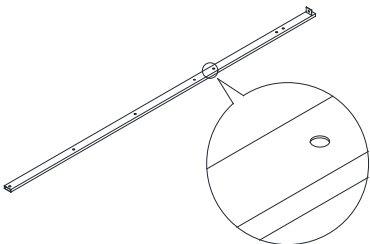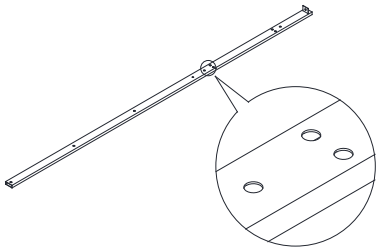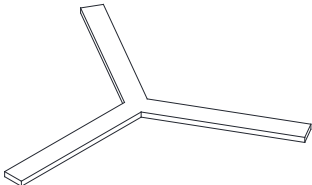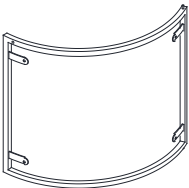No.	SKETCH	PART DESC	CODE	Q'TY
6		ROUND FRAME	PDA-16360-WRFRM2	1
7		BOX TOP FRAME	PDA-16360-WRFRM3	1
8		BOX BOTTOM FRAME	PDA-16360-WRFRM4	1
9		LEG FRAME A	PDA-16360-WRLEGA	2
10		LEG FRAME B	PDA-16360-WRLEGB	1
11		BASE FRAME	PDA-16360-WRLEGC	1
12		DOOR FRAME	PDA-16360-WRDFR	1


# PART LIST

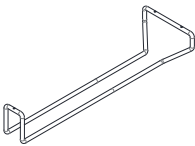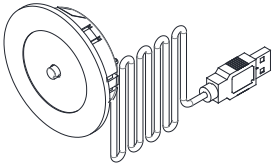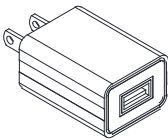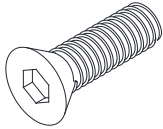No.	SKETCH	PART DESC	CODE	Q'TY
13		ACRYLIC DOOR PANEL	PDA-16360-3-WRDOR PDA-16360-7-WRDOR PDA-16360-8-WRDOR	1
14		ACRYLIC SIDE PANEL	PDA-16360-3-WRPNLS PDA-16360-7-WRPNLS PDA-16360-8-WRPNLS	2
15		GLASS HANGER	PDA-16360-RACK	2
16		HANDLE	PDA-16360-HD	1
17		LED LIGHT	PDA-16360-LED	1
18		ADAPTER	PDA-16360-ADT	1
19		CABLE CLIP	PDA-16360-CLP	1
20		MEDIUM BOLT 1/4" x 18mm	<b>PDA-16360-HW1</b> <i>(for DA-16360-3-WR)</i>  <b>PDA-16360-HW2</b> <i>(for DA-16360-7-WR &amp; DA-16360-8-WR)</i>	15
21		SHORT BOLT 1/4" x 12mm		11
22		SMALL BOLT 3/16" x 15mm		3

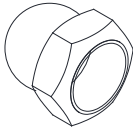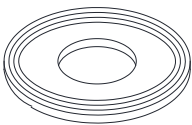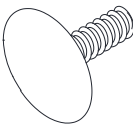PART LIST				
No.	SKETCH	PART DESC	CODE	Q'TY
23		SCREW 3.5 x 12mm	<b>PDA-16360-HW1</b> <i>(for DA-16360-3-WR)</i>  <b>PDA-16360-HW2</b> <i>(for DA-16360-7-WR &amp; DA-16360-8-WR)</i>	15 (HW1) 12 (HW2)
24		NUT		4
25		WASHER		4
26		PLASTIC WASHER		4
27		PLASTIC BOLT		4
28		BUMPER PAD		6 (HW1) 9 (HW2)
29		MAGNET		1
30		CAP 13 x38mm		3
31		HANDLE BOLT 5/32" x 15mm		1
32		ALLEN KEY 4mm		1
33		HEXAGONAL KEY		1


**Step 1:**

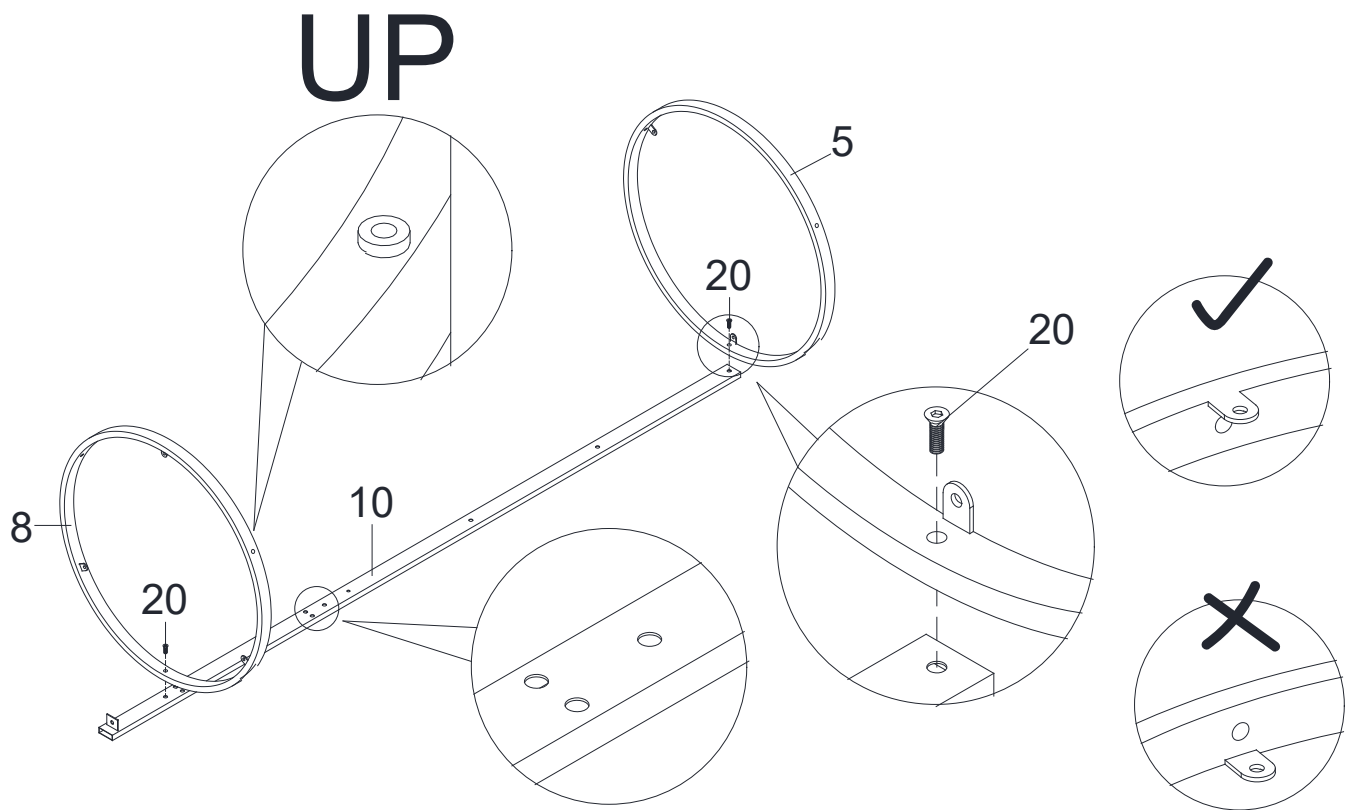Attach Shelf Frame (5) and Box Bottom Frame (8) to the Leg Frame B (10) with Medium Bolt (20) as shown.




**Step 2:**

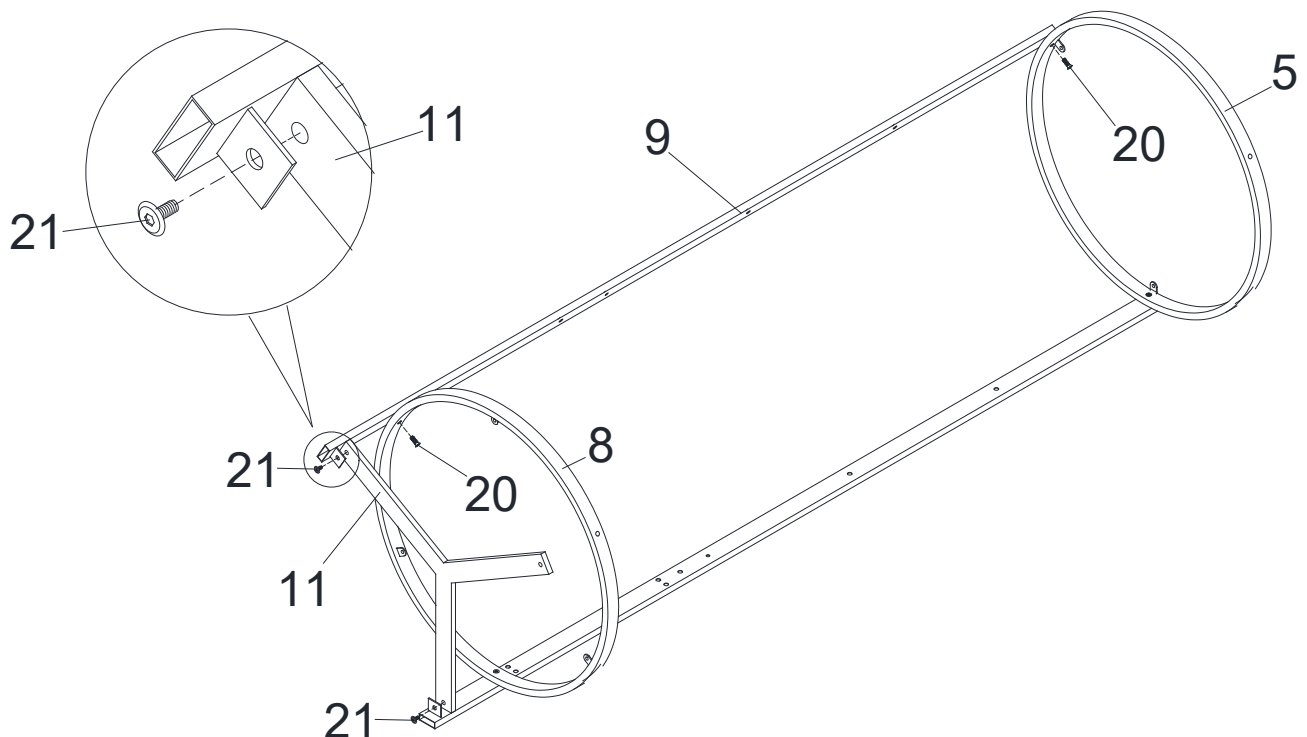Attach Leg Frame A (9) to Shelf Frame (5), Box Bottom Frame (8) and Base Frame (11) with Medium Bolt (20) and Short Bolt (21) as shown.




**Step 3:**

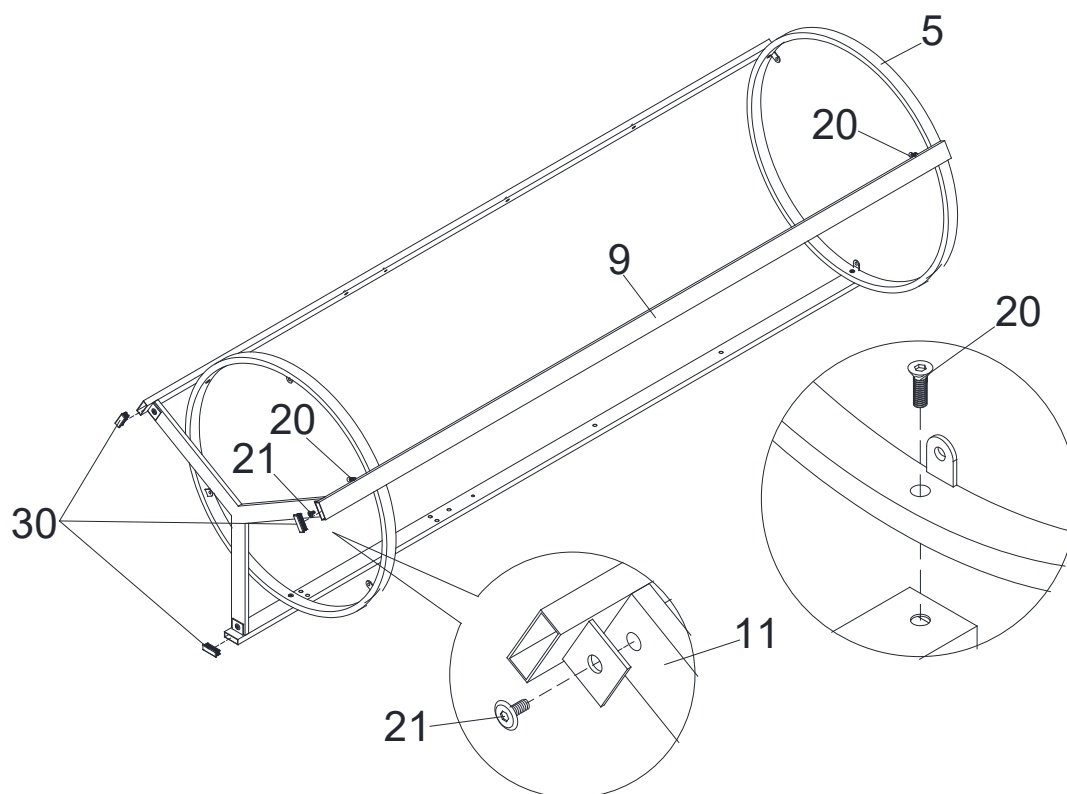1. Attach Leg Frame A (9) to Shelf Frame (5), Box Bottom Frame (8) and Base Frame (11) with Medium Bolt (20) and Short Bolt (21) as shown.
2. Insert Cap (30) onto Leg Frame A (9) and Leg Frame B (10).




**Step 4:**

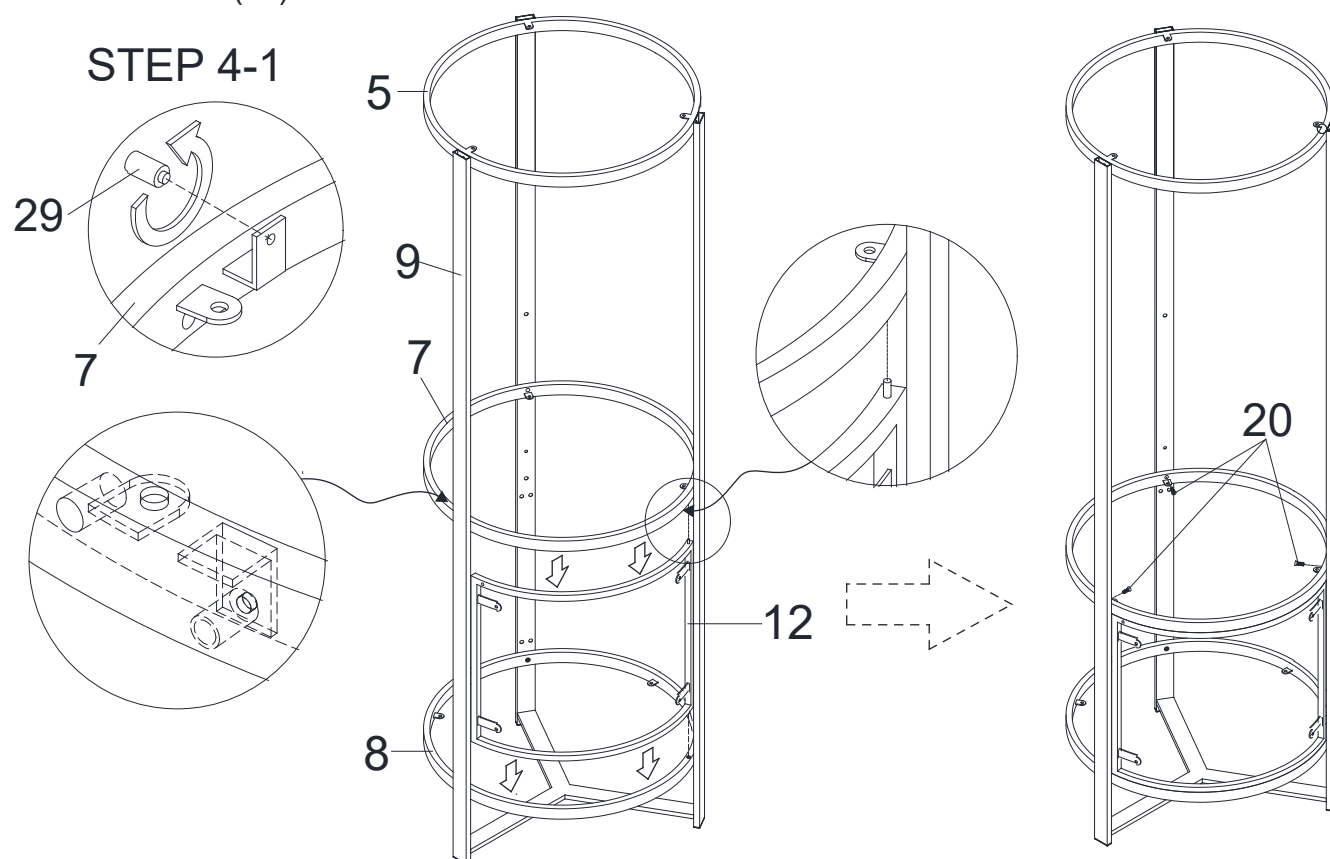1. Install Magnet (29) onto Box Top Frame (7).
2. Attach Door Frame (12) between Box Top Frame (7) and Box Bottom Frame (8) with Medium Bolt (20) as shown.




**Step 5:**

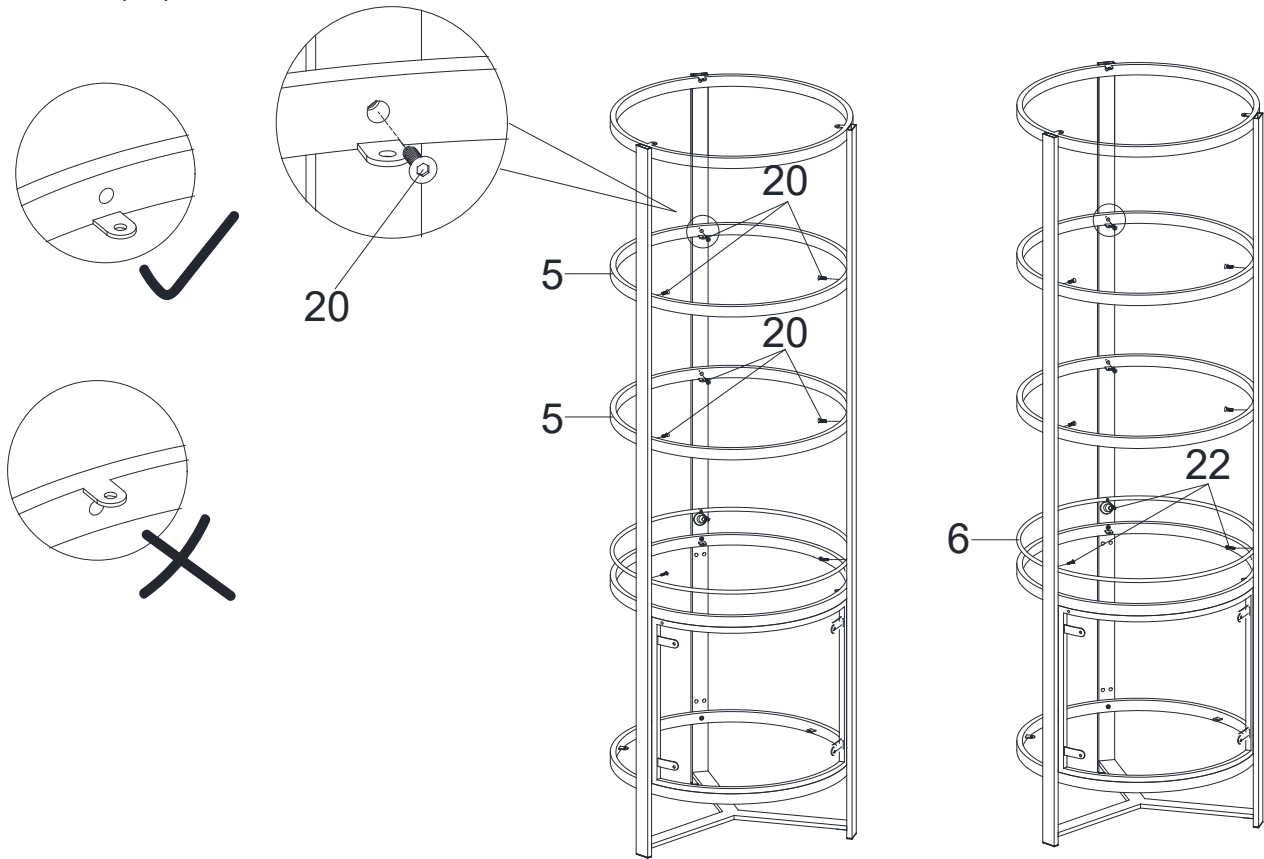Attach Shelf Frame (5) to the assembly with Medium Bolt (20), and Round Frame (6) with Small Bolt (22).



**Step 6:**


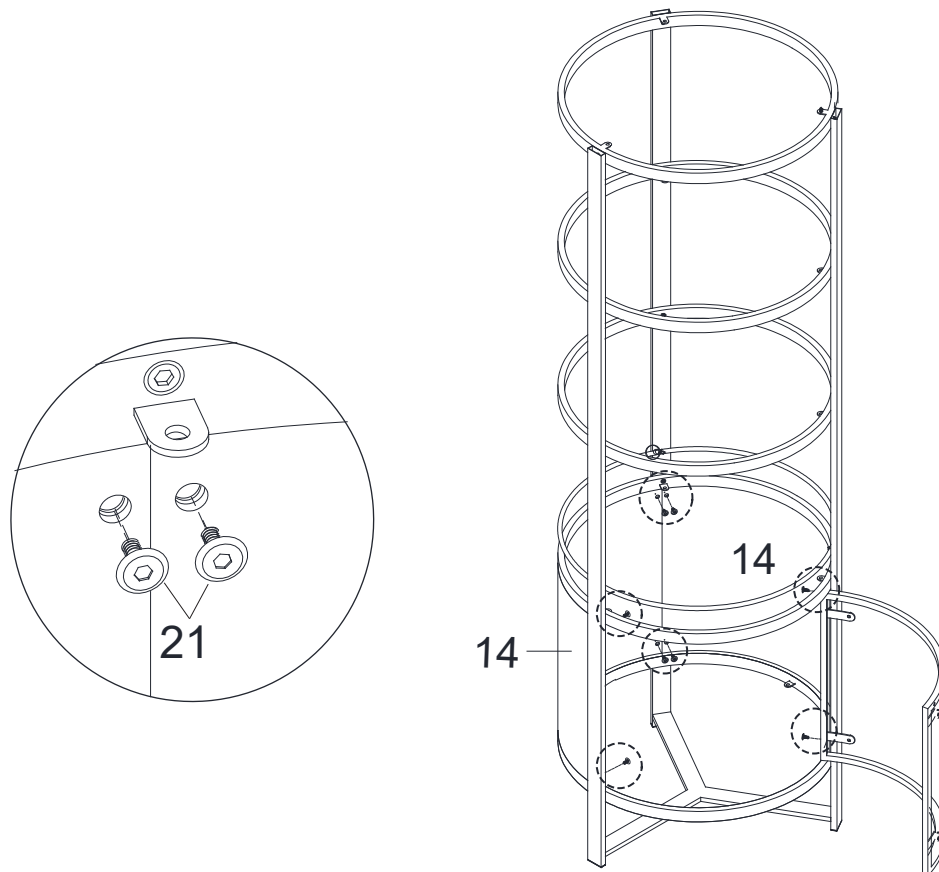
Install Acrylic Side Panel (14) with Short Bolt (21).






### Step 7:

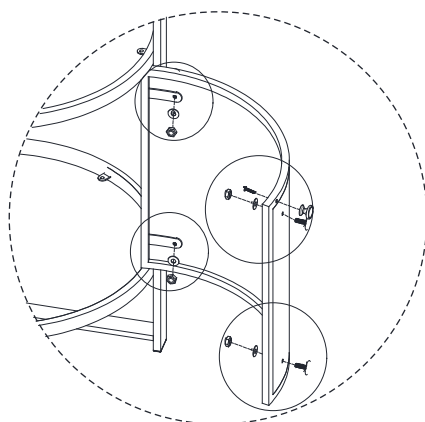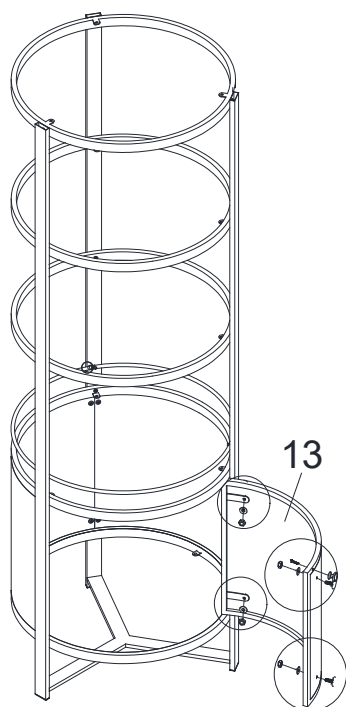
1. Install Handle (16) to Door Frame (12) with Handle Bolt (31).
2. Install Acrylic Door Panel (13) to Door Frame (12) with Nut (24), Washer (25), Plastic Washer (26) and Plastic Bolt (27).



#### Step 7-1

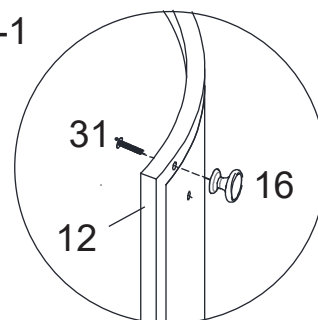


#### Step 7-2

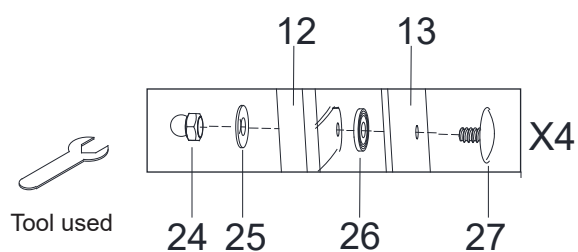


### Step 8:

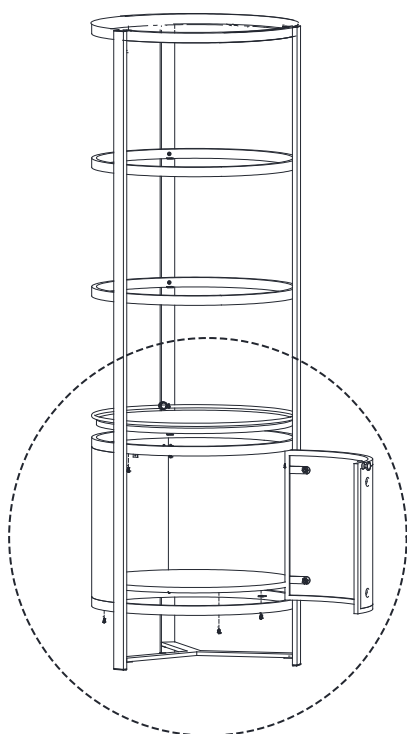
Install Bottom Panel (2) with Screw (23).



For  
DA-16360-3-WR

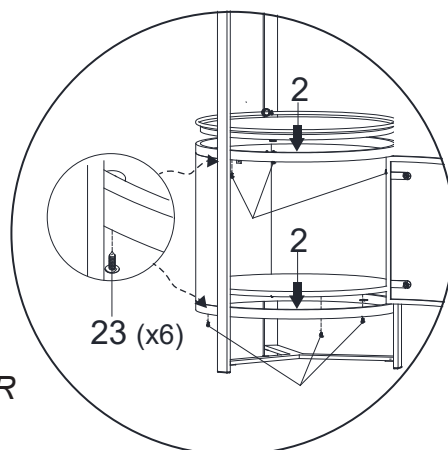


For  
DA-16360-7-WR  
DA-16360-8-WR

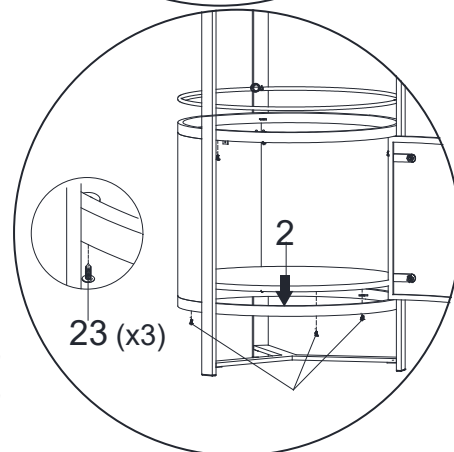


**Step 9:**

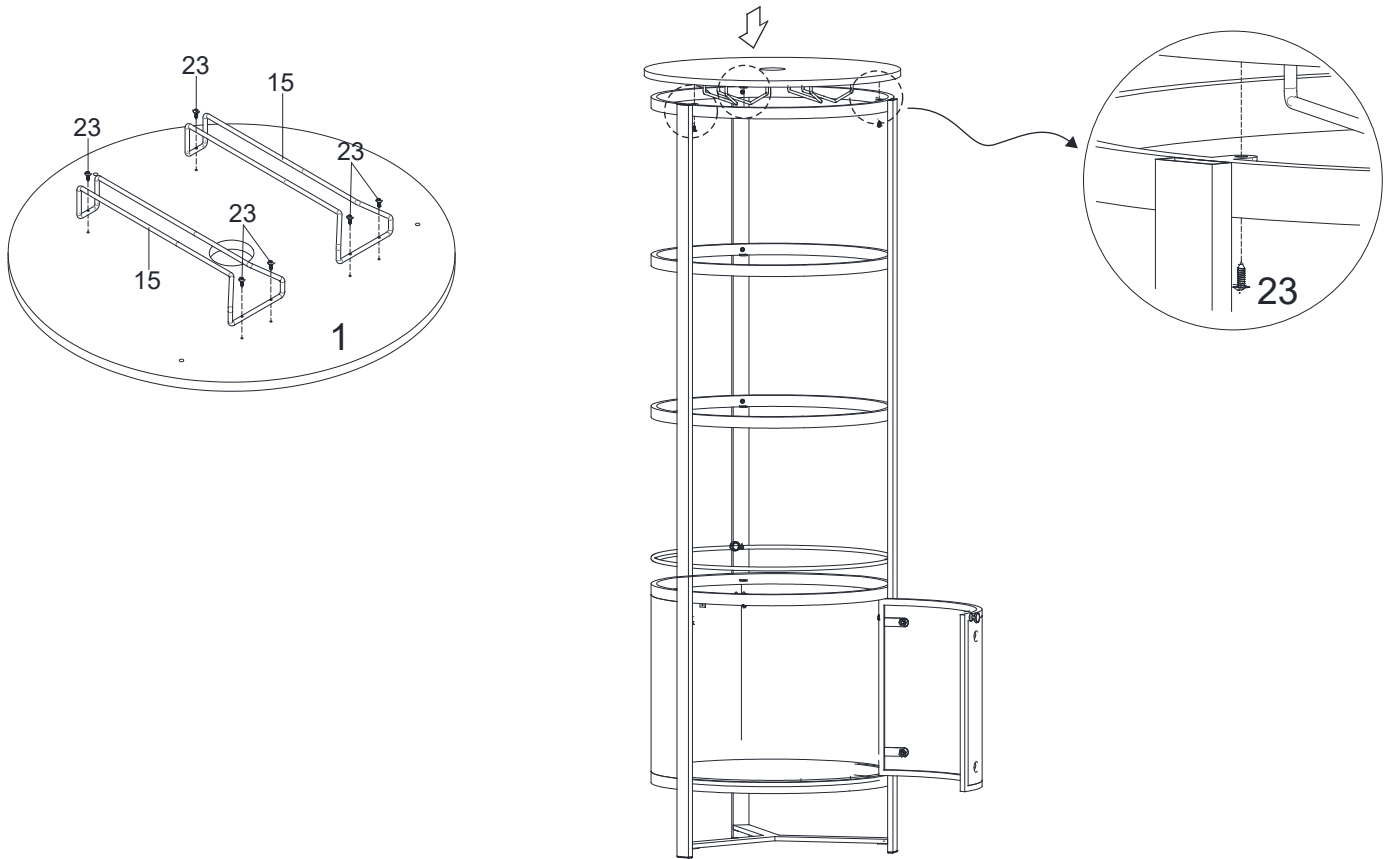1. Install Glass Hanger (15) on Top Panel (1) with Screw (23)
2. Attach Top Panel (1) to the top with Screw (23).





**Step 10:**

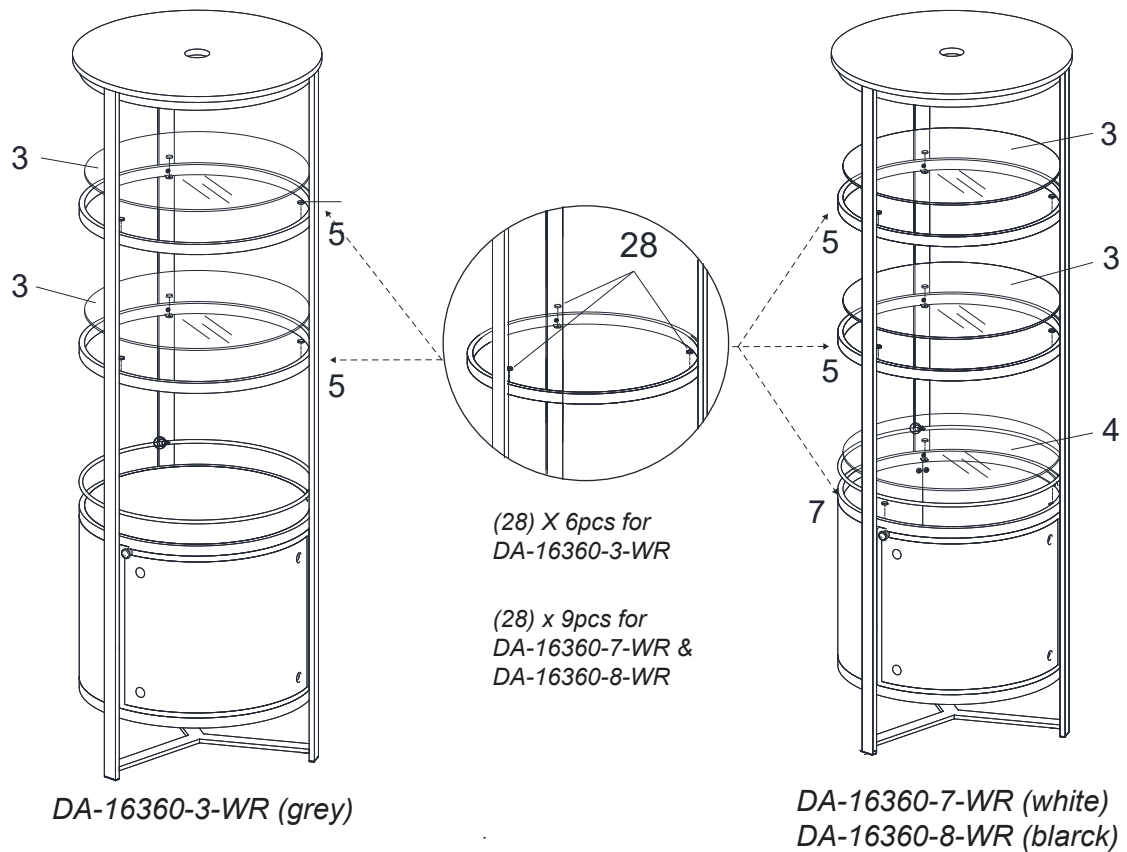Install Bumper Pad (28) on Shelf Frame (5) and Box Top Frame (7), and then place Glass (3,4) as shown.



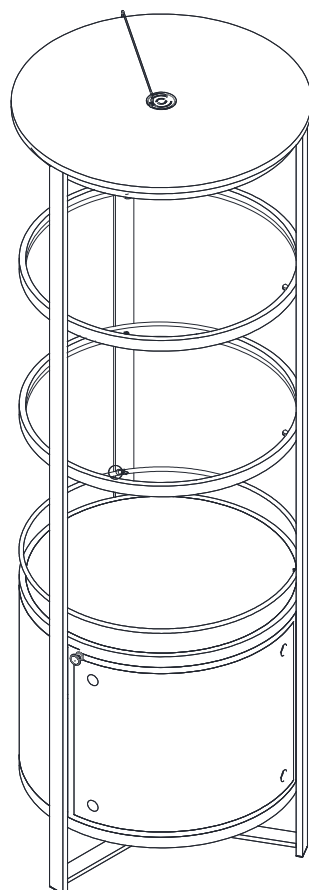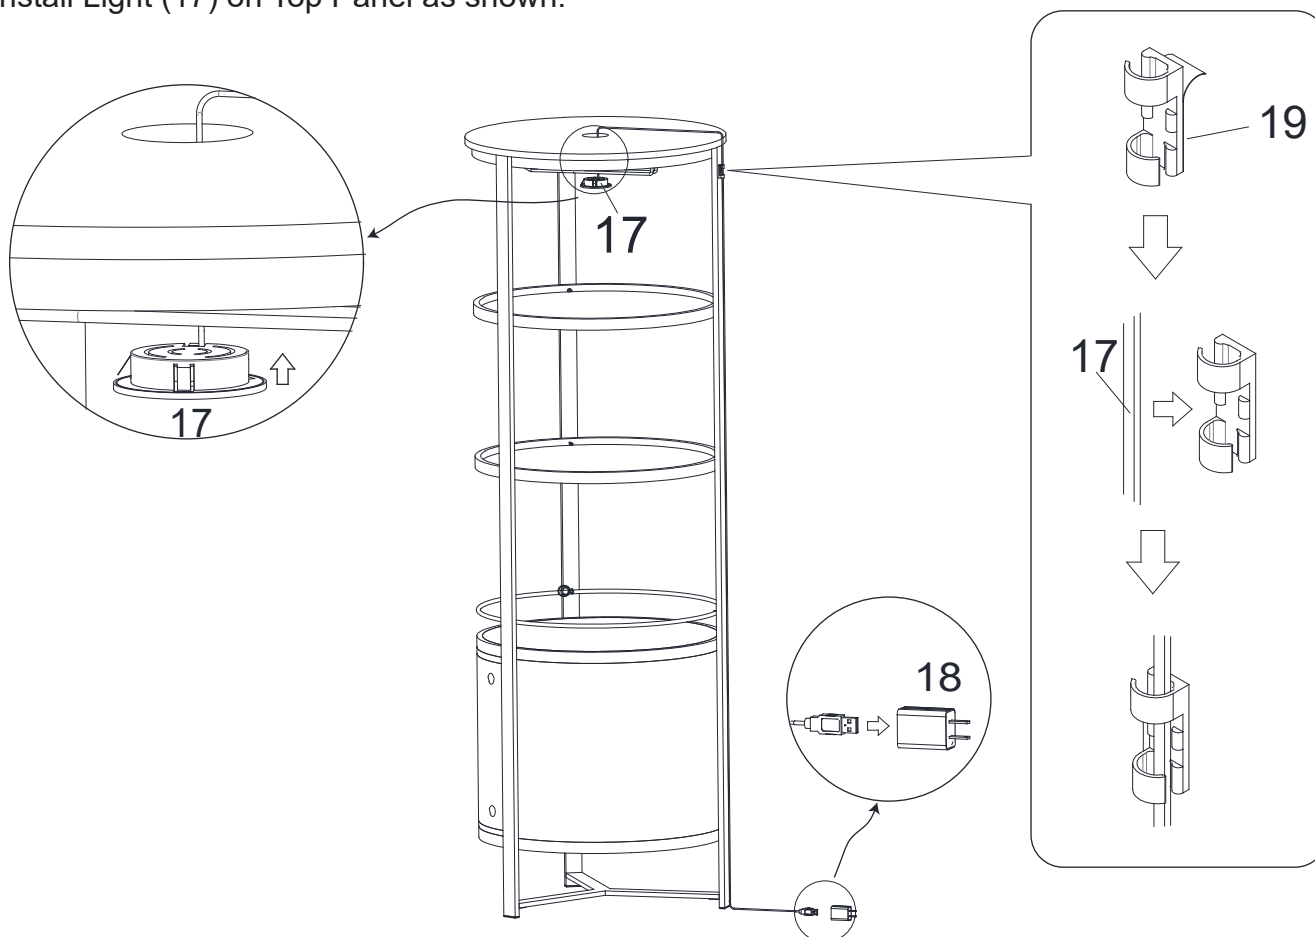Step 11:  
Install Light (17) on Top Panel as shown.



Assembly completed.