




SIDE BY SIDE REFRIGERATOR

MODELS:

WRS315SDHW02 (White)
WRS315SDHB02 (Black)
WRS315SDHT02 (Biscuit)
WRS315SDHM02 (Stainless)


CABINET PARTS

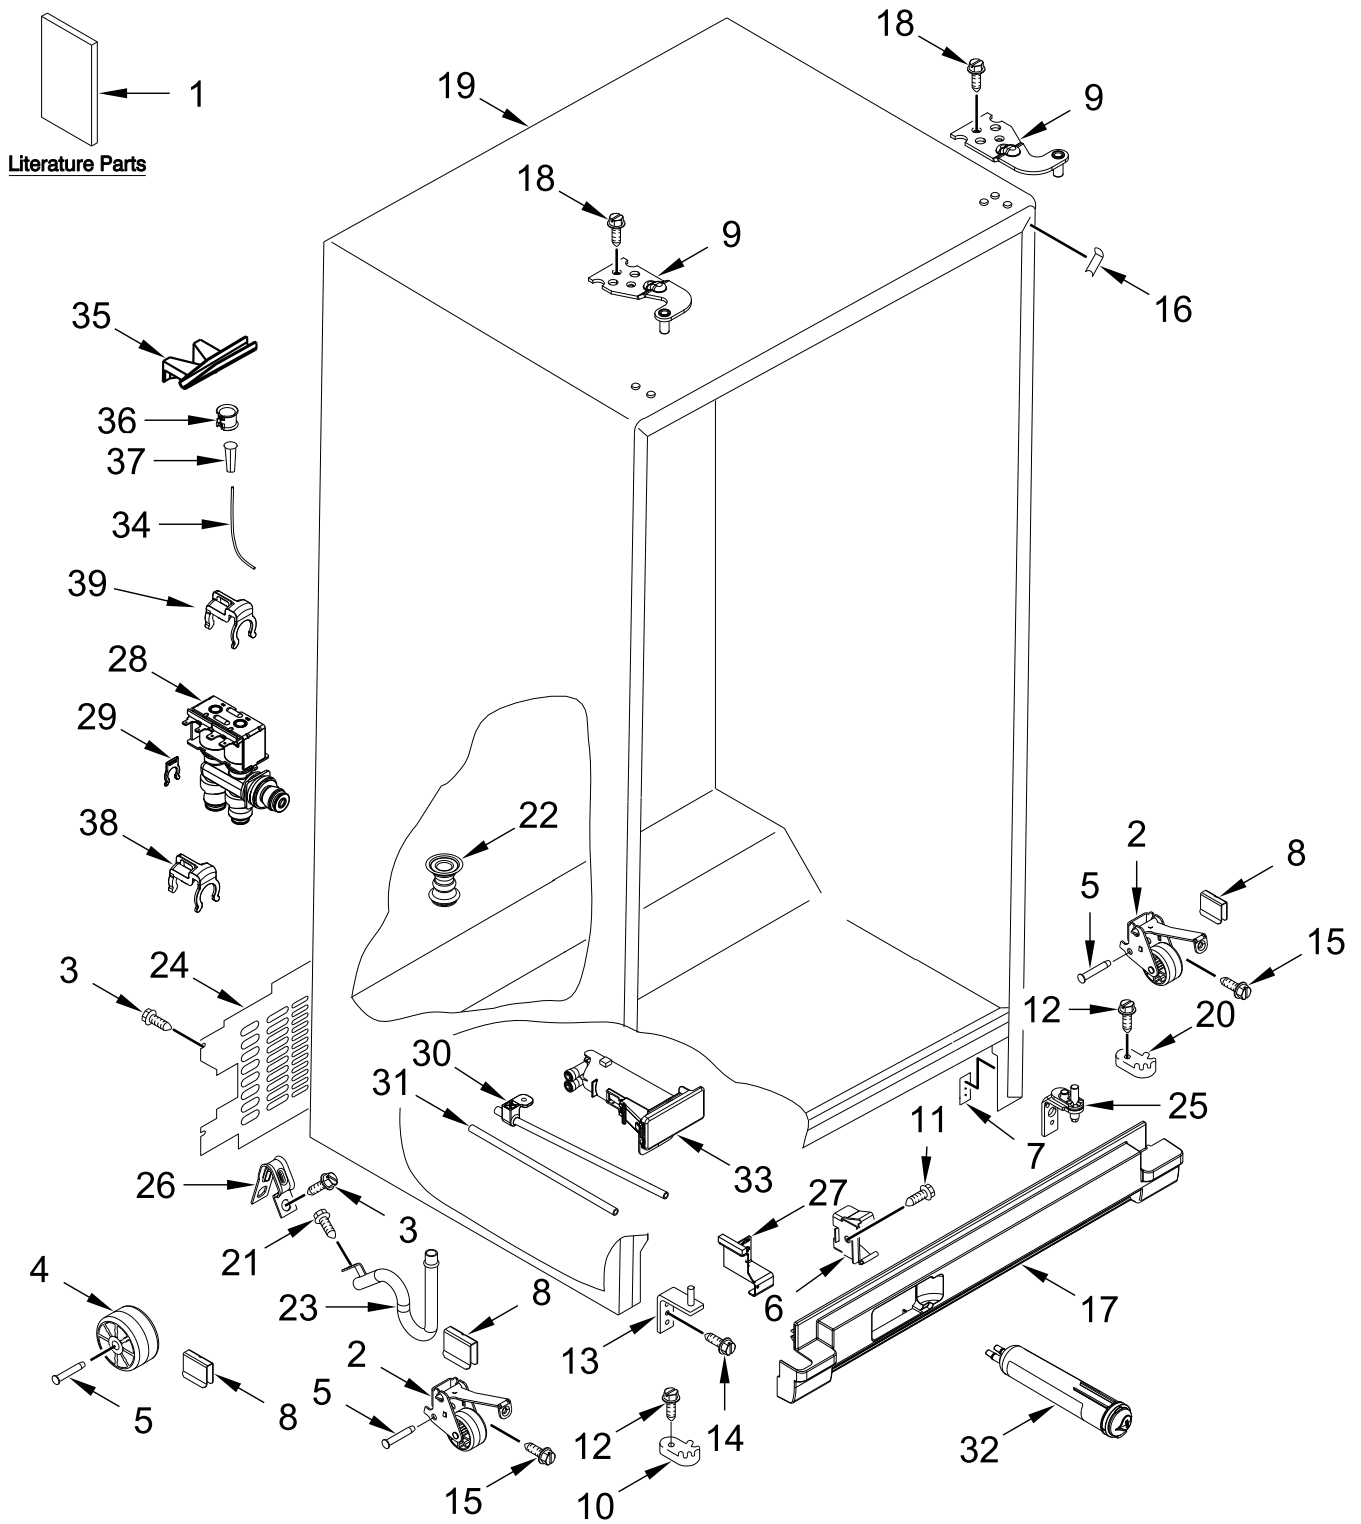

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	11	8281149	Screw	25	W11097327	Assembly, Bottom Hinge (Refrigerator)
	W11105309	Use & Care Guide	12	W10142234	Screw	26	W11242280	Clamp, Power Cord
	W11248697	Tech Sheet	13	W11093938	Assembly, Bottom Hinge (Freezer)	27	W10897565	Assembly, Bracket
	W11239611	Energy Guide				28	W10179146	Assembly, Filter Valve
2		Assembly, Roller	14	3400113	Screw	29	W11175632	Locking Ring (1/4)
	W10304660	Left Hand	15	2152958	Screw		W11175631	Locking Ring (5/16)
	W10304659	Right Hand	16		Filler, Wrapper	30	W10900449	Tube, Filter Inlet
3	W10141645	Screw		W11219639	White	31	W10900447	Tube, Filter Outlet
4	2150304	Roller		W11219641	Black	32	W10735398	Filter, Water
5	W11365774	Axle, Roller		W11219640	Biscuit	33		Housing, Water Filter
6	2155013	Clip, Grille		W11219642	Grey		W11036340	White
7	W11036715	Plate, Screw (Refrigerator)	17		Grille		W11036341	Black
	W10904380	Plate, Screw (Freezer)		W11226340	White		W11036339	Biscuit
8	W11087168	Clip, Roller		W11226342	Black		W11036338	Grey
9		Hinge, Top		W11226336	Biscuit	34	W10357076	Tube, Water
	W10922200	White (Refrigerator)		W11226338	Grey	35	W11444726	Chute, Water
	W10922201	White (Freezer)	18	W10308750	Screw (White)	36	W10329003	Clamp, Tube
	W10922216	Black (Refrigerator)		W10308751	Screw (Black)	37	2181939	Insert, Tube
	W10922217	Black (Freezer)	19		Cabinet (Not A Servicable Part)	38	W11091654	Connector, Double Lock
	W10922218	Biscuit (Refrigerator)	20	W10905504	Closer, Lower Cam Door (Refrigerator)	39	W11252188	Double Lock Ring (1/4)
	W10922219	Biscuit (Freezer)	21	489464A	Screw			
	W10900868	Grey (Refrigerator)	22	2304888	Fitting, Drain			
	W10900869	Grey (Freezer)	23	W10153550	Extension, Drain Fitting			
10	W11095731	Closer, Door (Freezer)	24	W10904634	Cover, Unit			


REFRIGERATOR LINER PARTS

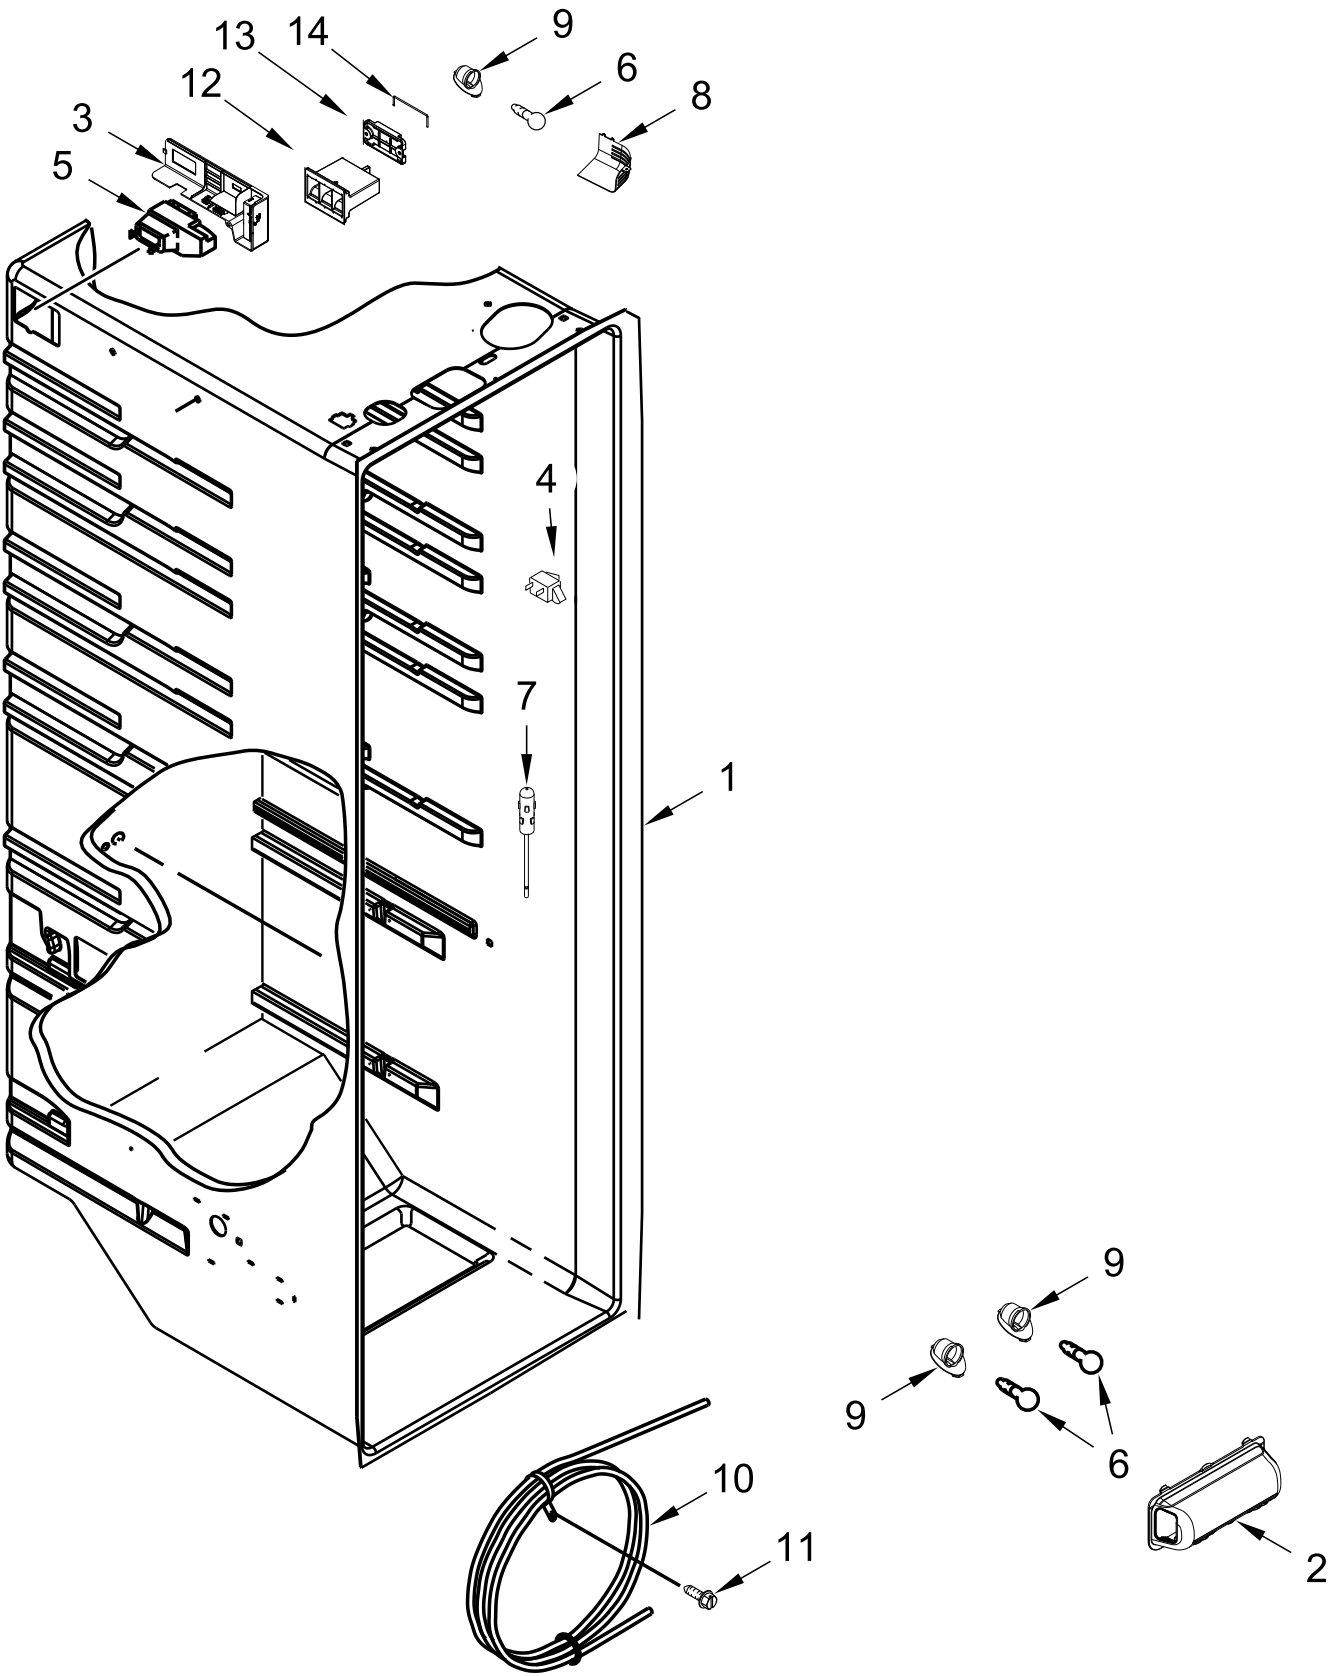

REFRIGERATOR LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	4	1118894	Switch, Rocker Arm	10	W11222026	Tubing, Water Reservoir
2	W10166130	Lens, Light (Includes Gasket)	5	W11264792	Diffuser, Air	11	W10141518	Screw
			6	W11125625	Lamp, LED	12	W10901825	Slider, Housing
3	W11026017	Assembly, Control Box (Includes Electronic Control)	7	W10384183	Thermistor	13	W10901827	Slider
			8	W10900030	Cover, Light	14	W10901826	Connecting Rod
			9	W10134764	Socket, Light			


REFRIGERATOR SHELF PARTS

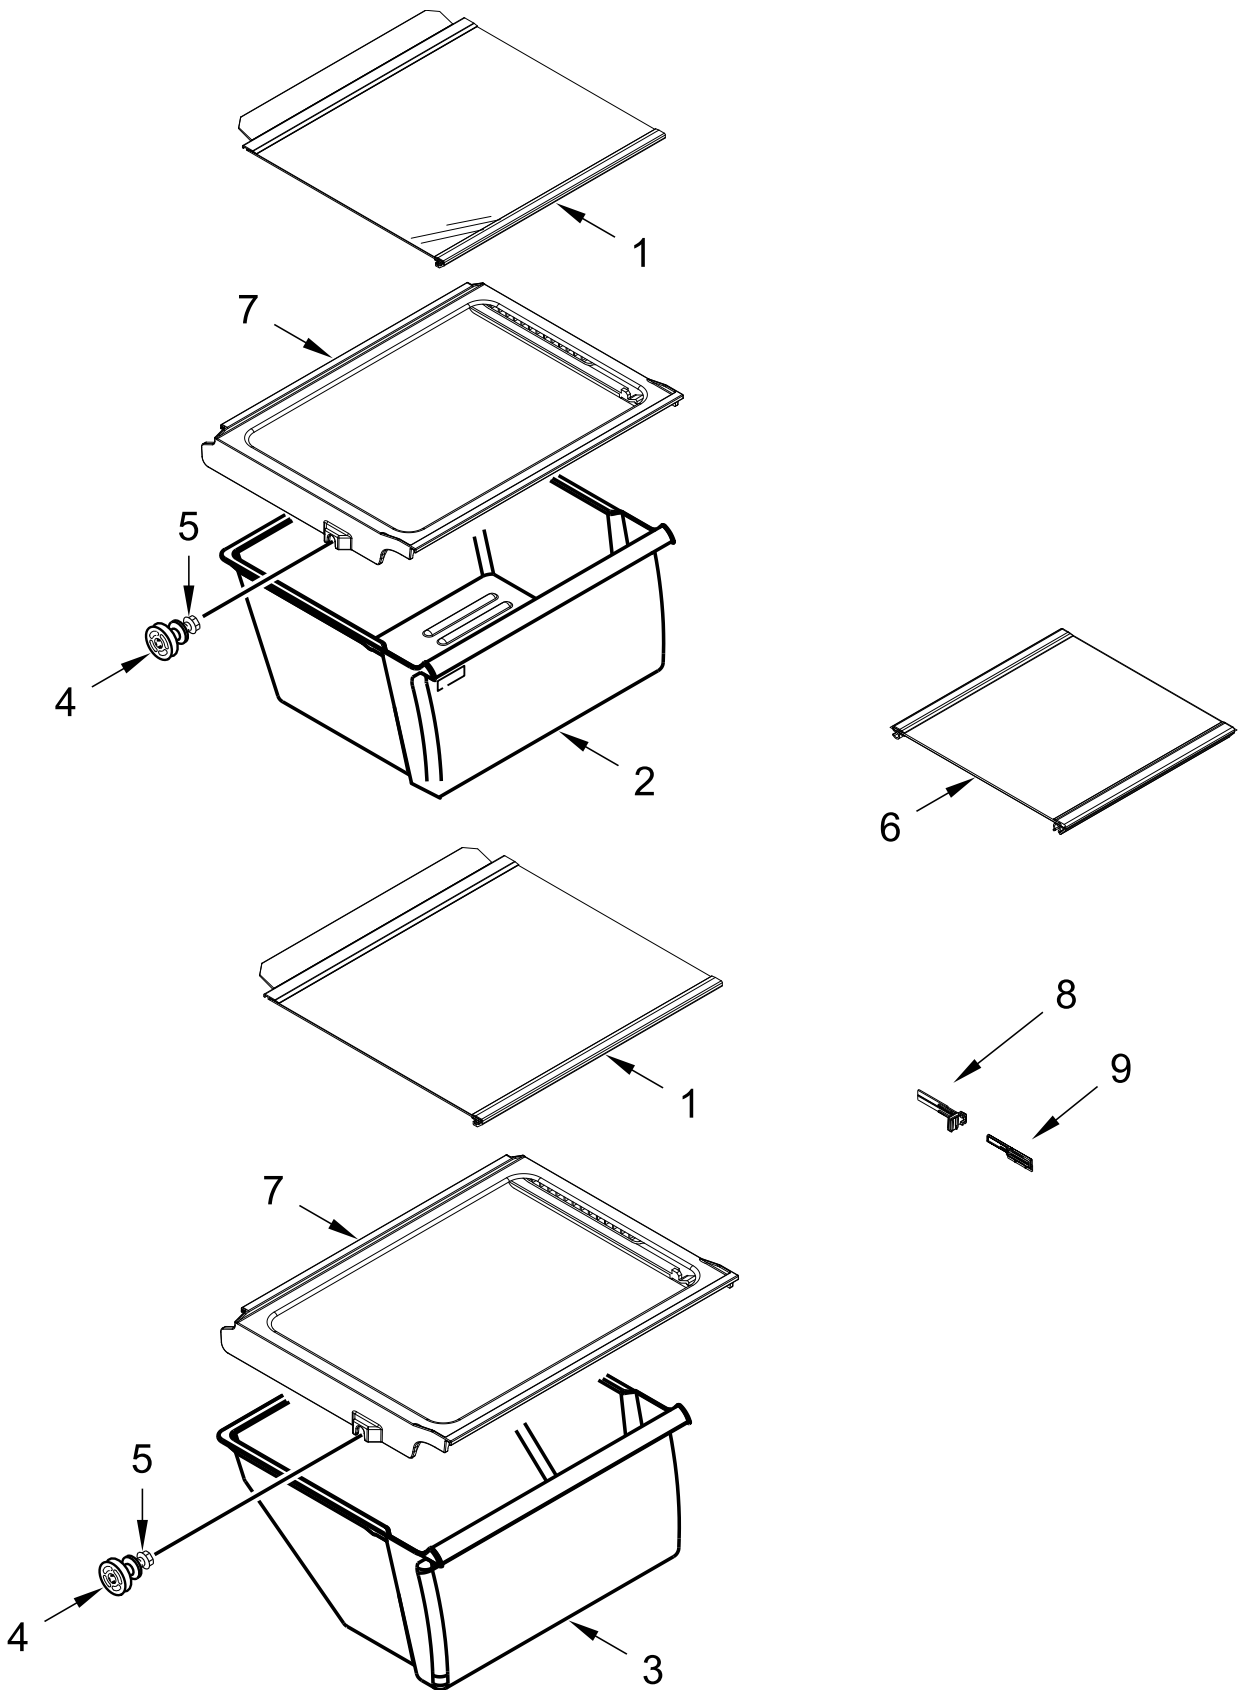

REFRIGERATOR SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11351248	Assembly, Cover	4	W10173126	Assembly, Shelf Stud	7	W10904001	Holder, Pan
2	W11046494	Pan, Crisper	5	W10191954	Screw	8	W10282883	Slide, Humidity
3	W11046495	Pan, Meat	6	W11135529	Assembly, Shelf	9	W10282880	Housing, Humidity


FREEZER LINER PARTS

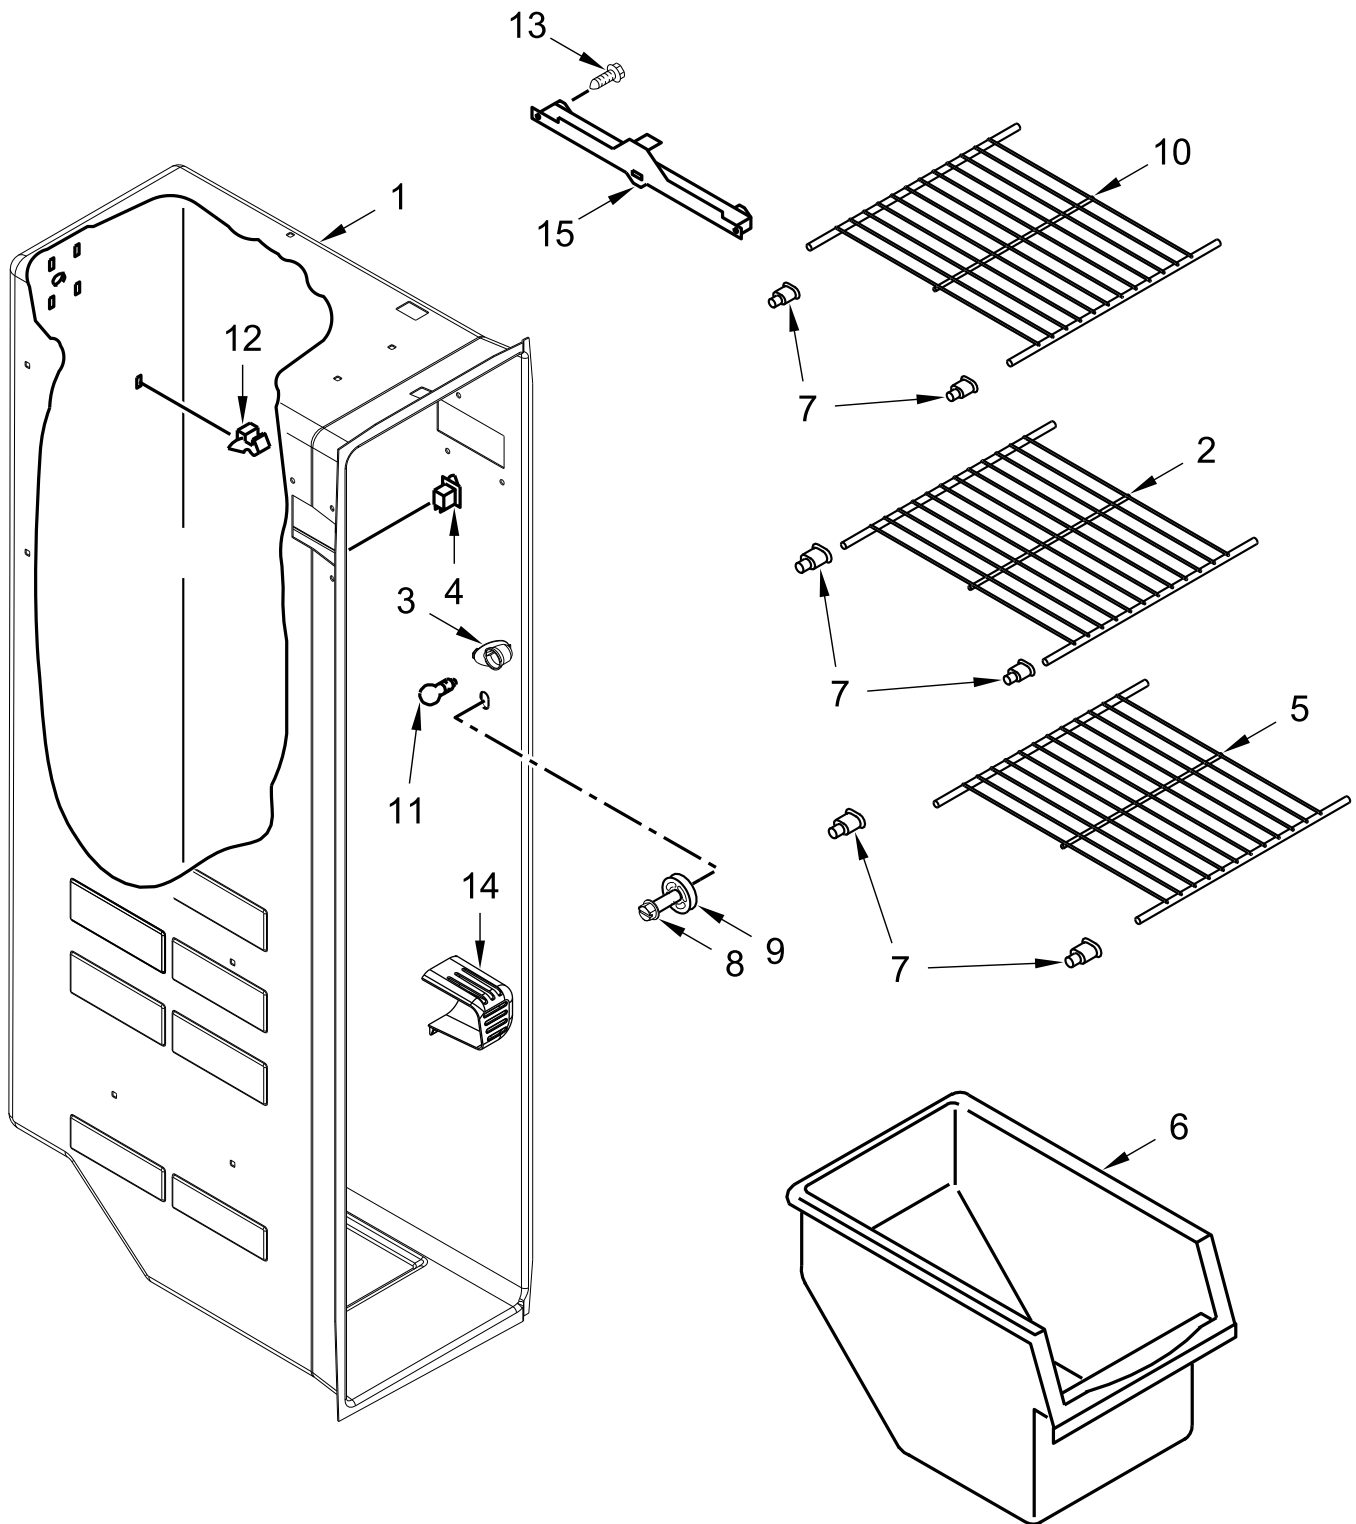

FREEZER LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	7	W10130299	Cup, Shelf	15	W10845583	Slide, Ice Container (Right)
2	W10318948	Shelf, Wire	8	W10191954	Screw			
3	W10134764	Socket, Light	9	2196208	Assembly, Stud	W10845585		Slide, Ice Container (Left)
4	1115373	Switch, Rocker Arm (Freezer)	10	W10318961	Shelf, Wire			
5	W10318947	Shelf, Wire	11	W11125625	Lamp, LED			
6	2309757	Bin, Freezer	12	2315163	Clip, Air Duct			
			13	489100	Screw			
			14	W11204001	Lens, Light			


MOTOR AND ICE CONTAINER PARTS

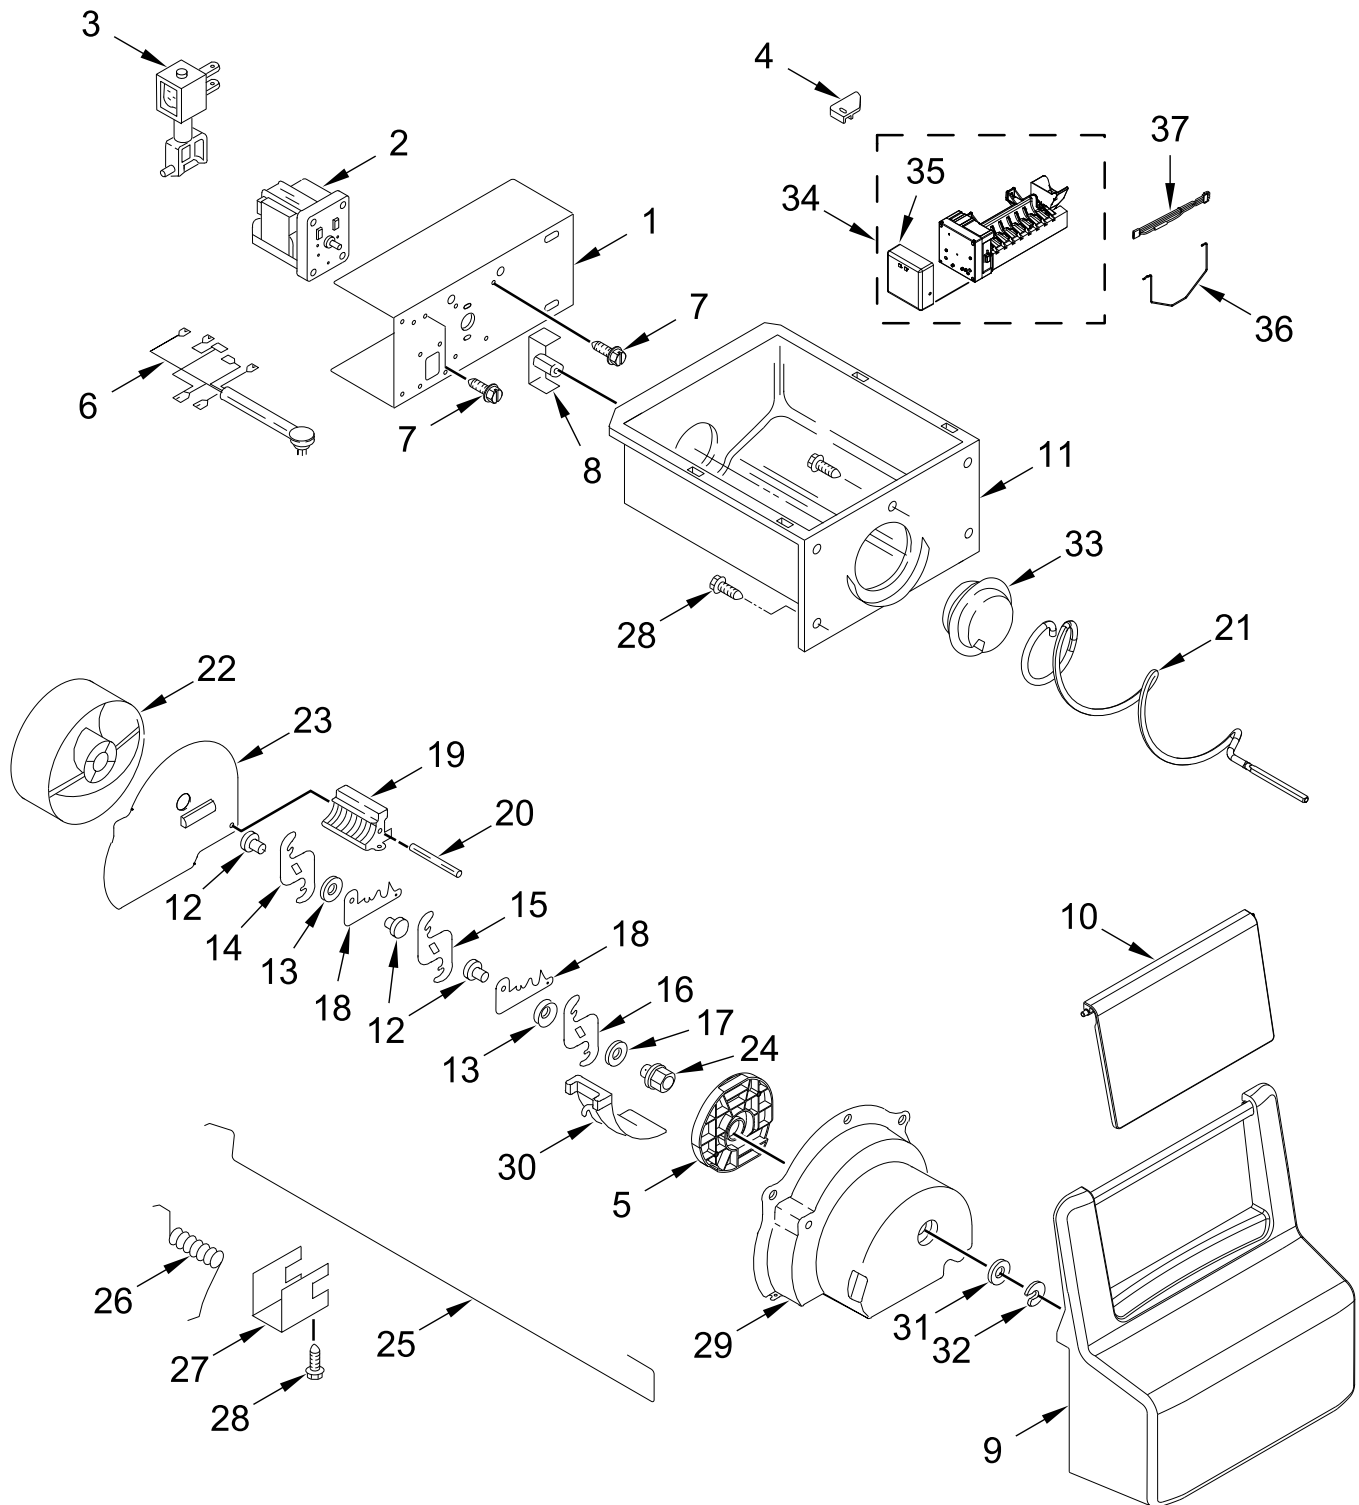

MOTOR AND ICE CONTAINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11210541	Bracket, Motor	13	W11032808	Spacer, Flat	28	488886	Screw
2	W10884561	Motor, Dispenser	14	W10278731	Blade, Rotary A	29	W10185018	Housing, Crusher
3	2152713	Assembly, Solenoid	15	W10278732	Blade, Rotary B	30	1119017	Deflector, Ice
4	628320	Bracket, Icemaker Mounting	16	W10278733	Blade, Rotary C	31	489234	Washer, Plain Upper Cam
5	W10138206	Spacer - Crusher Housing	17	489234	Washer, Plain Upper Cam	32	489236	Ring, Retainer
6	W11218402	Assembly, Ice Dispenser Wiring	18	W10181990	Blade, Fixed	33	W10698668	Coupling, Ice Conveyor
7	489399	Screw	19	W10189708	Block, Blade	34	W10300022	Assembly, Icemaker
8	W10169511	Coupling, Motor	20	489229	Pin, Roll	35	W10289690	Cover, Icemaker
9	W10189191	Cover, Ice Container Front	21	W10295082	Auger	36	W11182354	Assembly, Shut Off Arm
10	W11351746	Ice Door	22	W10698642	Drum	37	W11348616	Harness, Icemaker
11	W10670845	Container, Ice	23	W10403781	Baffle, Floating	100	W10558423	Ice Container, Complete
12	W11032812	Spacer, Step	24	1119018	Nut, Bearing			
			25	W10838981	Arm, Control			
			26	1119020	Spring, Return			
			27	1119021	Clip, Retainer (Dispenser Rod)			


REFRIGERATOR DOOR PARTS

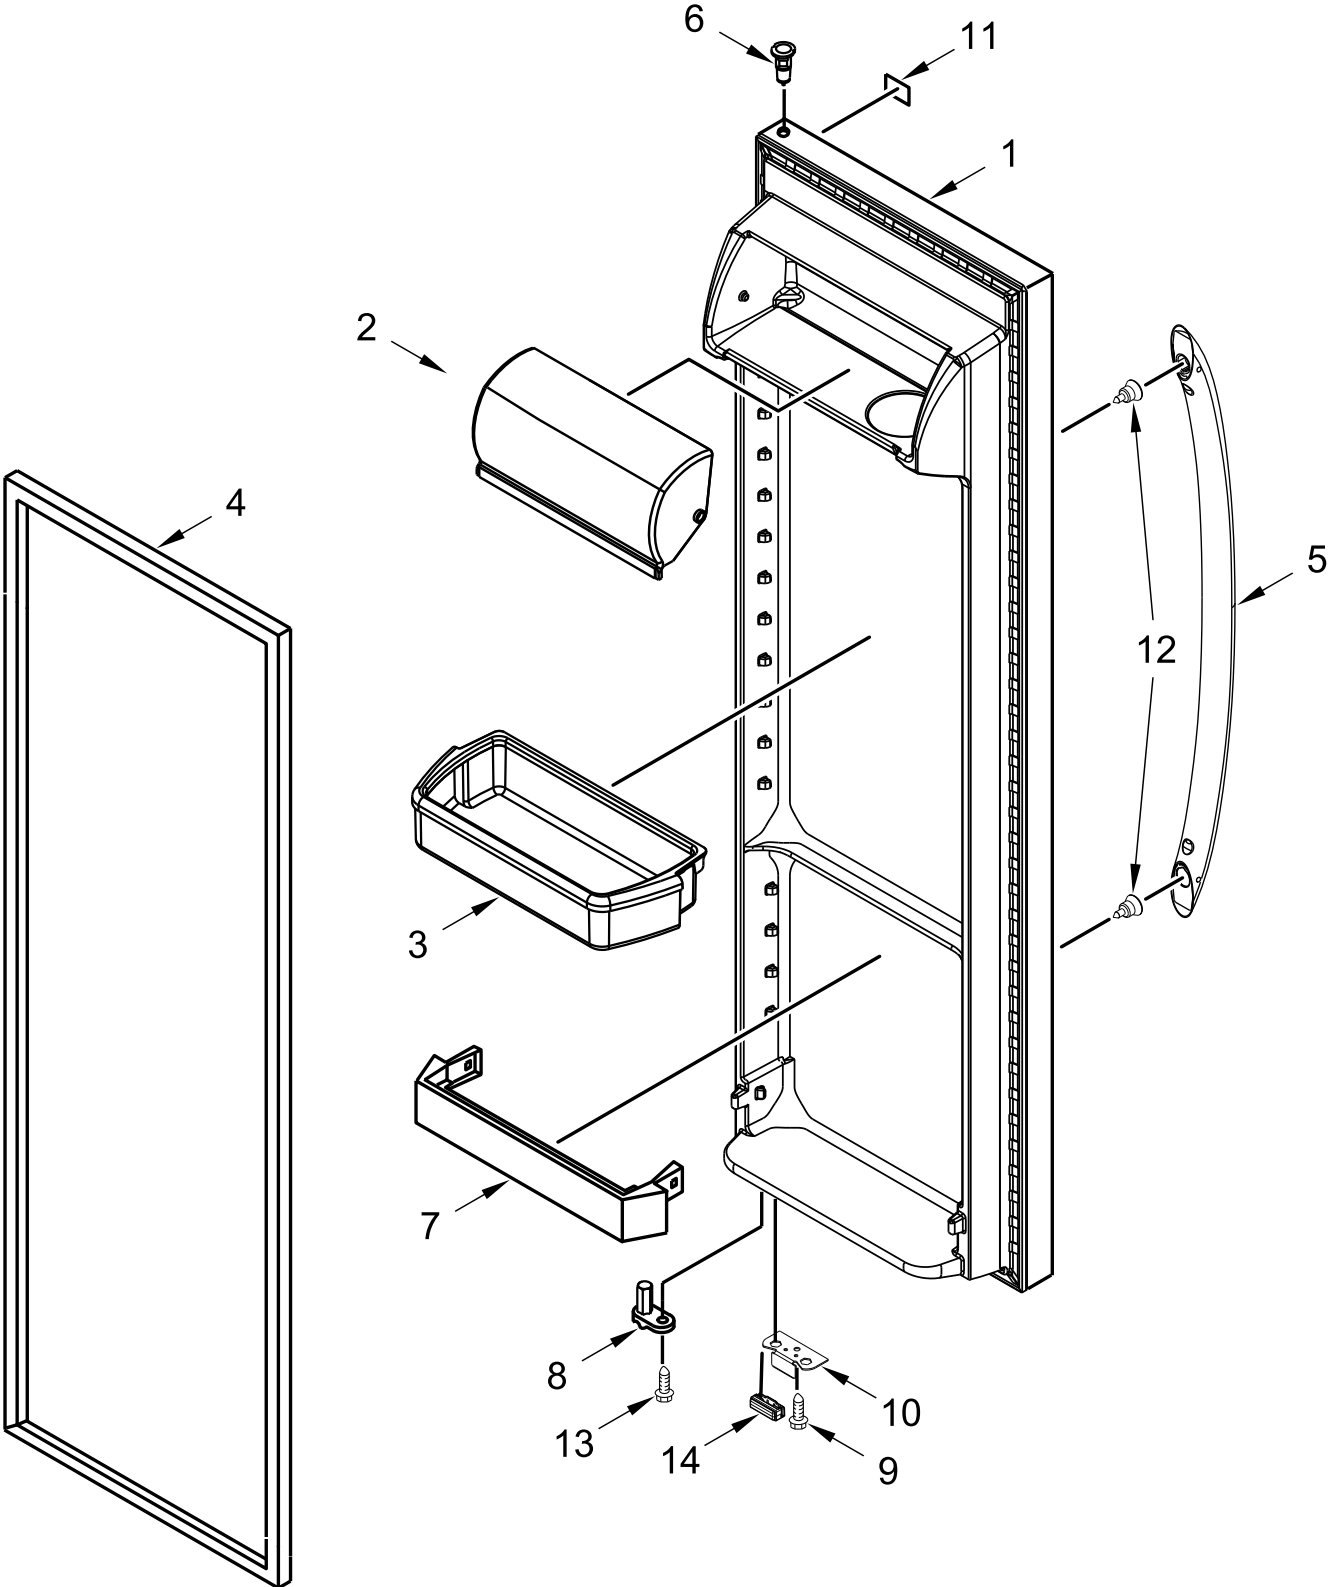

REFRIGERATOR DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Refrigerator (Includes Door Gasket)	5		Handle	13	W10308489	Screw (Grey)
	W10912118	White		W11289637	White	14		Bumper, Door
	W10912126	Black		W11289638	Black		W10407175	White
	W10912135	Biscuit		W11289636	Biscuit		W10407187	Black
	W11258450	Stainless		W11045530	Stainless		W10407203	Biscuit
2	2256101	Door, Compartment	6	2200087	Thimble		W10407188	Grey
3	W10900538	Bin, Door	7	2309941	Trivet			
4		Gasket, Door	8	W10900464	Thimble, Cam			
	W10911412	Beige	9	W10296816	Screw			
	W10911422	Black	10		Bracket, Door Stop			
	W10911389	Grey		W10900463	Black			
			11	W10884773	Badge			
			12	W10460893	Screw			


FREEZER DOOR PARTS

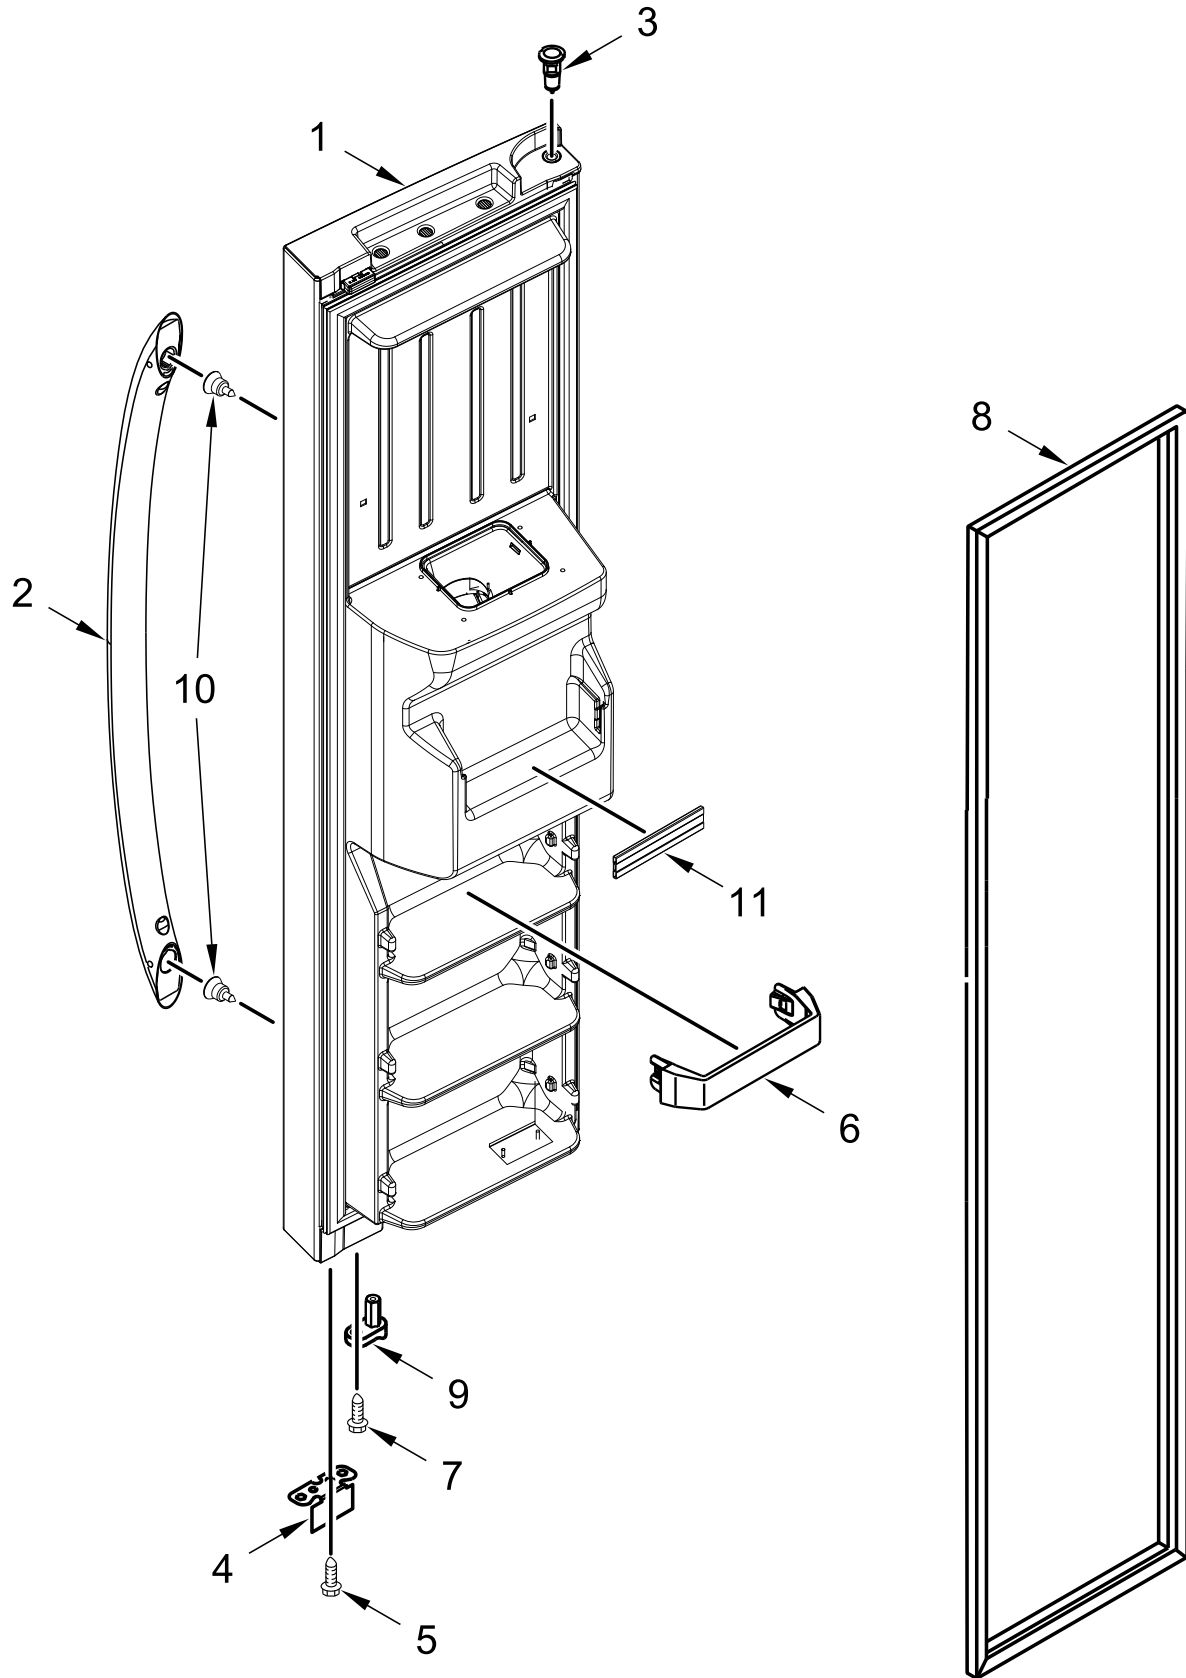

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Freezer (Includes Door Gasket and Dispenser Parts)	2		Handle	6	2309718	Trivet
	W11025560	White		W11289637	White	7	W10296804	Screw
	W11025561	Black		W11289638	Black	8		Gasket, Door
	W11025562	Biscuit		W11289636	Biscuit		W10912123	Beige
	W11258441	Stainless		W11045530	Stainless		W10912133	Black
			3	2200087	Thimble		W10912081	Grey
			4		Bracket, Door Stop	9	W10900532	Thimble, Cam
				W10900531	Black	10	W10460893	Screw
			5	W10296816	Screw	11	W10307494	Trim, Door Shelf


DISPENSER PARTS

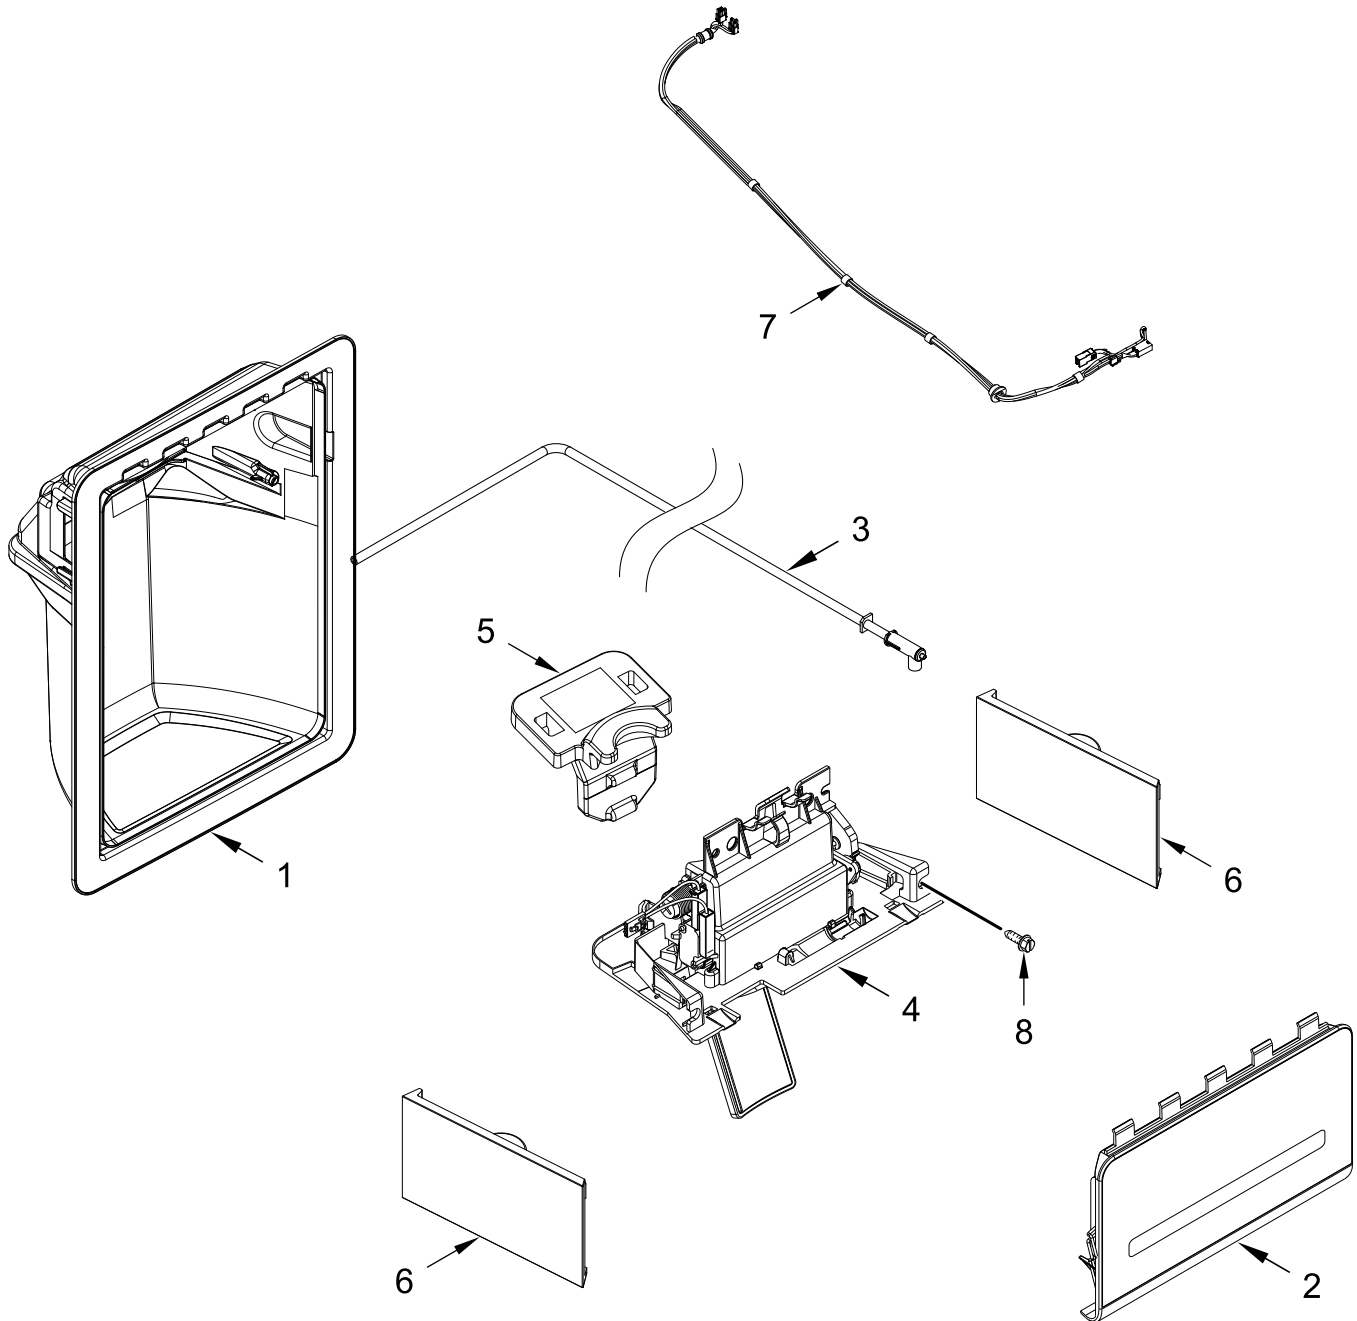

DISPENSER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Housing, Dispenser (Not Serviced)	6		Cover, Dispenser Front
2		Assembly, User Interface (Includes Light Feature)	W11183318		White (Left Hand)
			W11183314		White (Right Hand)
	W10898320	Black	W11183317		Black (Left Hand)
3	W10898317	Assembly, Water Fitting	W11183313		Black (Right Hand)
4		Assembly, Separator	W11183316		Biscuit (Left Hand)
	W11355300	White	W11183312		Biscuit (Right Hand)
	W11355299	Black	7	W10898319	Harness, Wire
	W11231387	Biscuit	8	8281163	Screw (Stainless)
	W11355298	Neptune Frost			
5	W11039857	Retainer, Separator Hose			


AIR FLOW PARTS

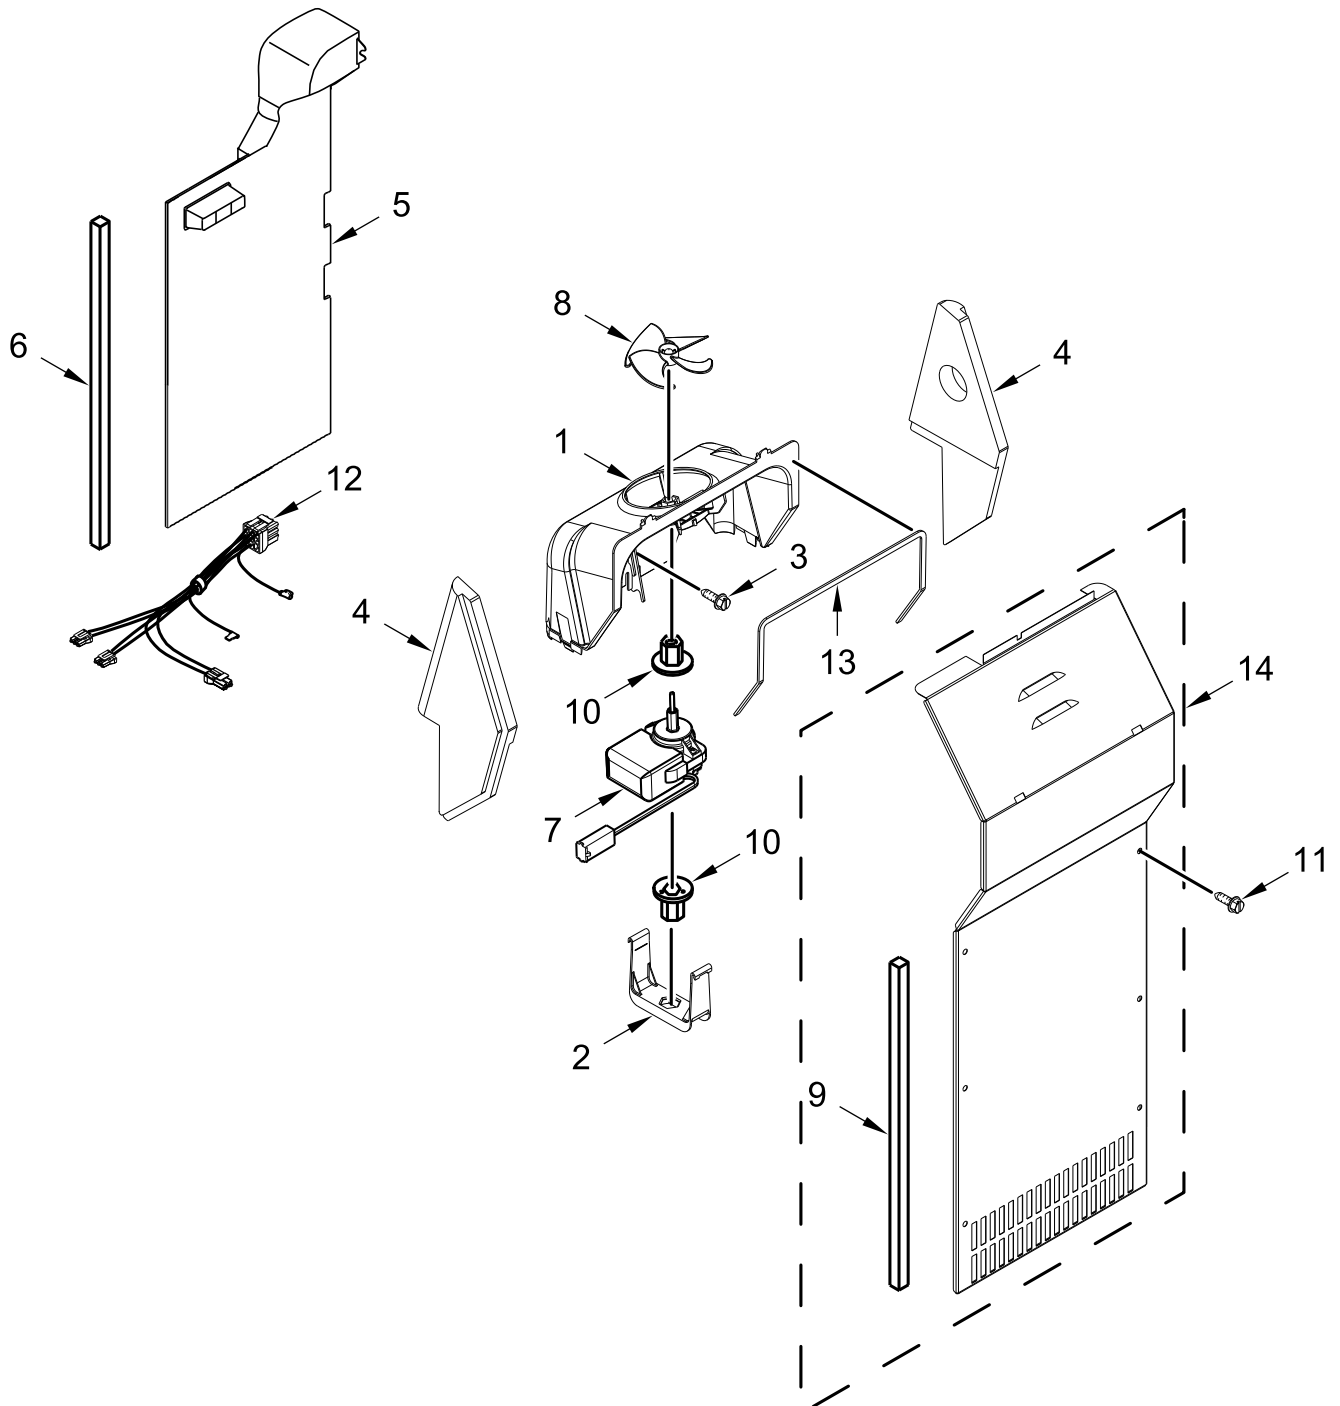

AIR FLOW PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11228713	Scroll, Fan	6	W10252477	Gasket, Air Duct	12	W11342162	Harness, Evaporator Fan (Includes Thermal Fuse)
2	W10188846	Retainer, Fan Motor	7	2315549	Motor, Fan	13	2155789	Gasket
3	489478	Screw	8	2169142	Blade, Fan	14	W10463013	Cover, Evaporator
4		Support, Fan Scroll	9	2304241	Gasket			
	2203596	Left Hand	10	2176759	Grommet, Motor			
	2203595	Right Hand	11	W10142292	Screw			
5	W11110658	Duct, Freezer Air						

UNIT PARTS

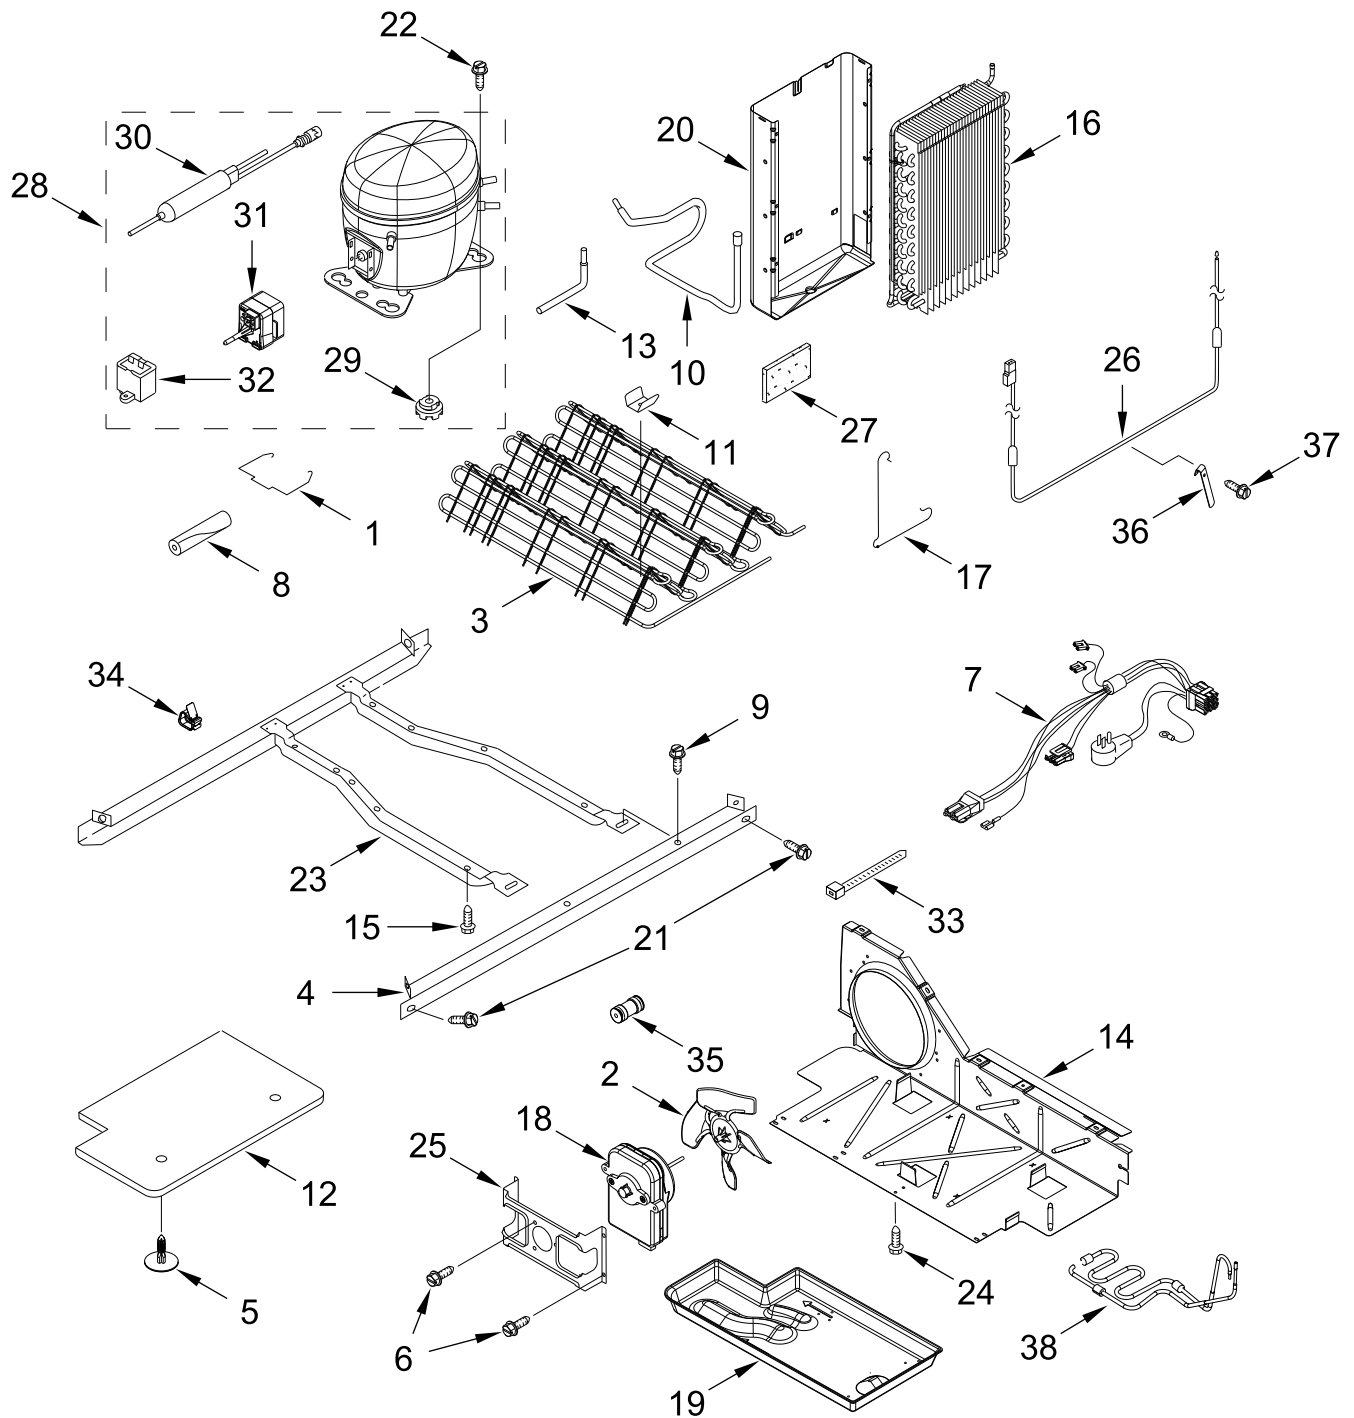

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10174384	Strap, Bale	20	W10194475	Assembly, Heat Shield and Drain Pan	36	W10895163	Probe, Heat
2	2225834	Blade, Fan				37	489478	Screw
3	W10904626	Assembly, Condenser	21	489340	Bolt	38	W11189542	Assembly, Precooler Formed
4	W10900442	Rail, Unit Mounting	22	489473	Screw			FOLLOWING PARTS NOT ILLUSTRATED
5	489396	Clip	23	W10900446	Frame, Unit Mounting (Includes Unit Mounting Rail)			
6	8533993	Screw				978025		Valve, Access (1/4")
7	W11218404	Assembly, Unit Wire (Includes Power Cord)	24	489464A	Screw	978026		Valve, Access (5/16")
8	2161302	Sleeve	25	2181929	Bracket, Fan Mounting	978027		Valve, Access (3/8")
9	489427	Screw	26	2188175	Heater, Defrost	978029		Valve, Access (5/8")
10	W11201407	Tube, Suction	27	2169104	Insulation, Sound Deadening	978030		Valve, Access (3/4")
11	2311725	Clip, Condenser	28	W11322225	Compressor	876764		Valve, Access (3/16")
12	W10897560	Assembly, Unit Cover (Bottom)	29	W10836504	Grommet, Compressor			REFRIGERANT CHARGE
13	W11239207	Tube, Process	30	W10771114	Drier			5.50 oz. (R-134A)
14	W10897567	Baffle, Air	31	W10197428	Device, Combination Start (Start Relay and Overload)			
15	8281232	Screw						
16	W10878980	Evaporator	32	W10350564	Capacitor			
17	2161324	Clip, Defrost Heater	33	2263990	Tie, Wire			
18	W10522629	Motor, Condenser Fan	34	2326941	Clip, Wire			
19	W10897557	Tray, Evaporator	35	W10271541	Connector, Union			

OPTIONAL PARTS

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350942	White Primer
	350939	Enamel, Black
	350930	White
	4392901	Biscuit/Bisque

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	W10134625	Apollo Grey

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)
	4392900	Biscuit/Bisque

MISCELLANEOUS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	212643	Sealer, Gum (4 Feet)
	479502	Tape, Vinyl (3/4 x 108")
	505587	Sealer, Mastic (1 Qt)
	503695	Cork, Sealer
	542638	Grease, Silicone (1/2 Oz.)
	542639	Cement, Alumilastic (1 1/4 Oz.)
	833938	Kit, Terminal Connector
	8003RP	Kit, Water Inlet
	W10300794	Kit, Handle Installation
	W10715708	Ice Maker Assembly (ECKMF95)

TORX SCREW WRENCH

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	1117510	Torx Key