



Preparing your  
Debut Carbon  
for shipping

When shipping your Debut Carbon, it is important to package the turntable properly. Using the OEM box and packaging will help minimize the possibility of damage while it is in transit.

---


# Getting your turntable ready for shipping

---

There are a few items we want to remove from the turntable before placing it in the shipping box:

- Remove the dustcover
- Remove the anti-skate weight and the counterweight from the tonearm
- Remove the platter
- Remove the motor belt

Set these aside; we will come back to them later.

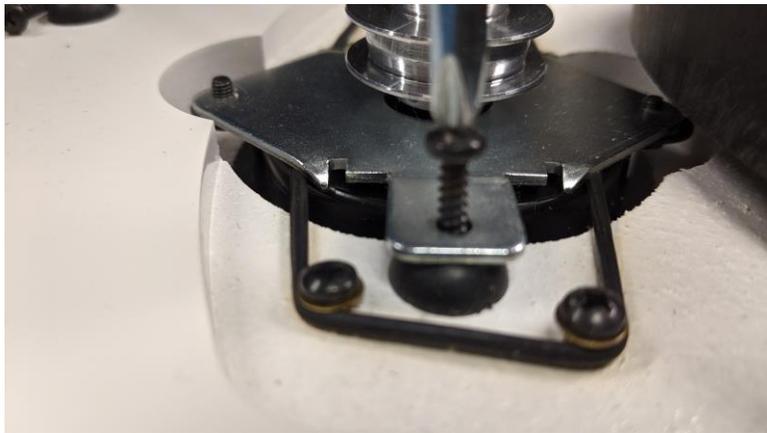

## Prepping the motor for transit


---

- If your motor transport screws are installed, that's great! If not, replace the TPE dampers and screw down the motor flange until it's snug in order to secure the motor to the plinth.

## Securing the tonearm

With a standard bread tie, twist around the tonearm rest once and then again above the tonearm itself. This will prevent it from dislodging in transit and potentially damaging your cartridge and/or stylus.



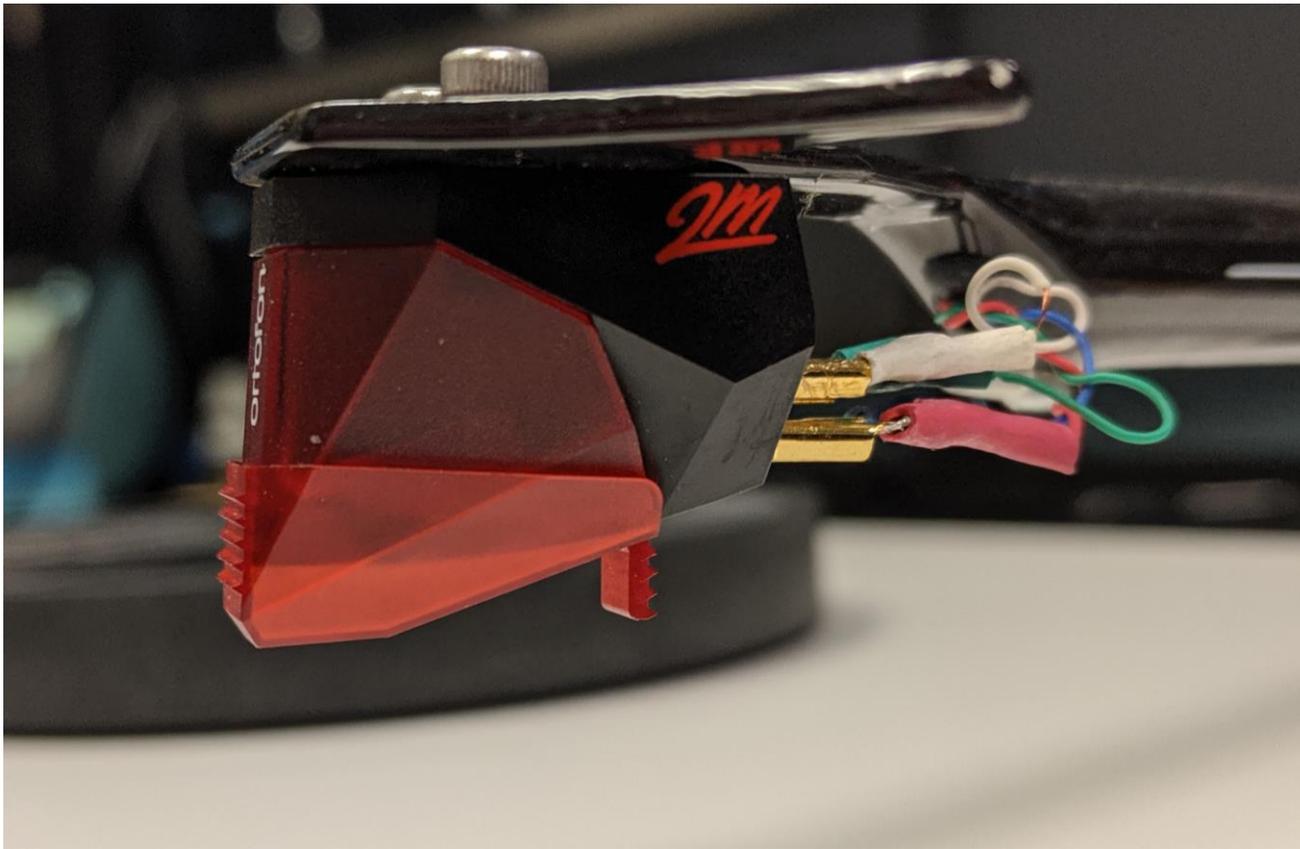


Place stylus guard on  
cartridge

Place on the front of the  
cartridge first and press  
up on the back of the  
guard until it clicks into  
place. This protects the  
most fragile part of the  
turntable.

## Packing items into the box

There is an order in which to place the items into the box. Please follow this diagram. It is also found on the last page of your manual for reference.

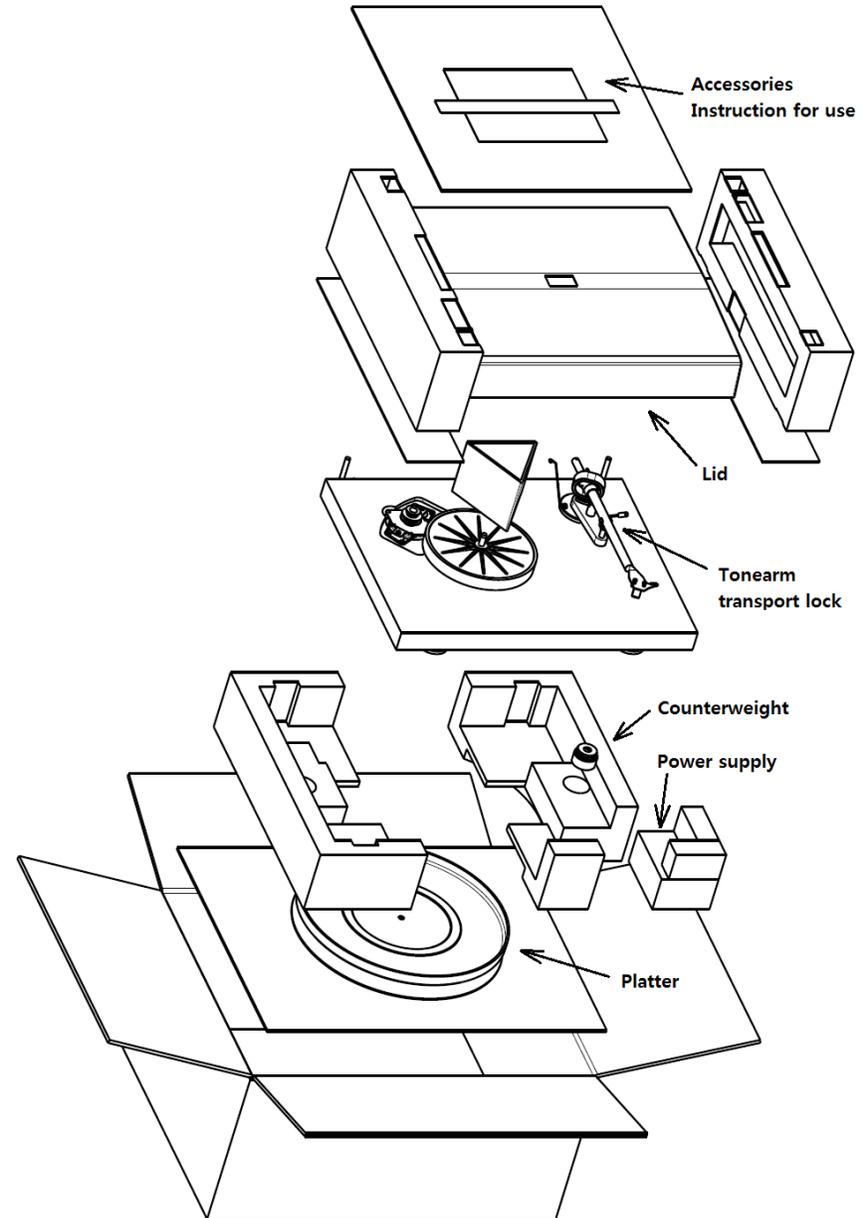



- First, place the platter on the bottom of the box. Place the two foam inserts on the short ends of the box.
- Place the counterweight in the foam inset and tape down with packaging tape.


Let's start packing the box

Box up the power supply and place in the corner pocket.

---

Place styrofoam bricks on top of the PSU box.



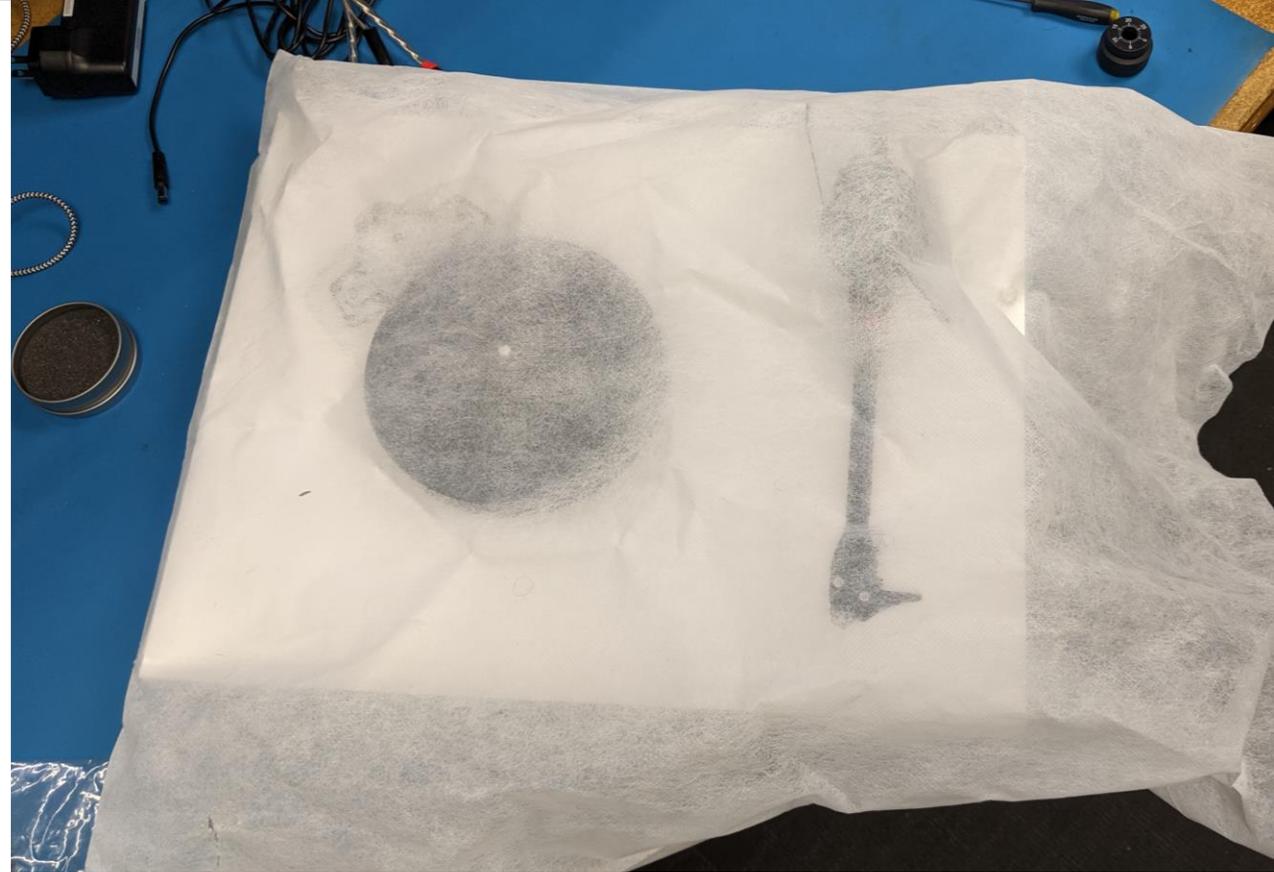

Now add the plinth (and sub-platter)  
into the box.

Use enclosed fabric cloth to protect the finish.

Place the cardboard triangle on top of the sub platter

- The cardboard triangle will prevent the sub platter from coming loose from the spindle bearing cup. This little piece will prevent damage to your turntable plinth.



## Setting the dustcover in the box

---

- Using the supplied cardboard pieces, place the short ends of the dustcover into the cardboard end caps as shown. If you have a fabric sleeve for the dustcover, go ahead and put it on before placing the dustcover into the cardboard end caps. *We left the fabric sleeve off for illustration only.*



Now place  
the  
cardboard  
sheet on top  
of the  
dustcover





Set the accessories kit on top of the cardboard

Please include your RCA phono cable and drive belt along with any remaining accessories that came with your turntable.

Close up the box and tape down the flaps. We strongly suggest placing the turntable in a second box with packing material such as bubble wrap or sheet foam for additional protection.

Please ship your turntable to:

SUMIKO Service

6655 Wedgwood Road N

Suite 115

Maple Grove, MN 55311-28140

**Be sure to include your RA# prominently on the outer box or on your shipping label.**