

## FRONT-CONTROL ELECTRIC COIL RANGES



### FEATURING



#### TimeSaver™ system

The TimeSaver™ system's Frozen Bake™ Technology allows you to skip preheating for favorites like pizza and lasagna so you can cook frozen foods faster.\*



#### QuickSelect™ system

The QuickSelect™ system's Guided cooktop controls help you to control the heat without the guesswork. The knobless design uses up/down arrows to select the temperature you need, while heat level indicators show when you are simmering and melting.



#### ReadySet™ system

ReadySet™ system's High-speed coil elements deliver quick, high heat for faster boiling and frying, so you can cook pasta or fry eggs in less time.

# Every day, care.™

\*Compared to a traditional preheat and bake cycle for pizza and lasagna.

# Front-Control Electric Coil Ranges



**WEC310S0F**

NEW

4.8 cu. ft.



## TimeSavor™ system

- Frozen Bake™ technology



## QuickSelect™ system

- Guided cooktop controls



## ReadySet™ system

- High-speed coil elements



## CompleteClean system

- Adjustable self-cleaning



## HeatRight™ system

- Temperature sensor

## Available Colors



W  
White




B  
Black



S  
Stainless Steel

## Product Dimensions

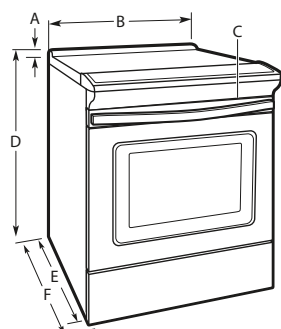


- A. 13<sup>1/8</sup>" (33.0 cm) height from cooktop to top of vent  
 B. 29<sup>1/4</sup>" (75.9 cm)  
 C. Model/serial/rating plate (located behind the oven door on the top right-hand side of the oven frame)  
 D. 36" (91.4 cm) height to top of cooktop edge with leveling legs screwed all the way in  
 E. 28<sup>3/4</sup>" (72.1 cm) max. depth from front of console to back of range  
 F. 29<sup>1/4</sup>" (73.7 cm) max. depth from handle to back of range

**IMPORTANT:** Range must be level after installation. Follow the instructions in the "Level Range" section. Using the cooktop as a reference for leveling the range is not recommended.

\* Range can be raised approximately 1" (2.5 cm) by adjusting the leveling legs.

## Cabinet Dimensions

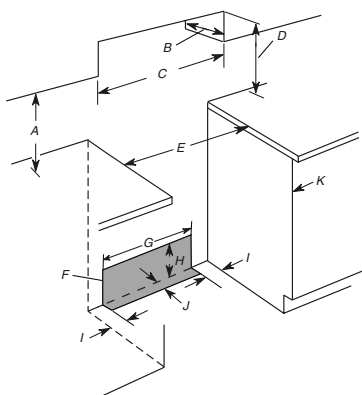

- A. 18" (45.7 cm) upper side cabinet to countertop  
 B. 13" (33 cm) max. upper cabinet depth  
 C. 30" (76.2 cm) min. opening width  
 D. For minimum clearance to top of cooktop, see NOTE\*.  
 E. 30" (76.2 cm) min. opening width  
 F. The shaded area is recommended for installation of grounded outlet.  
 G. 13<sup>1/8</sup>" (33.3 cm)  
 H. 7<sup>1/8</sup>" (19.5 cm)  
 I. 4<sup>5/8</sup>" (12.2 cm)  
 J. 3<sup>1/8</sup>" (9.4 cm)  
 K. Cabinet door or hinges should not extend into the cutout.

**\*NOTE:** 24" (61.0 cm) minimum when bottom of wood or metal cabinet is shielded by not less than 1/4" (0.64 cm) flame retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015" (0.4 mm) stainless steel, 0.024" (0.6 mm) aluminum or 0.020" (0.5 mm) copper.  
 30" (76.2 cm) minimum clearance between the top of the cooking platform and the bottom of an uncovered wood or metal cabinet.

## ADDITIONAL FEATURES

- Upswept SpillGuard™ cooktop
- Keep Warm
- Closed door broiling
- Delay Cook
- Sabbath mode
- Star-K certified
- ADA compliant

Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.

