BUILT-IN REFRIGERATOR COLUMNS BUILT-IN FREEZER COLUMNS BUILT-IN WINE COLUMNS

DESIGN GUIDE



### **BUILT-IN COLUMNS**

These premium refrigerators, freezers and wine columns are masterpieces of design and technology. Their stylish appearance reflects close attention to detail and high-quality materials, inside and out. The stainless steel front and panel ready doors are mounted with state-of-the-art engineered lift-and-swing hinges that give the perception of a weightless range of motion. Versatile installation options make it possible to bring together elegant configurations of the refrigerator, freezer and wine columns in any desired width. All three columns work in harmony with handles and finishes available for every Series.

# **INDEX**



INTRODUCTION	3	BUILT-IN WINE COLUMNS	44
		24" Wine Column Panel Installed	46
BUILT-IN REFRIGERATOR COLUMNS	4	24" Wine Column Panel Ready	49
36" Refrigerator Column Panel Installed	6	18" Wine Column Panel Installed	52
36" Refrigerator Column Panel Ready	9	18" Wine Column Panel Ready	55
30" Refrigerator Column Panel Installed	12		
30" Refrigerator Column Panel Ready	15	MULTIPLE INSTALLATIONS	58
24" Refrigerator Column Panel Installed	18	42" Double Configurations	61
24" Refrigerator Column Panel Ready	21	48" Double Configurations	62
		54" Double Configurations	63
BUILT-IN FREEZER COLUMNS	24	60" Double Configurations	64
30" Freezer Column Panel Installed	26	60" Triple Configurations	65
30" Freezer Column Panel Ready	29	66" Triple Configurations	66
24" Freezer Column Panel Installed	32	72" Triple Configurations	67
24" Freezer Column Panel Ready	35	90" Triple Configurations	68
18" Freezer Column Panel Installed	38	Custom Door Panel	69
18" Freezer Column Panel Ready	41	Recommended Installations	70
		Refrigeration Handles	71
		Toekick Panel	72

# **BUILT-IN REFRIGERATOR COLUMNS**



36" - 30" - 24" Panel Ready and Panel Installed



# **Dimensions**

TALIA

REF36RCPIXL left hinge REF36RCPIXR right hinge

### Handle choices


Professional Series: PROHKCOL Master series: MASHKCOL Heritage Series: HERHKCOL


# SIDE VIEW FRONT VIEW 35 5/8" (904) DOOR WIDTH 77 3/4" (1974) 83 1/2" (2120) 1"(25) 1"(25) 1"(25) 5" (127) 19 7/8" (505) 19 7/8" (505)

# \* 5 1/2" (139) 35 15/16" (913) 24 3/8" (620) 58 1/2" (1487) 100°

**TOP VIEW** 

**TOP VIEW** 

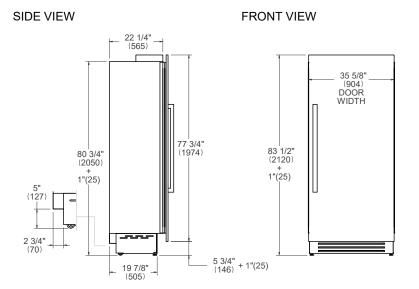

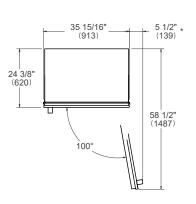

<sup>\*</sup> Maximum Overall Handle Dimension For detailed handle dimensions see page 71

# Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product.

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support	1532 lb (695 kg)
------------------------	------------------


### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**






A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	218 W	2 Amp
Service	15 Amp dedicated circuit			
Power Connection	NEMA 5-15P with 79" power cord			ver cord


# Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

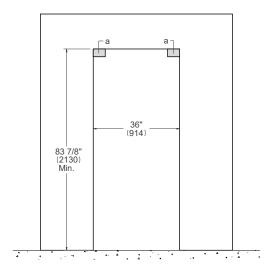


<sup>(</sup>a) Area to be left clear for the anti-tipping brackets – 3"1/2x5" (82x127mm)


# **Dimensions**


REF36RCPRL left hinge REF36RCPRR right hinge




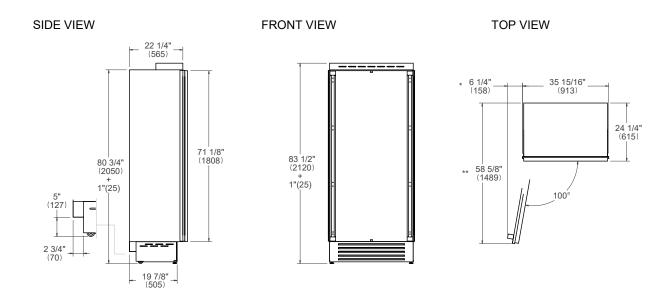

FRONT VIEW

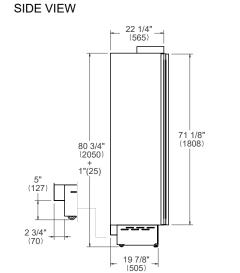

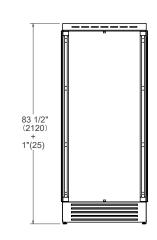

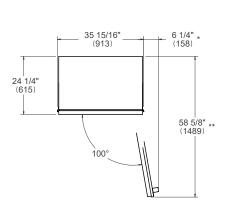

**TOP VIEW** 

\*\* Width of 3/4" (19mm) Door Panel For detailed handle dimensions see page 71

<sup>\*</sup> Maximum Overall Handle Dimension

# Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product. For panel ready columns, do not exceed the maximum weight of 75 pounds (34 kg) for door panel. Panel can have thickness ranging between 3/4" (18 mm) and 1 1/8" (28 mm).

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

	Required floor support	1532 lb (695 kg)
П		· ·


### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	218 W	2 Amp
Service	15 Amp dedicated circuit			
Power Connection	NEMA 5-15P with 79" power cord			ver cord


For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

 $\label{lem:decomposition} \mbox{Dimensions in parentheses are millimeters unless otherwise specified.}$ 


# Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

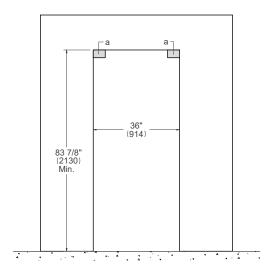

<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)

<sup>(</sup>b) Panel dimensions available on Built-in Food Preservation Design Guide or Installation Manual



REF30RCPIXL left hinge REF30RCPIXR right hinge


### Handle choices


Professional Series: PROHKCOL Master series: MASHKCOL

Heritage Series: HERHKCOL

### SIDE VIEW FRONT VIEW 22 1/4" (565) 29 5/8" (752) DOOR WIDTH 77 3/4" (1974) 83 1/2" (2120) 80 3/4" (2050) + 1"(25) 1"(25) 5" (127) 2 3/4" 5 3/4" (146) + 1"(25) 19 7/8" (505)


### **TOP VIEW**

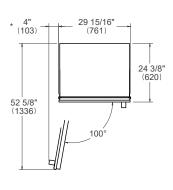

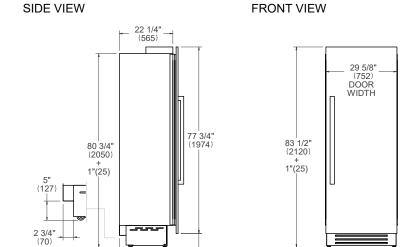

5 3/4" (146) + 1"(25)



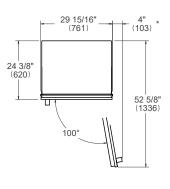

19 7/8" (505)

<sup>\*</sup> Maximum Overall Handle Dimension For detailed handle dimensions see page 71

# Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factoryinstalled and covering frames are provided with the product.

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

<b>Required floor support</b> 1257 lb (570 kg)
--


### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**






A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	218 W	2 Amp
Service	15 Amp dedicated circuit			
Power Connection	NEMA 5-15P with 79" power cord			ver cord


# Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

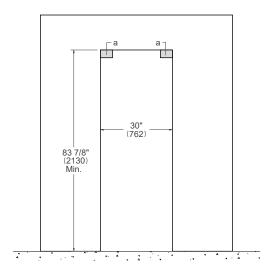

<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)


# **Dimensions**


REF30RCPRL left hinge REF30RCPRR right hinge




### SIDE VIEW FRONT VIEW **TOP VIEW** 22 1/4" (565) 5 1/4" (132) 29 15/16" (761) 24 1/4" (615) 71 1/8" (1808) 83 1/2" (2120) \*\* 52 5/8" (1338) 80 3/4" (2050) + 1"(25) + 1"(25) 100 5" (127) 2 3/4"

FRONT VIEW

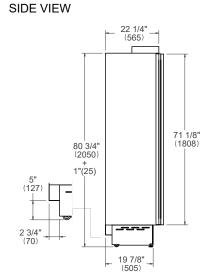

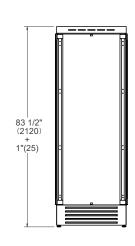

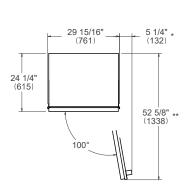

**TOP VIEW** 

For detailed handle dimensions see page 71

\*\* Width of 3/4" (19mm) Door Panel

<sup>\*</sup> Maximum Overall Handle Dimension

# Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product. For panel ready columns, do not exceed the maximum weight of 75 pounds (34 kg) for door panel. Panel can have thickness ranging between 3/4" (18 mm) and 1 1/8" (28 mm).

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support	1257 lb (570 kg)
	_


### **ELECTRICAL REQUIREMENT**

The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	218 W	2 Amp
Service	15 Amp dedicated circuit  NEMA 5-15P with 79" power cord			
Power Connection			ver cord	

For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

 $\label{lem:decomposition} \mbox{Dimensions in parentheses are millimeters unless otherwise specified.}$ 


# Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

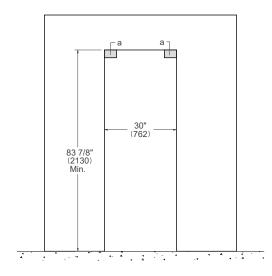

(b) Panel dimensions available on Built-in Food Preservation Design Guide or Installation Manual

<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)



TALLA

REF24RCPIXL left hinge REF24RCPIXR right hinge


### Handle choices


Professional Series: PROHKCOL Master series: MASHKCOL

Heritage Series: HERHKCOL

# SIDE VIEW FRONT VIEW 22 1/4" (565) 77 3/4" (1974) 83 1/2" (2120) 1"(25) 1"(25) 1"(25) 19 7/8" (505) 5 3/4" + 1"(25)


### **TOP VIEW**

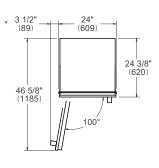

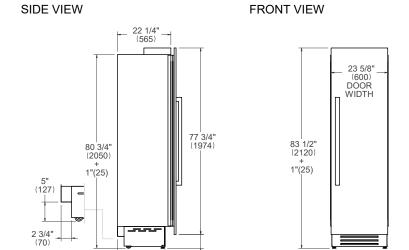

5 3/4" (146) + 1"(25)

### **TOP VIEW**

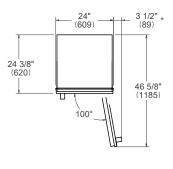

19 7/8" (505)

<sup>\*</sup> Maximum Overall Handle Dimension For detailed handle dimensions see page 71

# Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factoryinstalled and covering frames are provided with the product.

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

	Required floor support	992 lb (450 kg)
П		


### **ELECTRICAL REQUIREMENT**

The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	163 W	1.5 Amp
Service	15 Amp dedicated circuit			
Power Connection	NEMA 5-15P with 79" power cor		ver cord	


For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

 $\label{lem:decomposition} \mbox{Dimensions in parentheses are millimeters unless otherwise specified.}$ 


# Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

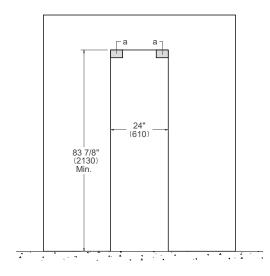


<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)

# **Dimensions**


REF24RCPRL left hinge REF24RCPRR right hinge




# SIDE VIEW

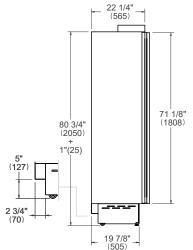


### FRONT VIEW

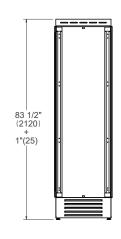


### **TOP VIEW**

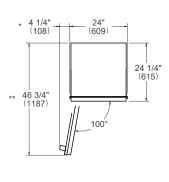


### SIDE VIEW

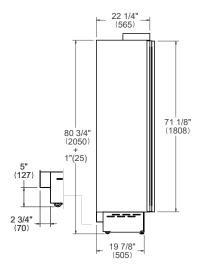

FRONT VIEW

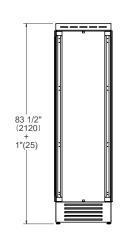

### **TOP VIEW**

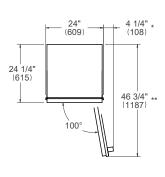

For detailed handle dimensions see page 71

<sup>\*</sup> Maximum Overall Handle Dimension

<sup>\*\*</sup> Width of 3/4" (19mm) Door Panel

# Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product. For panel ready columns, do not exceed the maximum weight of 75 pounds (34 kg) for door panel. Panel can have thickness ranging between 3/4" (18 mm) and 1 1/8" (28 mm).

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support	992 lb (450 kg)
	•


### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	163 W	1.5 Amp
Service	15 Amp dedicated circuit			
Power Connection	NEMA 5-15P with 79" power cord			


For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

 $\label{lem:decomposition} \mbox{Dimensions in parentheses are millimeters unless otherwise specified.}$ 


# Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

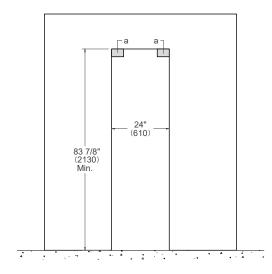

(b) Panel dimensions available on Built-in Food Preservation Design Guide or Installation Manual

<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)

# **BUILT-IN FREEZER COLUMNS**



30" - 24" - 18" Panel Ready and Panel Installed





# **Dimensions**

REF30FCPIXL left hinge REF30FCPIXR right hinge

### Handle choices


Professional Series: PROHKCOL Master series: MASHKCOL Heritage Series: HERHKCOL




# SIDE VIEW FRONT VIEW 22 1/4" (565) 29 5/8" (752) DOOR WIDTH 77 3/4" (1974) 83 1/2" (2120) 80 3/4" (2050) 1"(25) 1"(25) 5" (127) 2 3/4"


5 3/4" (146) + 1"(25)

### **TOP VIEW**

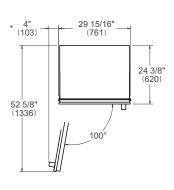

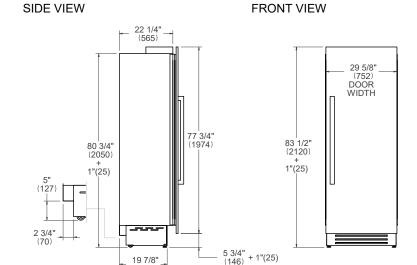



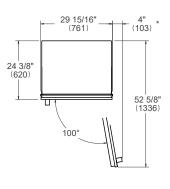

19 7/8" (505)

19 7/8" (505)

<sup>\*</sup> Maximum Overall Handle Dimension For detailed handle dimensions see page 71

# Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product.

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support	1257 lb (570 kg )

### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.


Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

### TOP VIEW





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	327 W	3 Amp
Service	15 Amp dedicated circuit			
Power Connection	NEMA 5-15P with 79" power cord			

### PLUMBING REQUIREMENTS

Bertazzoni Freezer Columns are provided with a water filter assembly which must be mounted outside the unit.

The appliance must be connected only to a potable water supply system.

To connect to water supply system (for appliances equipped with ice maker) a 1/4" waterline with accessible shut-off valve must be supplied.

The solenoid connection on the appliance is <sup>3</sup>/<sub>4</sub>" diameter but is metric threaded (NPT).


The system pressure must be between from 8 PSI to 75 PSI (between 0.5 bar and 5 bar). Different pressures can cause malfunctions or leaks in the water system.

For information on how to purchase the water filter, please see Use and Maintenance Manual.


# Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

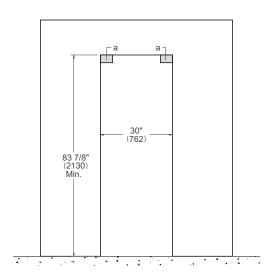


<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)


# **Dimensions**


REF30FCPRL left hinge REF30FCPRR right hinge




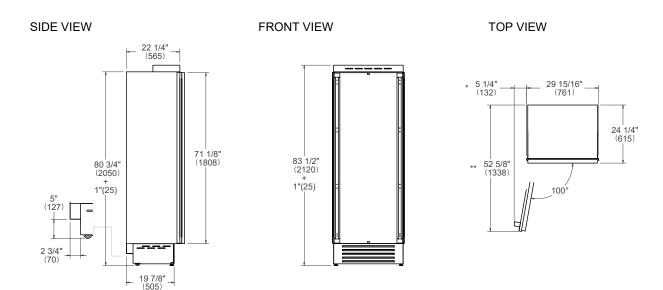

FRONT VIEW

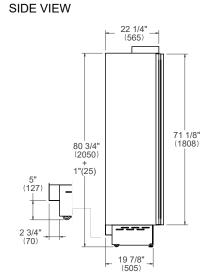

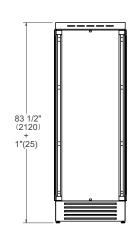

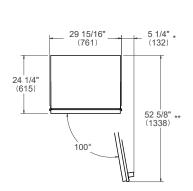

**TOP VIEW** 

For detailed handle dimensions see page 71

<sup>\*</sup> Maximum Overall Handle Dimension

<sup>\*\*</sup> Width of 3/4" (19mm) Door Panel

# Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product. For panel ready columns, do not exceed the maximum weight of 75 pounds (34 kg) for door panel. Panel can have thickness ranging between 3/4" (18 mm) and 1 1/8" (28 mm).

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support	1257 lb (570 kg)
Required floor support	1257 lb (570 kg)

### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.


Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	327 W	3 Amp
Service	15 Amp dedicated circuit			
Power Connection	NEMA 5-15P with 79" power cord			

### PLUMBING REQUIREMENTS

Bertazzoni Freezer Columns are provided with a water filter assembly which must be mounted outside the unit.

The appliance must be connected only to a potable water supply system.

To connect to water supply system (for appliances equipped with ice maker) a 1/4" waterline with accessible shut-off valve must be supplied.

The solenoid connection on the appliance is 3/4" diameter but is metric threaded (NPT).

The system pressure must be between from 8 PSI to 75 PSI (between 0.5 bar and 5 bar). Different pressures can cause malfunctions or leaks in the water system.

For information on how to purchase the water filter, please see Use and Maintenance Manual.

 $\label{lem:decomposition} \mbox{Dimensions in parentheses are millimeters unless otherwise specified.}$ 


# Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

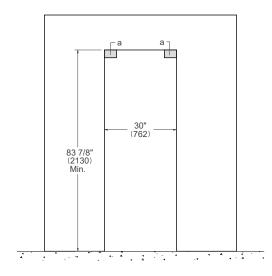

(b) Panel dimensions available on Built-in Food Preservation Design Guide or Installation Manual

<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)

# **Dimensions**


REF24FCPIXL left hinge REF24FCPIXR right hinge

### Handle choices


Professional Series: PROHKCOL Master series: MASHKCOL Heritage Series: HERHKCOL




# SIDE VIEW FRONT VIEW

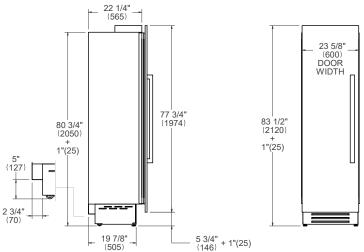

### **TOP VIEW**

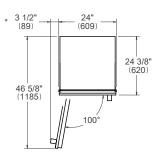


### SIDE VIEW

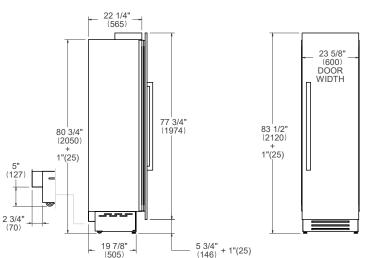

FRONT VIEW

### TOP VIEW

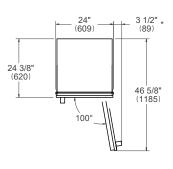

<sup>\*</sup> Maximum Overall Handle Dimension For detailed handle dimensions see page 71

# Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product...

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support	992 lb (450 kg)
------------------------	-----------------

### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.


Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	327 W	3 Amp
Service	15 Amp dedicated circuit			
Power Connection	NEMA 5-15P with 79" power cord			

### PLUMBING REQUIREMENTS

Bertazzoni Freezer Columns are provided with a water filter assembly which must be mounted outside the unit.

The appliance must be connected only to a potable water supply system.

To connect to water supply system (for appliances equipped with ice maker) a 1/4" waterline with accessible shut-off valve must be supplied.

The solenoid connection on the appliance is 3/4" diameter but is metric threaded (NPT).


The system pressure must be between from 8 PSI to 75 PSI (between 0.5 bar and 5 bar). Different pressures can cause malfunctions or leaks in the water system.

For information on how to purchase the water filter, please see Use and Maintenance Manual.


# Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

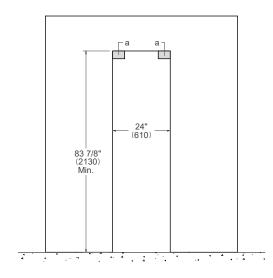

<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)

# **Dimensions**


REF24FCPRL left hinge REF24FCPRR right hinge




# SIDE VIEW

22 1/4" (565) 71 1/8" (1808) 80 3/4" (2050) + 1"(25) 5" (127)


### FRONT VIEW

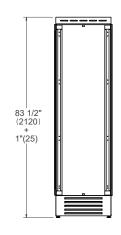


### **TOP VIEW**

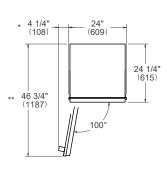


### SIDE VIEW

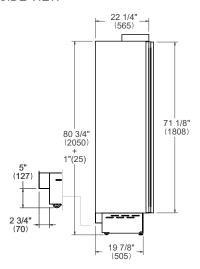

FRONT VIEW

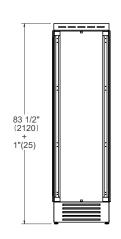

### **TOP VIEW**

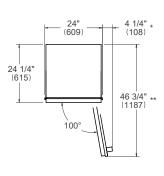

For detailed handle dimensions see page 71

\*\* Width of 3/4" (19mm) Door Panel

<sup>\*</sup> Maximum Overall Handle Dimension

# Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product. For panel ready columns, do not exceed the maximum weight of 75 pounds (34 kg) for door panel. Panel can have thickness ranging between 3/4" (18 mm) and 1 1/8" (28 mm).

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

<b>1992</b> lb (450 kg)
<b>1992</b> lb (450 kg)

### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.


Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	327 W	3 Amp
Service	15 Amp dedicated circuit			
Power Connection	NEMA 5-15P with 79" power cord			

### PLUMBING REQUIREMENTS

Bertazzoni Freezer Columns are provided with a water filter assembly which must be mounted outside the unit.

The appliance must be connected only to a potable water supply system.

To connect to water supply system (for appliances equipped with ice maker) a 1/4" waterline with accessible shut-off valve must be supplied.

The solenoid connection on the appliance is <sup>3</sup>/<sub>4</sub>" diameter but is metric threaded (NPT).


The system pressure must be between from 8 PSI to 75 PSI (between 0.5 bar and 5 bar). Different pressures can cause malfunctions or leaks in the water system.

For information on how to purchase the water filter, please see Use and Maintenance Manual.


### Flush installation




### TOP VIEW b



### SIDE VIEW



### FRONT VIEW

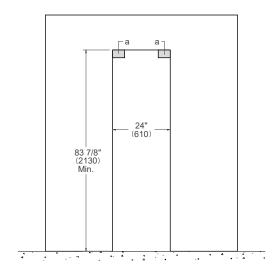

<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)

<sup>(</sup>b) Panel dimensions available on Built-in Food Preservation Design Guide or Installation Manual

### 18" Freezer Column Panel Installed


### **Dimensions**


REF18FCIPIXL left hinge REF18FCIPIXR right hinge

### Handle choices


Professional Series: PROHKCOL Master series: MASHKCOL Heritage Series: HERHKCOL


### SIDE VIEW FRONT VIEW TOP VIEW

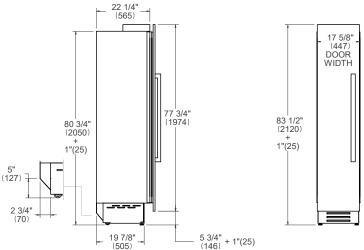

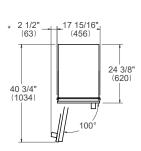



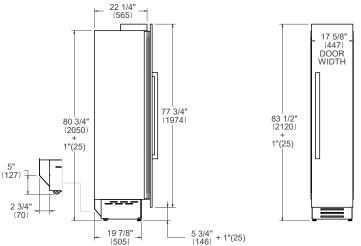

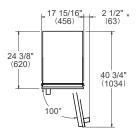

<sup>\*</sup> Maximum Overall Handle Dimension For detailed handle dimensions see page 71

### 18" Freezer Column Panel Installed

### Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factoryinstalled and covering frames are provided with the product.

For instructions of product combinations please see the Multiple Installation Section (page 58).

### CABINET REQUIREMENT

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support	694 lb (315 kg)


### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

**TOP VIEW** 





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	327 W	3 Amp
Service	15 Amp dedicated circuit			
Power Connection	NEMA 5-15P with 79" power cord			

### PLUMBING REQUIREMENTS

Bertazzoni Freezer Columns are provided with a water filter assembly which must be mounted outside the unit.

The appliance must be connected only to a potable water supply system.

To connect to water supply system (for appliances equipped with ice maker) a 1/4" waterline with accessible shut-off valve must be supplied.

The solenoid connection on the appliance is 3/4" diameter but is metric threaded (NPT).

The system pressure must be between from 8 PSI to 75 PSI (between 0.5 bar and 5 bar). Different pressures can cause malfunctions or leaks in the water system.

For information on how to purchase the water filter, please see Use and Maintenance Manual.


For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

### 18" Freezer Column Panel Installed


### Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

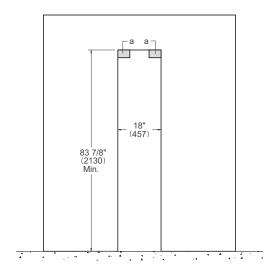


<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)

### **Dimensions**


REF18FCIPRL left hinge REF18FCIPRR right hinge




### SIDE VIEW

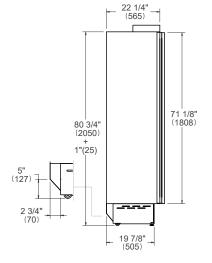


### FRONT VIEW



### **TOP VIEW**

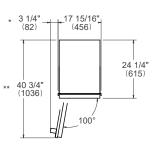


### SIDE VIEW

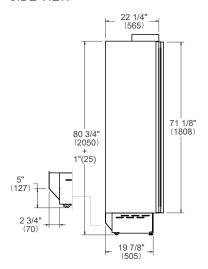

FRONT VIEW



**TOP VIEW** 

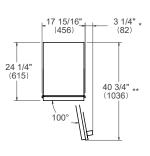

For detailed handle dimensions see page 71

\*\* Width of 3/4" (19mm) Door Panel

<sup>\*</sup> Maximum Overall Handle Dimension

### Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product. For panel ready columns, do not exceed the maximum weight of 75 pounds (34 kg) for door panel. Panel can have thickness ranging between 3/4" (18 mm) and 1 1/8" (28 mm).

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support	694 lb (315 kg)
------------------------	-----------------

### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.


Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	327 W	3 Amp	
Service	15 Amp dedicated circuit				
Power Connection	NEMA 5-15P with 79" power cord				

### PLUMBING REQUIREMENTS

Bertazzoni Freezer Columns are provided with a water filter assembly which must be mounted outside the unit.

The appliance must be connected only to a potable water supply system.

To connect to water supply system (for appliances equipped with ice maker) a 1/4" waterline with accessible shut-off valve must be supplied.

The solenoid connection on the appliance is 3/4" diameter but is metric threaded (NPT).

The system pressure must be between from 8 PSI to 75 PSI (between 0.5 bar and 5 bar). Different pressures can cause malfunctions or leaks in the water system.


For information on how to purchase the water filter, please see Use and Maintenance Manual.

 $\label{lem:decomposition} \mbox{Dimensions in parentheses are millimeters unless otherwise specified.}$ 


### Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

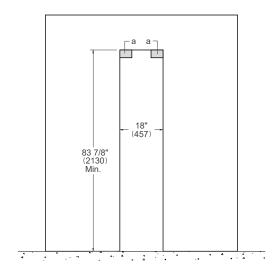


<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)

<sup>(</sup>b) Panel dimensions available on Built-in Food Preservation Design Guide or Installation Manual

### **BUILT-IN WINE COLUMNS**



24" - 18" Panel Ready and Panel Installed





### **Dimensions**

REF24WCPIXL left hinge REF24WCPIXR right hinge


### Handle choices


Professional Series: PROHKCOL Master series: MASHKCOL

Master series: MASHKCOL Heritage Series: HERHKCOL


### SIDE VIEW FRONT VIEW - 22 1/4" - (565) - 23 5/8" - (600) - DOOR WIDTH - (1974) 19 7/8" - (505) - 19 7/8" - (505) - 5 3/4" + 1"(25)

### **TOP VIEW**

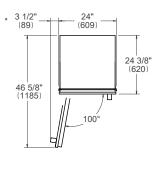

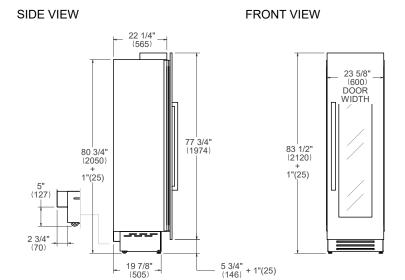

### **TOP VIEW**

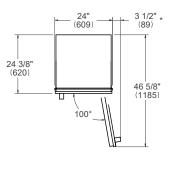

<sup>\*</sup> Maximum Overall Handle Dimension For detailed handle dimensions see page 71

### Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product.

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support 992 lb (450 kg
---------------------------------------


### **ELECTRICAL REQUIREMENT**

The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**






A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	152 W	1.4 Amp	
Service	15 Amp dedicated circuit				
Power Connection	NEMA 5-15P with 79" power cord				


### Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

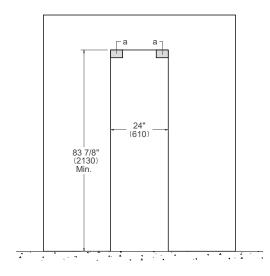


<sup>(</sup>a) Area to be left clear for the anti-tipping brackets – 3"1/2x5" (82x127mm)

### **Dimensions**


REF24WCPRL left hinge REF24WCPRR right hinge




### SIDE VIEW

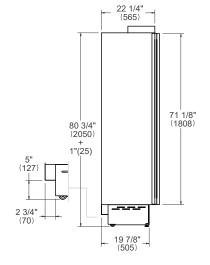


### FRONT VIEW

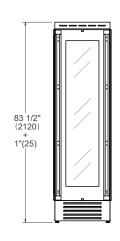


### **TOP VIEW**

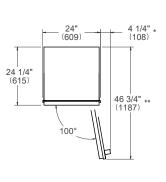


### SIDE VIEW

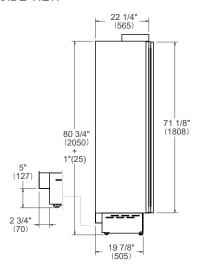

FRONT VIEW

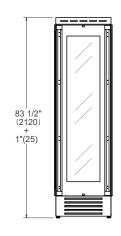

### TOP VIEW

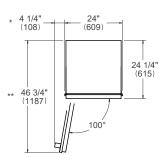

For detailed handle dimensions see page 71

Dimensions in parentheses are millimeters unless otherwise specified. For custom panel dimensions and window cutout see page 69.

<sup>\*</sup> Maximum Overall Handle Dimension

<sup>\*\*</sup> Width of 3/4" (19mm) Door Panel

### Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product. For panel ready columns, do not exceed the maximum weight of 75 pounds (34 kg) for door panel. Panel can have thickness ranging between 3/4" (18 mm) and 1 1/8" (28 mm).

For instructions of product combinations please see the Multiple Installation Section (page ).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.


### **ELECTRICAL REQUIREMENT**

The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	152 W	1.4 Amp	
Service	15 Amp dedicated circuit				
Power Connection	NEMA 5-15P with 79" power cord				


For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

 $\label{lem:decomposition} \mbox{Dimensions in parentheses are millimeters unless otherwise specified.}$ 


### Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

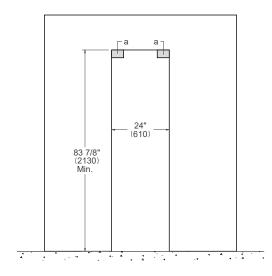

<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)

<sup>(</sup>b) Panel dimensions available on Built-in Food Preservation Design Guide or Installation Manual


### **Dimensions**


REF18WCPIXL left hinge REF18WCPIXR right hinge


### Handle choices

Professional Series: PROHKCOL Master series: MASHKCOL Heritage Series: HERHKCOL

SIDE VIEW FRONT VIEW **TOP VIEW** 

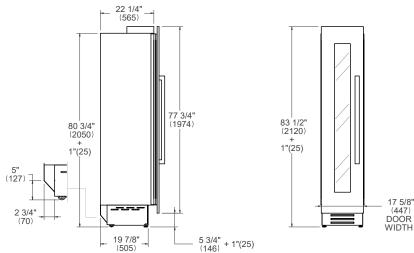

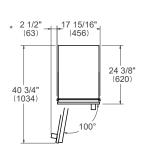

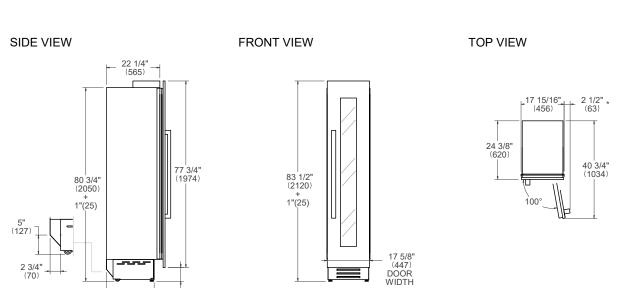

19 7/8" (505)

5 3/4" (146) + 1"(25)

2 3/4"

<sup>\*</sup> Maximum Overall Handle Dimension For detailed handle dimensions see page 71

### Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product.

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support	694 lb (315 kg)
------------------------	-----------------


### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.


Electrical supply	115 V	60 Hz	152 W	1.4 Amp	
Service	15 Amp dedicated circuit				
Power Connection	NEMA 5-15P with 79" power cord				

For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.


### Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

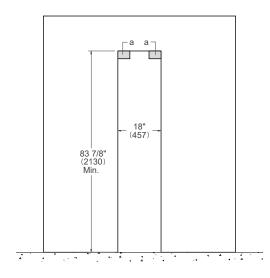


<sup>(</sup>a) Area to be left clear for the anti-tipping brackets - 3"1/2x5" (82x127mm)

### **Dimensions**


REF18WCPRL left hinge REF18WCPRR right hinge




### SIDE VIEW

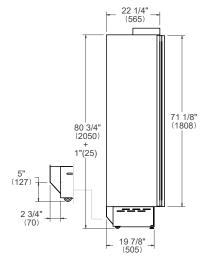


### FRONT VIEW




### **TOP VIEW**

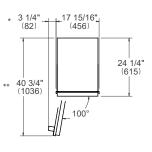


### SIDE VIEW

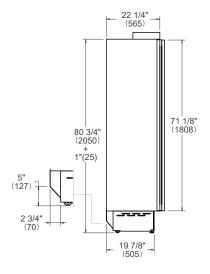

FRONT VIEW



### TOP VIEW

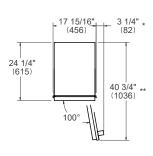

For detailed handle dimensions see page 71

Dimensions in parentheses are millimeters unless otherwise specified. For custom panel dimensions and window cutout see page 69.

<sup>\*</sup> Maximum Overall Handle Dimension

<sup>\*\*</sup> Width of 3/4" (19mm) Door Panel

### Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliance and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product. For panel ready columns, do not exceed the maximum weight of 75 pounds (34 kg) for door panel. Panel can have thickness ranging between 3/4" (18 mm) and 1 1/8" (28 mm).

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliance must be performed in accordance with the provisions of applicable legislation.

Be sure that support of this appliance is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of the appliance when in use.

Required floor support	694 lb (315 kg)
------------------------	-----------------


### **ELECTRICAL REQUIREMENT**

The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**





A separate circuit breaker servicing only this appliance is recommended.

Electrical supply	115 V	60 Hz	152 W	1.4 Amp	
Service	15 Amp dedicated circuit				
Power Connection	NEMA 5-15P with 79" power cord				


For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

 $\label{lem:decomposition} \mbox{Dimensions in parentheses are millimeters unless otherwise specified.}$ 


### Flush installation




TOP VIEW b



### SIDE VIEW



### FRONT VIEW

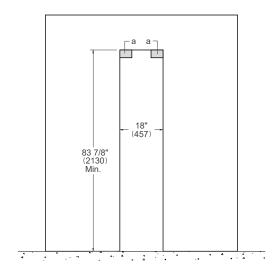

<sup>(</sup>a) Area to be left clear for the anti-tipping brackets – 3"1/2x5" (82x127mm)

<sup>(</sup>b) Panel dimensions available on Built-in Food Preservation Design Guide or Installation Manual

### **MULTIPLE INSTALLATIONS**





### Multiple installations

### Installation requirements



### **INSTALLATION**

All Bertazzoni columns can be installed in a standard 25" depth cutout.

Finish the edges of the opening because they may be visible when the door is open.

For a built-in installation, to cover gaps between the appliances and the adjacent cabinets, special side profiles are factory-installed and covering frames are provided with the product.

For panel ready columns, do not exceed the maximum weight of 75 pounds (34 kg) for door panel. Panel can have thickness ranging between <sup>3</sup>/<sub>4</sub>" (18 mm) and 1 1/8" (28 mm).

For instructions of product combinations please see the Multiple Installation Section (page 58).

### **CABINET REQUIREMENT**

Installation of the appliances must be performed in accordance with the provisions of applicable legislation. Be sure that support of these appliances is perpendicular to the front facing of the wall or cabinet before you perform the installation.

The floor must be flat and must be capable of supporting the weight of all the appliances when in use. Please see any single product installation manual for required floor support.


### **ELECTRICAL REQUIREMENT**


The installation must comply with all applicable electrical codes. A properly - grounded horizontally - mounted electrical receptacle should be installed.

Place the electrical supply flush with the back wall and within the shaded area shown in the illustrations.

Placement within the opening may require additional cabinet depth.

### **TOP VIEW**





A separate 10 Amp circuit breaker servicing only these appliances is recommended.

### PLUMBING REQUIREMENTS

Bertazzoni Freezer Columns are provided with a water filter assembly which must be mounted outside the unit.

The appliance must be connected only to a potable water supply system.

To connect to water supply system (for appliances equipped with ice maker) a 1/4" waterline with accessible shut-off valve must be supplied.

The solenoid connection on the appliance is 3/4" diameter but is metric threaded (NPT).

The system pressure must be between from 8 PSI to 75 PSI (between 0.5 bar and 5 bar). Different pressures can cause malfunctions or leaks in the water system.

For information on how to purchase the water filter, please see Use and Maintenance Manual.


For detailed installation specifications consult the multiple installation requirements page or each single product installation manual.

### Flush installation




### POSSIBLE COMBINATIONS o

REF24RCPIX(L/R) REF18FCPIX(L/R) REF24RCPR(L/R) REF18FCPR(L/R)




REF24RCPIX(L/R) REF18WCPIX(L/R) REF24RCPR(L/R) REF18FCPR(L/R)



### TOP VIEW b



### FRONT VIEW

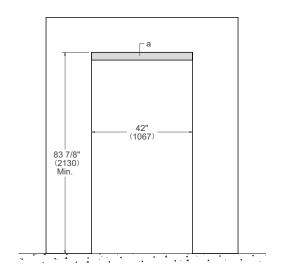

<sup>(</sup>a) Spacers - Included with appliance


<sup>(</sup>b) All Freezer and Wine Columns are supplied with a vertical connector trim for multiple columns installations. No addition accessories are needed

c: Optional 42 inch bridge toe kick accessory is available. For details see page 72


### Flush installation



# REF30RCPIX(L/R) REF18FCPIX(L/R) REF30RCPIX(L/R) REF30RCPIX(L/R) REF18FCPR(L/R) REF30RCPIX(L/R) REF18WCPIX(L/R) REF18WCPR(L/R) REF24RCPIX(L/R) REF24FCPIX(L/R) REF24FCPIX(L/R) REF24FCPIX(L/R) REF24FCPIX(L/R) REF24FCPIX(L/R) REF24RCPIX(L/R) REF24RCPIX(L/R) REF24RCPIX(L/R) REF24RCPIX(L/R) REF24RCPIX(L/R)



### FRONT VIEW

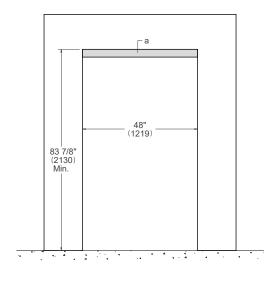

<sup>(</sup>a) Spacers - Included with appliance

<sup>(</sup>b) All Freezer and Wine Columns are supplied with a vertical connector trim for multiple columns installations. No addition accessories are needed


Dimensions in parentheses are millimeters unless otherwise specified. b: depth includes kitchen cabinet front panel.

c: Optional 48 inch bridge toe kick accessory is available. For details see page  $72\,$ 


### Flush installation



### POSSIBLE COMBINATIONS REF30RCPIX(L/R) REF24FCPIX(L/R) REF30RCPR(L/R) REF24FCPR(L/R) REF30RCPIX(L/R) REF18WCPIX(L/R) REF30RCPR(L/R) REF18WCPR(L/R) REF36RCPIX(L/R) REF18FCPIX(L/R) REF36RCPR(L/R) REF18FCPR(L/R) REF36RCPIX(L/R) REF18WCPIX(L/R) REF36RCPR(L/R) REF18WCPR(L/R)

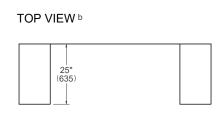



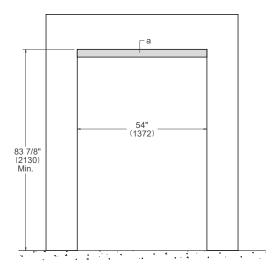


<sup>(</sup>a) Spacers - Included with appliance

<sup>(</sup>b) All Freezer and Wine Columns are supplied with a vertical connector trim for multiple columns installations. No addition accessories are needed


### Flush installation



## POSSIBLE COMBINATIONS REF30RCPIX(L/R) REF30FCPIX(L/R) REF30FCPR(L/R) REF36RCPIX(L/R) REF24WCPIX(L/R) REF24WCPIX(L/R) REF24FCPIX(L/R) REF24FCPIX(L/R) REF24FCPIX(L/R) REF24FCPIX(L/R) REF24FCPIX(L/R)



### FRONT VIEW

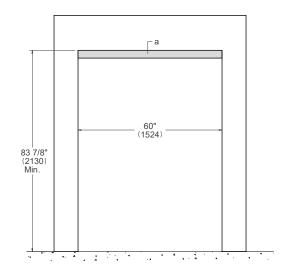

<sup>(</sup>a) Spacers - Included with appliance

<sup>(</sup>b) All Freezer and Wine Columns are supplied with a vertical connector trim for multiple columns installations. No addition accessories are needed


### Flush installation





### POSSIBLE COMBINATIONS


REF24RCPIX(L/R) REF18FCPIX(L/R) REF18WCPIX(L/R)

REF24RCPR(L/R) REF18FCPR(L/R) REF18WCPR(L/R)










### TOP VIEW b



### FRONT VIEW

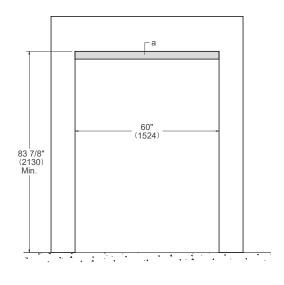

<sup>(</sup>a) Spacers - Included with appliance

<sup>(</sup>b) All Freezer and Wine Columns are supplied with a vertical connector trim for multiple columns installations. No addition accessories are needed


### Flush installation





### POSSIBLE COMBINATIONS


REF30RCPIX(L/R) REF18FCPIX(L/R) REF18WCPIX(L/R)

REF30RCPR(L/R) REF18FCPR(L/R) REF18WCPR(L/R)










### TOP VIEW b



### FRONT VIEW

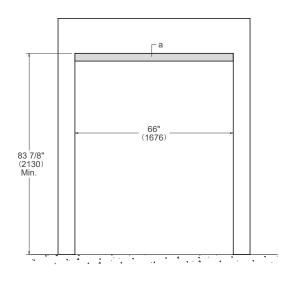

<sup>(</sup>a) Spacers - Included with appliance

<sup>(</sup>b) All Freezer and Wine Columns are supplied with a vertical connector trim for multiple columns installations. No addition accessories are needed

### Flush installation





### POSSIBLE COMBINATIONS


REF24RCPIX(L/R) REF24FCPIX(L/R) REF24WCPIX(L/R)

REF24RCPR(L/R) REF24FCPR(L/R) REF24WCPR(L/R)










### TOP VIEW b



### FRONT VIEW

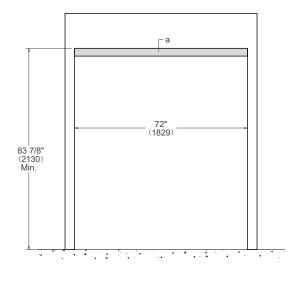

<sup>(</sup>a) Spacers - Included with appliance

<sup>(</sup>b) All Freezer and Wine Columns are supplied with a vertical connector trim for multiple columns installations. No addition accessories are needed

### Flush installation





### POSSIBLE COMBINATIONS b


REF36RCPIX(L/R) REF30FCPIX(L/R) REF24WCPIX(L/R)

REF36RCPR(L/R) REF30FCPR(L/R) REF24WCPR(L/R)










### TOP VIEW b



### FRONT VIEW

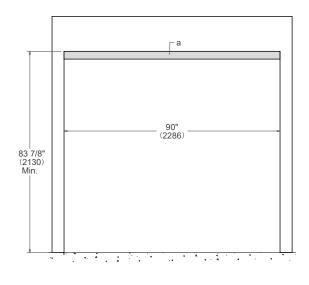

Optional 42 inch bridge toe kick accessory is available. For details see page  $72\,$ 


<sup>(</sup>a) Spacers - Included with appliance

<sup>(</sup>b) All Freezer and Wine Columns are supplied with a vertical connector trim for multiple columns installations. No addition accessories are needed.


### **Custom Door Panel**




**REAR PANEL DRILLING** 

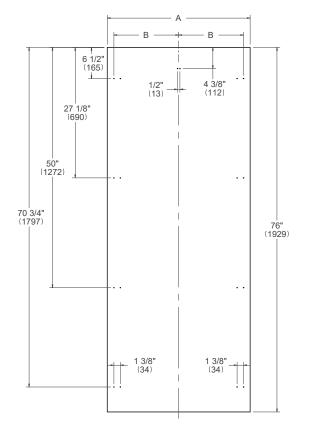

### WINE COLUMN **DOOR WINDOW DIMENSIONS**

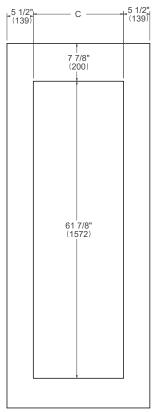

### **CUSTOM HANDLES MOUNTING AREA**

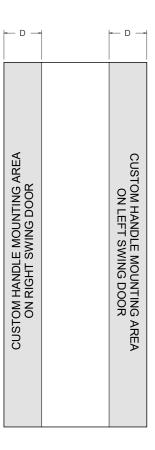


	36"	30"	24"	18"
Α	35 3/4" (908)	29 3/4" (756)	23 3/4" (604)	17 3/4" (451)
В	16 1/2" (418)	13 1/2" (343)	10 7/8" (275)	7 7/8" (200)
С	_	_	12 7/8" (327)	6 7/8" (177)
D	7 1/8" (182)	6" (152)	4 3/4" (121)	3 5/8" (92)


### **Recommended Installations**



### **RECOMMENDED INSTALLATIONS**

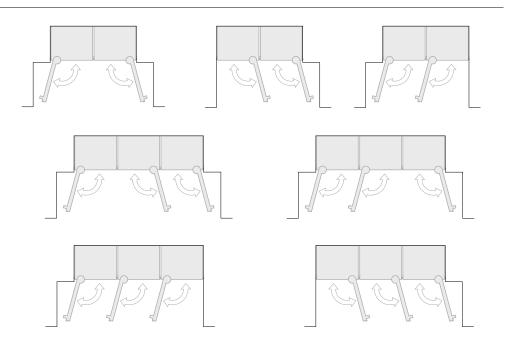


### **NOT RECOMMENDED INSTALLATIONS**

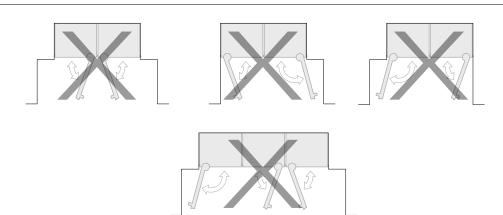

### **Refrigeration Handles**



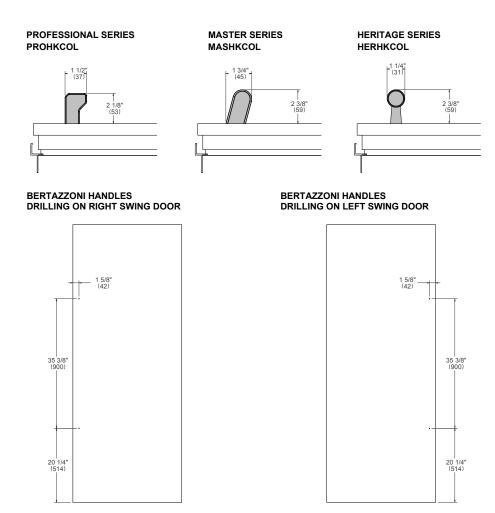

### HANDLE INSTALLATION ON CUSTOM PANELS


In case a custom panel is to be mounted on any of the models listed below with Bertazzoni handles, it will be necessary to install M5 x 0.8 mm brass tapping inserts in order to secure the handle properly on the custom panel.

Recommended drill bit size to drill the pilot hole is 3/8". Suitable inserts can be ordered at www.encompassparts.com Part Number: 95631A100, contains n°4 M5 brass hardwood inserts and 1 M5 installation bit.

Do not use a power tool to mount the inserts. Installation of the inserts with improperly calibrated power tools risk damaging the panels.

### **Toekick Panel**



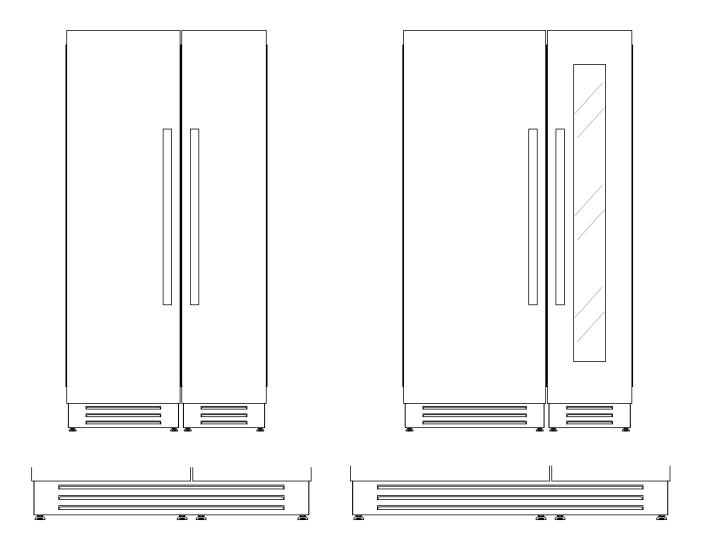

### Part number 901560

Part number 901561

Installation of multiple column units with a continuous cabinet toe kick are possible. Details are provided in the Bertazzoni Columns installation manual



TO COOK BEAUTIFULLY