

CONTENTS

- | | |
|---|--|
| 1 | Orifice, 18,000/20,000 Btu burner, '166' |
| 2 | Screw, #8-32 x 11/2" |
| 1 | Label, high altitude conversion |

⚠ WARNING

This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion or production of carbon monoxide may result causing property damage, personal injury or loss of life. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.


This kit is only valid for models with a serial number 18085871 and higher, installed above 9,900' (3018 m) in altitude.

⚠ CAUTION


Before proceeding with the conversion, shut off the gas supply to the appliance prior to disconnecting the electrical power.

SURFACE BURNERS

- 1 Remove the burner cap, then extract two screws from the 18,000/20,000 (5.3kW/5.9kW) surface burner. Do not attempt to remove the two tamper proof screws from the burner.
- 2 Gently lift the burner, then disconnect the igniter wire. Set burner assembly aside.
- 3 Extract the existing main orifice from the burner and replace with a new '166' orifice. Refer to the illustration below.
- 4 Once the orifice has been installed, reinstall the igniter wire and two screws. Verify the burner is seated properly, then tighten screws to 24 in-lb.

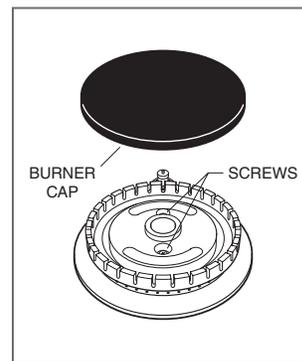

Surface burner.

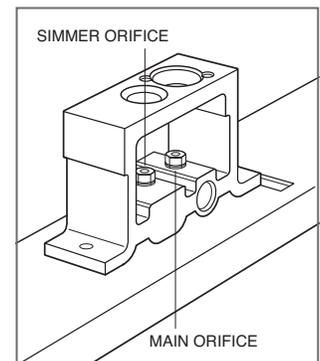

Surface burner orifice.

