ASSEMBLY INSTRUCTIONS FOR

Kona Torchiere

Model # 3499-01

3499-21

3499-01
3499-21
1.0

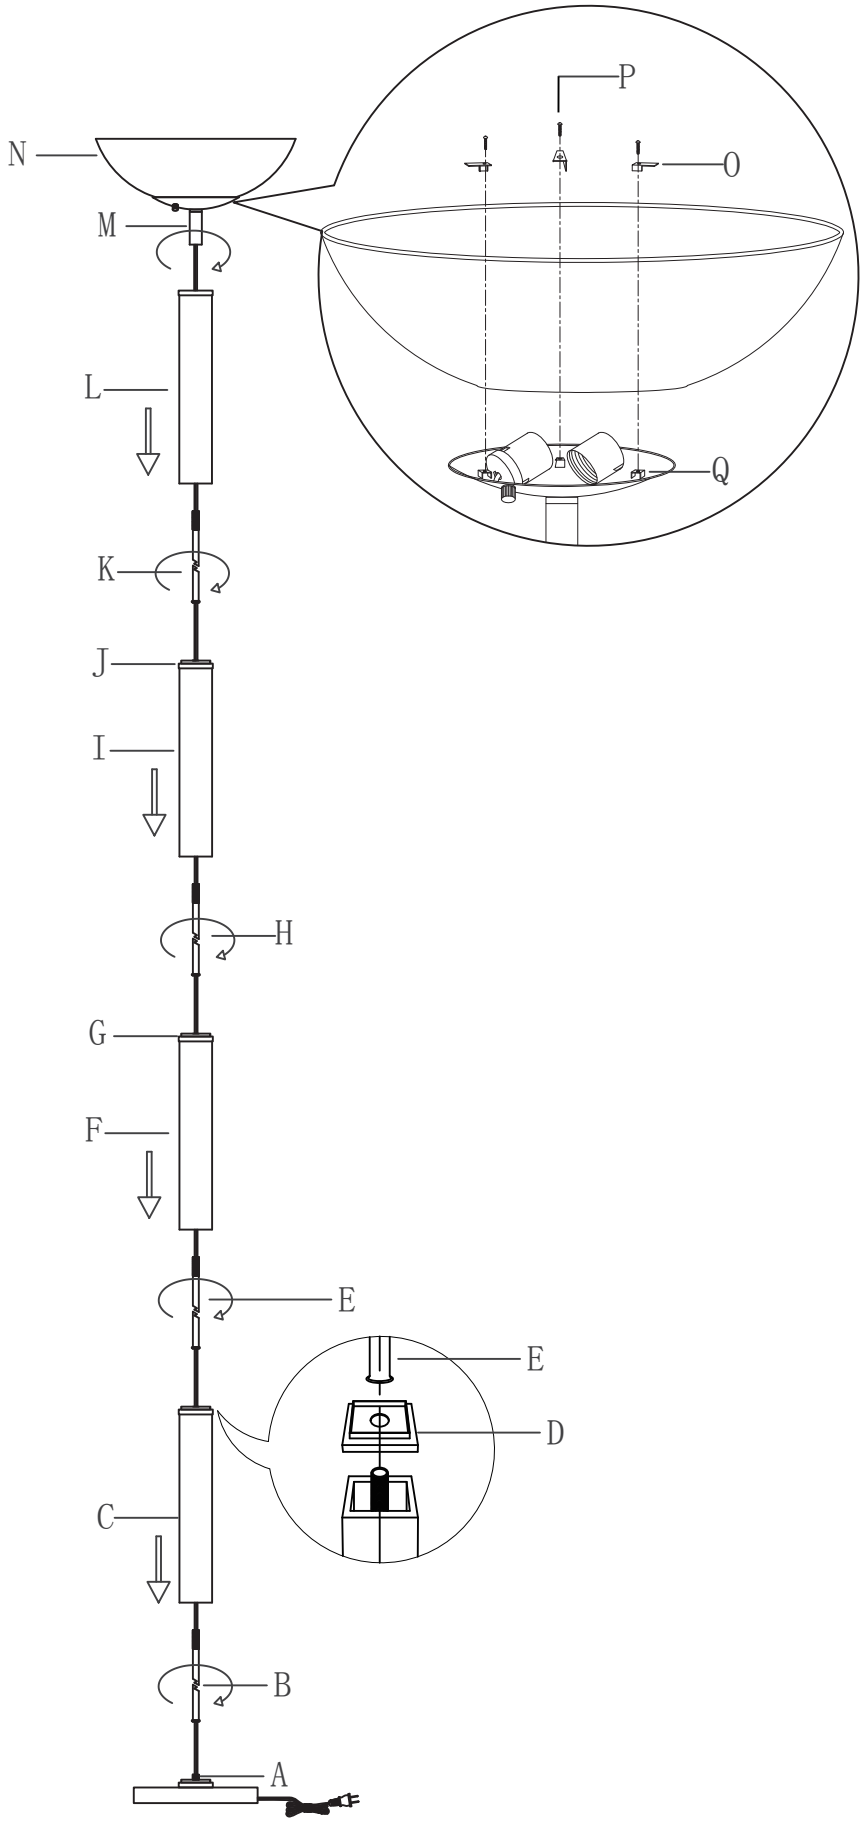

1. Screw pole(B) clockwise onto screw(A) to tighten. Then place wood tube (C) onto the base.

2. Place metal square (D) on top of wood tube(C), then screw pole (E) clockwise onto the top of pole (B) to tighten.

3. Place wood tube (F) onto metal square (D) and then repeat step 2 to assemble the metal square (G) and pole (H).

4. Place wood tube (I) onto metal square (G) and then repeat step 2 to assemble the metal square (J) and pole (K).

5. Screw socket part(M) clockwise onto wood tube (L) to tighten. Then get the remaining slack of the power cord out carefully from the base.

6. Place shade(N) onto the socket plate then place tabs(O) onto the metal part(Q), secure the tabs with screws(P) using a phillips head screwdriver. Do not over tighten the screws, as this could cause the glass shade to break. Repeat this assemble way to screw the other srcews(P) to make sure shade is secure.

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.

Intertek

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: (2) 150 watt incandescent or 42 watt CFL equivalent. (not included)

PARTS DIAGRAM:

(3) Screws (P)
(3) Tabs (O)

ADESSO

353 West 39th Street, 2nd FL, New York, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com