

В


connect the hoses to the Ports of each Arm. Firmly number. Locate the correnote each hose has a each side of chair body and Locate the Air Hoses off

Step 4:

Ocations A, B and C attaches to the chair body; Note the 3 locations each arm

Step 3:



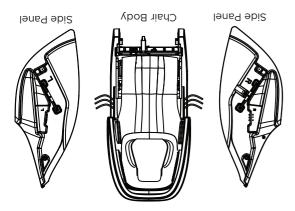

chair. correct side of the place next to the from the right and the left arm panel assembly. Determine on a soft surface for Place the chair body


Step 2:









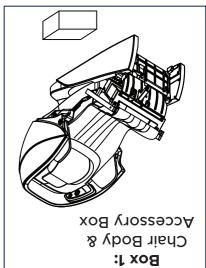

603-910-5000. Do not return to the place of purchase. If anything is missing, please contact INFINITY at


Or Scan Code



accounted tor. below, making sure all contents are Carefully check box contents to the detail



tutorials to watch an assembly video. www.infinitymassagechairs.com/assembly-

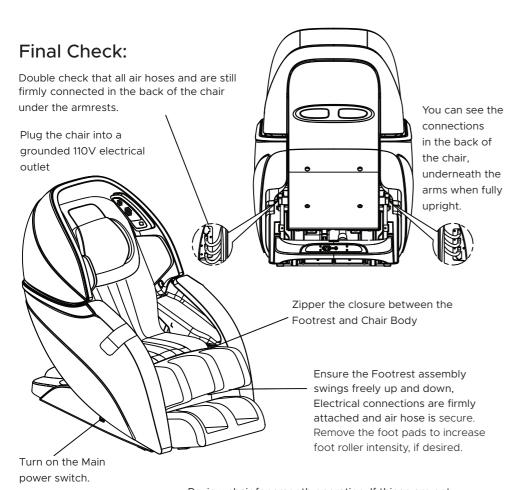

Power on the remote and select AUTO program to start a session.

Review chair for smooth operation. If things are not operating correctly, review all assembly steps. Call Infinity support at 1-603-910-5000 if you need live US-based support.

If you wish to use an APP to control the chair, download from the Apple or Google app store and follow pairing instruction found within the APP.

You are done; time for a Massage!

Go to www.infinitymassagechairs.com/warranty to register your chair and enable full support for your warranty.







INFINITY

Long Bolt

→ M8 x 40


M8 x 24

Washer

Position B

Step 5:


Carefully lift each arm and hook on the rail to support the arm. Make sure the air hoses and electrical wires remain connected and not pinched.

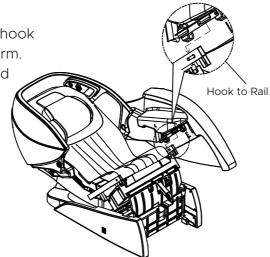

Step 6:

Next locate the Pin in position A on the Arm and secure it under the Pin Retainer on the Chair body in position A from

step 3.

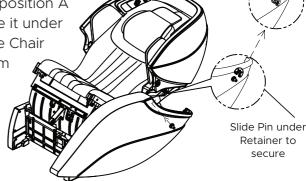

Pin retainer


Step 7:

Locate the long, silver M8 Bolts (2), Washers (2) and hex key tool from the Accessory Box. Fasten this bolt and washer under the Velcro flap just below the shoulder air bag (Position B) until snug;

do not tighten yet.



Locate the shorter, black M8 Bolts (2) and Washers (2) from the Accessory Box. Fasten this bolt and washer in Position C. When secured, tighten both positions C and B on both arms.

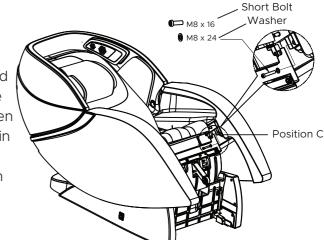

Step 9:

Locate the Power Cord, Remote Control and Remote pouch from the Accessory Box. Attach each to the chair body in locations on the illustration, being careful to line up electrical pins and prongs. The Pouch attaches to the Velcro found under the right arm massage.

electrical source. Locate


Footrest and place on

floor adjacent to chair

body. Attach the 3


electrical connectors


and air hose to air port.

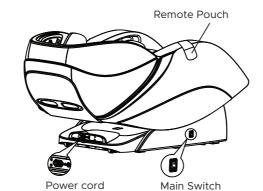



Plug the chair into a grounded electrical outlet. Power on the Main power switch and press the Power button on the remote until the chair uprights out of shipping position. (you may need to press power more than once).

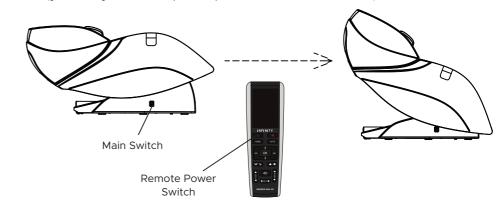


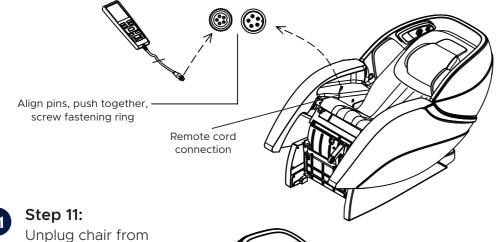


Step 12:


Remove the clips on the Chair Body Pins by sliding up. (If Clips are missing, there are spare clips in the Accessory Box)

Lift the Footrest and position the hinge of on body pin. Carefully align the other side hinge over the pin and center the Footrest. Fasten the clips over the pins to retain both sides of the footrest.

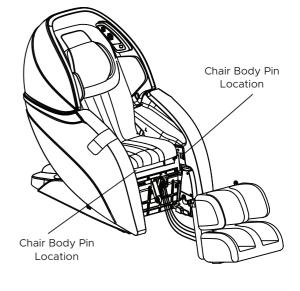

Remove Clips from Body Pins by sliding up




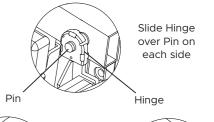



Slide Clips over Pin to Fasten Footrest in place

Air nozzle ◀ ▶ Air hose Footrest drive Footrest drive connector plug connector port Footrest power 4 Footrest power connector port connector plug Footrest air Footrest air valve connector port connector plug



Footrest

(Box 3)

Footrest