



Setup Instructions

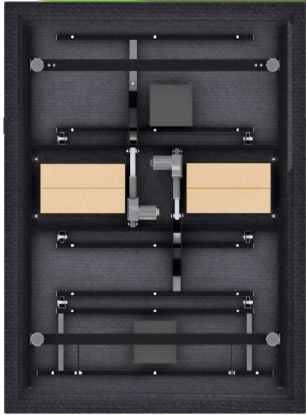


Accessories list

- * Remote control with batteries
- * Power supply and 9V batteries
- * Legs
- * Mattress retainer
- * Velcro & Sync cable (only on TXL and Split CK)

Step 1 Screw the legs

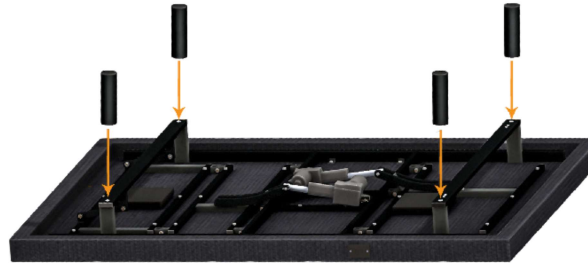


Step 2 Connect power supply with control box and lock it using the clip

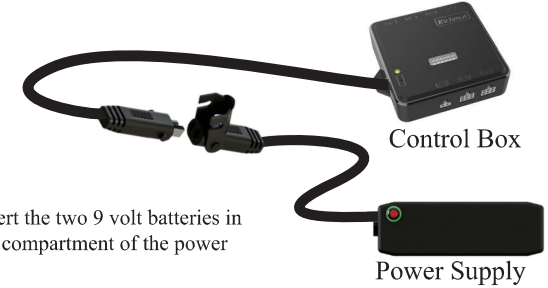

Insert the two 9 volt batteries in the compartment of the power

Step 3 Lift and rotate the bed to its final position (c), holding the metal frame

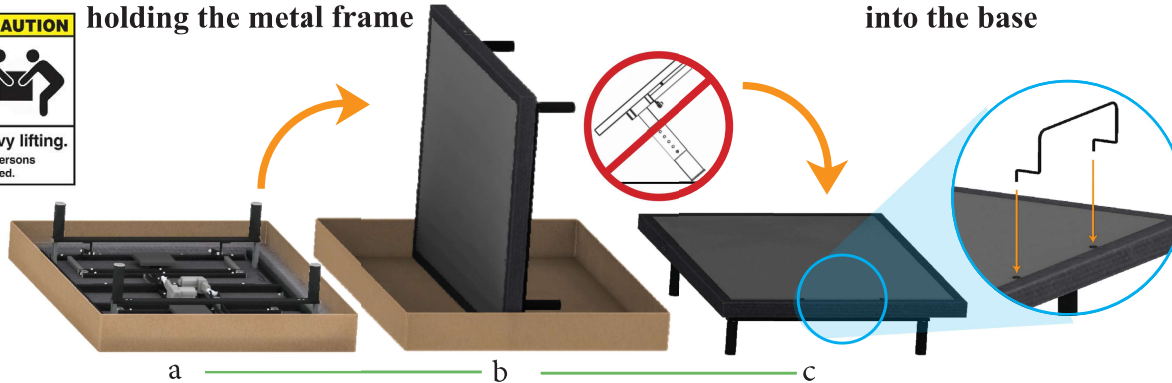

Step 4 Insert the mattress retainer into the base

Step 5 Plug the power cord into a grounded electrical outlet.



Note: For optimal safety, a surge protector should be used (not supplied with this adjustable bed).



Step 6 Remote pairing

Commonly, your remote control will be already paired with your base from the factory, however, if you need to replace your remote or need to re-pair current remote. Please follow these steps (only do one remote to one base).

1. Press and hold pair buttons on remote control. The pair buttons vary depending on the model, pairing buttons for each model are marked with green on the right.

2. While still holding pairing buttons on the remote, press "PAIR" button which is located in the control box or in the control box cable, close to the connection to power supply unit (do not confuse pair button with red button on power supply).


3. When pairing is complete, you will hear a beep, if no beep is heard, repeat steps 6.1 and 6.2 with a firmer press on remote's buttons before pressing "PAIR" (cable) button.

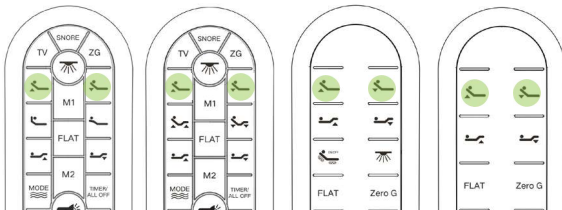

Step 7 Two Base Synchronization (Split Size Only)


Locate the sync cable in the accessories box and control boxes attached underneath the bases. Plug one side of the sync cable into the "Sync Cable" inlet of first control box, repeat procedure with the other side of the sync cable on the second control box.

NOTE: You might receive two sync cables (one with each base), make sure to use and connect only ONE sync cable. Please make sure identify sync cable inlet port correctly, which is labeled as "SYNC" or "F1".

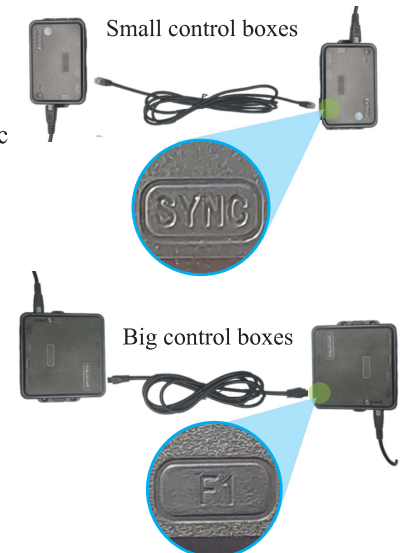


Step 8 Bluetooth App Synchronization.

1. Open the application on your smart device, touch the bluetooth icon, to turn it on (it will turn blue) then touch the search icon select the bluetooth device shown on your screen. Touch outside the bluetooth selection box to exit this screen.

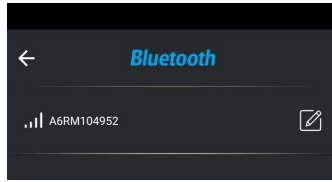


2. Touch the Phone Icon to open the interface screen and touch the white section to edit the interface name (1), then manually enter your code UI according with your model, once entered click "Confirm" (2). Finally touch outside the "Search Interface" box to exit this screen. If your remote includes a QR code on the back or inside the cover of your remote, you can scan it in the QR section.

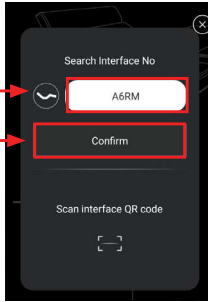

3. Now you can use your phone to control the functions of your bed such as raise the head and/or foot sections, use massage motors, etc. (functions available depend on your base model)

MODEL	#APP UI
S27, S28, S31, S41	A6RM
S32, S42	Y2RM
G72, S45	O1RM
G71, S33, S34, S43, S44	UVRM
S435H	DIRM
S33K	UVRM

Step 9 Headboard Assembly (Optional on most bases)

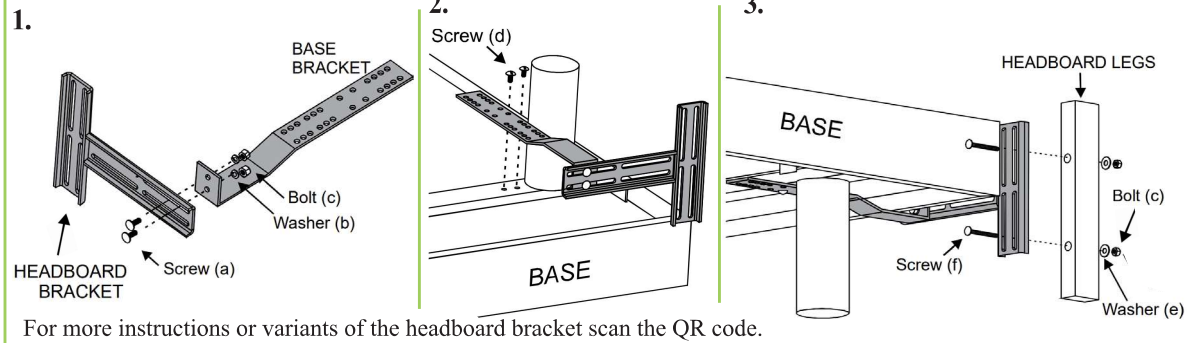

For more instructions or variants of the headboard bracket scan the QR code.



More information

Scan the QR code with your smartphone camera for more detailed base assembly instructions and for the warranty registration of your product or go to:

wsilverproducts.com/w-silver-products-product-registration

Visit our website wsilverproducts.com

Or call Customer Service toll free 888-846-3840



W. Silver Products
9059 Doniphan Dr
Vinton, TX 79821

Safety Information

Electrical Safety

Always unplug this adjustable bed frame from the electrical outlet before any maintenance or cleaning of the frame. To safely disconnect, make sure all of the controls are in the off position, and then remove the plug from the outlet. To prevent fire or shock hazard, do not expose this unit to moisture. Keep the power cord away from heated surfaces. Do not operate this adjustable bed frame and contact the manufacturer for repair if (1) it is not working properly, (2) it has a damaged cord or plug, (3) it has been dropped or damaged or (4) has been dropped into water.

Electrical Grounding

This product is equipped with a grounded electrical power cord. The power cord will only fit into a grounded, electrical surge protection device (not included) or a grounded electrical outlet. The use of adapters is not recommended unless the outlet is checked by a qualified electrician to ensure the proper grounding of the adapter. For optimal safety, your adjustable bed should be plugged into a surge protector.

Electrical Rating

Input—100-240V, 50/60Hz, 1.6A; Output 29VDC, 2.0A

Battery Precautions

Please follow these precautions when using batteries in this adjustable bed frame:

Danger of explosion if the battery is incorrectly replaced. Replace only with the 6LR61 9V batteries and LR03 AAA batteries.

Do not mix different types of batteries together (Alkaline, Rechargeable and Carbon-Zinc) or old batteries with new batteries.

Be sure to follow the correct polarity when installing new batteries as indicated in the battery compartment.

If the adjustable bed is not going to be used for a long period of time, remove the batteries from the battery compartment to prevent damage or injury from possible battery leakage.

In Home Use & Hospital Disclaimer

Your adjustable bed frame is strictly designed for in-home use only. It is NOT designed for hospital or nursing home use and is NOT designed to meet hospital standards. Do not use this bed with TENT TYPE oxygen therapy equipment or near explosive gases. Misuse will void product warranty.

Lubrication and cleaning

Your adjustable bed is designed to be maintenance free. The lift motors are permanently sealed and lubricated, no additional lubrication is required. Do not apply any lubricant to lift motor lead screws or any nylon nuts or the base may inadvertently creep downward from the elevated position.

Warranty Warning

Please do not open any control box, motors or hand controls (with the exception of the battery compartment). The product warranty may be void if any of these components are tampered with. Do not attempt to alter component wiring or adjust or modify the structure of the product in any way or the warranty will be void. Only WSP can authorize any repairs or replacement of parts on your adjustable bed.

Pets and Small Children Warning

Immediately dispose of all packing materials as it may pose a smothering risk to small children and pets. To avoid injury, it is not advised to allow children and small pets to play on or under the bed. Children should not operate your adjustable bed without adult supervision.

Consumers with Pacemakers

Your adjustable bed may be equipped with a massage motor that produces a vibrating motion. It is possible that some pacemakers may

interpret this type of motion as a false sense of movement and/or exercise. This may or may not affect your pacemaker. If you have any concerns, please consult your physician.

Your adjustable bed also contains Neodymium (magnets) which may interfere with devices such as pacemakers, ICD's and any other device sensitive to magnetic fields. It is strongly recommended that owners of such medical devices consult their physician prior to using this product.

Product Ratings

The lift motors in your adjustable bed are NOT designed for continuous use. Reliable operation and full life expectancy will be attained as long as the lift motors do not operate more than 2 minutes over an 18 minute period, or approximately 10% duty cycle. To ensure reliable functionality and full life of your adjustable bed, do not attempt to exceed these limits. Attempting to circumvent or exceed this rating will shorten the life expectancy of your adjustable bed and may void the warranty.

Acoustics

Your adjustable bed may contain the optional massage motor. That will emit a noticeable tone during operation. As the massage intensity level is increased, the volume of the tone will increase. The volume of the tone is directly related to the location of your adjustable bed. As an example, the surrounding environmental noise that might have been present in the showroom where you purchased your adjustable bed could have covered some of the noise from your adjustable bed massage motors. When your adjustable bed was installed in your home you might notice an increase in volume in wood floorings or carpets. In some normal base operations, you might notice some noise coming from the wheels which allow your adjustable bed to maintain its distance from the wall. These wheels will make contact with the steel platform supports of your adjustable bed creating a contact noise when you enter, exit or shift weight while on the bed. This is normal.

FCC Compliance

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; (2) This device must accept any interference received, including interference that may cause undesired operation. To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and void user's authority to operate the device. Radio Frequency is 2.4-2.48 GHz

Weight Restrictions

The structure of your adjustable bed will support the recommended weight when distributed evenly across the bed. The adjustable bed is not designed to support or lift this amount in the head or foot sections alone. You should enter and exit your adjustable bed with the base in the flat (horizontal) position. DO NOT STAND ON THE BASE AT ANY TIME. DO NOT SIT ON THE HEAD OR FOOT WHILE IN THE RAISED POSITION. The recommended weight limits are Twin/TwinXL/Full/FullXL/Split Queen/Queen/Split Cal King/Split King: 850 lbs; Single Piece King 650 lbs. Exceeding this weight restriction could damage the bed and/or cause injury and will void the warranty.

Moving After Installation

Do not place adjustable bed base vertically on its head or foot sections. This may cause injury to persons or damage to the base.

Fabric Cleaning Information

Spot clean only with a water based shampoo or a foam upholstery cleaner. Pretest a small, inconspicuous area before proceeding. Do not over wet or use solvents to spot clean. Hot water extraction or steam cleaning is not a recommended cleaning method. To prevent overall soiling, frequent vacuuming or light brushing with a non-metallic stiff bristle brush to remove dust or grime is recommended.