



Item #: WS5000

Description: Westlake 5PC Counter Set

Product Size Table: 36" x 36" x 36"H

Stool: 21" x 15" x 24"H

Your furniture purchase is an investment. Here are a few tips to maximize the lifetime of your furniture with a minimum amount of effort. Properly caring for your furniture can help ensure that it looks great year after year.

Wood Furniture Maintenance:

- Always dust, wipe, and clean *with* the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- Use the same type of polish consistently as interchanging oil-based and wax-based polishes will cause a build-up and result in a foggy or cloudy appearance.
- If a polished surface becomes foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surfaces. Water can penetrate the finish and raise the grain on wood, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface

The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which results in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

High Gloss Resin Table Maintenance:

- Resin tabletops have approximately 1/8" of a resin coat on the top face of the table, which will resist ice, water, wine, liquor, food, cleaning fluids, and warm or hot liquids; however, cups, glasses, etc. containing hot liquids should not be left on the table without a coaster for protection.
- Resin tabletops will scratch just the same as any other glossy surface and basic precautions should be taken.
- For lasting shine, the resin table should be waxed with a car wax that does not contain silicon. Maintaining this wax build-up will result in a high gloss shine.
- When wiping down the table, a soft, clean rag should be used. Do not use a heavy paper.

Granite Top Maintenance:

The surface of the granite on your table has been polished or sealed to create a generally non-porous surface. The stone has many natural characteristics including: veining, hairline cracks, and color variations - which make up the stone's beauty.

To maintain the beauty of your granite:

- Protect surfaces from scratching, staining and etching by:
 - * Keeping them free of debris or sharp objects
 - * Wiping up spills immediately
 - * Avoiding contact with chemicals (particularly acid-based materials)
- Clean with pH neutral products or those especially formulated for use on stone.
- It is not recommended to use a water-based solvent for dark granite as it will remove the polish from the surface. Absorbed into the stone.
- After a period of use, apply a penetrating sealer to prevent contaminants from being
- Remove stains with special absorbent poultices formulated for use on stone.
- Renew the surface on polished granite (granite with a high gloss surface) by buffing with special stone polish, powder or cream.

Do not use granite polish on granite with a matte finish, which has been honed rather than polished. (Penetrating sealer may be used on both polished and honed granite.)

Marble Top Maintenance:

Marble may be stone, but it is porous stone and can stain easily. Treating marble surfaces the same as wood surfaces is a great rule of thumb.

- It is recommended to seal the tops on a regular basis (every 6 to 12 months).

A good quality stone sealer can be purchased from any tiles / stone store or any homecare store and should be applied according to the manufacturer's recommendation.

- When sealed properly, marble tops can be used indoors and outdoors and can withstand any weather conditions except internal freezing. Snow or freezing rain will penetrate the table and cause cracks.

Caring for the Fabric on Upholstered Furniture:

- Frequent vacuuming of the entire upholstered area will prevent dust from settling into the fibers.
- Professional cleaning is always recommended for all upholstered pieces.
- Always pre-test a small area of fabric in an inconspicuous area when cleaning before proceeding.
- Do not use cleaning products containing brightening agents.

VERY IMPORTANT!!

NEVER
USE GLASS CLEANERS
ON FINISHED SURFACES.
AMMONIA WILL
CHEMICALLY ATTACK
THE FINISH.

DO NOT
WRITE
DIRECTLY
ON
SURFACE



**PREVENT
MARKING**

DO NOT
PLACE
DIRECTLY
IN
SUNLIGHT



**PREVENT
FADING**

DO NOT
USE
PLACEMATS
WITH
RUBBER
BASES



**PREVENT
DISCOLORING**

NEVER
ALLOW LIQUIDS OF ANY
KIND TO LINGER ON
SURFACES. ABSORPTION
CAUSES THE WOOD TO
WARP AND THE FINISH
TO DE-LAMINATE.

DO NOT USE
COMMERCIAL
POLISHES
AND WAXES



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
POTS, ETC.
ON
SURFACE



**PREVENT
DAMAGE TO
FINISH!**

REGULATE
THE
HUMIDITY
CONDITIONS
AT YOUR
HOME



**PREVENT
SPLITTING**

WS5000

ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts and screws until the entire item is completely assembled

STEP 1

Place Table Top (A) upside down on a non-abrasive surface such as carpet (underside of table top should be facing up).

STEP 2

Attach Table Legs (B) to corner of Table Top (A) with Flat washers (4), Spring washers (3) and Bolts (1). Finger tighten all bolts until legs are secure. Do not fully tighten bolts with Open wrench (2) in this step. (see DETAIL A)

DETAIL A

STEP 3


With assistance, carefully turn the table upright. Ensure the table is level and fully tighten all Bolts (1) using Open wrench (2).

NOTE: To ease the tightening of the bolts, fully tighten the bottom bolt first. Finger tighten the top bolt if it is loose and then use the Open wrench (2) to fully tighten the top bolt. Repeat for each leg until all bolts are fully tightened.

WS5000

ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts and screws until the entire item is completely assembled

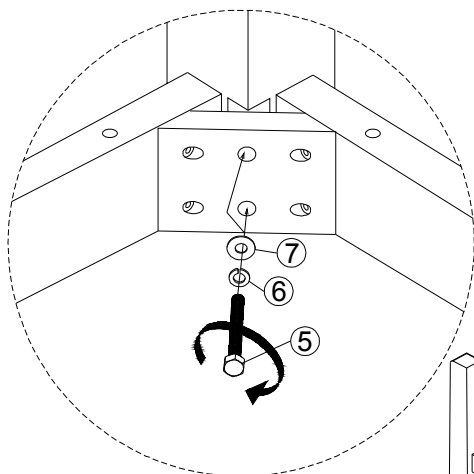

DETAIL A


STEP 1

Place Seat Frame (C) upside down on a non-abrasive surface such as carpet (underside of stool top should be facing up).

STEP 2


Attach Front Legs (D/E) to the apron of Stool (C) with Flat washers (7), Spring washers (6) and

Bolts (5) and Front Stretcher (F) connect with Front Legs (D/E) the same time Finger tighten all bolts until legs are secure. Do not fully tighten bolts with Open wrench (2) in this step. (see DETAIL A)

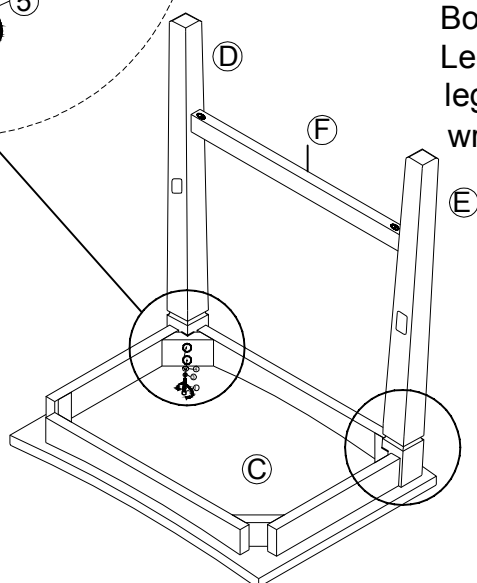


STEP 3

Attach Right Front Legs (E) to the apron of Seat Frame (C) with Flat washers (7), Spring washers (6) and Bolts (5). Connect Side Stretcher (G) with Front Legs (D/E). Finger tighten all bolts until legs are secure. Do not fully tighten bolts with Open wrench (2) in this step. (see DETAIL B)

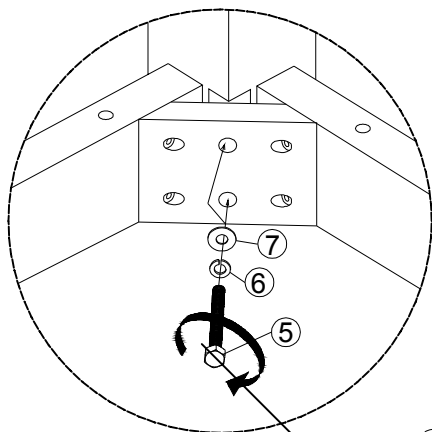


DETAIL B

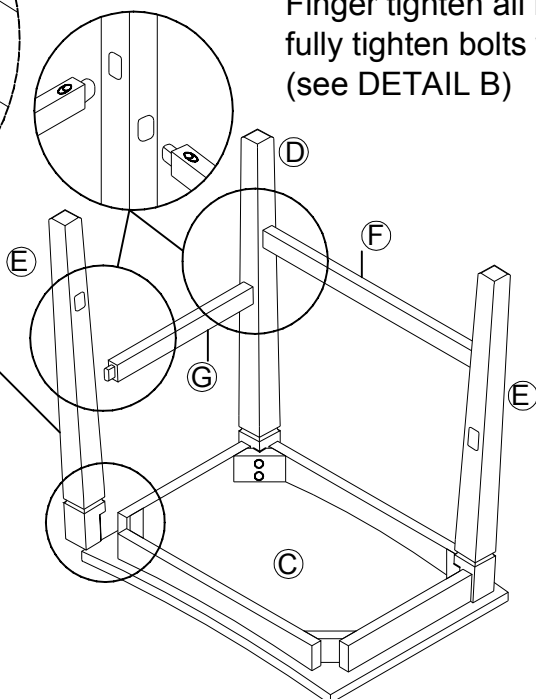


WS5000

ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts and screws until the entire item is completely assembled

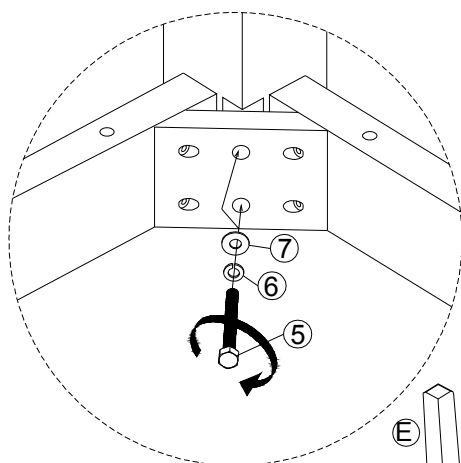


DETAIL C

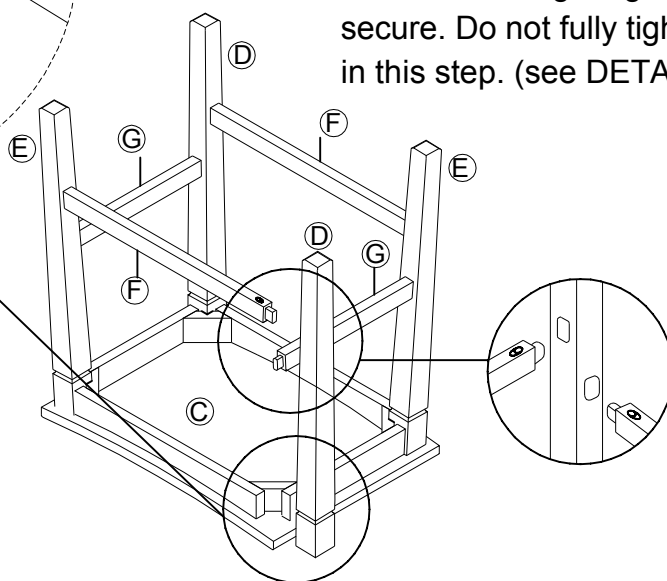

STEP 4

Attach Left Front Legs (D) to the apron of Seat Frame (C) with Flat washers (7), Spring washers (6) and Bolts (5). Attach and hold Side Stretcher(G) Front stretcher (F) connect with Front Legs (D/E) at the same time. Finger tighten all bolts until legs are secure. Do not fully tighten bolts with Openwrench (2) in this step. (see DETAIL C)

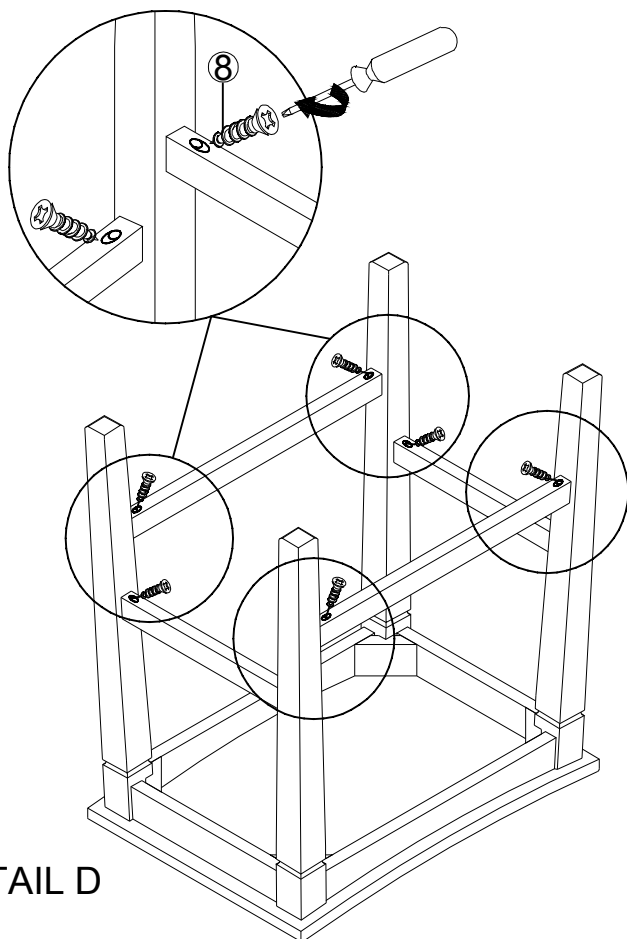

DETAIL D


STEP 5

Insert Wood Screw (8) into the hole both ends of each stretcher and secure with Phillips screwdriver. (see DETAIL D)

WS5000

ASSEMBLY INSTRUCTIONS


Do not fully tighten bolts and screws until the entire item is completely assembled

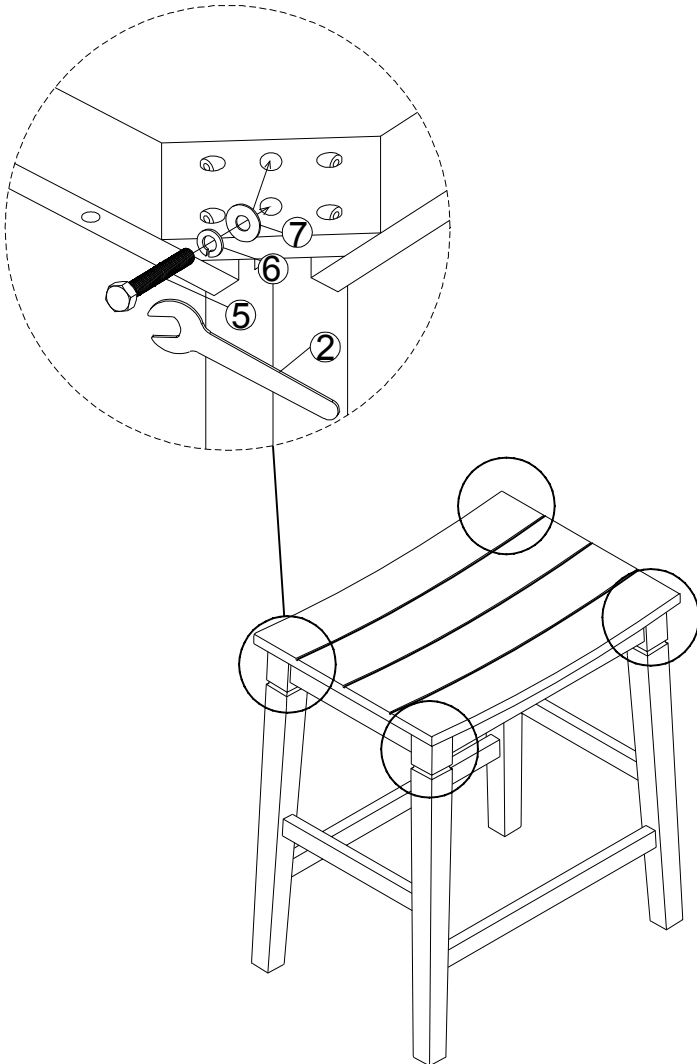

STEP 6

With assistance, carefully turn the table upright. Ensure the stool is level and fully tighten all Bolts (5) using Open wrench (2).








NOTE: To ease the tightening of the bolts, fully tighten the bottom bolt first. Finger tighten the top bolt if it is loose and then use the Open wrench (2) to fully tighten the top bolt. Repeat for each leg until all bolts are fully tightened.

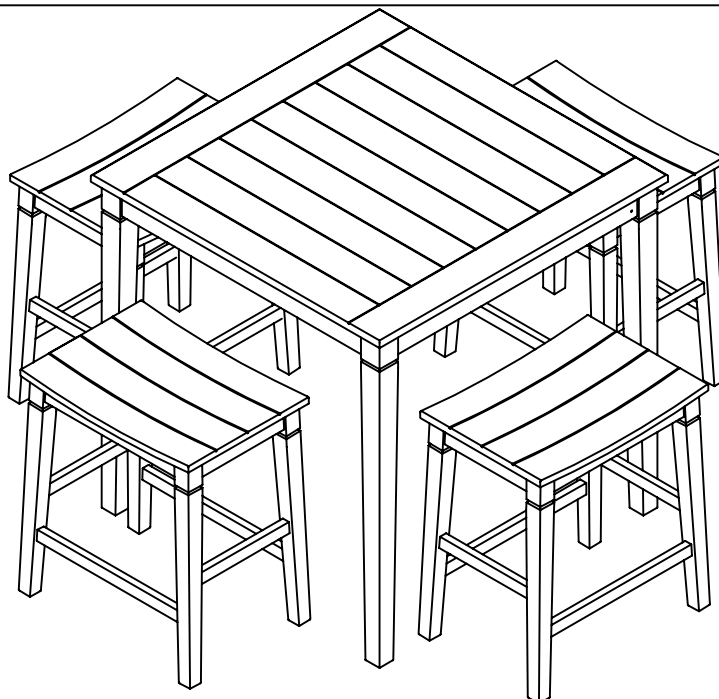



The table is now ready for use

PARTS LIST

Wood Part List

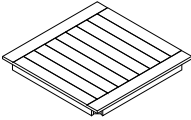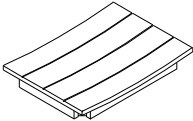
Ⓐ Table Top x 1pc 	Ⓑ Table Leg x 4pcs 
Ⓒ Seat Frame x 1pc 	Ⓓ Left Front Leg x 2pcs 
Ⓔ Right Front Leg x 2pcs 	Ⓕ Front Stretcher x 2pcs 
Ⓖ Side Stretcher x 2pcs 	

HARDWARE PACK#: PWS5000H

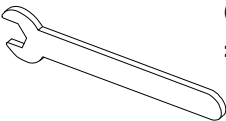①  Bolt x 8pcs Ø5/16" x 2 "	②  Open wrench x 1pc #12mm
③  Spring washer x 8pcs Ø5/16"	④  Flat washer x 8pcs Ø5/16" x 19mm
⑤  Bolt x 8pcs Ø1/4" x 2"	⑥  Spring washer x 8pcs Ø1/4"
⑦  Flat washer x 8pcs Ø1/4" x16mm	⑧  Wood Screw x 8pcs Ø4mmx45mm

PARTS FOR WS5000

COMPLETE HARDWARE#:PWS5000H

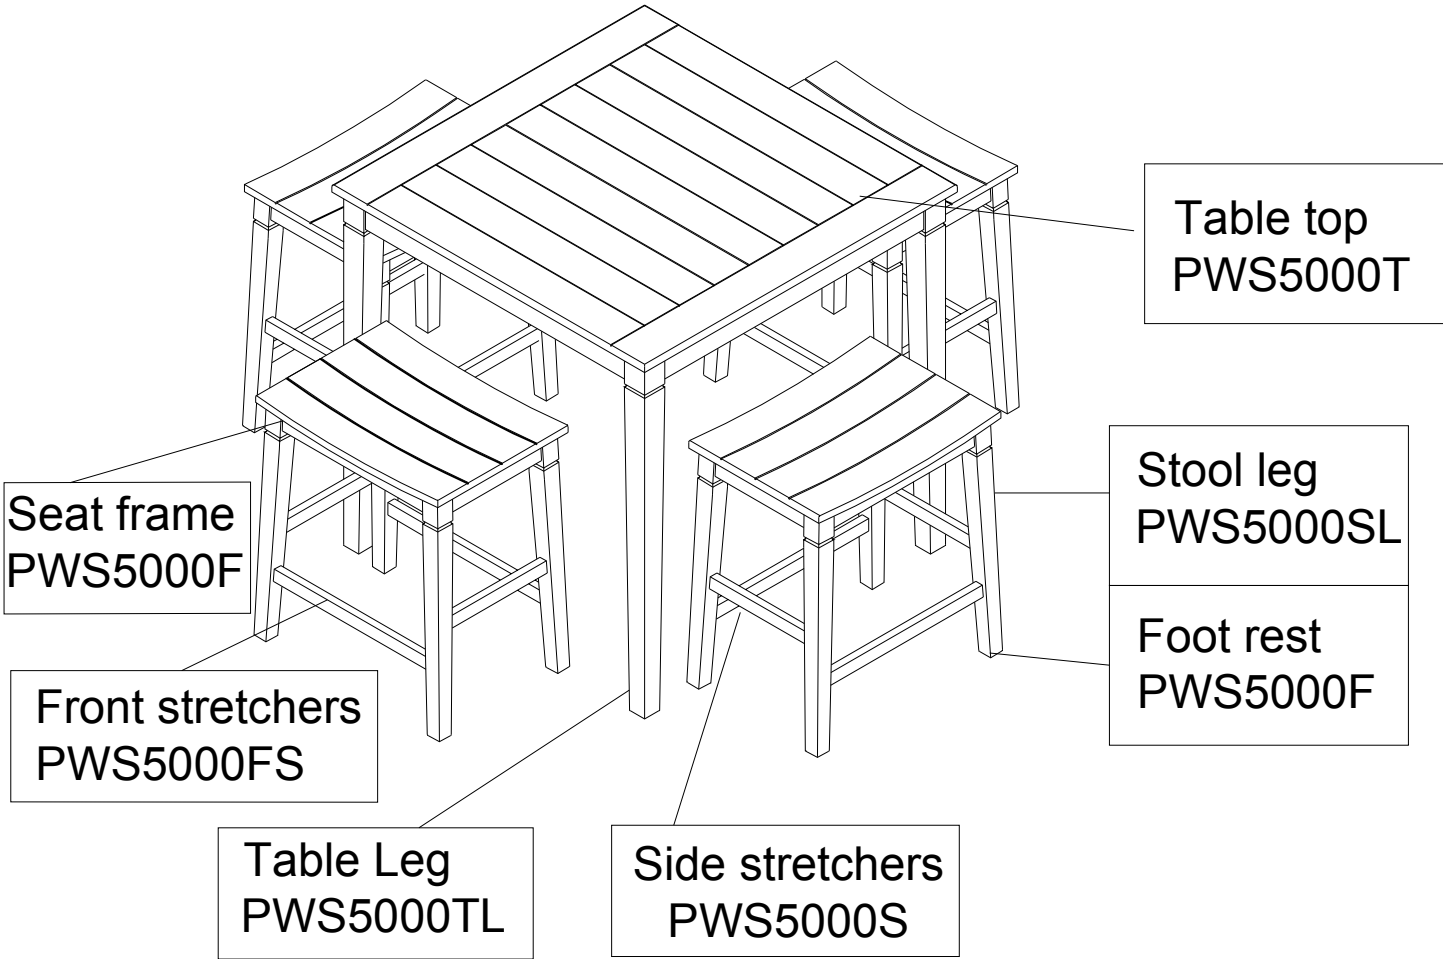

PRODUCT DETAILS	
TOP	MDF & CHINESE ASH VENEER WITH GRAY COLOR
STRETCHER AND LEG	RUBBER WOOD
COLOR OF PRODUCT	WHITE INISHED
PRODUCT SIZE	Table: 36" x 36"x 36 " Stool: 21" x 15"x 24 "
CARTON SIZE	40.5 ''*39.75''*9''
NET WEIGHT	110 LBS
GROSS WEIGHT	123.2LBS
CU.FT.	8.38/5PC

MADE IN VIETNAM