


# LIEBHERR

## Installation Instructions

For NoFrost Combined  
Refrigerator-Freezers

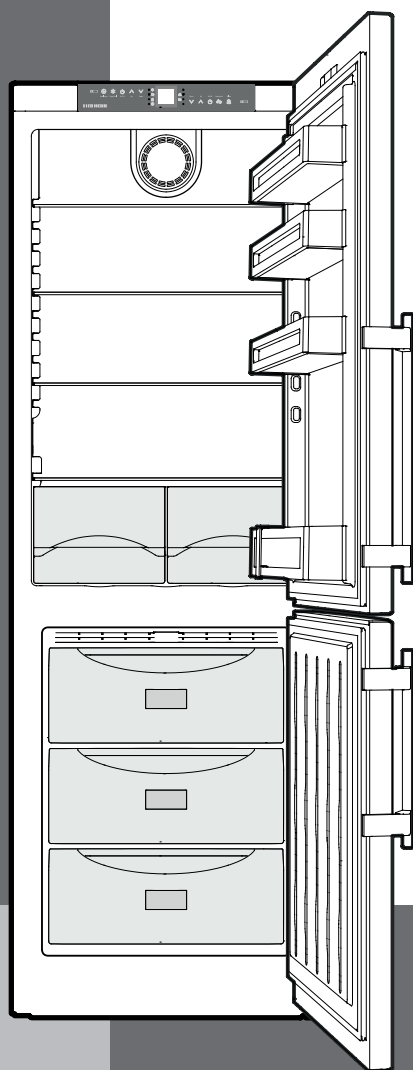

CS 1210  
7085 565-00

# IMPORTANT

## Please Read and Follow these Instructions

These instructions contain Danger, Warning and Caution notes.

This information is important for safe and efficient installation and operation.

Always read and comply with all Danger, Warning and Caution notes!



### DANGER!

**Danger indicates a hazard which will cause serious injury or death if precautions are not followed.**



### WARNING!

**Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.**



### CAUTION!

**Caution indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.**

### IMPORTANT

*This indicates information that is especially relevant to a problem-free installation and operation.*

## Note to the Installer

It is very important to follow the instructions in the manual to ensure proper installation and operation of the unit.

Before installing the unit, be sure to thoroughly read and understand all of the information in this manual.



### WARNING!

**Electrocution hazard.**

**Do not connect to the electrical outlet before the installation is completed.**

## Content

## Page

Please Read and Follow these Instructions.....	2
Note to the Installer.....	2
R600a Refrigerant .....	2
Disposal of Old Appliance .....	3
Disposal of Carton .....	3
Electrical Safety .....	3
Blocking for Safety.....	3
Appliance Dimensions.....	4
Cabinet Opening Dimensions .....	5
Unit Venting.....	6
Leveling the Appliance .....	6
Mounting the anti tipping device .....	7
Changing Over Door Hinges .....	8

## R600a Refrigerant




### WARNING!

**The refrigerant contained within the appliance R600a is environmentally friendly, but flammable. Leaking refrigerant can ignite.**

**To prevent possible ignition follow the warnings below:**

- **Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.** →
- **Do not damage the refrigerant circuit.**
- **Component parts and power cords shall be replaced with like components performed by factory authorized service personnel only.**

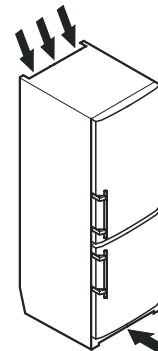

## Disposal of Old Appliance



### DANGER!

#### Risk of child entrapment.

Child entrapment and suffocation are not problems of the past.

Junked or abandoned refrigerators are still dangerous – even if they will sit for “just a few days.”

If you are getting rid of your old refrigerator, please follow these instructions to help prevent accidents.

#### Before you discard old appliances:

- **Take off the doors.**
- **Leave the shelves in place so that children may not easily climb inside.**
- **Cut off the power cable from the discarded refrigerator. Discard separately from the refrigerator.**
- **Be sure to follow your local requirements for disposal of appliances.**

Contact the trash collection agency in your area for additional information.

## Disposal of Carton

The packaging is designed to protect the appliance and individual components during moving and is made of recyclable materials.



### WARNING!

**Keep packaging materials away from children. Polythene sheets and bags can cause suffocation!**

Please recycle packaging material where facilities are available.

## Electrical Safety

Connect this appliance to a 15 amp or 20 amp, 110-120 VAC, circuit which is grounded and protected by a circuit breaker or fuse.

We recommend using a dedicated circuit for this appliance to prevent circuit overload and the chance of interruption to the appliance.

This appliance is equipped with a three-prong (grounding) polarized plug for your protection against possible shock hazards.

Where a two-prong wall receptacle is encountered, contact a qualified electrician and have it replaced with a properly grounded three-prong receptacle in accordance with all local codes and ordinances.

Disconnect power before installing optional Side By Side Kit.




### WARNING!

**Electrocution hazard.**


**Electrical grounding required.**

- **Do not remove the round grounding prong from the plug.** →
- **Do not use extension cords or ungrounded (two prong) adapters.**
- **Do not use a power cord that is frayed or damaged.**

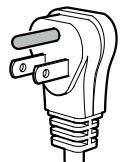

- **Do not use a power strip.** →

**Failure to follow these instructions may result in fire, electrical shock or death.**

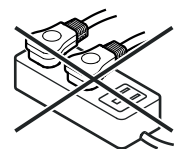

## Blocking for Safety




### WARNING!


**To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.**

# PLANNING INFORMATION

## Appliance Dimensions

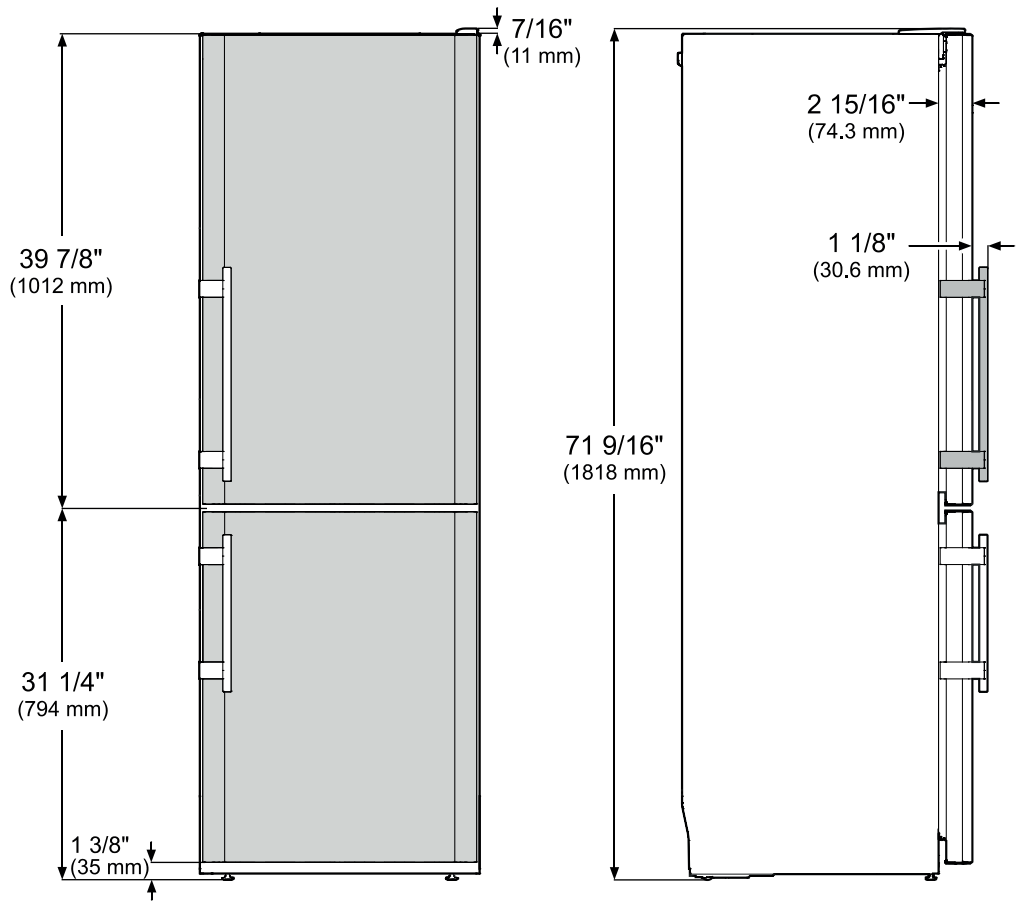


Overall height of the appliance can be increased by a maximum of  $\frac{5}{8}"$  (see Leveling the appliance).

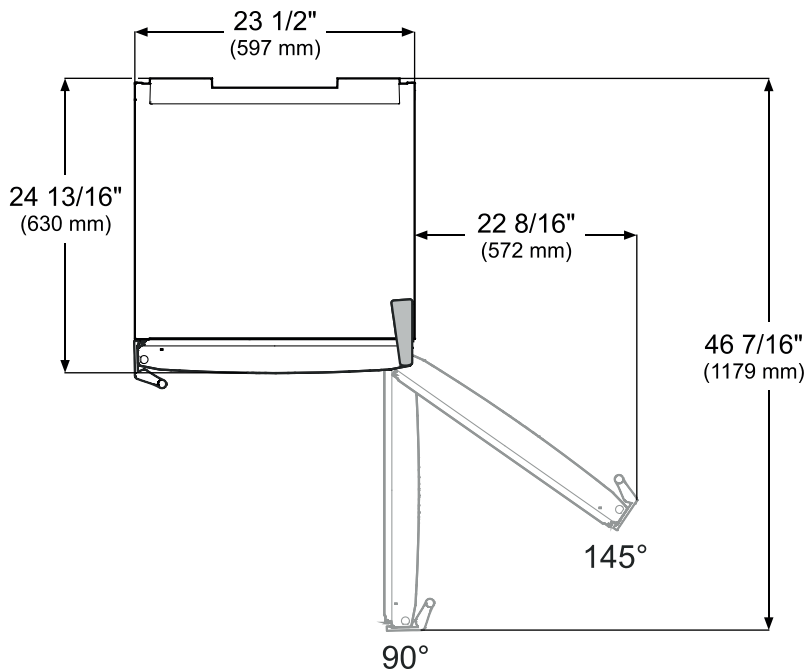

## Cabinet Opening Dimensions

The appliance can be used freestanding or semi built-in.

If semi built-in, please consider the cabinet opening dimensions.

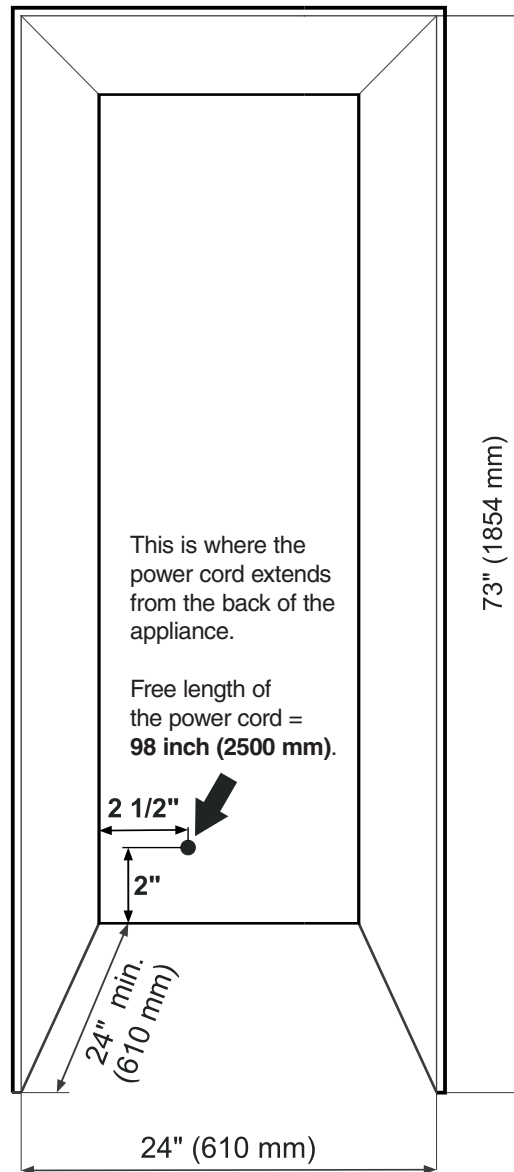

### IMPORTANT

***The power plug must be easily accessible so that the appliance can be disconnected from the mains quickly in an emergency. It must not be behind the back of the appliance.***

*Clearance on the back must be 2 inch (51 mm).*

### NOTE

*If the gap between the rear of the appliance and the wall is less than 2 inch (51 mm), the power consumption level may increase*

# INSTALLATION

## Unit Venting


Do not restrict the air flow.

The ventilation opening can either be directly over the appliance ①, above the cabinet and below the ceiling ② or through a vent installed in a soffit ③.



### IMPORTANT

*The clear ventilation cross-section must be at least 31 in<sup>2</sup> (200 cm<sup>2</sup>) from the lower ventilation opening right to the upper one.*

*The section below the freezer door and the floor must not be covered.*

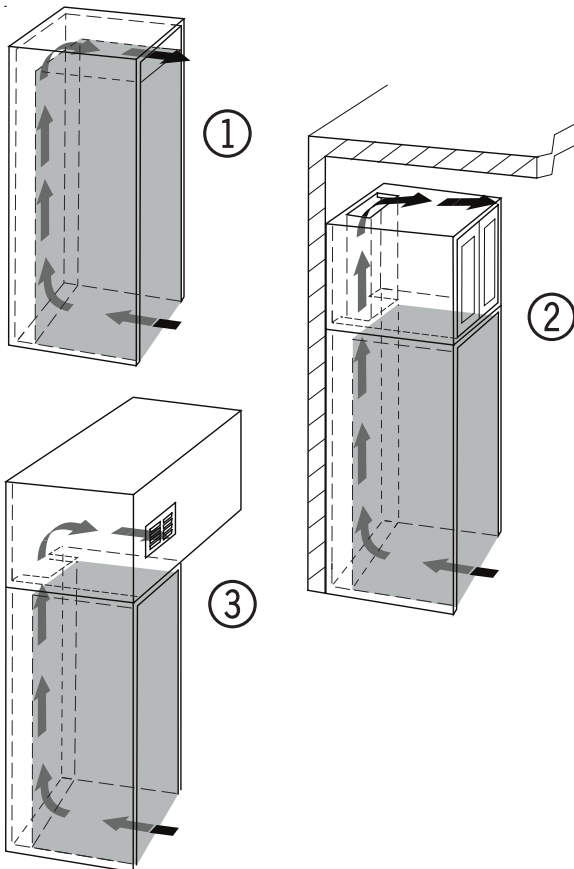

## Leveling the Appliance

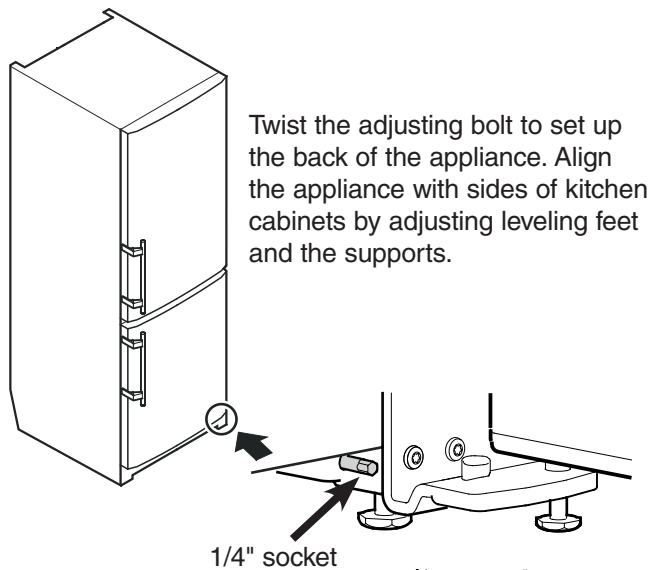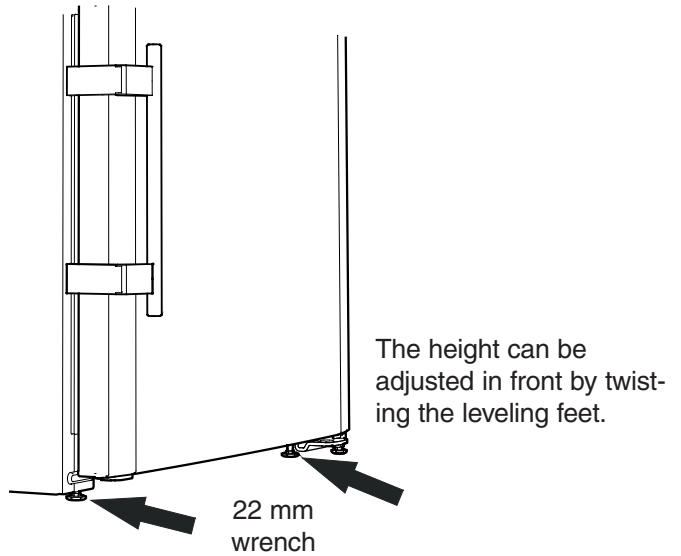

### IMPORTANT

*After final installation, this screw must be turned down until it has proper floor contact to support the hinge bracket.*

## Mounting the anti tipping device

### ⚠ WARNING!


**Tip over hazard!**

The anti tipping bracket must be mounted to prevent the appliance from tipping when the fully stocked door is opened.

#### **IMPORTANT**

*Be sure that there is no plumbing or electrical wiring located in this area which screws or drills could damage.*

1. Mark the center of the appliance on the back wall.
2. Mount the anti tipping bracket.

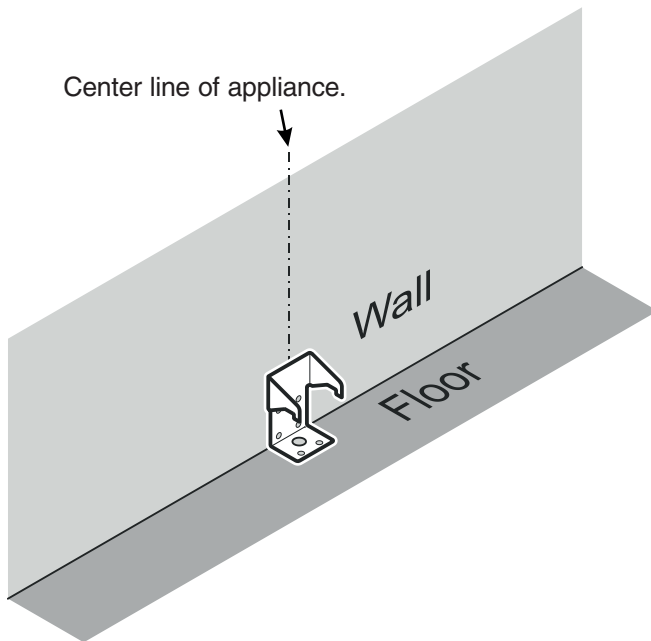

#### **IMPORTANT**


*The screws for fastening the anti-tip device are not supplied with the appliance. Appropriate screws must be used for the material (wood, concrete, etc.) in which the safety device is mounted.*

# REVERSING DOOR HINGES

## Changing Over Door Hinges

Door hinges should only be changed by a trained expert.


Changing over the door hinges requires two people.

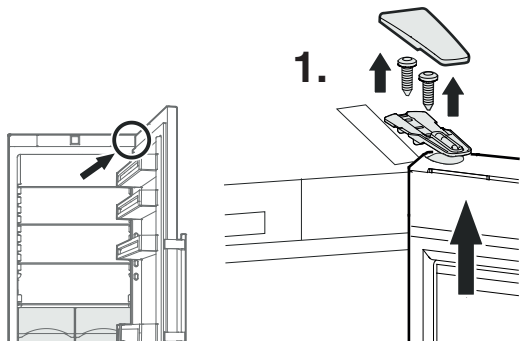

### IMPORTANT

*The door must now be held secure by another person.*


1. Remove cover from upper door mounting and unscrew door.

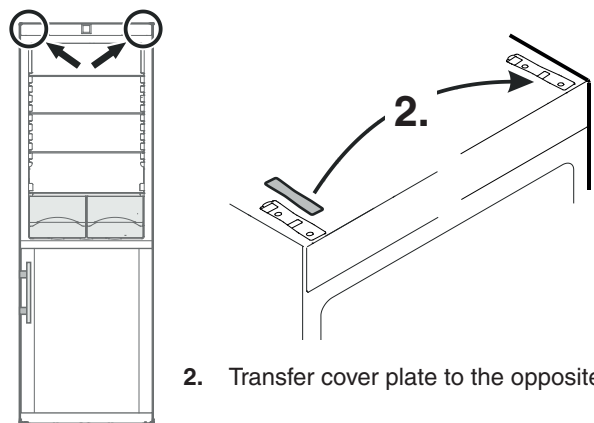



2. Transfer cover plate to the opposite side.

### IMPORTANT



*The door must now be held secure by another person.*

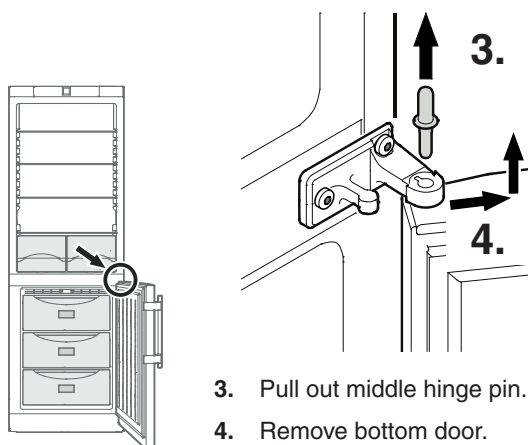



3. Pull out middle hinge pin.
4. Remove bottom door.

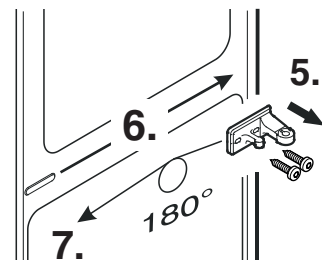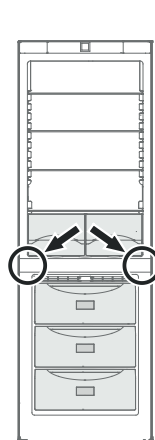

5. Unscrew hinge bracket.
6. Transfer cover plate to the opposite side.
7. Turn hinge bracket through 180° and screw into place.

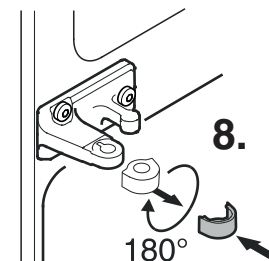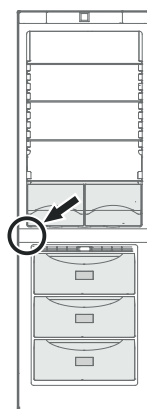

8. Remove hinge bushing, turn through 180° and re-fit.

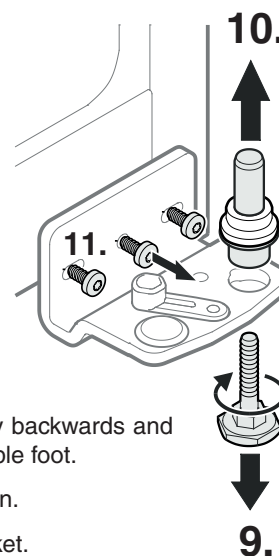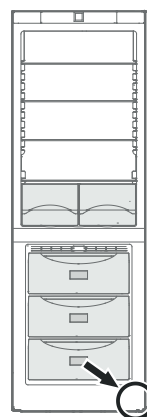


9. Tilt appliance slightly backwards and unscrew the adjustable foot.
10. Remove the hinge pin.
11. Unscrew hinge bracket.






# REVERSING DOOR HINGES



12. Transfer the hinge component on the hinge bracket to the opposite side.

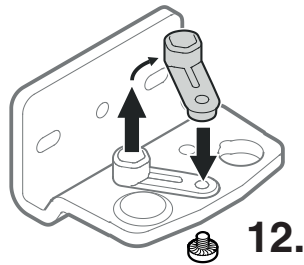

13. Transfer cover to the opposite side.

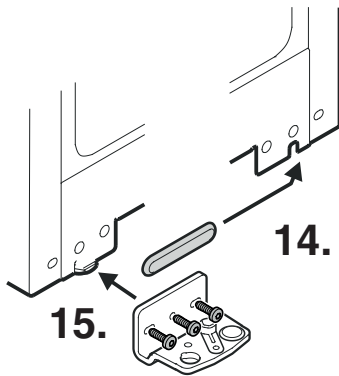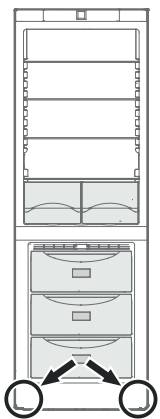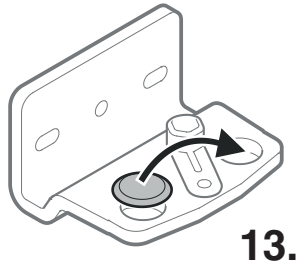

14. Transfer cover plate to the opposite side.  
15. Screw hinge bracket into place.

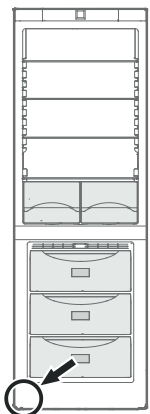
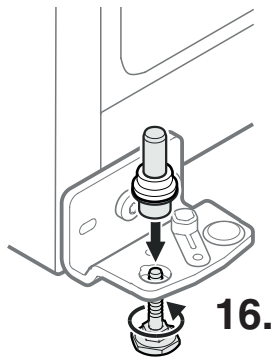


16. Tilt appliance slightly backwards, insert pin and attach using the adjustable foot.

## Both doors



17. Release pressure plates at the front ① and pull them backwards to remove ②.

18. Transfer door handle and plugs to the opposite side.

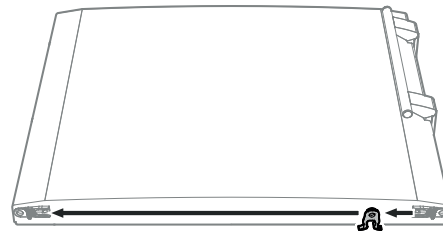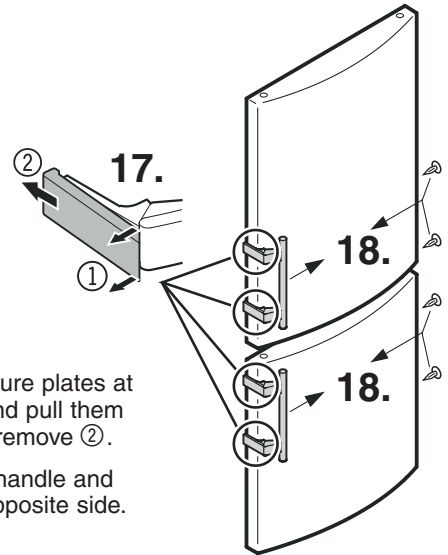

## Both doors



19. Transfer spring clip to the opposite side.

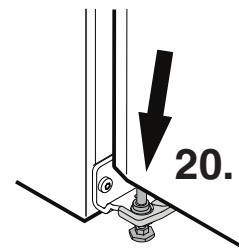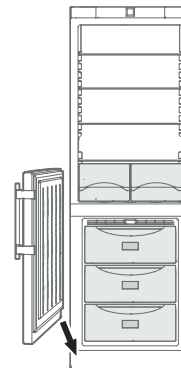

20. Suspend bottom door on hinge pin.

## IMPORTANT

*The door must now be held secure by another person.*

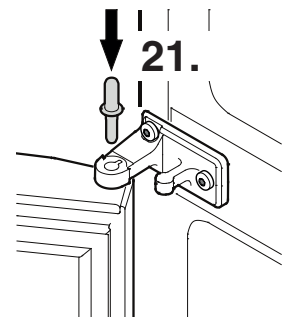
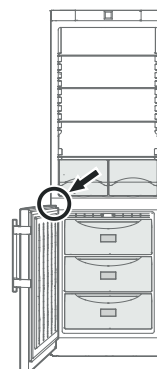


21. Insert middle hinge pin.



# REVERSING DOOR HINGES

## IMPORTANT



*The door must now be held secure by another person.*

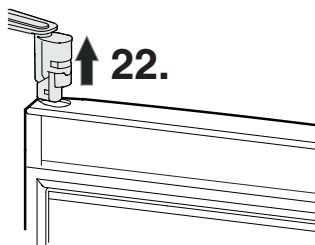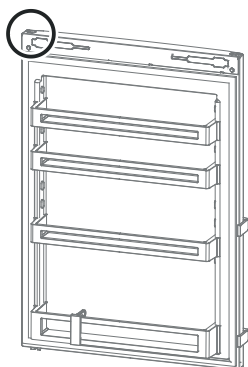



22. Using a screwdriver, push out the hinge and remove it from the door .

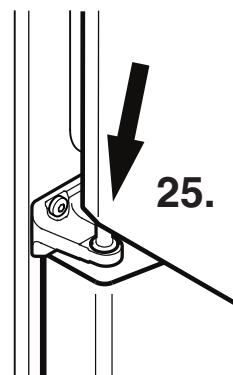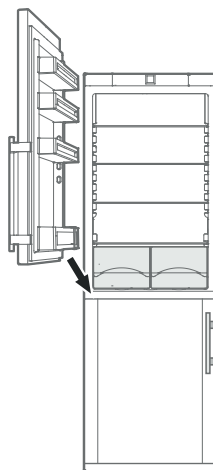



25. Suspend top door on hinge pin. For this, the door must be open at least 90°.

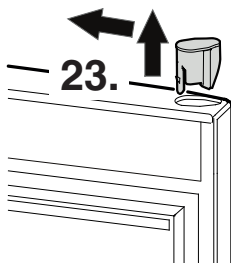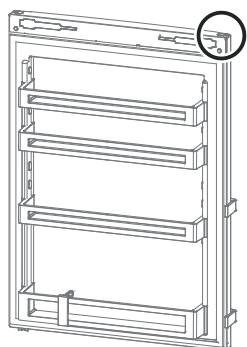


23. Using a screwdriver, push out the plug and transfer it to the opposite side.

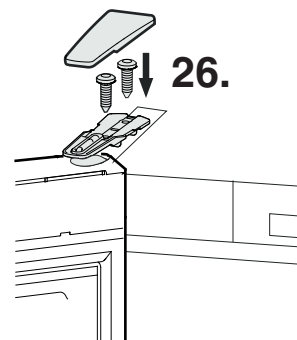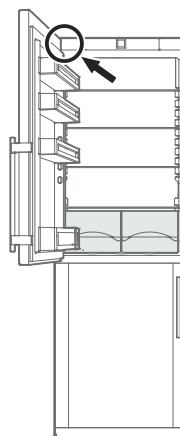

26. Secure door with screws and click cover into place.

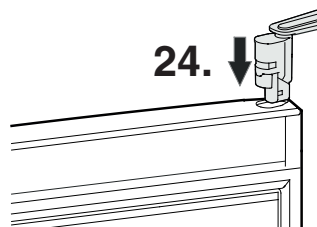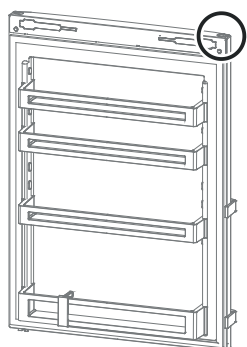

24. Insert hinge.

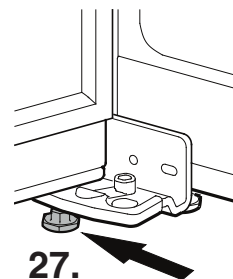

27. Place the appliance in its final position at the place of installation. Extend the adjustable foot at the bottom hinge bracket until it rests on the floor and then make a further 90° turn.

## **For Service in the U.S.**

### **Liebherr Service Center**

Toll Free: **1-866-LIEBHER or 1-866-543-2437**

Email: [Service-appliances.us@liebherr.com](mailto:Service-appliances.us@liebherr.com)

### **PlusOne Solutions, Inc.**

3501 Quadrangle Blvd, Suite 120

Orlando, FL 32817

## **For Service in Canada**

### **Liebherr Service Center**

Toll Free: **1-888-LIEBHER or 1-888-543-2437**

[www.euro-parts.ca](http://www.euro-parts.ca)

### **EURO-PARTS CANADA**

39822 Belgrave Road

Belgrave, Ontario, N0G 1E0

Phone: (519) 357-3320

Fax: (519) 357-1326



[www.liebherr-appliances.com](http://www.liebherr-appliances.com)