



Maytag® Top Load Gas Wrinkle Prevent Dryer - 7.0 cu. ft.

MGD4005SW

Available Finishes/Colours

☐ MGD4005SW
White

Dimensions		Controls	
Depth	28.5	Control Type	Knob & Buttons
Height	43.0	End Of Cycle Signal	Yes
Width	29.0		

Features		Specifications	
Automatic Dry Control	Yes	Top Load Matching	Yes
LP Convertible	Yes	Front Load Matching	No
Pedestal Options	N/A	Product To Product Pairs	MVW4005SW
Stackable	No	Country Of Origin	USA
Lint Filter Indicator	No	Optional Accessories	3406839, 4396028, SWHLDLFF2B, SWHLDLFL2B, W10470674, W11581316
Moisture Sensor	No	Extended Service Plan Parent	EW04IW1Y, EW04IW2Y, EW04IW4Y
Sound Package	No		

Controls	
Feedback Status Indicators	No
Control Location	Rear Console

Wrinkles are no match for this Maytag® top load gas dryer with the automatic Wrinkle Prevent phase that keeps clothes tumbling to help block wrinkles. The spacious 7.0 cu. ft. capacity can handle large loads, and the hamper door drops down to give you a chute for loading and a sturdy platform for unloading, folding and stacking. Plus, count on Maytag Brand with the included 10-year limited parts warranty on the motor and dryer drum.

**Visit maytag.ca for warranty details.

Top Features

Timed Dry

Drum Light

End of cycle signal




Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice. Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.



Dimension Guide

7.0 cu. ft. Dryer


MED4005SW - Electric
YMED4005SW - Electric
MGD4005SW - Gas

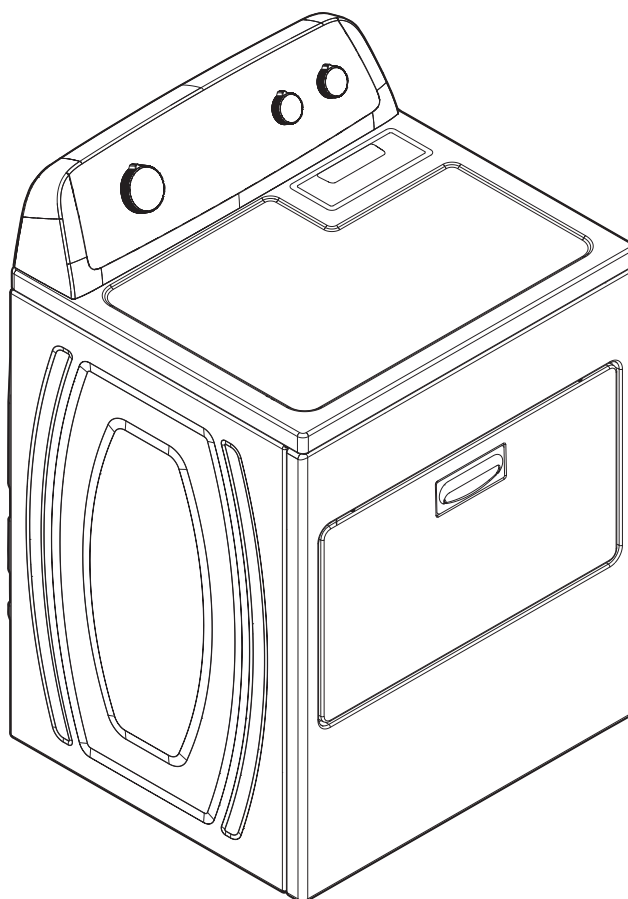

DETAILED PLANNING DIMENSIONS



WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS and INSTALLATION INSTRUCTIONS, located in your appliance's Safety and Installation Instructions, before installing and operating this appliance.

Electrical Requirements		
Fuel Type	Electric	Gas
Minimum Circuit Amperage Rating	30 A	15 A or 20 A
Operating Voltage	240 V - AC only	120 V - AC only
Operating Frequency	60 Hz	

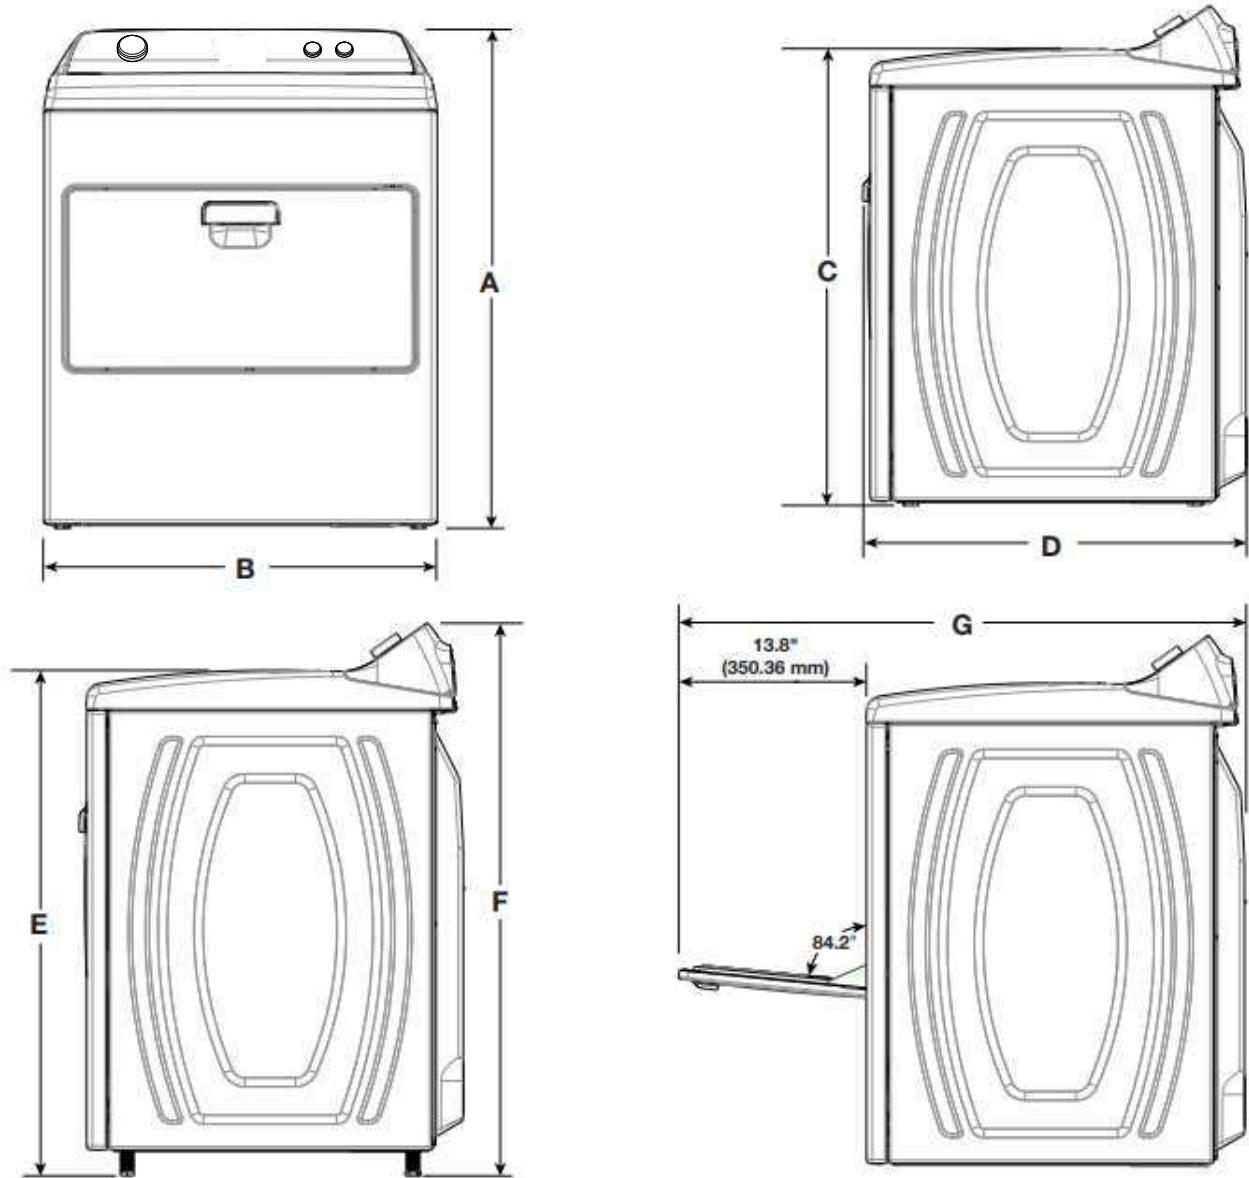

Product Dimensions					
		in (minimum)	mm (minimum)	in (maximum)	mm (maximum)
A	Height (with feet)	42 ⁷ / ₈	1089	44 ¹ / ₂	1130
B	Width	29	737	-	-
C	Top Height (with feet)	35 ¹ / ₂	902	37 ¹ / ₈	943
D	Depth	28 ¹ / ₂	724	-	-
G	Depth with Door Open	41 ³ / ₄	1060	-	-

DETAILED PLANNING DIMENSIONS

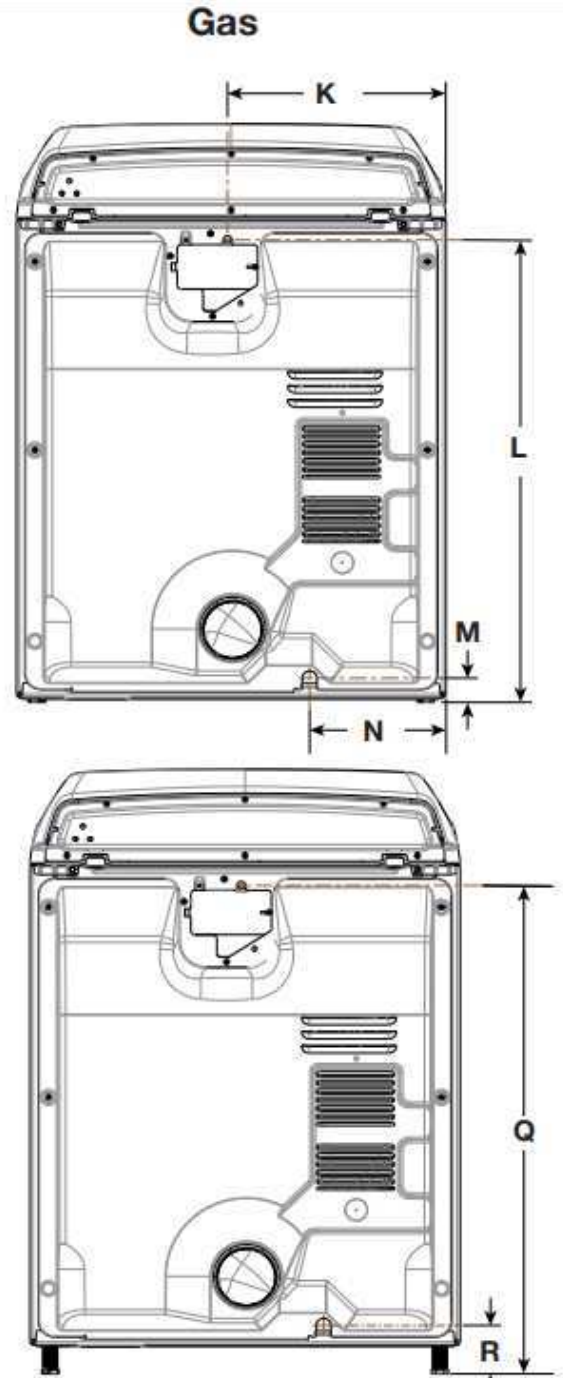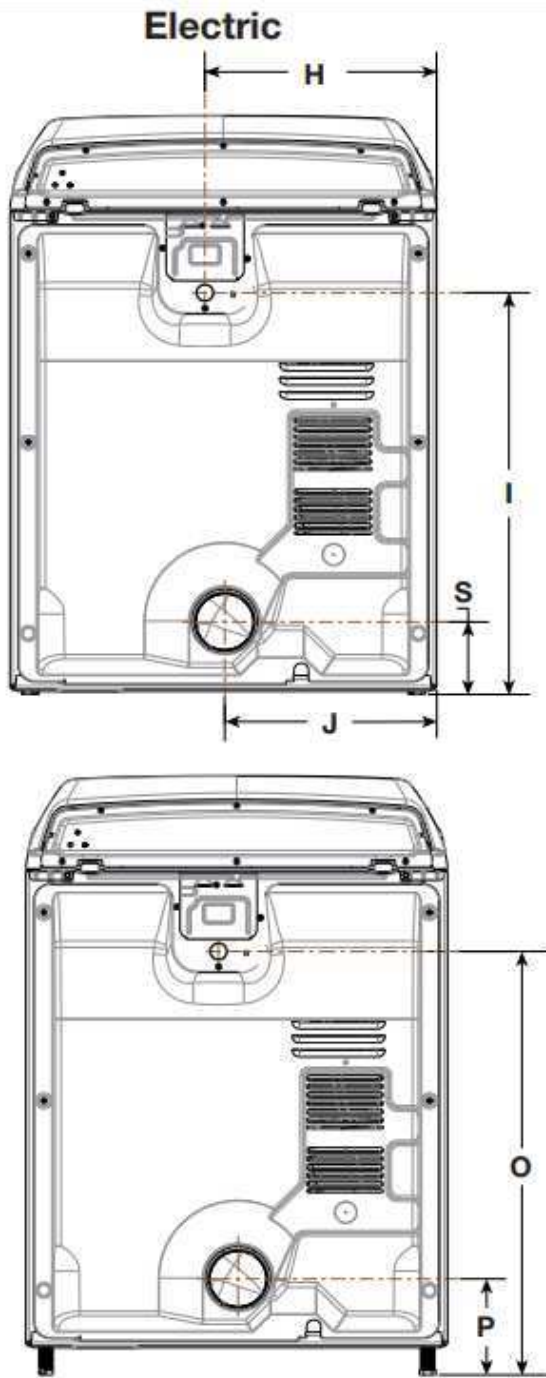


Product Dimensions					
		in (minimum)	mm (minimum)	in (maximum)	mm (maximum)
H	Strain Relief from Side (electric)	15 ³ / ₄	400	-	-
I	Strain Relief Height (electric)	28 ¹ / ₈	714	29 ³ / ₄	756
J	Exhaust Duct from Side	14 ¹ / ₂	368	-	-
K	Power Cord from Side (gas)	14 ³ / ₄	375	-	-
L	Power Cord Height (gas)	32 ³ / ₈	822	34	864
M	Gas Connection	1 ³ / ₄	44	3 ³ / ₈	86
N	Gas Connection from Side	9 ¹ / ₄	235	-	-
S	Exhaust Duct Height	5 ⁵ / ₈	130	6 ³ / ₄	171
	Gas Power Cord Length	60 ¹ / ₈	1527	61 ³ / ₄	1568

DETAILED PLANNING DIMENSIONS

Spacing for recessed area or closet installation

The dimensions shown are for the recommended spacing allowed.

- Additional spacing should be considered for ease of installation and servicing.
- Additional clearances might be required for wall, door, and floor moldings.
- Additional spacing of 1" (25 mm) on all sides of the dryer is recommended to reduce noise transfer.
- For closet installation, with a door, minimum ventilation openings in the top and bottom of the door are required. Louvered doors with equivalent ventilations openings are acceptable.
- Companion appliance spacing should also be considered.

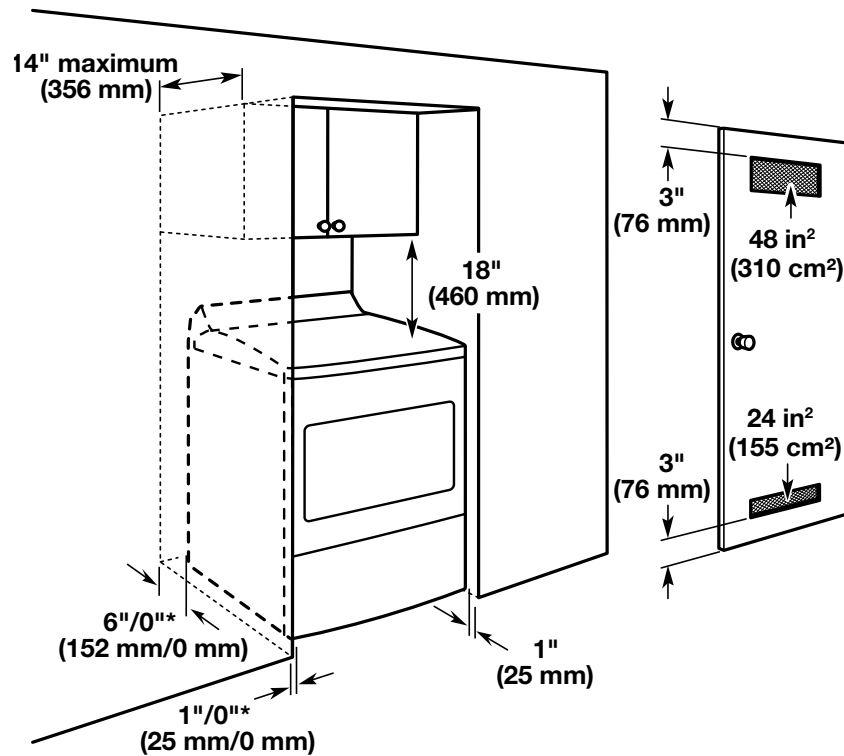

*Recommended/Minimum spacing




Guide de Dimensions

Sécheuse de 7,0 pi³

MED4005SW – Électrique

YMED4005SW – Électrique


MGD4005SW – Gaz

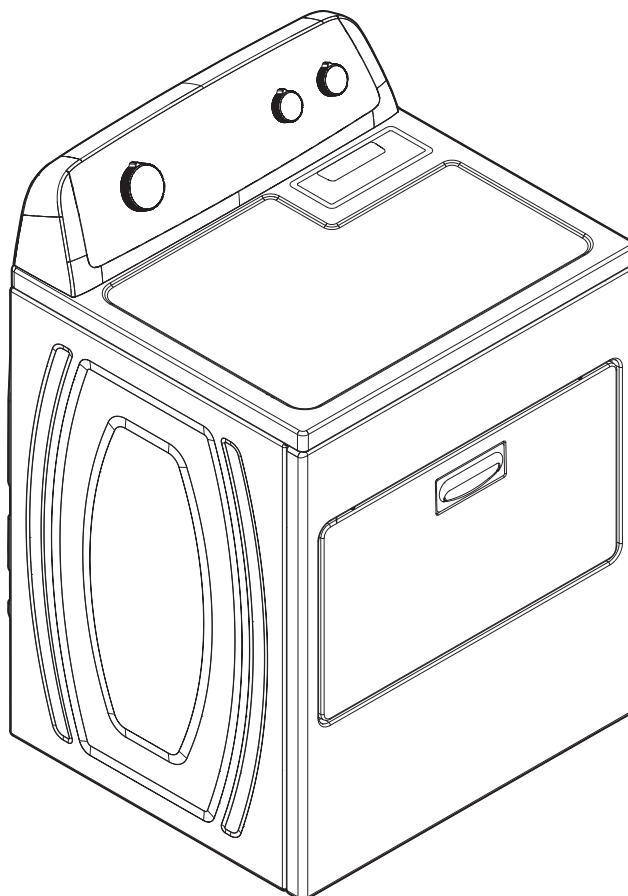

DIMENSIONS DE PLANIFICATION DÉTAILLÉES

AVERTISSEMENT : Pour réduire le risque d'incendie, de décharge électrique ou de blessures, lire les INSTRUCTIONS IMPORTANTES DE SÉCURITÉ et INSTRUCTIONS D'INSTALLATION du guide d'instruction de sécurité et d'installation de votre appareil avant d'installer et de faire fonctionner cet appareil.



Spécifications électriques		
Type de combustible	Électrique	Gaz
Courant minimum du circuit	30 A	15 A ou 20 A
Tension de fonctionnement	240 V CA seulement	120 V CA seulement
Fréquence de fonctionnement	60 Hz	

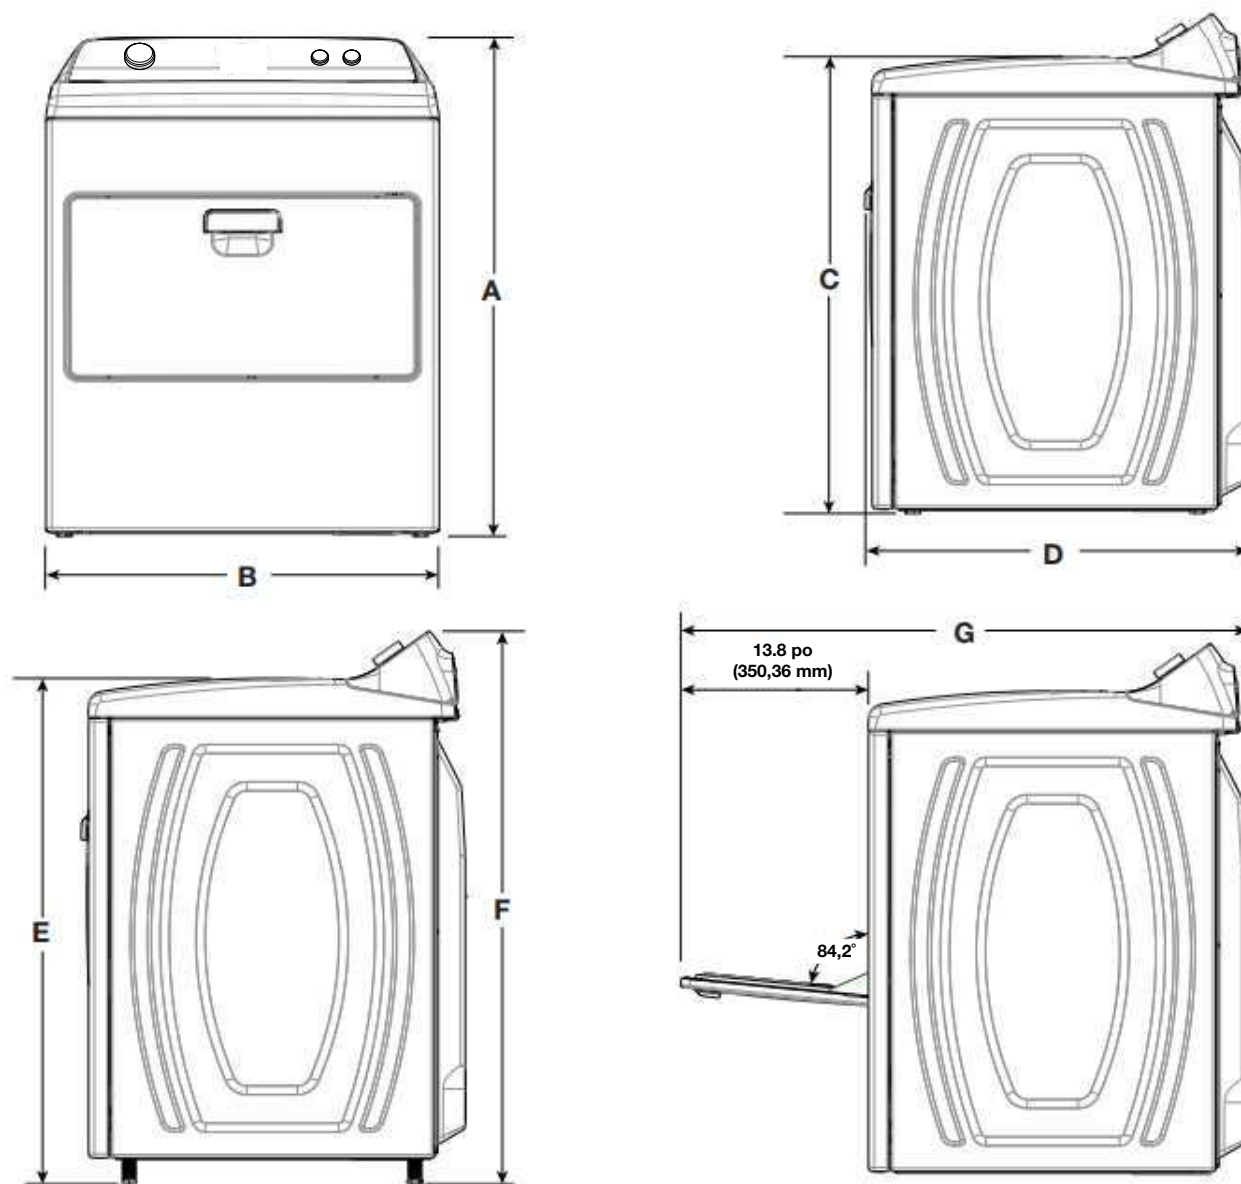



Dimensions du produit					
		po (minimum)	mm (minimum)	po (maximum)	mm (maximum)
A	Hauteur (avec pieds)	42 ⁷ / ₈	1089	44 ¹ / ₂	1130
B	Largeur	29	737	-	-
C	Hauteur à partir du haut du couvercle (en pieds)	35 ¹ / ₂	902	37 ¹ / ₈	943
D	Profondeur	28 ¹ / ₂	724	-	-
G	Profondeur avec porte ouverte	41 ³ / ₄	1060	-	-

DIMENSIONS DE PLANIFICATION DÉTAILLÉES

Électrique

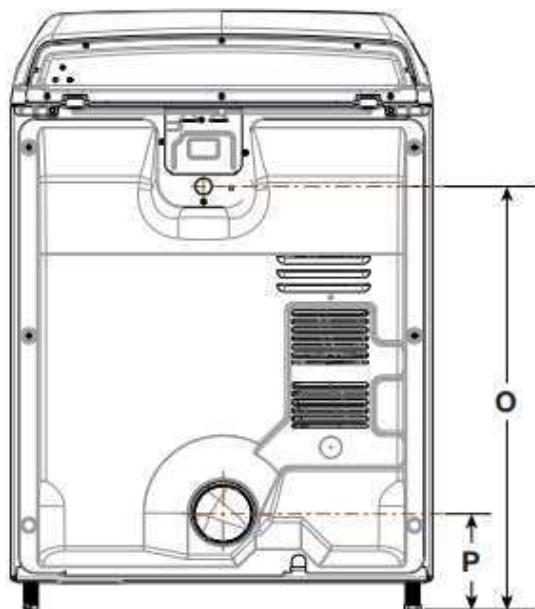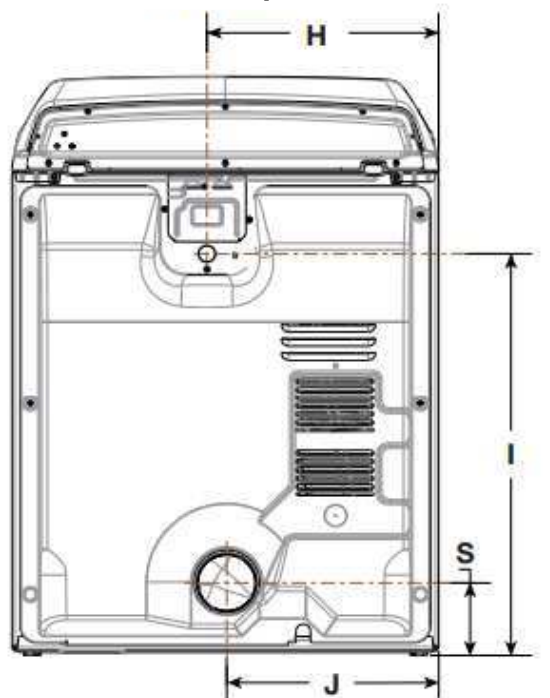

Gaz

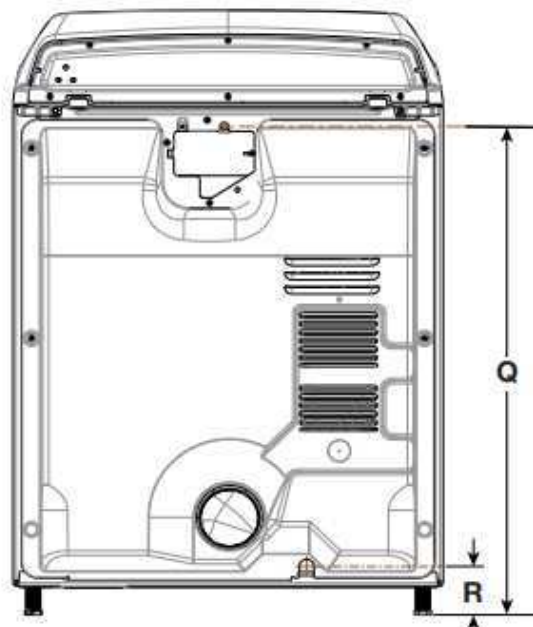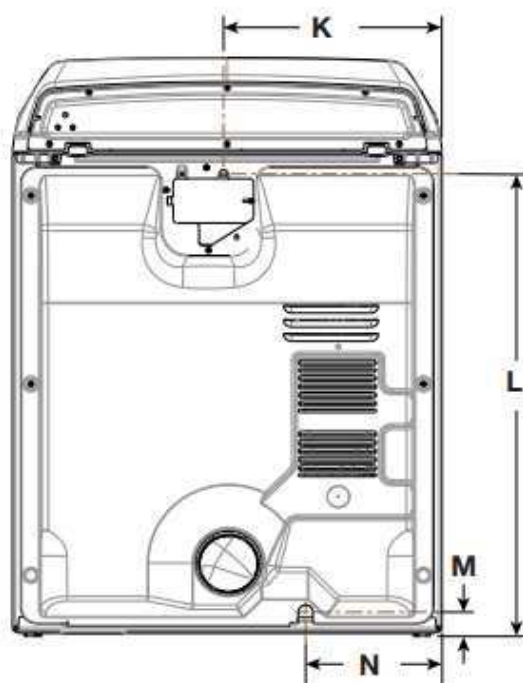

Dimensions du produit


		po (minimum)	mm (minimum)	po (maximum)	mm (maximum)
H	Réducteur de tension de côté (électrique)	15 ¾	400	-	-
I	Hauteur du réducteur de tension (électrique)	28 ⅞	714	29 ¾	756
J	Conduit d'évacuation de côté	14 ½	368	-	-
K	Cordon d'alimentation de côté (gaz)	14 ¾	375	-	-
L	Hauteur du cordon d'alimentation (gaz)	32 ⅞	822	34	864
M	Raccordements au gaz	1 ¾	44	3 ⅞	86
N	Raccordement au gaz de côté	9 ¼	235	-	-
S	Hauteur du conduit d'évacuation	5 ⅞	130	6 ¾	171
	Longueur du cordon d'alimentation pour le gaz	60 ⅞	1527	61 ¾	1568

DIMENSIONS DE PLANIFICATION DÉTAILLÉES

Espacement pour une installation dans un encastrement ou dans un placard

Les dimensions indiquées correspondent à l'espacement recommandé permis.

- Prévoir davantage d'espace pour faciliter l'installation et l'entretien.
- Un espace supplémentaire peut être requis pour les moulures de porte et de plancher et pour les plinthes.
- Un espace supplémentaire de 1 po (25 mm) de tous les côtés de la sècheuse est recommandé pour réduire le transfert du bruit.
- Pour installation dans un placard avec porte, on doit prévoir des ouvertures minimums d'entrée d'air en haut et en bas de la porte. Les portes à claire-voie offrant des ouvertures équivalentes de passage de l'air sont acceptables.
- Il faut aussi prendre en compte l'espace requis entre les appareils voisins.

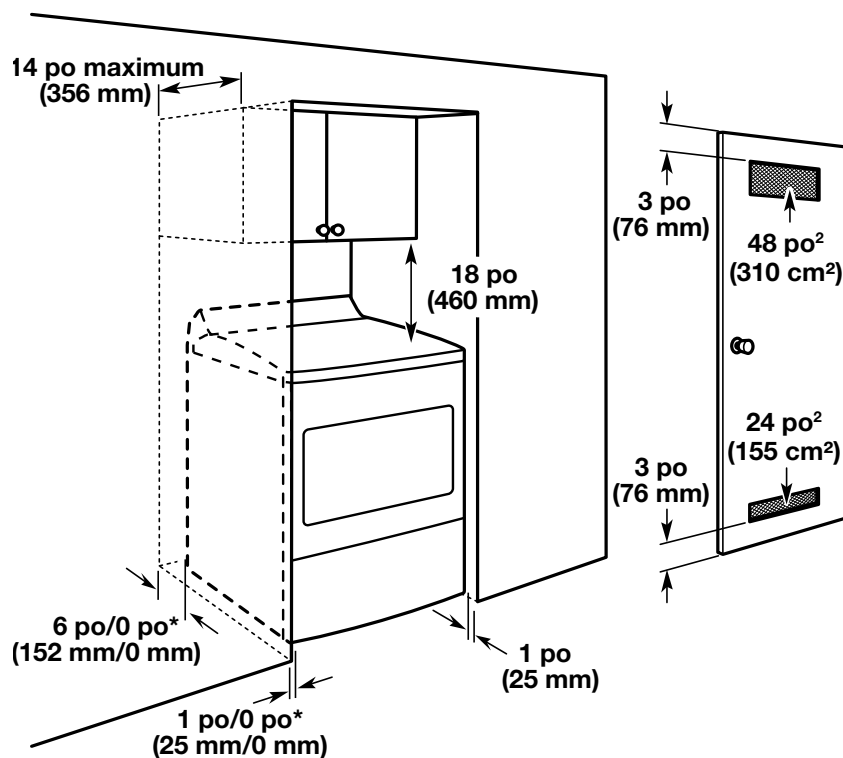

*Dégagement minimum recommandé