

ZRC-9100A Recirculating Kit Instructions

THIS KIT INCLUDES:




(1) return air vent



(4) return air vent screws



(2) charcoal filter



(8) C clips



(1) 7" to 6" adapter

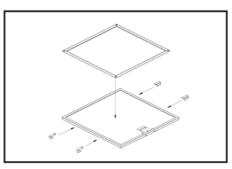


FIG. 1

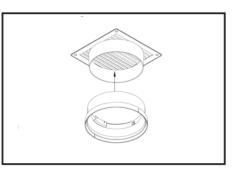



FIG.2

- Remove mesh filter from hood and place charcoal on the top of mesh filter. Secure charcoal filter by 4 C clips from recirculation kit, 2 C clips for each enlongated side of charcoal filter, FIG.1.
- 2. Reinstall mesh filter.
- Charcoal filtere must be replaced after every 120 hours of use or approximately every 3 to 4 months based on an average daily use of 1 hour of cooking time.
- 4. Install 7" to 6" adapter to the return air vent and use tape to secure. FIG.2.

To install the return air vent to top of the cabinet:

(for installations where cabinet does not extend to ceiling)

- 1. Cut a 6 1/2" round opening in top or the cabinet where the ducting will connect to the return air vent and 7" to 6" adapter. FIG.3.
- 2. Connect 7" round ducting from blower collar to return air vent collar. Return air vent collar will go around the ducting. Secure with duct tape.
- Secure return air vent to top of cabinet with (4) screws.

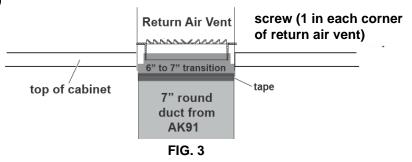

To install the return air vent to a soffit or ceiling:

(for installations where top of cabinet is flush with the ceiling)

- 1. Cut a 6 1/2" round opening in soffit ceiling where the ducting will connect to the return air vent and 7" to 6" adapter. FIG.4.
- 2. Connect 7" round ducting from blower collar to return air vent collar. Return air vent collar will go around the ducting. Secure with duct tape.
- 3. Secure return air vent to soffit or ceiling with (4) screws.

note: Return air vent deflectors should face the sides to properly vent the air. FIG.5

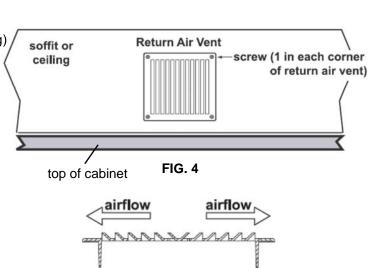


FIG. 5