




Dimension Guide

7.0 cu. ft. Dryer


MED4005SW - Electric
YMED4005SW - Electric
MGD4005SW - Gas

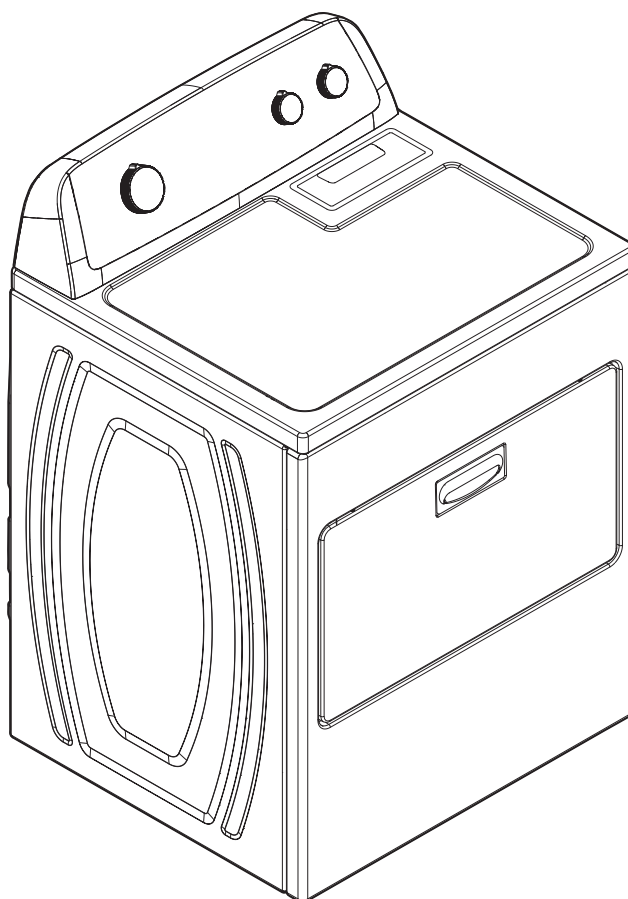

DETAILED PLANNING DIMENSIONS



WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS and INSTALLATION INSTRUCTIONS, located in your appliance's Safety and Installation Instructions, before installing and operating this appliance.

Electrical Requirements		
Fuel Type	Electric	Gas
Minimum Circuit Amperage Rating	30 A	15 A or 20 A
Operating Voltage	240 V - AC only	120 V - AC only
Operating Frequency	60 Hz	

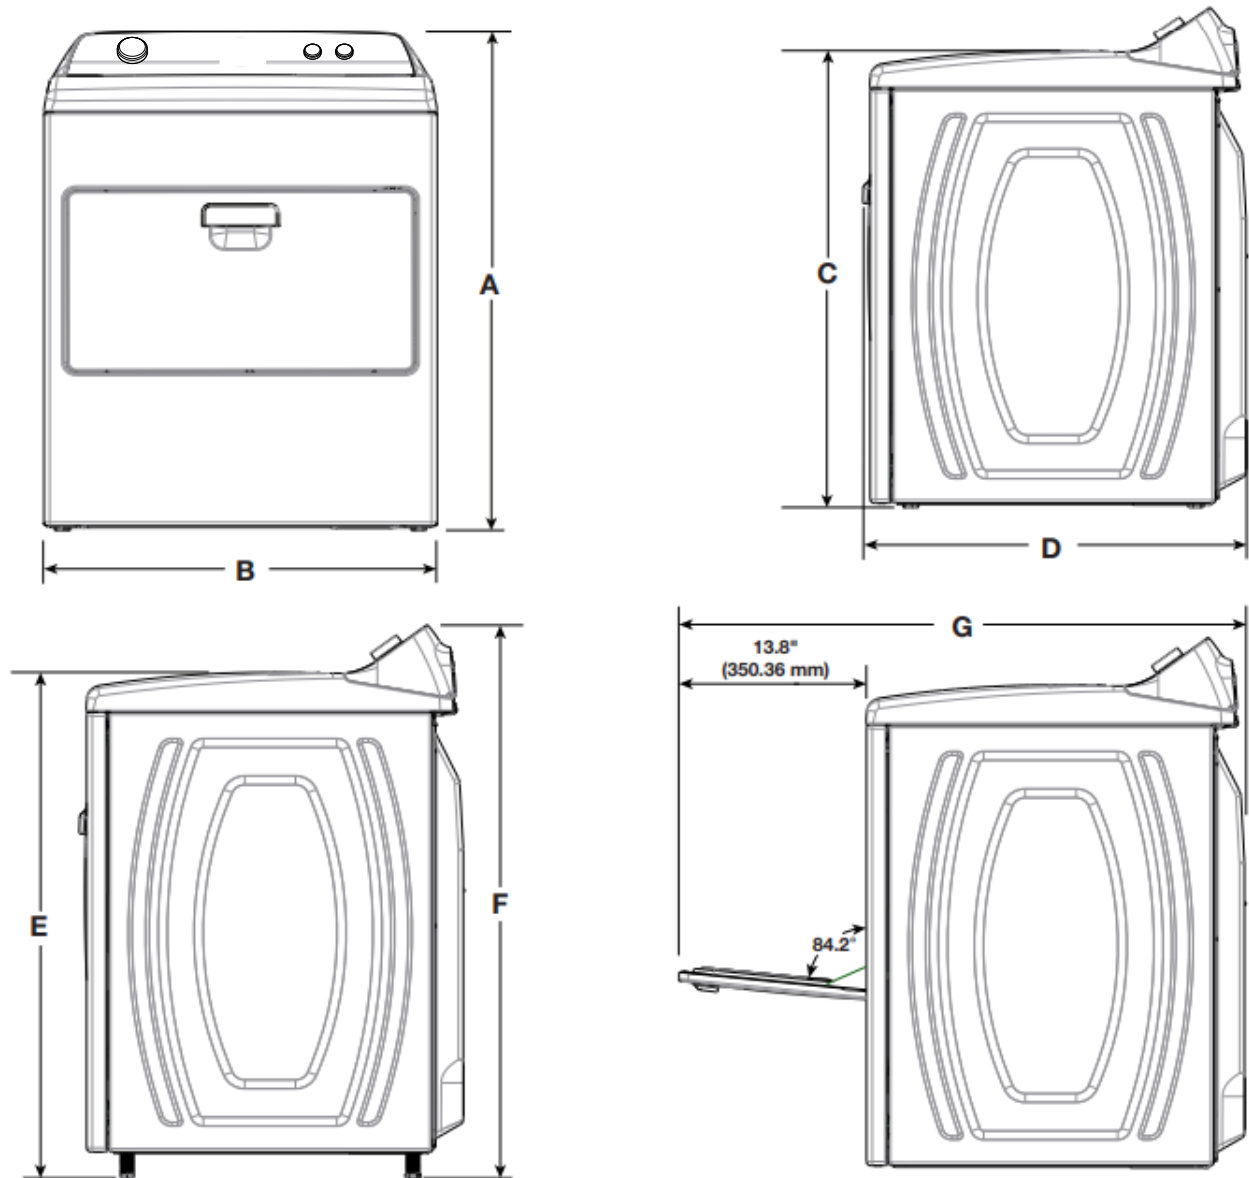

Product Dimensions					
		in (minimum)	mm (minimum)	in (maximum)	mm (maximum)
A	Height (with feet)	42 ⁷ / ₈	1089	44 ¹ / ₂	1130
B	Width	29	737	-	-
C	Top Height (with feet)	35 ¹ / ₂	902	37 ¹ / ₈	943
D	Depth	28 ¹ / ₂	724	-	-
G	Depth with Door Open	41 ³ / ₄	1060	-	-

DETAILED PLANNING DIMENSIONS

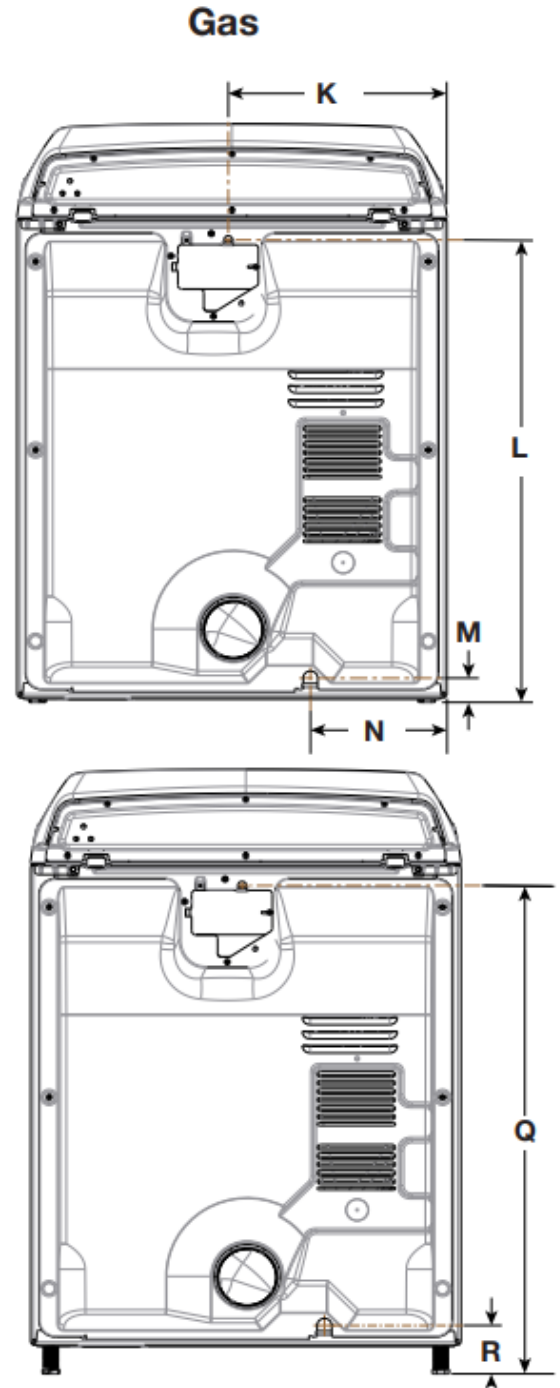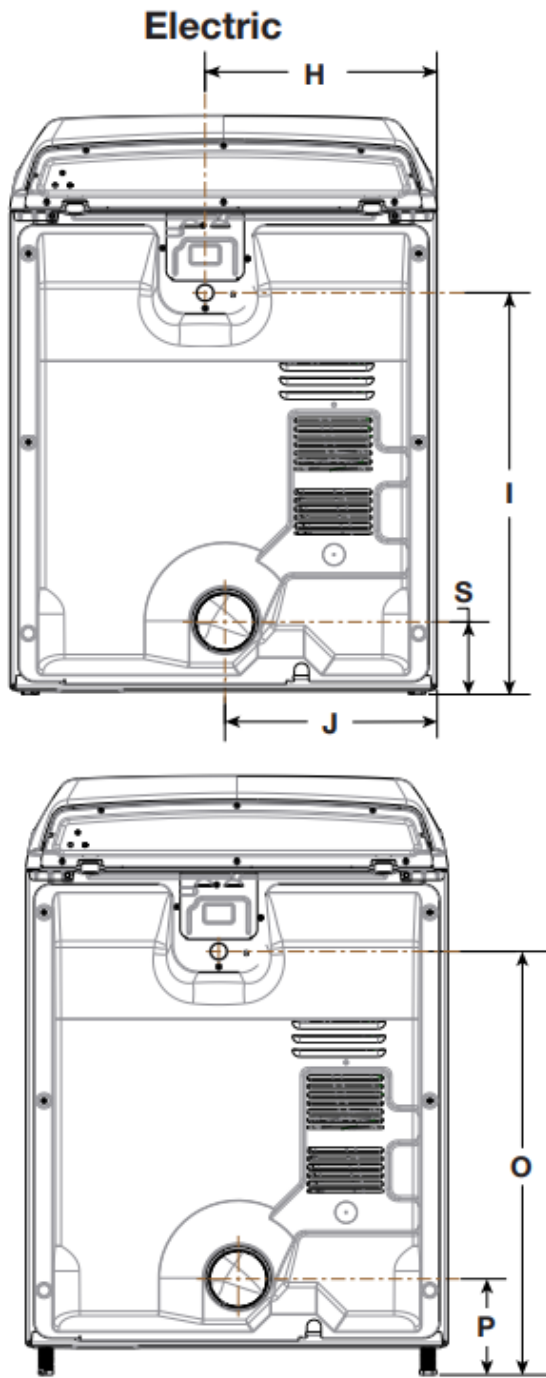


Product Dimensions					
		in (minimum)	mm (minimum)	in (maximum)	mm (maximum)
H	Strain Relief from Side (electric)	15 ³ / ₄	400	-	-
I	Strain Relief Height (electric)	28 ¹ / ₈	714	29 ³ / ₄	756
J	Exhaust Duct from Side	14 ¹ / ₂	368	-	-
K	Power Cord from Side (gas)	14 ³ / ₄	375	-	-
L	Power Cord Height (gas)	32 ³ / ₈	822	34	864
M	Gas Connection	1 ³ / ₄	44	3 ³ / ₈	86
N	Gas Connection from Side	9 ¹ / ₄	235	-	-
S	Exhaust Duct Height	5 ⁵ / ₈	130	6 ³ / ₄	171
	Gas Power Cord Length	60 ¹ / ₈	1527	61 ³ / ₄	1568

DETAILED PLANNING DIMENSIONS

Spacing for recessed area or closet installation

The dimensions shown are for the recommended spacing allowed.

- Additional spacing should be considered for ease of installation and servicing.
- Additional clearances might be required for wall, door, and floor moldings.
- Additional spacing of 1" (25 mm) on all sides of the dryer is recommended to reduce noise transfer.
- For closet installation, with a door, minimum ventilation openings in the top and bottom of the door are required. Louvered doors with equivalent ventilations openings are acceptable.
- Companion appliance spacing should also be considered.

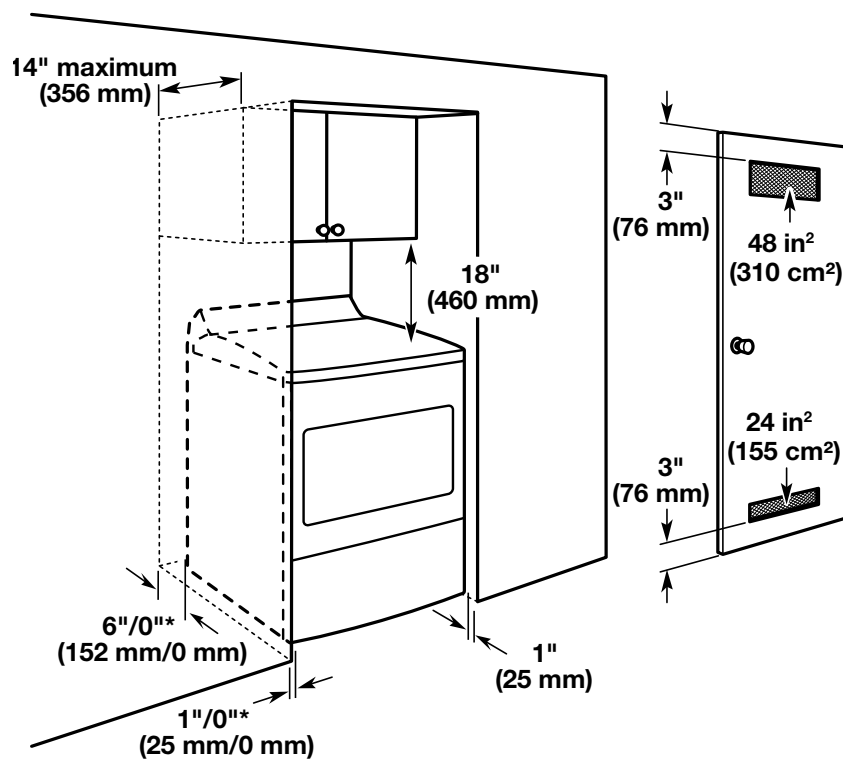

*Recommended/Minimum spacing




Guide de Dimensions

Sécheuse de 7,0 pi³

MED4005SW – Électrique

YMED4005SW – Électrique


MGD4005SW – Gaz

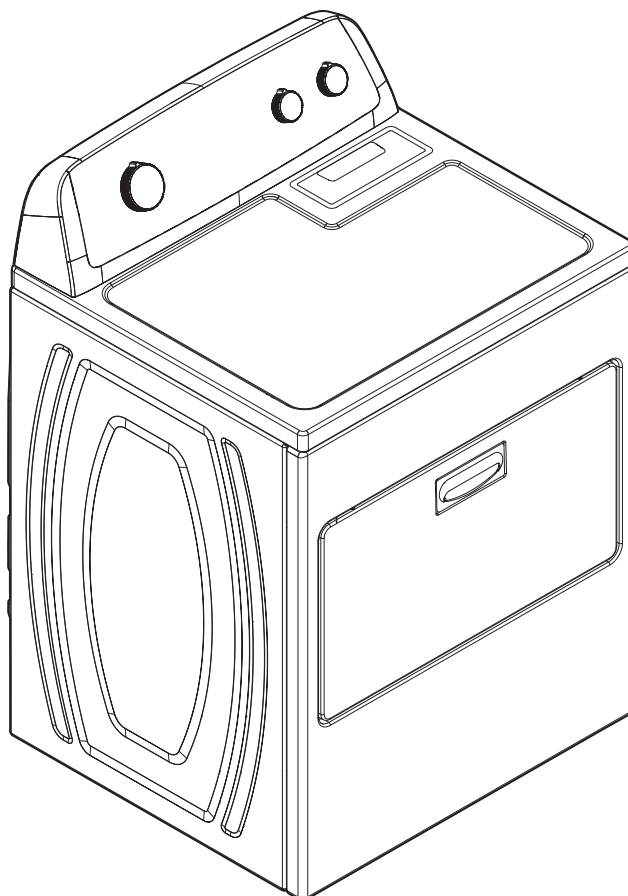

DIMENSIONS DE PLANIFICATION DÉTAILLÉES

AVERTISSEMENT : Pour réduire le risque d'incendie, de décharge électrique ou de blessures, lire les INSTRUCTIONS IMPORTANTES DE SÉCURITÉ et INSTRUCTIONS D'INSTALLATION du guide d'instruction de sécurité et d'installation de votre appareil avant d'installer et de faire fonctionner cet appareil.



Spécifications électriques		
Type de combustible	Électrique	Gaz
Courant minimum du circuit	30 A	15 A ou 20 A
Tension de fonctionnement	240 V CA seulement	120 V CA seulement
Fréquence de fonctionnement	60 Hz	

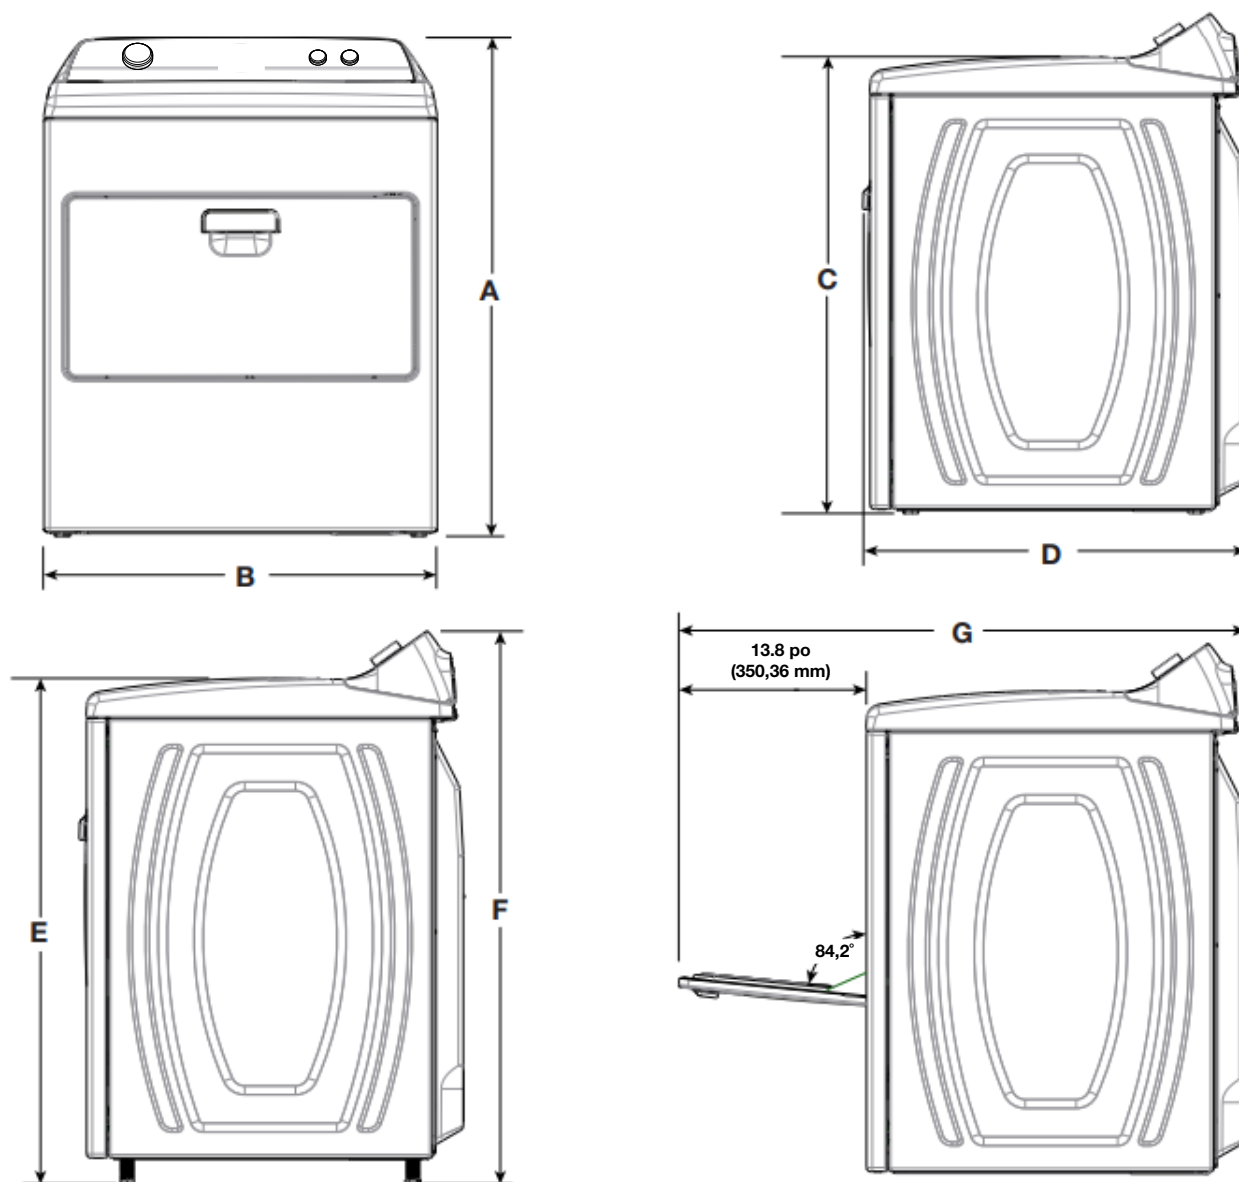



Dimensions du produit					
		po (minimum)	mm (minimum)	po (maximum)	mm (maximum)
A	Hauteur (avec pieds)	42 ⁷ / ₈	1089	44 ¹ / ₂	1130
B	Largeur	29	737	-	-
C	Hauteur à partir du haut du couvercle (en pieds)	35 ¹ / ₂	902	37 ¹ / ₈	943
D	Profondeur	28 ¹ / ₂	724	-	-
G	Profondeur avec porte ouverte	41 ³ / ₄	1060	-	-

DIMENSIONS DE PLANIFICATION DÉTAILLÉES

Électrique

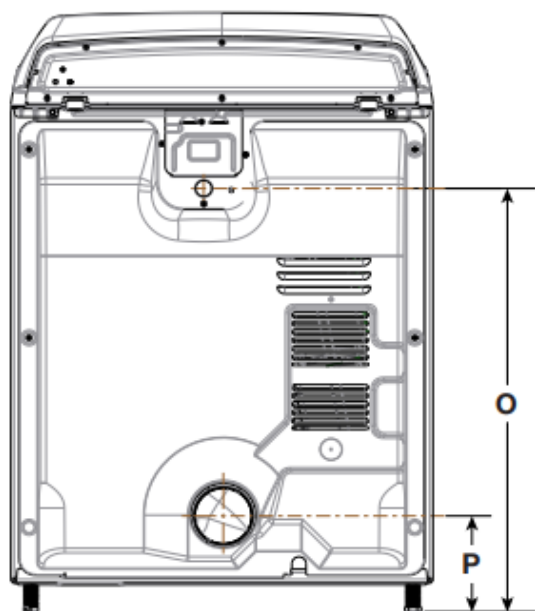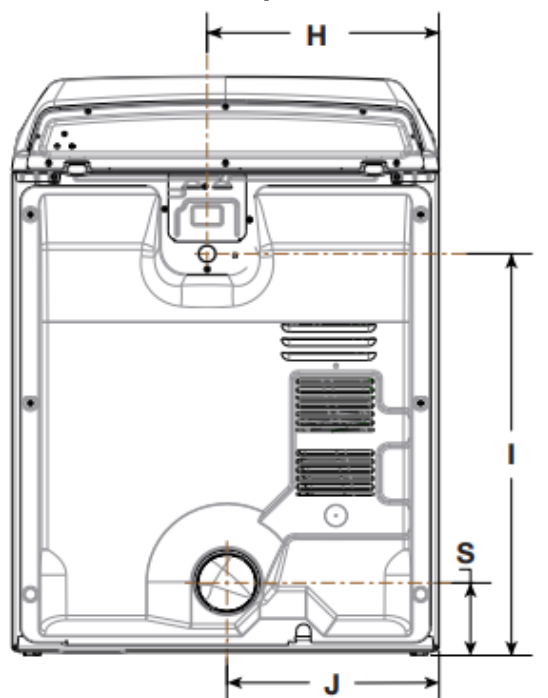

Gaz

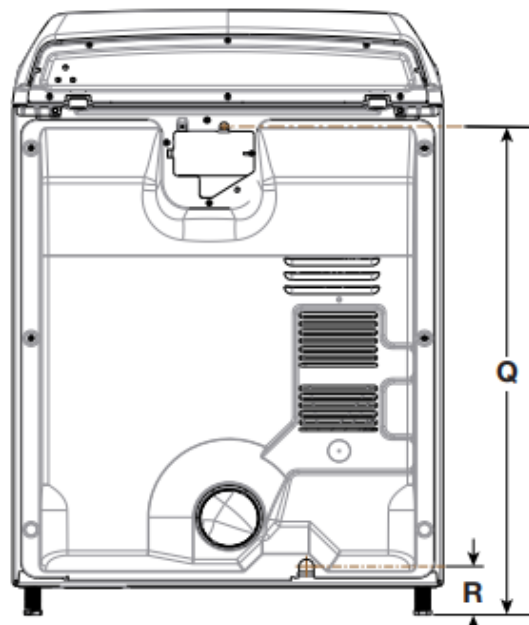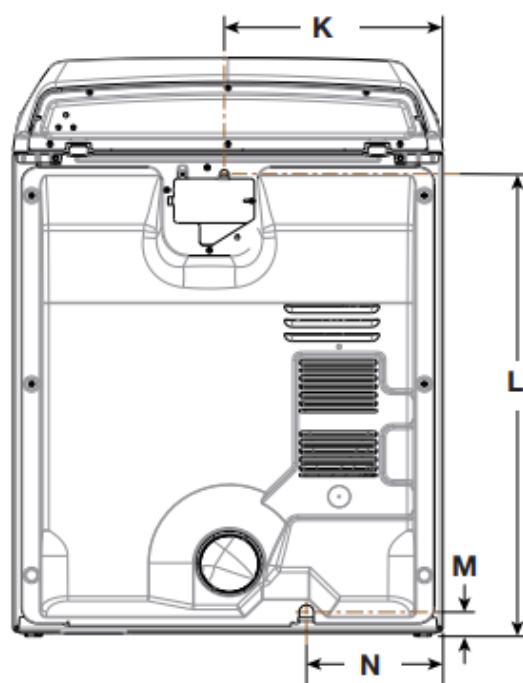

Dimensions du produit


		po (minimum)	mm (minimum)	po (maximum)	mm (maximum)
H	Réducteur de tension de côté (électrique)	15 ¾	400	-	-
I	Hauteur du réducteur de tension (électrique)	28 ⅞	714	29 ¾	756
J	Conduit d'évacuation de côté	14 ½	368	-	-
K	Cordon d'alimentation de côté (gaz)	14 ¾	375	-	-
L	Hauteur du cordon d'alimentation (gaz)	32 ⅞	822	34	864
M	Raccordements au gaz	1 ¾	44	3 ⅞	86
N	Raccordement au gaz de côté	9 ¼	235	-	-
S	Hauteur du conduit d'évacuation	5 ⅞	130	6 ¾	171
	Longueur du cordon d'alimentation pour le gaz	60 ⅞	1527	61 ¾	1568

DIMENSIONS DE PLANIFICATION DÉTAILLÉES

Espacement pour une installation dans un encastrement ou dans un placard

Les dimensions indiquées correspondent à l'espacement recommandé permis.

- Prévoir davantage d'espace pour faciliter l'installation et l'entretien.
- Un espace supplémentaire peut être requis pour les moulures de porte et de plancher et pour les plinthes.
- Un espace supplémentaire de 1 po (25 mm) de tous les côtés de la sècheuse est recommandé pour réduire le transfert du bruit.
- Pour installation dans un placard avec porte, on doit prévoir des ouvertures minimums d'entrée d'air en haut et en bas de la porte. Les portes à claire-voie offrant des ouvertures équivalentes de passage de l'air sont acceptables.
- Il faut aussi prendre en compte l'espace requis entre les appareils voisins.

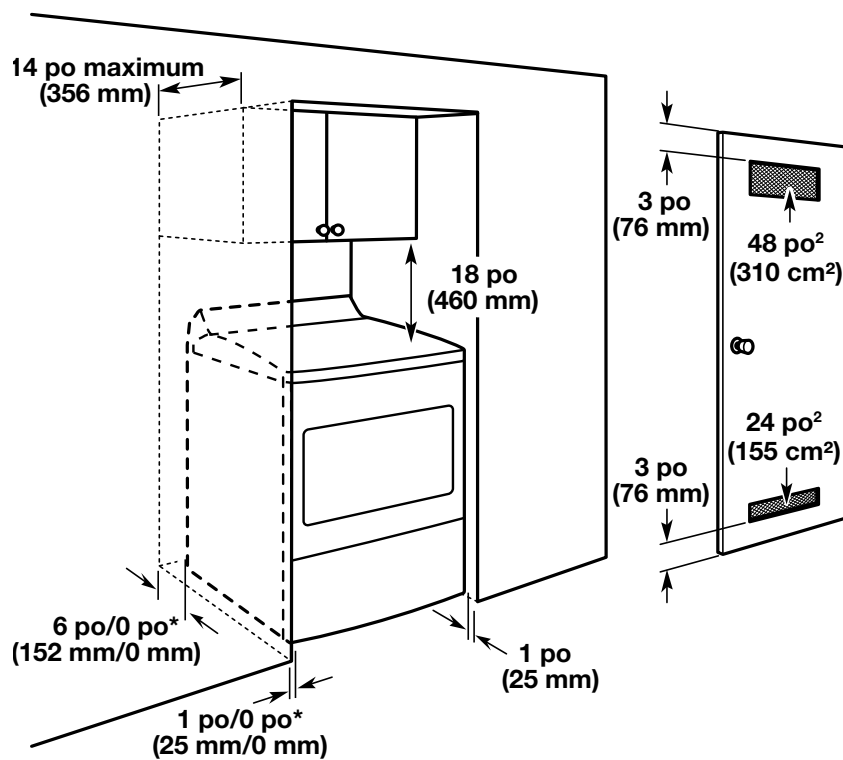

*Dégagement minimum recommandé