

# TWIN CITY SLEEPER BEDSIDE BASSINET



## INSTRUCTION MANUAL

Read all instructions BEFORE assembly and USE of product. KEEP INSTRUCTIONS FOR FUTURE USE.

# 25507

ASSEMBLY INSTRUCTIONS

Styles and colors may vary



**⚠ WARNING:  
CHOKING HAZARD**

Adult assembly required because of small parts. Keep assembly parts out of reach of children under 3 years.

# WARNING

**WARNING:** Do not use this bassinet if you cannot exactly follow the accompanying instructions. Failure to follow these warnings and instructions could result in serious injury or death.

- **Read all instructions before assembling unit.**

**KEEP INSTRUCTIONS FOR FUTURE USE.**

**DO NOT USE THIS UNIT IF THE INSTRUCTIONS CANNOT BE STRICTLY FOLLOWED.**

- Before each usage or assembly, inspect unit for damaged hardware, loose joints, missing parts or sharp edges. NEVER use this product if there are any loose or missing fasteners, loose joints, broken parts, or torn mesh/fabric. Check before assembly and periodically during use. Contact Delta Children's Products Customer Service Department at (646) 435-8726 for replacement parts, repair or instructions.

## **SUFFOCATION HAZARD** **Infants have suffocated:**

- In gaps between an extra padding, a mattress (too small or too thick) and product sides.
- On soft bedding.
- Use only the pad provided by the manufacturer that is no thicker than 25 mm (1 in) and is of such a size that, when pushed against any side of the product, it does not leave a gap of more than 25 mm (1 in) between the mattress and sides.
- **NEVER** add a pillow, comforter or another mattress for padding.

**FALL HAZARD:** To help prevent falls, **DO NOT** use this product when your baby begins to roll over.

### **STRANGULATION HAZARD:**

- Strings can cause strangulation! **DO NOT** place items with a string around a child's neck, such as hood strings or pacifier cords. **DO NOT** suspend strings over a product or attach strings to toys.
- To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.
- Always attach all provided fasteners tightly according to the instructions. Check frequently. **DO NOT** use if there are any loose or missing parts or signs of damage. **DO NOT** substitute parts. Contact the manufacturer for replacement parts.
- **Never** use bassinet with more than two children at a time.
- **DO NOT** place medication, small toys, small items, cords, straps or similar items that could become wound around the child's neck in or near this product and do not place product near a window, patio door, heater, or power outlet.
- **DO NOT** place bassinet near a window where cords from blinds or drapes may strangle a child. Child may fall out of window.
- If a sheet is used with the pad use only the one provided by Delta Children or one made specifically for the dimensions of the bassinet mattress.

## CARE AND MAINTENANCE

- The frame and mattress pads may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue. Do not immerse the frame.
- The sheets are machine washable. Wash them separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- Always store product in a clean and dry place.



**Please DO NOT return this product to the store.**

If you experience any difficulty with assembly, missing parts or use, please DO NOT return this item to the store. Retail stores are unable to properly assist you. Contact our Customer Service Department directly for assistance

(646) 435-8726

www.DeltaChildren.com • gcs@simmonkids.com  
©2019 Delta Children's Products, Inc. New York, NY 10001



## **EXTENDED WARRANTY**

**DON'T MISS YOUR CHANCE TO BE COVERED FOR ALL OF LIFE'S MISHAPS!**

With Delta's Extended Warranty, you're covered for mechanical failure from normal use or if your item stops working due to normal wear and tear, plus all those unexpected surprises.

## **2 YEARS OF PROTECTION**

**For Additional Information:**


**Simply visit our Website, register your product, and add the Extended Warranty**

**<https://www.deltachildren.com/pages/product-registration>**


Extended Warranty only available in the following States: Arkansas, Colorado, Delaware, District of Columbia, Georgia, Idaho, Illinois, Indiana, Iowa, Kansas, Kentucky, Louisiana, Maryland, Michigan, Mississippi, Missouri, Nebraska, Nevada, New Hampshire, New York, North Carolina, North Dakota, Pennsylvania, Rhode Island, South Dakota, Tennessee, Utah, West Virginia

# PARTS


**IMPORTANT!** Please remove all parts from the package and identify them before assembly.

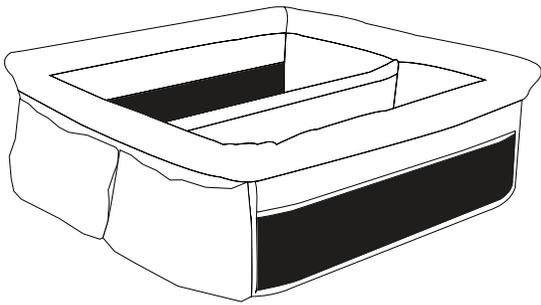


**Bassinet Fabric**




**Left Side Frame Stand with Wheel**

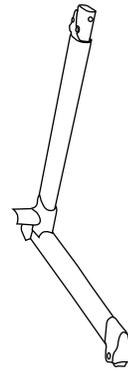


**Right Side Frame Stand with Wheel**

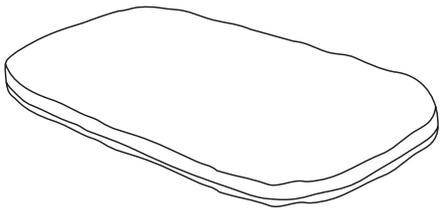

**Mattress Support Pad (x2)**

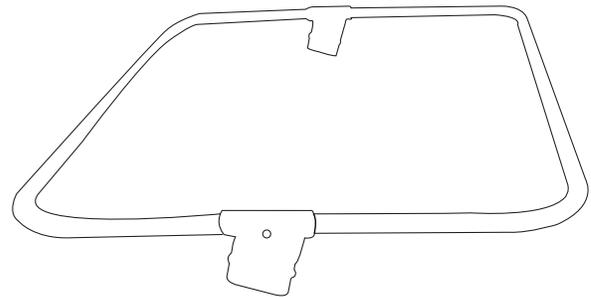


**Top Support Tube**

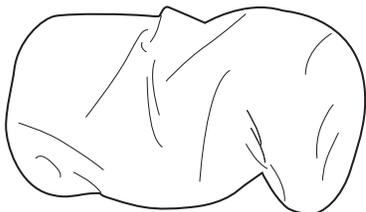


**Sheet (x2)**



**Bottom Cross Support Bar**




**Divider Support Bar**



**Wrench**



**M8 Screw (x4)**





**Nut & Bolt (x2)**




# 1

## BASSINET FRAME ASSEMBLY & LEG EXTENSION

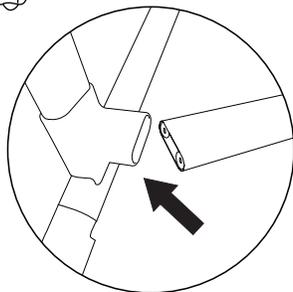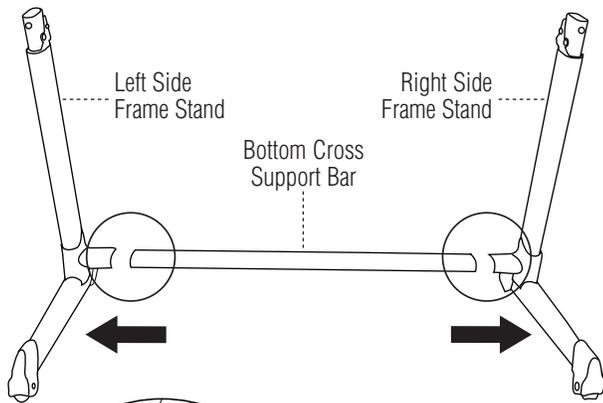


**Fig. 1A**

Insert support bar into side frame stand

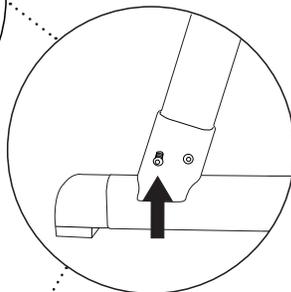


**Fig. 1B**

Secure side frame stand and support tube with screw

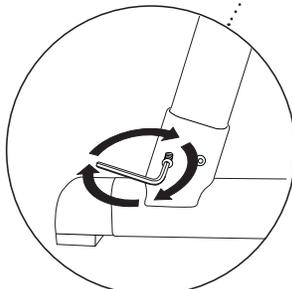

**Fig. 1C**



Tighten screws with wrench clockwise

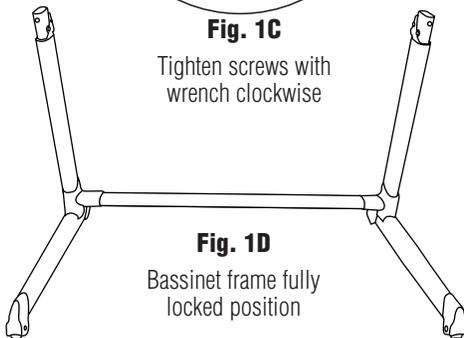

**Fig. 1D**

Bassinet frame fully locked position

- 1 Insert support bar to the left side frame stand (Fig. 1A). Secure with the two screws (Fig. 1B). Use the wrench to tighten screws in clockwise direction (Fig. 1C). Repeat for the right side frame stand. Make sure frame is in a fully locked position (Fig. 1D) pull outward on left and right side frames.

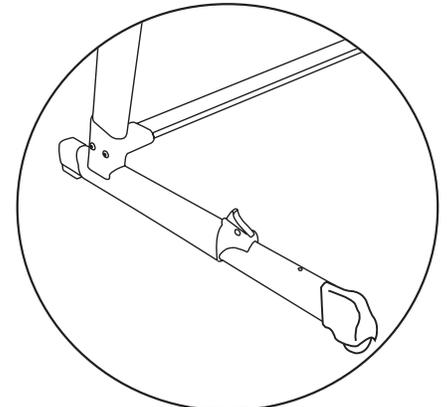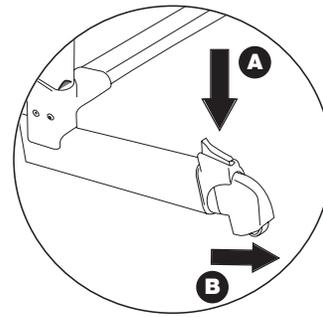


**Fig. 1E**

Bassinet frame fully locked position


- 2 Fully extend both sides of the bassinet legs by pressing the button located on top of the bassinet legs **A** and pull outward **B** to fully extended position (Fig. 1E).

# BASSINET FRAME ASSEMBLY






Support Tube





**Fig. 1F**  
Insert both sides of the top support tube into the bassinet frame

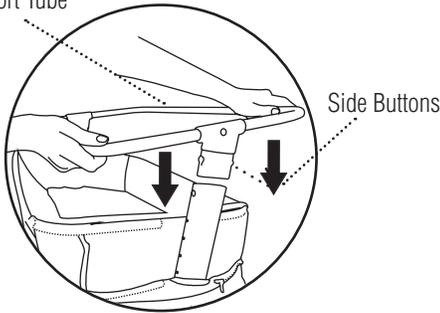



**Fig. 1G**  
After top support is in place, insert nut & bolt as shown. Use the wrench to tighten screws in clockwise direction

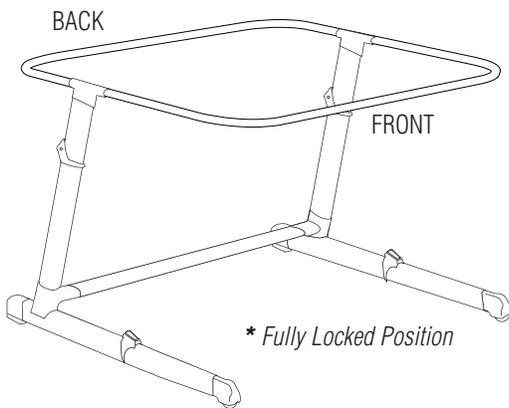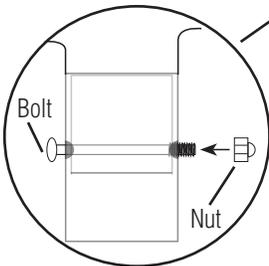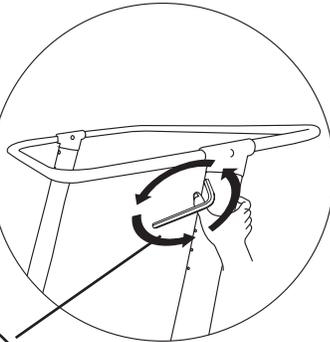


**3** Align top back support tube to the side frames. Insert both sides of the top support tube into the bassinet frame until holes are aligned (Fig. 1F). After top support is in place, insert nut & bolt as shown (Fig. 1G) and use the wrench to tighten screws in clockwise direction.

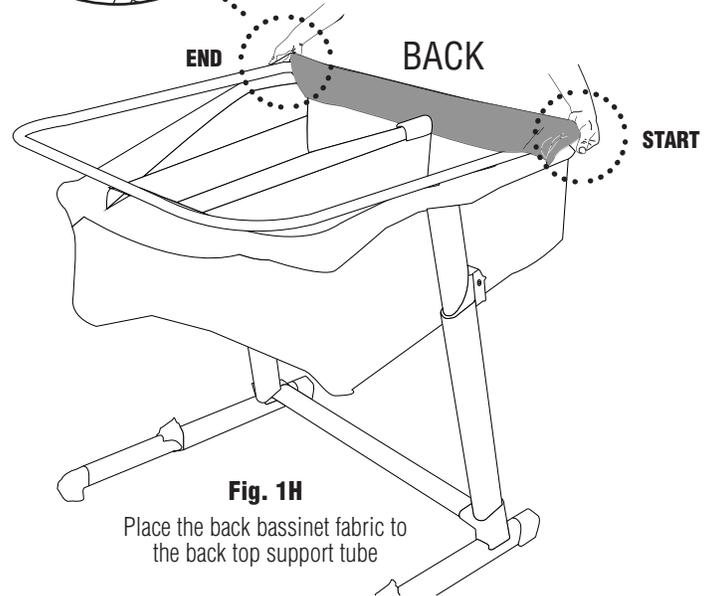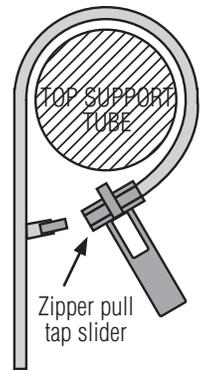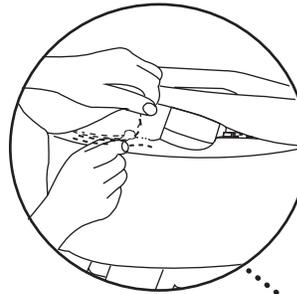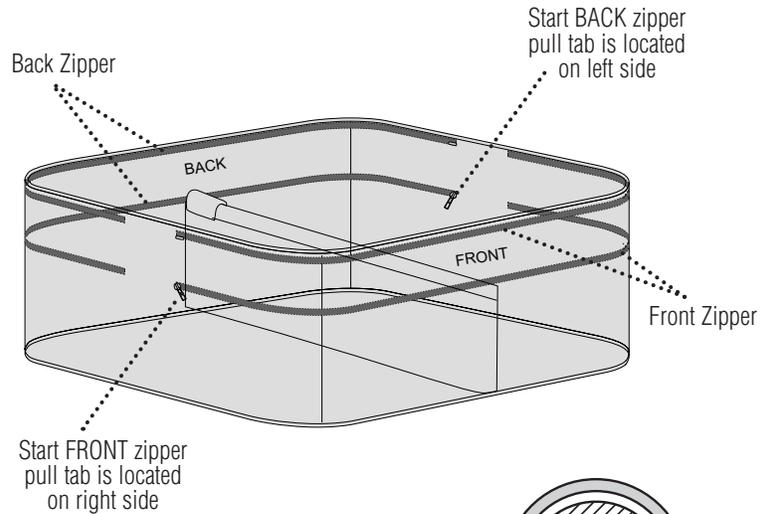

**4** Place the back bassinet fabric over the back rail tube. Align and fasten zipper to top rail (Fig. 1H).  
NOTE: Zipper pull tab slider located on left side.

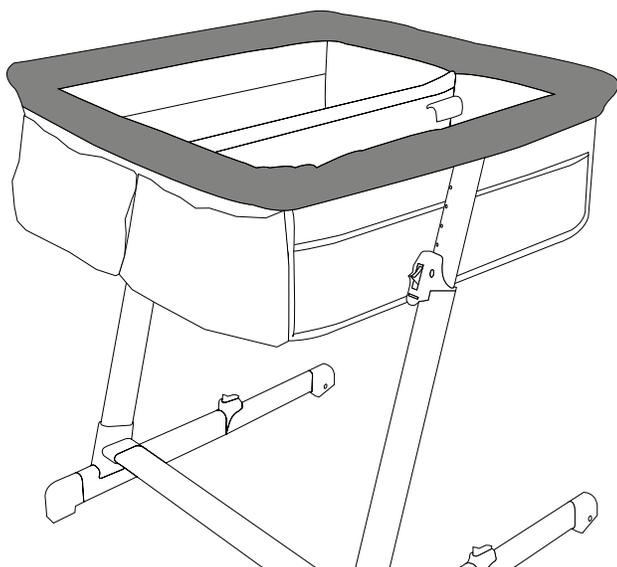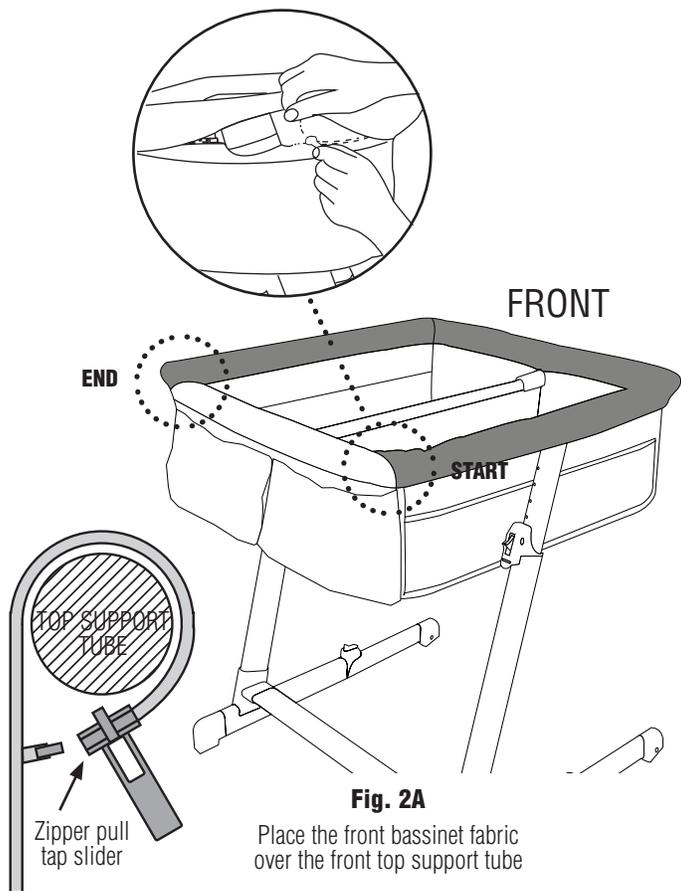


- 1 Place the front bassinet fabric over the front top support tube. Fully zip fabric bassinet. (Fig. 2A) into fully zipped fabric bassinet (Fig. 2B).

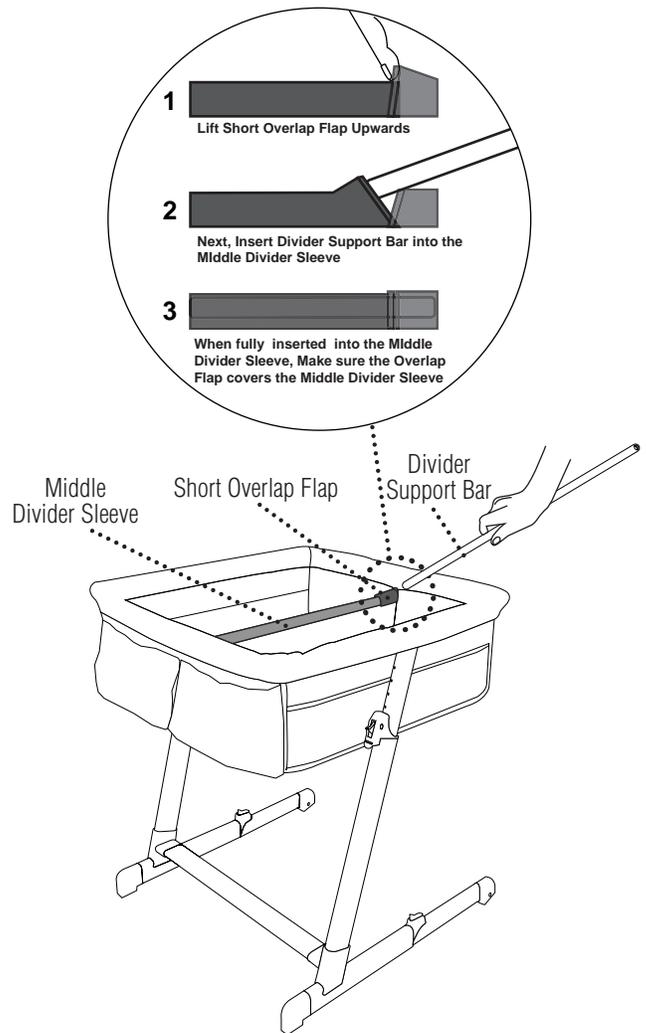

- 2 Insert the divider support bar into the middle divider (Fig. 2C).


# BASSINET FABRIC ASSEMBLY

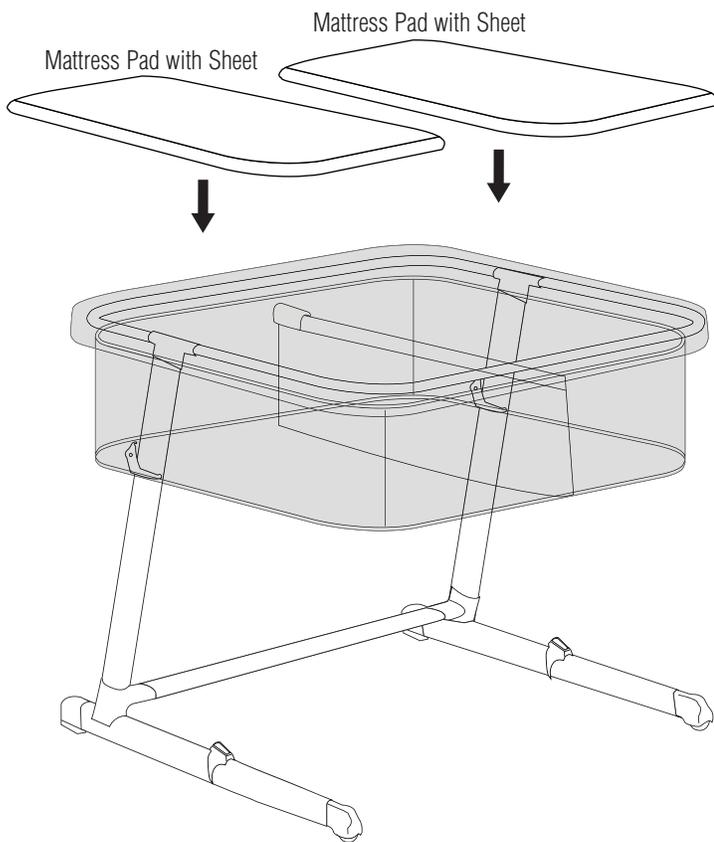

- 3** Place sheet over each mattress support pad. Place each mattress support pad with sheet into bassinet.

## 3



## HEIGHT ADJUSTMENT

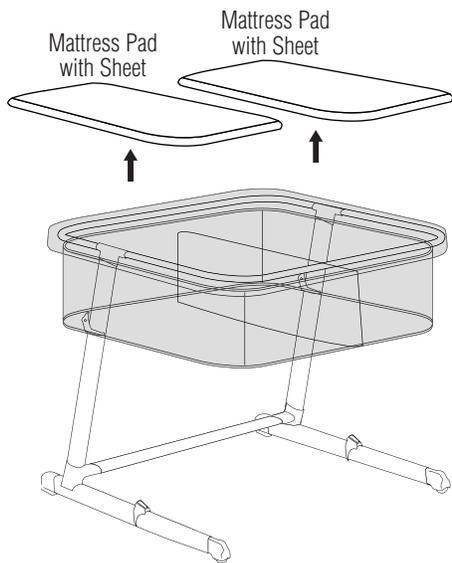

**⚠ WARNING:** NEVER adjust height with baby inside.


- 1 Remove mattress support pads.
- 2 Locate left side locking housing (A), push and hold up from underneath locking housing (B). Then press the lever inward (C) and move top rail up or down into desired position. There are 6 positions total (D).

NOTE: TO adjust up or down you must unlock EACH SIDE separately.

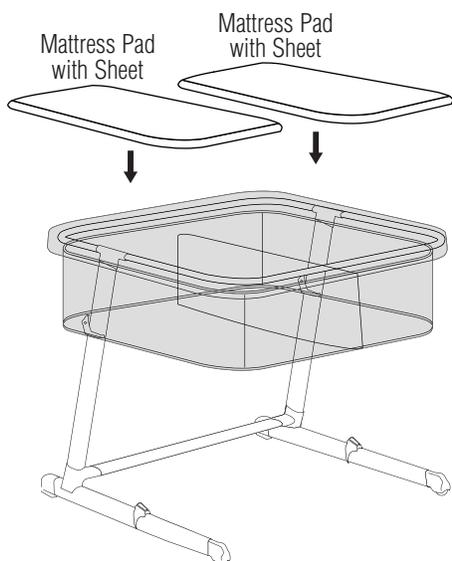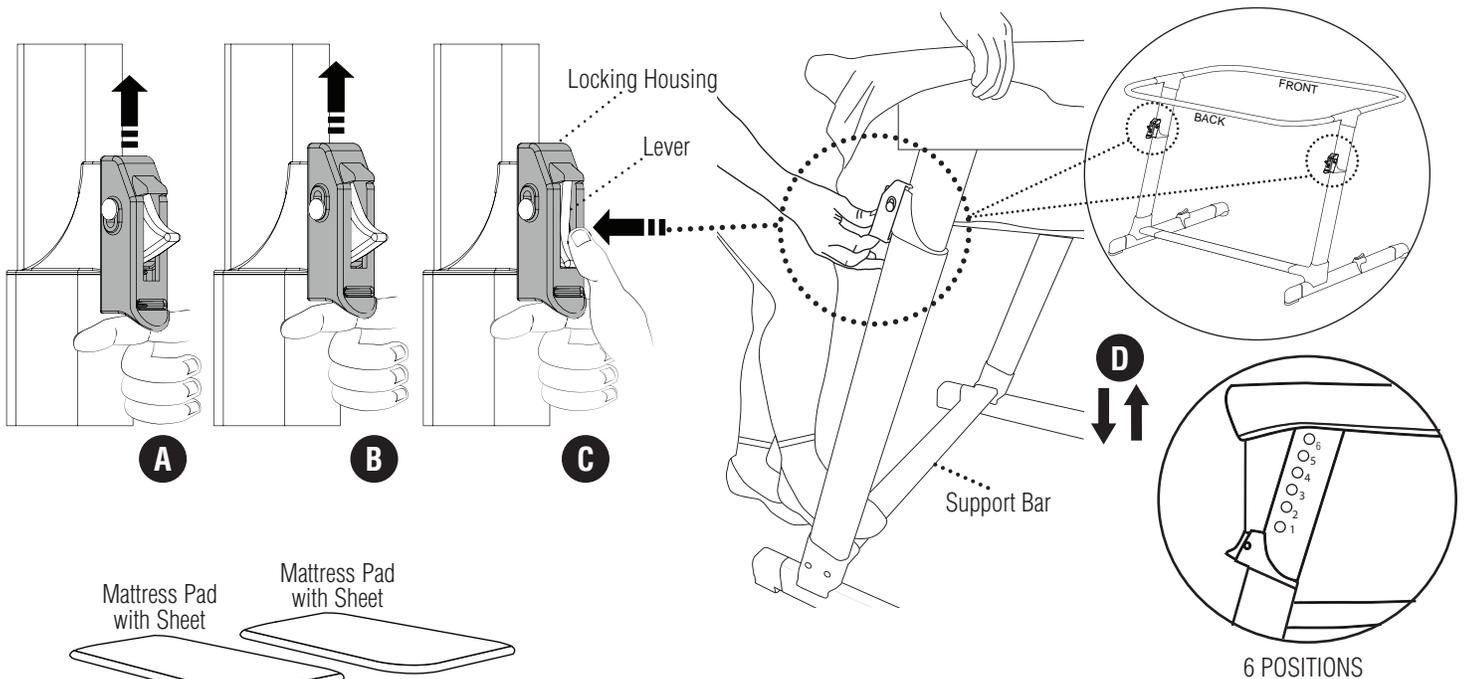


- 3 Repeat STEP 2 on the right side.  
NOTE: Make sure the bassinet is equally level.

- 4 Insert mattress support pads.  
NOTE: The mattress support pad should fully cover the bassinet bottom. No excess fabric should show on the edges.

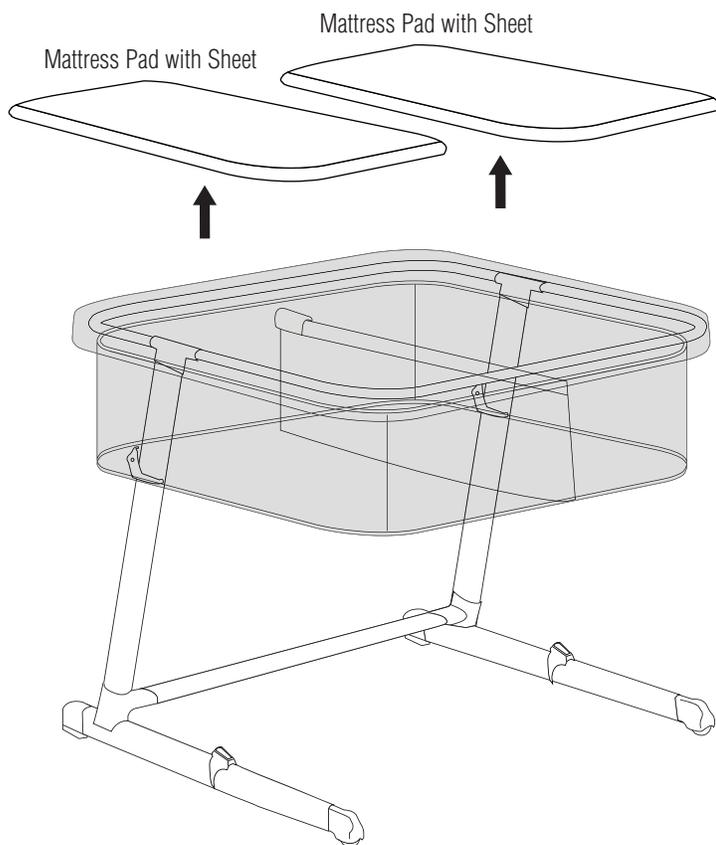

- 1 Remove mattress support pads from bassinet.

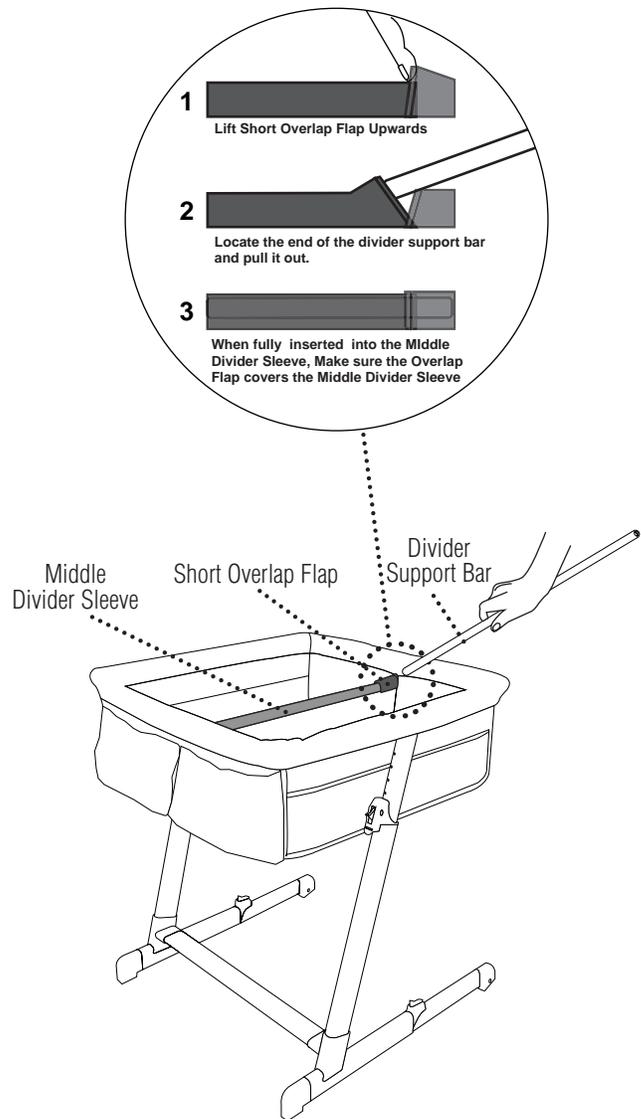


**Fig. 4A**

**Removing** Divider Support Bar  
from the Middle Divider


- 2 Remove divider support bar from the middle divider (Fig. 4A).

# REMOVING FABRIC

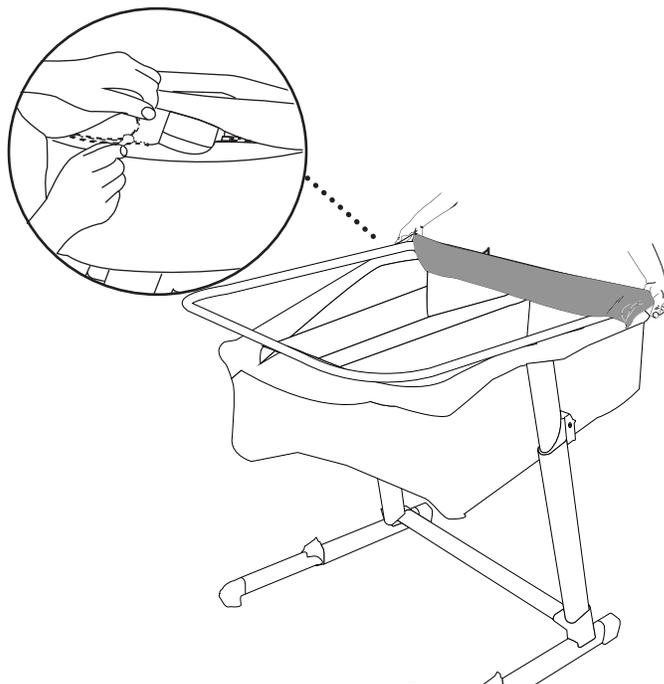

**Fig. 4B**

Unzip both sides of the bassinet fabric from the top support tube


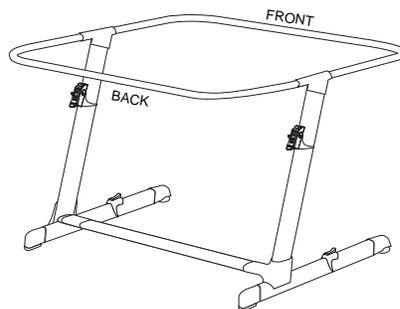


**Fig. 4C**

Bassinet Fabric Fully Removed

- 3** Unzip both sides of the bassinet fabric from the top rail (Fig. 4B) to (Fig. 4C).

**Fig. 5A**  
Use the wrench to remove nut & bolt by turning counter-clockwise

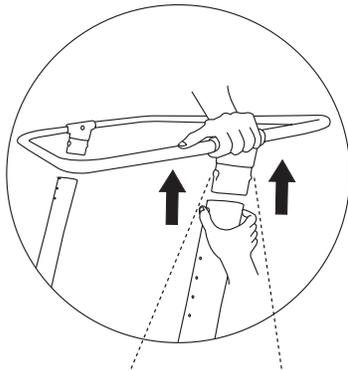
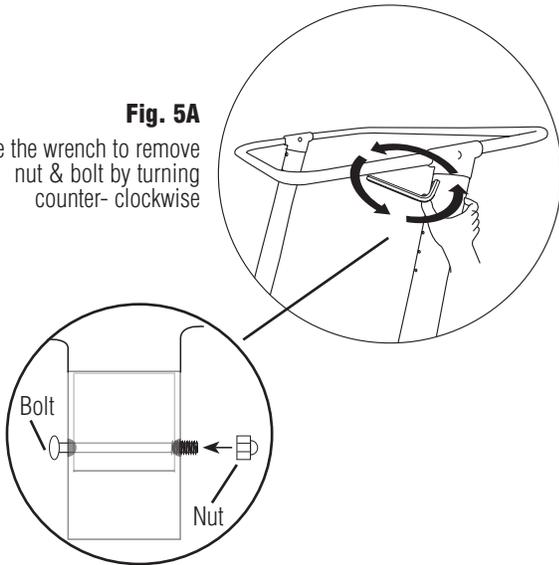


**Fig. 5B**

Place front and back side buttons on the support tube and lift upward to remove. Repeat on opposite side.

- 1** Use wrench to remove nut & bolt to remove nut & bolt by turning counter-clockwise (Fig. 5A)
- 2** Pull upward on tube to remove (Fig. 5B).

**Fig. 5C**

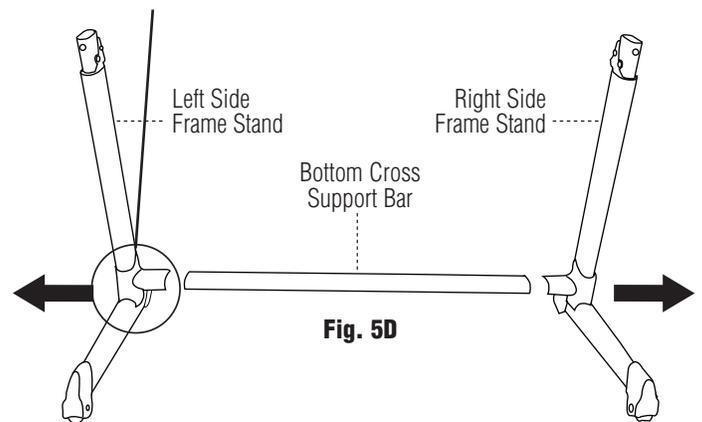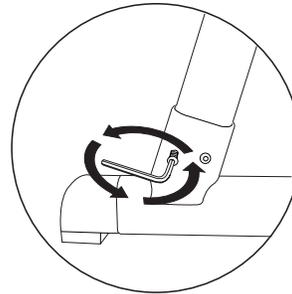

**Fig. 5D**

- 3** Using the wrench, unscrew screws on left and right side frame (Fig. 5C).
- 4** Pull frame stand outward to remove. Repeat on opposite side (Fig. 5D).



**Delta Children**

114 West 26th Street  
New York, NY 10001  
(646) 435-8726

**[www.DeltaChildren.com](http://www.DeltaChildren.com)**