

AVOCADO

AVOCADO-PLUS ADJUSTABLE BASE OWNER'S MANUAL INSTALLATION & OPERATION



Please read the manual carefully and keep it safe for future maintenance.

Contents

Safety & Warranty Warnings	01
Overview & Parts List	04
Installation Guide	06
Remote Control Instructions	08
Pairing Remote Control Instructions	09
Synchronizing Two Bases	10
Bluetooth Instructions	12
Emergency Battery Backup	14
Troubleshooting	15
Common Problems & Recommended Solutions	17

Safety & Warranty Warnings

ATTENTION:

Read the following information before using this product. Failure to use a surge protection device could compromise safety or cause product malfunction and could void the electrical portion of your warranty.

Electrical surges are by far the biggest cause of problems with electrical circuits. In order to help protect your investment in case of a power surge or outage, use a surge protection device (not included).

WARRANTY WARNING!

Do not open or tamper with the transformer, control box, motors, or remote control (with the exception of battery compartments). The product warranty will be void if these components are tampered with.

SMALL CHILDREN AND PETS:

Immediately dispose of all packing materials as they can smother small children and pets. Do not allow any persons or pets under the bed. Children, convalescents and disabled person should not operate the bed without adult supervision.

HOSPITAL OR CONVALESCENT USE DISCLAIMER:

Adjustable beds are designed and engineered for a life style of in-home comfort and are not intended for hospital use or for a bed-ridden patient on an extended recovery. Adjustable beds are not equipped with bars to help patients get safely in and out of bed and are not intended to be used around tent type oxygen therapy or explosive gases.

PACEMAKER WARNING:

Electronics may activate a special sensor in your pacemaker that detects motion. This can fool the pacemaker into “thinking” you are engaged in some sort of physical activity and require a faster heart rate. You may experience a sensation similar to when you are exercising. Consult your physician for further information.

Safety & Warranty Warnings

FULL WARRANTY: 1ST & 2ND YEAR

Starting from the Commencement Date, your adjustable base is warranted against non-excluded defects in Nisco's workmanship or materials. During the first and second year from the Warranty Commencement Date, AVOCADO will repair or replace (at no cost to you) any defective adjustable base part, and AVOCADO will pay all authorized labor associated with the repair or replacement of any parts found to be defective. However, if the entire adjustable base needs to be replaced, AVOCADO does not cover or pay for any part of transportation costs.

This warranty does not apply to:

- (a) any damage caused by the purchaser
- (b) unauthorized repair or replacement of adjustable bed parts;
- (c) any mishandling of the adjustable bed (whether in transit or by other means), physical or electrical abuse or misuse, or any operation inconsistent with the procedures outlined in the User Manual.

AVOCADO warrants this adjustable bed to the consumer who is the original purchaser ("purchaser"), subject to the terms and conditions set forth herein. This warranty begins on the "warranty commencement date" which is either the date of purchase for new unused beds or the date of manufacture for beds that have been used as floor or display models.

PRODUCT RATINGS

The bed lift motors are not designed for continuous use of more than 2 minutes in an 18-minute period, or approximately a 10% duty cycle. Any attempt to circumvent or exceed this rating will shorten the life expectancy of the product and may void the warranty.

WEIGHT UNITS

The limitation for this adjustable bed is 850 lbs. The bed will structurally support these weights, provided the weight is evenly distributed across the head and foot sections. This product is not designed to support or lift this amount in the head or foot section alone. Exceeding this weight restriction could damage the bed and/or cause injury and void the warranty. Enter or exit the bed in a flat position and do not sit on the head or foot sections while in the raised position.

Safety & Warranty Warnings

LIFTING AND LOWERING MECHANISMS AND MASSAGE UNITS:

It is normal for the raising and lowering feature on this bed to emit a minimal humming sound during operation. The massage feature creates a vibrating hum during operation and the resonance will increase accordingly with a higher intensity motor setting.

LOCATION ENVIRONMENT:

The level of sound experienced in a room is directly related to the environment within that location. In a room with hardwood floors and the massage units turned on, a vibrating noise can be noticeable. To reduce the resonance, place a piece of carpet or rubber casters cups under the legs. The rubber caster cups also prevent the bed from sliding when located on smooth or hard surface flooring.

TO REDUCE THE RISK OF SHOCK, BURNS, FIRE OR INJURY:

Make sure the base is in a flat position and the vibrating motors are turned off before unplugging the bed base from the power source. Always unplug the base from the electrical outlet before cleaning or servicing the base. If the cord or plug is damaged, discontinue use of the bed base. Contact a qualified service professional for examination and repair.

FCC COMPLIANCE:

This device complies with part 15 of the FCC Rules for residential use. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio Frequency: 2.4 GHz

For customer service under this limited warranty please contact AVOCADO.

Toll free phone: **1.855.430.8943**

Overview & Parts List


All electronics and components that need to be installed are located in boxes.
Before discarding the packing materials, ensure that all the parts are accounted for.

A



AAA Batteries (3) & Remote Control (1)

B

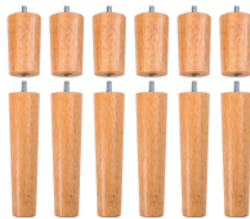

Adjustable Legs (6)

C



Power Supply (1)

D



Power Cord (1)

E




Sink Cable (1)
For TXL/CKS Only

F



Retainer Bar attached to the frame
TXL, 1PC
FULL/QUEEN/KING, 2PCS

Overview & Parts List

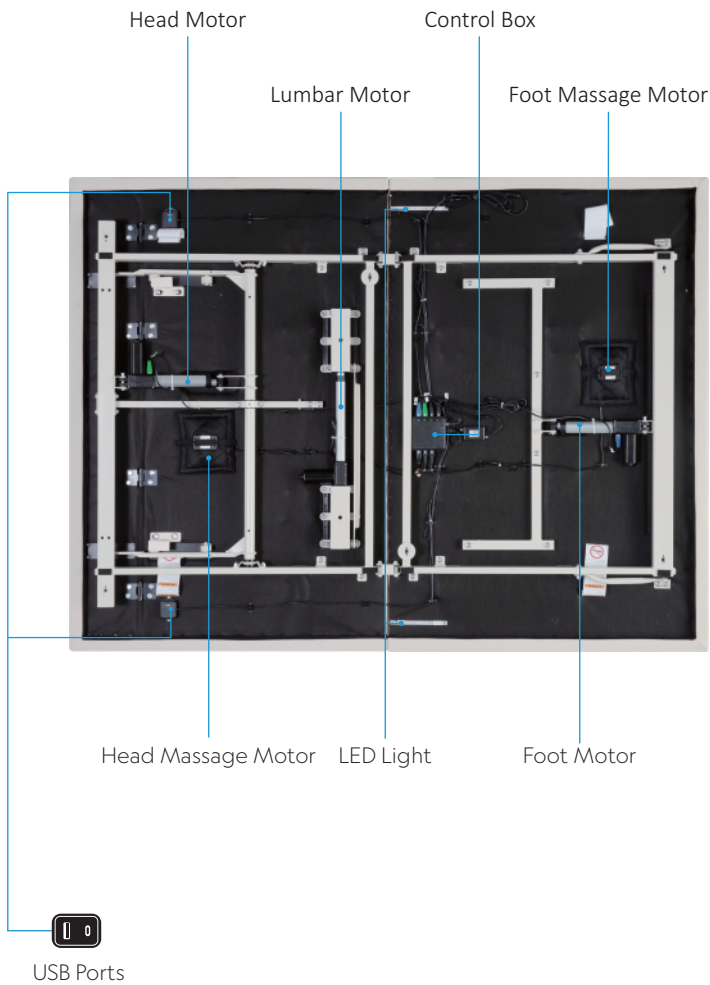

Installation Guide


Notes

1.



Two people are required to assemble this adjustable base.

2.




Open the carton in the flat position with the bottom facing up, to avoid damage.

Step 1

Remove folded bed base from the box and carefully unfold it top-side down on the floor.



Use caution to avoid pinning fingers or any underside wires along the hinge.

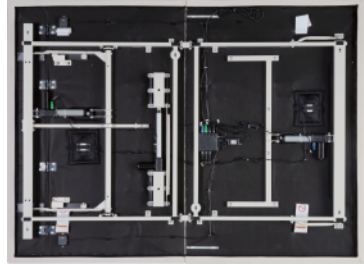

Step 2

Open the accessories box and ensure all accessories are included (see page 5).

Attaching Bed Legs

Step 1

The bed legs come in two segments (4" & 8"). These segments can be combined to achieve different heights, allowing you to adjust the base to match your bed frame.

Hand-tighten the legs by threading them clockwise into the pre-threaded holes on the bed frame.



The nut on the frame is removable and replaceable. Please remove the tape on the nut to install legs.

Step 2

Once the legs are attached, pick up the base from the head and foot and flip it over, being careful not to rest it on the legs.

Installation Guide

Installing Retainer Bar

Step 1

With assistance turn the bed frame over, top side up.

Step 2

Insert the ends of the retainer bar into the quick connect brackets located at the foot of the bed.



Setting Up Electronics

Step 1

Take out the power supply and power cord from the accessory box.



Step 2

Connect the power cord and plug the power cord into a working electrical outlet.




Note: Do not overload the power board.

Step 3

Install the three (3) AAA batteries into the remote control. Confirm the remote control works by pressing the lift buttons.



Remote Control Instructions

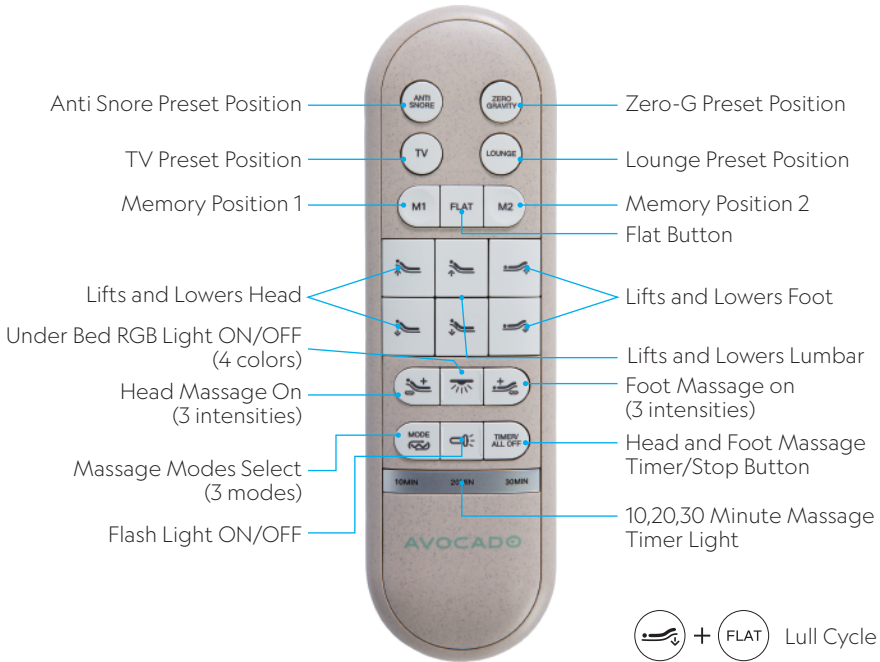

Excessive use of the massage motors, over 30 minutes at a time, will cause the motor to shut down and possibly overheat.

Do not use massage for more than 30 minutes at a time.

Turn massage back on after 30 minutes rest to prevent damage to the motors or the adjustable base.

The massage motors are loud when on high speed and on a cement or hard wood floor or tile floor.


Pairing Remote Control Instructions

The original remote that comes in the box, should already pair with the base. In the even that the remote is not paired with the base, follow these steps.

Remote Is Not Paired With The Base

STEP 1

Make sure the batteries in remote work fine. Replace them when necessary.

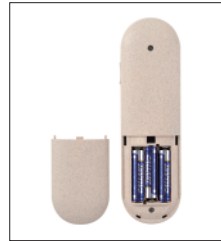


STEP 2

Plug the power cord to the power source.



STEP 3

Press and hold the head-up and foot-up buttons simultaneously, then press and hold the pair button on the cord connected to the power supply. Once you hear beeps, the remote is paired.

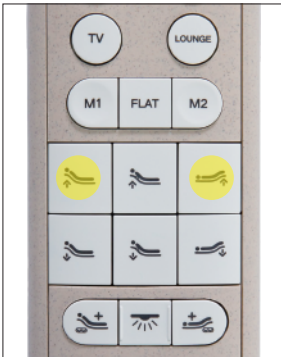

Synchronizing Two Bases

If you have split bases, follow these instructions to operate both sides with one remote control in a synchronized manner.

Skip this step if you don't have split bases.

STEP 1

Make sure each remote control operates a respective side.
(i.e., Remote A controls Base A and Remote B controls Base B).



STEP 2

Pair Remote A to Base B, then Base A and Base B can be simultaneous operated by Remote A.



STEP 3

Test moving both bases with Remote A. Remote B will no longer function.

NOTE: If you want to operate the bases separately again, Remote B can be paired to Base A or Base B again.

Synchronizing Two Bases

Using the Sync Cable

Overview

Two TXL or CKS bases may be placed next to each other to form a King or Cal King. Both sides can be operated independently with their own remotes or, if desired, a single remote can be used with both bases. Using a single remote for both bases will result in the bases moving jointly.

Setting Up Electronics

Step 1

Ensure both bases (A & B) are plugged into a power source and both are in the flat position.

Step 2

Using the splitter cable (included with TXL or CKS bases only) plug both cables into each base's control box. The bases should now be controlled by one remote.



Bluetooth Instructions

STEP 1

Plug base into power source.

STEP 2

Turn Bluetooth on in cell phone.

STEP 3

Install the APP.

Go to APP Store (IOS SYSTEM) / Google Store (ANDROID SYSTEM)
Type "Avocado Adjustable Base" into search field and select
APP, press "install" to install APP onto cell phone as shown below.



STEP 4


Control device via Aavocado Adjustable Base APP.

- 1) Open Avocado Adjustable Base APP that was previously installed on cell phone as shown in picture below.




Bluetooth Instructions

- 2) Open app that was previously installed on cell phone as shown in picture below. Select bed type first and then name your bed, third, select your bed model, last, pair your bed by select the QR code on bed frame (you can find it on the head frame or control box).

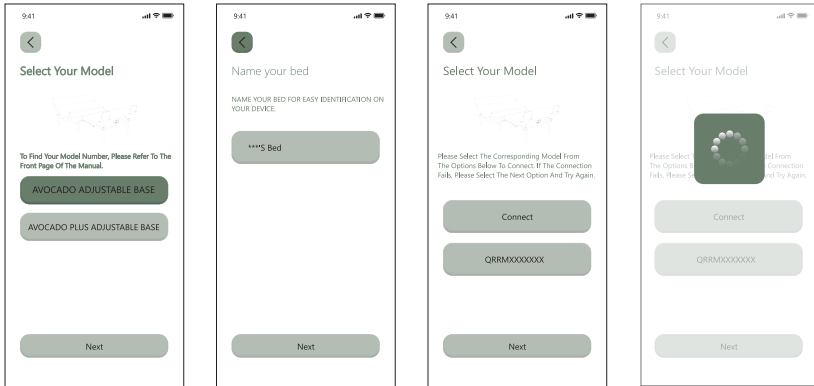

- 3) Open control center and select desired options.

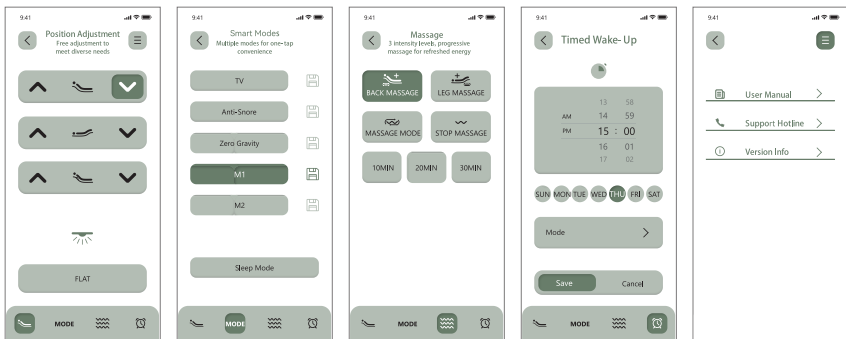

Emergency Battery Backup

Important: The backup battery is only to be used in case of a power outage. Batteries are not to be used for normal operation of the bed. The backup battery will not support repeated movement for an extended period of time.

Backup Battery Use:

Use two 9V batteries only (not included). If a power outage occurs, install the 9V batteries into the power supply to allow temporary power to the base (see image A).

Installing Batteries:


Unplug the power cord from the outlet and remove the cover from the compartment on the underside of the power supply (see image B).

Place two 9V batteries inside, close the cover and plug the power cord back into the wall outlet. The backup battery will not support repeated movement for extended periods of time. After power is restored, unplug power cord, remove the batteries, then plug the power cord back into the wall for normal use.

A



B

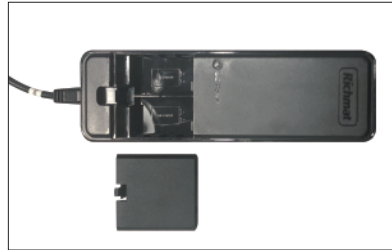

Troubleshooting

In the event that the power foundation fails to operate, assess the symptoms and possible solutions provided in the chart below.

Remote control illuminates and appears to be operable, but will not activate bed.

Verify that the power cord is plugged into a working, grounded electrical outlet. Test the outlet by plugging in another working appliance.

The base's power features will not activate.

Program the remote control (see the Setting Programmable Positions and Pairing Remote section of this manual for programming procedures).
Unplug the power cord, wait 30 seconds, and plug it back in to reset the electronic components. The surge protection device or the electrical outlet may be defective. Test the outlet by plugging in another working appliance.

Wireless remote will not illuminate.

Replace the batteries in the wireless remote.

Head or foot section will elevate, but will not return to the horizontal (flat) position.

Bed mechanism may be obstructed. Elevate the bed and check for an obstruction. Remove the obstruction. The head section may be too close to the wall. The headboard may be too close to the edge of the mattress. Verify that there is enough distance between the headboard brackets and the mattress. Adjust if required.

Troubleshooting

Head and Foot lift function has minor interference during operation.

Check batteries in the wireless remote control, replace with three (3) new AAA batteries if necessary.

Make sure that you are following the duty cycle of the motors (do not operate more than two minutes over an 18-minute period, or approximately 10% duty cycle).

Press the lift buttons squarely and accurately. The wireless remote control may be experiencing common Radio Frequency Interference from other radio transmitting devices. Wait several seconds, and then try pressing the appropriate button again.

See the FCC Compliance Statement on page 3 of this guide.

A clicking noise is heard under the bed when raising or lowering.

This is normal. The lift motor relays “click” when they are engaged. No action is required.

Common Problems & Recommended Solutions

Remote Control or Motor Malfunction:	Ensure the bed is properly plugged into a working outlet. Check the remote batteries or try re-pairing the remote to the bed. If the motor stops mid-function, unplug the bed for 10 minutes and restart. Contact customer service if the issue persists.
Product Does Not Match Description:	Before assembly, verify all parts using the checklist in the manual. If any components are missing or incorrect, contact support immediately for free replacements. Double-check product specs on the purchase page to avoid misunderstandings.
Parts Missing or Damaged:	Inspect all parts before starting installation. If power cables, USB modules, or adaptors are missing/damaged, request a replacement through the warranty service. Photos of damaged parts will help expedite support.
Bed Frame Too High or Uneven:	Check leg height installation settings. Most models have adjustable legs—adjust to preferred height. Re-tighten all bolts evenly to ensure level support.
Noisy Operation or Vibrations:	Some noise during movement is normal. If vibrations are excessive, inspect for obstructions under the bed or loose bolts. Lubricate motor joints if noise continues.
Mattress Slippage:	Reinstall mattress retainer bars. Use a mattress gripper pad between the base and mattress. For heavy movements, secure with Velcro strips.

[illegible]

[illegible]

AVOCADO

Customer Service: 1-855-430-8943