

CVA 7875

30" Coffee maker – PureLine Edst/Clst

Features

Large touch display with proximity sensor – M Touch + MotionReact
 Individual coffee enjoyment with 3 bean containers – CoffeeSelect
 Perfect care – Fully automatic with AutoDescale and AutoClean
 Perfectly positioned: Thanks to the patented CupSensor
 2 coffees at once at the touch of a button – OneTouch for Two

Included Accessories

Glass milk container
 Descaling cartridge
 AutoCleaner




Material

12635830

SPECIFICATIONS



Overall Unit Dimensions	29 13/16" (757 mm) W x 18 7/8" (477 mm) H x 18 5/8" (479 mm) D
Niche	
Minimum Cabinet Niche Opening	28 1/2" (724 mm) W x 18 1/9" (460 mm) H x 24" (610 mm) D
Plumbing	
Water Supply Requirements	Connect to a cold water supply only. Must be connected to a shut-off valve. The watershutoff valve must be accessible after installation. The water pressure must be between 14.5 psi (1 bar) and may not exceed 145 psi (10 bar). If the pressure is higher than 145 psi (10 bar), a pressure reducing valve must be installed.
Water Connection Line (Supplied)	3/4" BSP to 1/4" Compression fitting is supplied. Suitable 1/4" O.D flexible water line or copper piping is not supplied. Maximum water line length 4'11" (1.5 m).
Electrical	
Electrical Requirements	120 V, 60 Hz, 15 Amps
Power Cord	NEMA 5-15 plug, 6 ft (1.8 m)
Shipping	
Shipping Weight	83.7 lbs (38 kg)
Shipping Dimensions	32 3/4" (830 mm) W x 22 7/8" (580 mm) H x 23 1/16" (585 mm) D

Product Dimensions

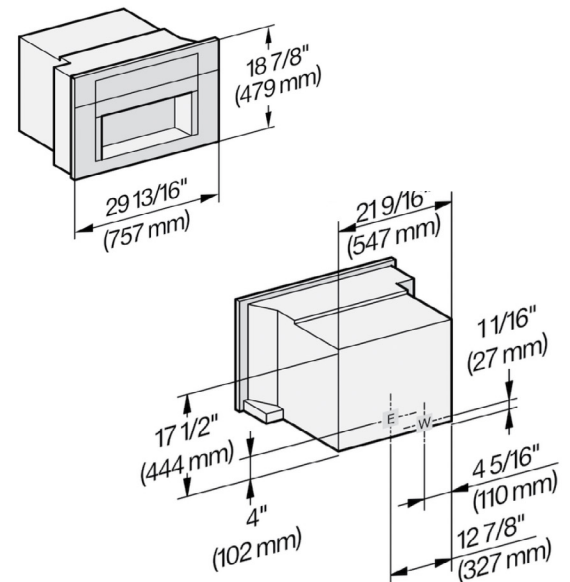


Flush Cutout Dimensions

Front View

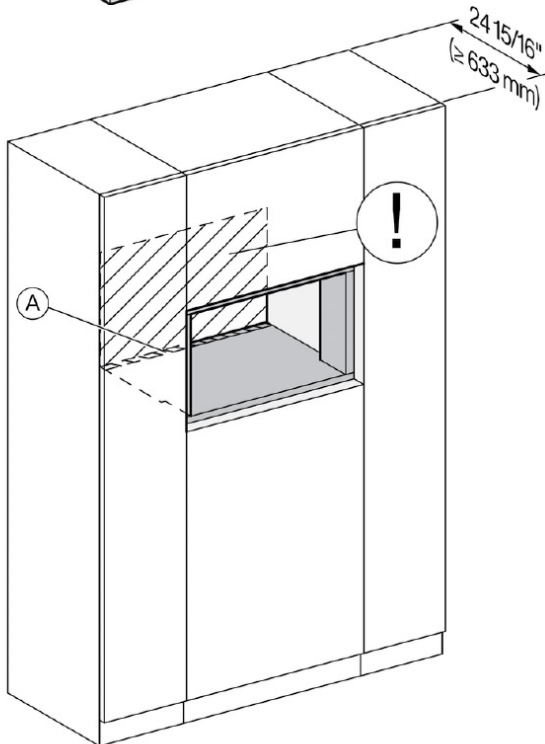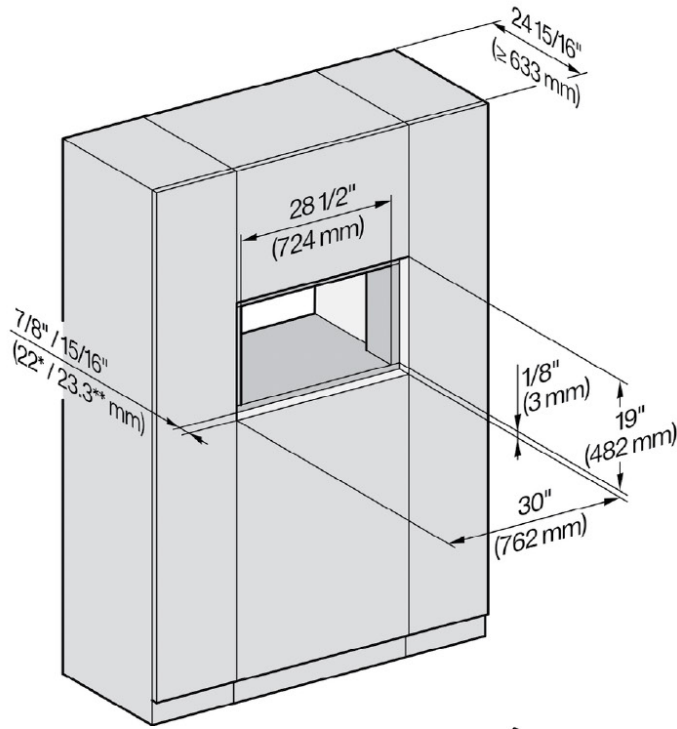


Side View

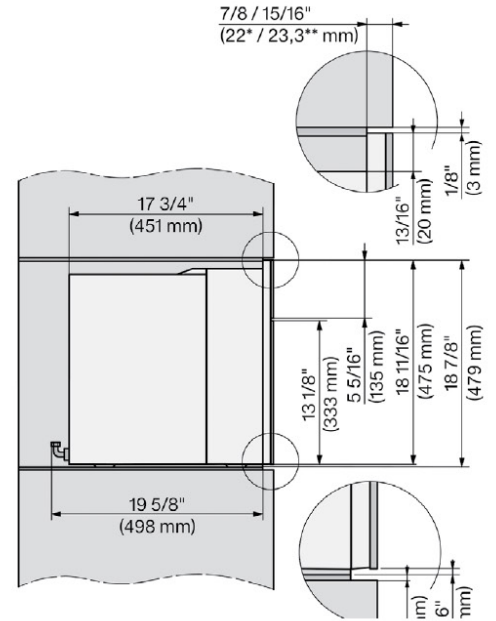



- A – Cut-out ($4" \times 28" - 100 \text{ mm} \times 720 \text{ mm}$) in the bottom of the cabinet for the power cord and Ventilation.
- Electrical and water supplies are recommended to be placed in adjacent cabinetry.
- Additional cabinet depth is required when placing the electrical and water supplies behind the appliance.

Product Cutout Dimensions

Front View

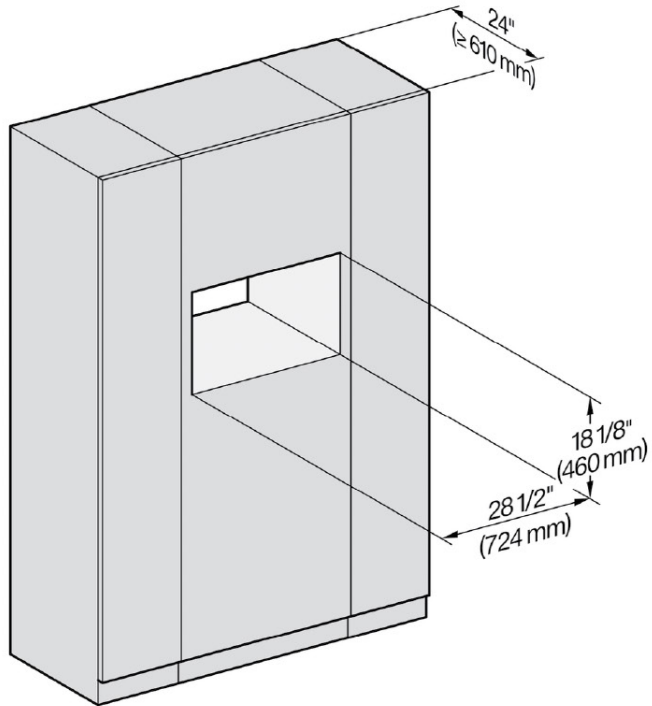

Side View

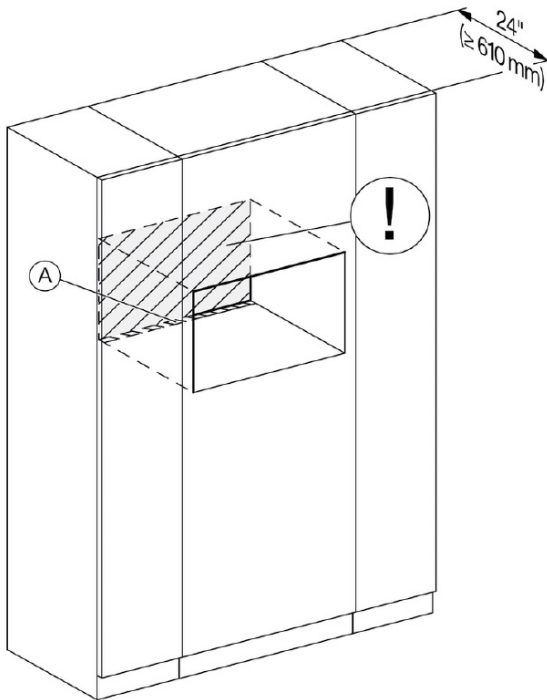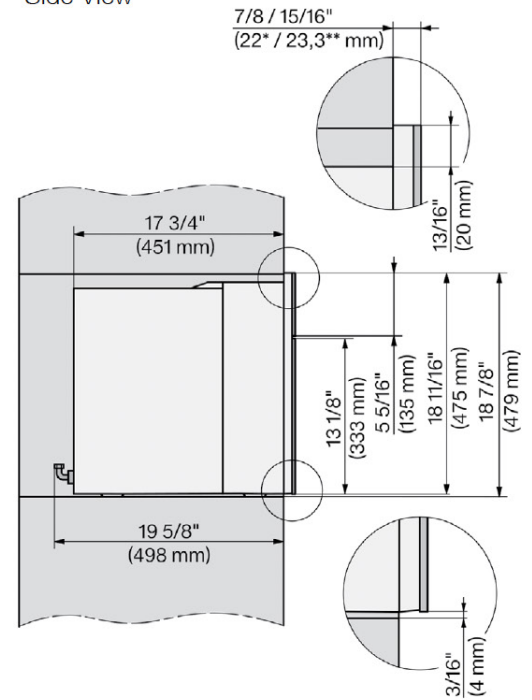

- A –Cut-out (4" x 28" – 100 mm x 720 mm) in the bottom of the cabinet for the power cord and Ventilation.
- Electrical and water supplies are recommended to be placed in adjacent cabinetry.
Additional cabinet depth is required when placing the electrical and water supplies behind the appliance.