

# Adjustable Comfort<sup>®</sup>

ADJUSTABLE BASE



M5X1 SERIES

## Owner's Manual

Serial Number: \_\_\_\_\_

(Place your serial number here for ready reference. The serial number is printed at the back of the battery compartment cover of the remote control.)

## Model Name: Adjustable Comfort

This product and all our bedding products are covered by one or more of the following issued and pending U.S. patents including Nos. 9706848, 9744088, 8209801, 9795223, 8769739, 8209800, 9706848, 8769739, D663968, and other patents pending.

Photos are for illustration purposes only.

IF YOU EXPERIENCE ANY TROUBLE WITH YOUR ADJUSTABLE BASE WITHIN THE WARRANTY PERIOD, PLEASE CONSULT THE TROUBLESHOOTING GUIDE PROVIDED WITH YOUR BASE AND ONLINE, IF APPLICABLE.

IF PROBLEMS PERSIST, PLEASE CALL:

CUSTOMER CARE TOLL FREE NUMBER

**1-844-966-0809**

Please have your receipt and product serial number ready.  
The serial number is printed at the back of the battery compartment cover of the remote control.

# Table of Contents

Safety Precautions	4
Parts List	6
Installation Guide	7
Remote Control Guide	12
Troubleshooting	13
Warranty Information	15

# Safety Precautions

## ATTENTION!

### IMPORTANT SAFETY INSTRUCTIONS.

PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT.



#### ELECTRICAL SAFETY

Always unplug this adjustable base from the electrical outlet before any cleaning or maintenance of the adjustable base. To safely disconnect, make sure all controls are in the off position, then remove the plug from the outlet.

Keep cord away from heated surfaces. Keep air openings free of lint, hair and the like. Never operate when air openings are blocked. Never drop or insert any object into any opening. Use only indoors.

Cease use of this adjustable base and contact the adjustable base Customer Care Center for repair if: (1) it has a damaged cord or plug, (2) it is not working properly, (3) it has been dropped or damaged, or (4) it has been dropped into water.

#### GROUNDING SAFETY

To reduce the risk of electric shock, electrical fire, or faulty operation of this product, your adjustable base may feature a polarized plug meant to be used only with a grounded electrical outlet. If this plug does not fit into your outlet, contact a qualified electrician to install a properly grounded outlet. Failure to use a properly grounded outlet for this product will compromise this important grounding safety feature. The use of adapters is not recommended unless the outlet is checked by a qualified electrician to ensure the proper grounding of the adapter. NOTE: Unauthorized modifications to this product could void the electrical portion of your Warranty.

#### WARRANTY WARNING!

This base is specifically designed to require no maintenance by you, the user. Any opening or tampering with the control box, motors, or hand controls (with the exception of the battery compartment if equipped) will result in a void of the Warranty. Only those authorized may conduct repairs or part replacement on your adjustable base. Unauthorized modifications to this product could void the electrical portion of your Warranty.

#### IN-HOME USE ONLY

This adjustable base is designed exclusively for in-home use.

HOSPITAL DISCLAIMER: It is NOT designed for hospital use and is NOT designed to meet hospital standards. Do not use this base with TENT TYPE oxygen therapy equipment or use near explosive gases.

#### IMPORTANT SAFETY FEATURES

Weight fail safe feature: In the case that an overload of weight is placed on the head or foot mechanism, the control unit will automatically stop all functions. The control unit will automatically resume all functions 30 seconds after excess weight is removed.

The recommended weight limitations for your adjustable base is 850 lb. on all sizes. For your adjustable base to structurally support the recommended weight, weight must be distributed evenly across the head and foot sections. The adjustable base will not and is not intended to support or lift this amount in just the head or foot section. Dependent on the size and/or model of mattress, the available weight limit may be less.

NOTE: If your adjustable base is positioned on a hard floor surface such as hardwood or tile, it is recommended that rubber cups or carpet squares are placed under the legs to prevent damaging or scratching your floor.

#### USER-SERVICEABLE PARTS

This base is specifically designed to have no maintenance by you, the user. Therefore, you are encouraged not to open any motors, alter the wiring, or adjust, modify or change the structure of the product, as it will void the Warranty.

#### RADIO FREQUENCY IS 2.4 GHz

FCC compliant device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's right to operate the device.

# Safety Precautions



## CONSUMERS WITH PACEMAKERS

It is possible that the (optional) vibrating feature of this base may be misinterpreted by some pacemakers as movement and/or exercise. This is common with any product that produces a vibrating motion, and may or may not affect your pacemaker. Please consult your physician with any concerns.

## PRODUCT RATINGS

**Lift Motor Restrictions:** The lift motors in this base are NOT designed to operate continuously for more than three (3) minutes over a thirty (30) minute time period, or approximately 10% duty cycle. To ensure reliable functionality and full life of this product, do not attempt to exceed these limits.

**NOTE:** Attempting to circumvent or exceed this rating will shorten the life expectancy of the product and may void the Warranty.

The structure of the base will support the recommended weight when distributed evenly across the base. The head and foot sections are not designed to individually support or lift this amount of weight. For optimal performance, entering and exiting the adjustable base with the base in the flat or level position is recommended.

**NOTE:** Exceeding the recommended weight restrictions could damage your adjustable base and void your Warranty.



## SMALL CHILDREN AND PETS WARNING

Immediately dispose of all packing materials as it can pose a smother risk to small children and pets. Injury could occur also if children or pets are permitted to play on or under the base. Do not allow children to operate this base without adult supervision.

## LIFT WARNING

Do not sit on the head or foot sections while in the raised position, or during lift or lowering cycles.

## MOVING AFTER INSTALLATION

Do not place adjustable base vertically on its head or foot sections. This may cause injury to persons or damage to the adjustable base. Two people are required for moving this adjustable base due to its heavy weight.

## SAFETY

When an overload of weight is placed on the head or foot mechanism, the control unit will automatically stop all functions. The control unit will automatically resume all functions 30 seconds after the excess weight is removed.

**NOTICE:** The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**IMPORTANT NOTE:** To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

## SAVE THESE INSTRUCTIONS

Proper operation of your adjustable base is necessary to ensure the long life and durability you expect from a high-quality product. The manufacturer has tested and inspected this product prior to shipment.

# Parts List

Before discarding any packing materials, check the adjustable base carton and verify all items in the parts list are included.



Remote control (1)



12" legs (6)



Power cable (1)



Mattress retainer  
bar (1)



Bed leg strap (1) \*\*

\*\* The bed leg strap is only available with Twin XL and Split CK beds.

# Installation Guide

**NOTE:** For safety reasons, lifting of the adjustable base must always be performed by two (2) people; and the unit should always be on a flat surface before opening.

## Setting up your adjustable base


- 1** Lift the folded adjustable base out of the box, place it on a flat floor and unfold it.

**NOTE:** Hold the edge of the base when unfolding it. Do not hold the metal frames to avoid potential injury.




- 2** Remove any accessory boxes from inside the frame. Remove the legs, retainer bracket, and power supply attached to the base.

**NOTE:** Take note of the other orange zip tie holding the frame near the head section of the base. You will cut this tie later in the setup.

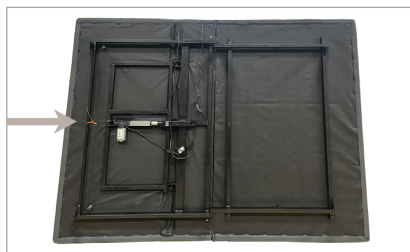

Zip tie on the head section of the base


- 3 IMPORTANT!** Insert the pins through the bars on both sides of the frame to securely connect the two sections of the bed.

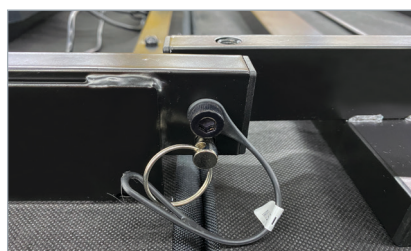


# Installation Guide

- 4** Attach the bed legs to the adjustable base by threading them in a clockwise direction into the pre-drilled holes on the frame.

**NOTE:** Tighten the bed legs. After using the base for a period of time or when the base wobbles unsteadily, check the legs and tighten them again if necessary.

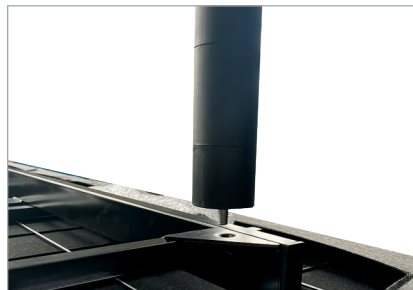


- 5** Take the remote control and power cables from the head lift motor. Connect the remote control cable to the wired remote control. Connect the DC cable to the power cable.

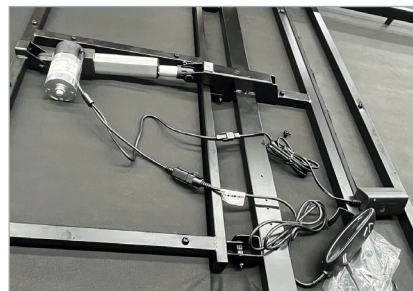

- 6** Lift one side of the base and then turn it over carefully so the top side is now facing up.

**NOTES:**

- When turning the base over, hold the frame and not any part of the deck to avoid damaging the adjustable base.
- Do not put stress on the base when resting it on its side as this may damage the legs.

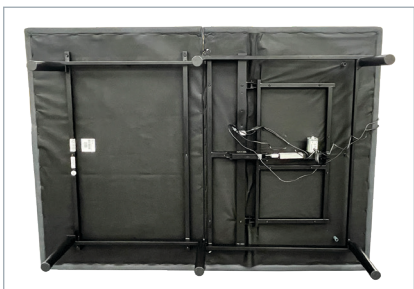




# Installation Guide

- 7** From under the head section of the base, cut and remove the orange zip tie holding the frame.

**NOTES:**

- Cut the zip tie only **AFTER** the adjustable base is turned over on its legs with the top side facing up.
- The zip tie on the head section of the bed is easily accessible for cutting.

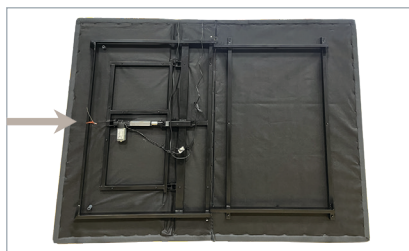

Zip tie on the head section of the base



- 8** Plug the AC power cable into a working electrical outlet.

- 9** Test all functions on the remote to make sure all features are operational.

**NOTE:** If the base does not move, see the Troubleshooting section of this manual.

- 10** Return base to flat position before continuing with the installation.

**NOTE:** Make sure your base is in a flat position before using it.



**IMPORTANT!** Make sure power cords do not obstruct any adjustable base mechanisms.

# Installation Guide

## Attaching the mattress retainer bar

- 1** Align the open ends of the retainer bar with the “loop” retainer anchors located at the foot of the base.
- 2** Slide the retainer bar into the anchors allowing the ends to glide into the loop.

If the adjustable base is set up without a headboard, place your mattress on the adjustable base surface. Your adjustable base installation is now complete.

If a headboard is to be installed, see “Assembling the headboard bracket.”



## Installing the bed leg strap (optional)

To help prevent base separation when using two adjustable bases together, use the bed leg straps.

- 1** Line up the two adjustable bases, then use the bed leg strap to wrap the inside legs together tightly (front leg to front leg and back leg to back leg).
- 2** Fasten the strap to prevent movement & maintain stability.



# Installation Guide

## Assembling the headboard bracket (optional)

**NOTE:** Headboard bracket parts are sold separately.

- 1 Turn the adjustable base over with the top side facing downward.
- 2 Remove the leg from the head section of the adjustable base by turning the leg in a counter-clockwise direction.
- 3 Slide the inner headboard bracket over the hole for the leg installation. (The bracket opening should face away from the adjustable base.)
- 4 Screw the leg back in by turning it clockwise. This will secure the inner headboard bracket to the adjustable base.
- 5 Place the open side of the outer headboard bracket onto the exposed square tube of the inner headboard bracket.
- 6 Insert a retainer bolt fitted with a washer through the outer headboard bracket and into the inner headboard bracket. Tighten the bolt with an Allen key wrench. Leave loose enough for adjusting.
- 7 Repeat steps 2 to 6 to install the brackets on the other side of the head section of the adjustable base.



**NOTE:** When the headboard brackets are assembled, make sure there is a space of 1.5 inches (38.1mm) to 2 inches (50.8mm) between the edge of the base and the headboard brackets.

- 8 Turn the adjustable base over into an upright position. Move the base and the headboard as close as possible to their final location, then install the headboard.

**NOTE:** If you need to adjust the headboard brackets, unscrew the bolts holding the outer headboard brackets and move the brackets accordingly. Reinstall the bolts and tighten securely.

- 9 Place your mattress on the adjustable base. Your adjustable base and headboard installation is now complete.

### IMPORTANT!

- Failure to follow the installation steps as they appear in this guide could result in damage to your adjustable base.
- For safety reasons, lifting of the adjustable base must always be performed by two (2) people; and the unit should always be on a flat surface.
- Make sure to position the bottom of the headboard cross member no more than 3 inches (76.2mm) between the headboard and the top of the mattress.

# Remote Control Guide



## HEAD UP ADJUSTMENT (1)

Press and hold the up ▲ button to raise the head section of your adjustable base.

## HEAD DOWN ADJUSTMENT (1)

Press and hold the down ▼ button to lower the head section of your adjustable base.

## USB PORT (3)

Use this USB port to charge your device while using your adjustable base.

## Using the remote control USB port

The convenient USB port located at the top of your remote control provides easy access for charging today's tech devices.



# Troubleshooting

In the event the adjustable base fails to operate, investigate the symptoms and possible solutions below.

## SYMPTOM

## SOLUTIONS

**The adjustable base does not respond when the remote is used. The remote does not work.**

**No features or functions of the adjustable base activates.**

**Remote control does not work or light up.**

- Make sure that the power cord is plugged into a working electrical outlet. Unplug the power cord from the outlet. After 30 seconds, plug it back in. Press any button on the remote control and check if the base responds.
- Make sure that the electrical outlet is not defective. Test the outlet by plugging in another working appliance.
- Make sure that the remote control is properly connected to the lift motor.
- Make sure the lift motor is properly connected to the power supply unit.

**The adjustable base stutters when in motion.**

- Clear any clutter or obstructions under and around the adjustable base. Radio frequency interference from other remotes or electronic devices may affect normal operation.
- Check the batteries in the remote.
- Press the lift buttons firmly and accurately.

**Head section elevates adjustable base but does not return to flat position.**

- Your adjustable base may be obstructed preventing smooth operation. Remove obstructions from around and under the base.
- Check that the head section is not too close to the wall.
- If a headboard is installed, check that it is not too close to the edge of the mattress. Make sure there is enough distance between the headboard bracket and the mattress.

# Troubleshooting

In the event the adjustable base fails to operate, investigate the symptoms and possible solutions below.

## SYMPTOM

## SOLUTIONS

**Head lift function has minor interference during operation.**

- Make sure that you are following the duty cycle of the motors. Do not operate for more than two minutes over a 20-minute period or approximately 10% duty cycle.
- Press the lift buttons firmly and accurately.

**The adjustable base is squeaking.**

1. Remove or loosen any pin, nut, bolt, or screw one at a time.
2. Lubricate pins, nuts, bolts, or screws by applying the grease with a cotton swab. Using a lithium or spray lubricant is recommended. (Lubrication can be obtained by contacting our Customer Care Center).
3. When placing the lubricated pin, nut, bolt, or screw back onto the adjustable base, make sure there is a looser tightening on the nut.
4. Additional solution: After completing these steps, spray the pins, nuts, bolts, and screw with a lubricant.

# Warranty Information

## Limited Warranties

The following Limited Warranties are given to the original purchaser, subject to all the terms and conditions below. These Limited Warranties are non-transferable.

Ashley Furniture Industries, LLC ("Ashley"), subject to all the limitations and exclusions described in these Limited Warranties, warrants the following products and parts against material manufacturing defects for the duration set forth next to that product or part in the table below. All warranty periods commence on the date of delivery of the product.

Product or Part	Limited Warranty Duration*	Labor Coverage
<b>Power Foundation Frame***</b>	<i>Limited Lifetime Warranty**</i>	1 Year
<b>Power Foundation Mechanism and Electrical Components</b>	<i>3 Year Limited Warranty</i>	1 Year
<b>Mattress***</b>	<i>10 Year Limited Warranty</i>	1 Year
<b>Foundation</b>	<i>10 Year Limited Warranty</i>	1 Year

\* Notwithstanding the Limited Warranty Duration in the table above, the Limited Warranty Duration for any product purchased for rental or for use under a rent-to-own program shall be for 1 Year from the date of delivery.

\*\* As used in these Limited Warranties, "lifetime" means the normal useful life of the product under reasonable use.

\*\*\* Ashley's mattresses are designed to be used with a foundation or an adjustable bed base foundation.

### Remedy

Under these Limited Warranties, Ashley's exclusive obligation during the applicable warranty period is to repair or replace, at its option, upon examination by an authorized representative of Ashley, the applicable product or part not in conformity with these Limited Warranties. After 1 Year, the Power Foundation Frame and Power Foundation Mechanism and Electrical Components Limited Warranties

cover replacement parts only. REFUNDS ARE NOT AVAILABLE. If within the warranty period, identical materials are unavailable at the time of repair or replacement, Ashley reserves the right to substitute materials of equal or better quality.

In addition, during the period of any applicable Labor Coverage, Ashley will pay reasonable and customary labor rates to repair or replace the defective parts (at Ashley's option) and shipping costs from the retailer to and from Ashley, at no charge to the original purchaser. After the expiration of the Labor Coverage or for all products or parts not covered by Labor Coverage, the original purchaser will be responsible for labor, packing, and all shipping and transportation costs.

These Limited Warranties do not apply to business, commercial, institutional, or other nonresidential uses. These Limited Warranties do not apply to (i) merchandise that was, at any time, used as a floor sample or display model, (ii) merchandise purchased "as is" or secondhand, (iii) merchandise purchased at a distress sale or a going-out-of business sale, or (iv) merchandise purchased from a liquidator. All warranties, whether express or implied, cover only normal household usage. No warranty, express or implied, applies to any condition resulting from misuse, abuse, delivery, or transportation damage, nor any condition resulting from incorrect or inadequate maintenance, cleaning, or care. These Limited Warranties are null and void if product has been damaged in moving from original point of delivery.

# Warranty Information


## *Modifications to Products*

These Limited Warranties do not apply to any products that have been altered by any person, dealer, or company without the express written authorization of Ashley.

## **LIMITATIONS AND EXCEPTIONS**

These Limited Warranties do not cover the following:

- Fabric stains, soiling, and burns.
- Border wires, which run along the perimeter of the mattress or foundation, that are bent due to moving or bending.
- Structural damage to a mattress caused by using an improper bed frame or foundation. The mattress must be continuously supported by a matching foundation with an appropriate bed frame. An appropriate bed frame must completely support the foundation. These Limited Warranties apply to queen and king mattresses and foundations only if they are used on an appropriate bed frame with a rigid center support having at least 5 legs and 3 cross slats.
- A mattress or foundation that is not defective.

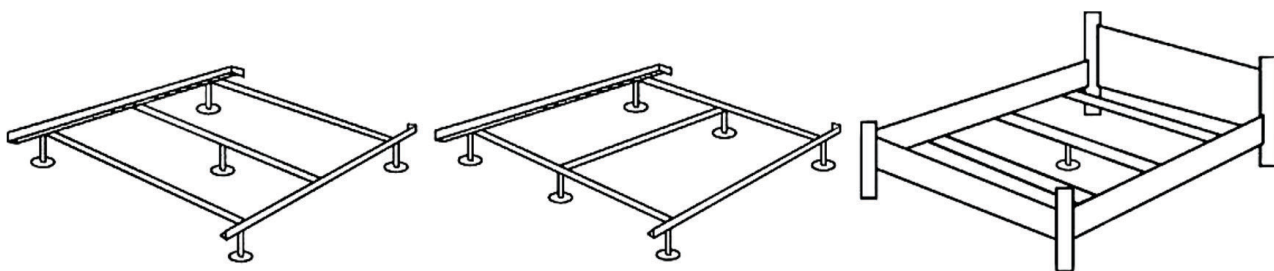

- Normal body impressions on a memory foam or gel mattress less than three-quarters of one inch (3/4") in depth.
- Normal body impressions on an inner spring mattress less than one and one-half inches (1 1/2") in depth.
- Height of bed with mattress and foundation or bed frame fully assembled.
- The zippered mattress cover more than two (2) years after the date of delivery.
- Comfort preference.
- Sheet fit.
- Transportation costs.

## **Implied Warranties**

IMPLIED WARRANTIES, INCLUDING ANY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IMPOSED ON THE SALE OF THIS PRODUCT AND ITS PARTS UNDER STATE LAW, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD AND NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

## **DISCLAIMER**

NO OTHER EXPRESS WARRANTY HAS BEEN MADE OR WILL BE MADE ON BEHALF OF ASHLEY WITH RESPECT TO THE PRODUCT AND ITS PARTS, OR THE OPERATION, REPAIR, OR REPLACEMENT THEREOF. FURTHERMORE, NO REPRESENTATIVE OF ASHLEY OR ITS DISTRIBUTORS OR RETAILERS IS AUTHORIZED TO MAKE ANY CHANGES OR MODIFICATIONS TO THESE LIMITED WARRANTIES.

SOME RETAILERS OFFER EXTENDED OR ADDITIONAL WARRANTIES, INCLUDING BUT NOT LIMITED TO EXTENDED OR ADDITIONAL FABRIC WARRANTIES, EITHER FROM THE RETAILER OR THROUGH A THIRD PARTY. ASHLEY SHALL NOT BE LIABLE UNDER ANY EXTENDED OR ADDITIONAL WARRANTIES OFFERED BY ANY RETAILER OR THROUGH A THIRD-PARTY UNDER ANY CIRCUMSTANCES.



# Warranty Information

THE TERMS AND CONDITIONS STATED IN THESE LIMITED WARRANTIES SHALL BE THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY IN THE EVENT OF A MANUFACTURING DEFECT DURING THE WARRANTY PERIOD. IN NO EVENT SHALL ASHLEY BE RESPONSIBLE FOR DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, PUNITIVE, EXEMPLARY, OR SIMILAR DAMAGES, WHETHER INDIRECT OR DIRECT, AND WHETHER ARISING IN CONTRACT OR TORT.

IN NO EVENT SHALL ASHLEY'S RESPONSIBILITY BE OTHER THAN ITS SOLE OBLIGATION TO REPAIR OR REPLACE THE PRODUCT. IN NO EVENT SHALL ASHLEY'S RESPONSIBILITY EXCEED THE PURCHASE PRICE OF THE PRODUCT OR ITS REPLACEMENT, THIS EXCLUSIVE REMEDY SHALL NOT BE DEEMED TO HAVE FAILED OF ITS ESSENTIAL PURPOSE SO LONG AS ASHLEY IS WILLING AND ABLE TO REPAIR OR REPLACE ANY PRODUCT FOUND, UPON EXAMINATION BY AN AUTHORIZED REPRESENTATIVE OF ASHLEY, TO CONTAIN A MATERIAL MANUFACTURING DEFECT DURING THE LIMITED WARRANTY PERIOD. Some states do not allow the exclusion or limitation of certain damages, so the above limitation or exclusion may not apply to you.

IF YOU USE AN INAPPROPRIATE FOUNDATION OR BOX SPRING WITH THIS MATTRESS, SUCH USE WILL VOID THESE LIMITED WARRANTIES. ASHLEY RESERVES ALL RIGHTS TO DISCONTINUE ITEMS AND CHANGE PRODUCT SPECIFICATIONS WITHOUT NOTICE.

REMOVAL OF ZIPPERED COVERS VOIDS THE MATTRESS WARRANTY. THESE COVERS ARE NOT MACHINE WASHABLE.

Ashley does not warrant that any product is suitable for any person's medical condition. Ashley makes no warranty beyond that which is contained in these Limited Warranties.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

## **Claim Procedure**

If a problem arises which you feel is covered by these Limited Warranties, contact the authorized retailer from which you purchased the product. All claims must include the original bill of sale, the product serial number, and the law label (from the mattress and/or foundation) and be filed within the applicable warranty period, to satisfy the Limited Warranty requirements. Ashley may require you to provide proof of the quality of the foundation used with your mattress. If necessary, the retailer will contact Ashley to establish service. If the problem can be easily corrected, Ashley will authorize the retailer to make those repairs. Ashley reserves the right to require that defective parts be returned upon request.

## **MRP78767**

### **Claim Procedure Continued**

Ashley is not responsible for scheduling or the cost of transporting the product from your home to the retailer or from the retailer to your home. You must make those arrangements with the retailer. If the retailer you purchased from has closed and you need service, contact Ashley in writing or call our Customer Service number for instructions.

### **Ashley Warranty and Retailer Information**

Ashley Furniture Industries, LLC Attn: Consumer Affairs  
One Ashley Way Arcadia, WI 54612  
Parts Website: [ashleyfurniture.parts](http://ashleyfurniture.parts)  
Customer Service Phone Number: 844-966-0809

### **Caution**

The power foundation has many moving parts. Caution must be used in operation. Children should not be allowed to play on or operate the power foundation. Always leave the power foundation in the flat position, and keep hands, fingers, and body parts away from the mechanism.

# Warranty Information

Ashley reserves the right to refuse service and invalidate these Limited Warranties when, upon inspection, the mattress or foundation is found to be in an unsanitary condition or when product failure is due to causes other than defective workmanship or materials. Please refer to the "Mattress & Foundation Care Instructions" section of this Limited Warranty for proper mattress and foundation care.

## MATTRESS & FOUNDATION CARE INSTRUCTIONS

### DO

- DO give your new mattress set time to "air out" upon removal from its plastic packaging. Dispose of all plastic packaging as soon as possible.
- DO carry your mattress flat on its side. It's easier to handle and you'll be less likely to damage the mattress.
- DO keep your bedding clean. We suggest using a mattress pad or mattress protector, especially if children use the bed.
- DO replace the old foundation when purchasing a new mattress. An old foundation may not provide sufficient support. It may appear that your new mattress is sagging when it is really the foundation, which supports the entire mattress.
- DO use an appropriate frame and center support for queen and king-size sets. Using the right support frame will ensure that your warranty remains in effect.
- DO allow your memory foam mattress to warm to room temperature. The memory foam is temperature sensitive and will soften when it is warm.

### DON'T

- DON'T PLACE YOUR MATTRESS NEAR OPEN FLAME OR EXPOSE TO FIRE. THIS MATTRESS IS NOT FLAME OR FIREPROOF, AND CAN IGNITE AND/OR BURN IF EXPOSED TO OPEN FLAME OR FIRE. WHEN IGNITED, SOME BEDDING MATERIAL CAN BURN RAPIDLY AND EMIT SMOKE AND HAZARDOUS GASES.
- Don't smoke in bed. This mattress is manufactured as required by Federal law to resist, but not necessarily eliminate, ignition by smoldering cigarettes.
- Don't let anyone stand or jump on your mattress or foundation. It was not built for that kind of weight concentration or abuse.
- Don't allow your mattress to get wet because some of the upholstery materials may compress. Protect it from water or other liquids.
- Don't remove the law label or tag at the end of your mattress. This label serves as a means of identification to establish your right to the Limited Warranty.
- Don't use dry cleaning fluid of any type on your mattress. These chemicals will damage some of the construction materials and will void the Limited Warranty.
- Don't place pillow-top side of mattress on bottom.



**IF YOU EXPERIENCE ANY TROUBLE WITH YOUR ADJUSTABLE BASE WITHIN THE WARRANTY PERIOD,  
PLEASE CONSULT THE TROUBLESHOOTING GUIDE PROVIDED WITH YOUR BASE AND ONLINE, IF APPLICABLE.**

**IF PROBLEMS PERSIST, PLEASE CALL:**

**CUSTOMER CARE TOLL FREE NUMBER**

**1-844-966-0809**

Please have your receipt ready and available.

**THANK YOU AND ENJOY YOUR ADJUSTABLE BASE!**