


Distributed by Furniture Values International, LLC


ITEM NO: I32-412/403/402 Queen Liquid Panel LP Bed I32-492/403/402 Queen Painted Panel LP Bed

| COMPONENTS LIST -412/492                                       |                                      | HARDWARE PACK For -412/492   |                                    |
|--|--------------------------------------|--|------------------------------------|
| Headboard Left Leg Right Leg Wood Stretcher Center Support Leg | 1 Pc<br>1 Pc<br>1 Pc<br>1 Pc<br>1 Pc | A Bolt (Ø5/16"*2") B Bolt (Ø5/16"*1-1/2") C D Lock Washer (Ø5/16") D Flat Washer (Ø5/16"*3/4") | 8 Pcs<br>6 Pcs<br>14 Pcs<br>14 Pcs |
| COMPONENTS LIST -403 Footboard                                 | 1 Pc                                 | E Allen Wrench (4mm) HARDWARE PACK For -402  | 1 Pc                               |
| Support legs (for slats)                                       | 4 Set                                | F Swood Screw (M4*1")  | 8 Pcs                              |
| COMPONENTS LIST -402   | • •                                  | G Allen Wrench (4mm)   | 1 Pc                               |
| Bed rails<br>Slats   | 2 Pcs<br>4 Pcs                       |  |                                    |


#### **SAFETY WARNING:**

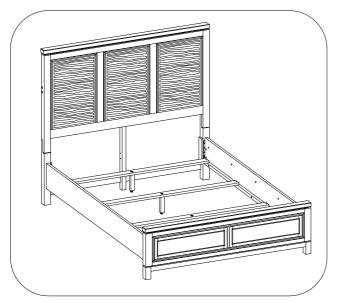

Queen Liquid Panel LP Bed

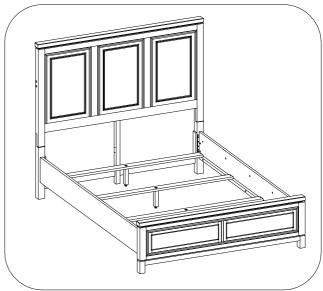


Queen Painted Panel LP Bed

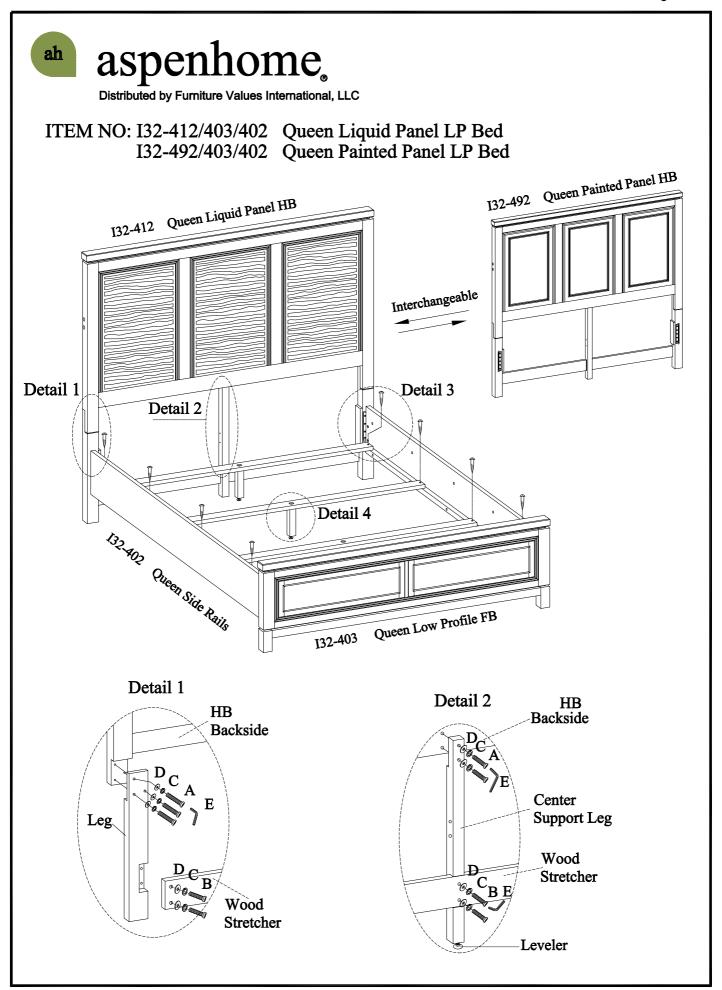



Distributed by Furniture Values International, LLC

ITEM NO: I32-412/403/402 Queen Liquid Panel LP Bed I32-492/403/402 Queen Painted Panel LP Bed

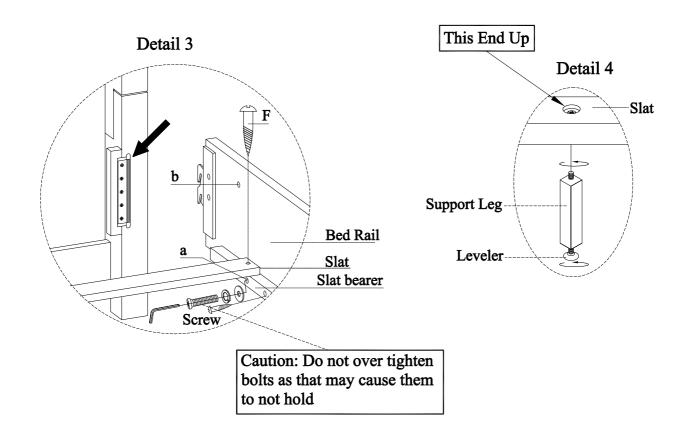

- 1. Attach legs to headboard using 6 bolts A, and attach wood stretcher to the legs using 2 bolts B as shown in detail 1. Then attach center support leg to the headboard using 2 bolts A and to the wood stretcher using 2 bolts B. Use an Allen Wrench to tighten all the bolts. See detail 2.
- 2. The slat bearers have been attached in the position b. You have to move your slat bearers in to position a. Remove the bolts (10pcs) and screws (8pcs) from the slat bearers to the side rails. Then re-attach the slat bearers to the side rails with bolts, lock washers, flat washers and screws. See detail 3.
- 3. Hook the side rails to the headboard and footboard as shown in detail 3.
- 4. Assemble the support legs with leveler to the slats as shown in detail 4, and attach the slats to the slat bearer equally with wood screws (F), as shown in detail 3. Adjust the levelers on bottom of support legs when necessary.





Distributed by Furniture Values International, LLC

ITEM NO: I32-412/403D/402 Queen Liquid Panel Storage Bed I32-492/403D/402 Queen Painted Panel Storage Bed

| COMPONENTS LIST -412/492  |                        | HARDWARE PACK For -412/492   |  |
|---|------------------------|--|--|
| Left Leg Right Leg  | 1 Pc<br>1 Pc<br>1 Pc   | A Bolt (Ø5/16"*2") B Bolt (Ø5/16"*1-1/2") C D Lock Washer (Ø5/16)  | 8 Pcs<br>6 Pcs<br>14 Pcs                 |
| 1,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,   | 1 Pc<br>1 Pc           | D @ Flat Washer (Ø5/16"*3/4") E Allen Wrench (4mm)                 | 14 Pcs<br>1 Pc                           |
| Bed rails Slats  COMPONENTS LIST -403D  Footboard Support legs (for center rail) Support leg (for pedestal) | 1 Pc<br>2 Pcs<br>3 Pcs | HARDWARE PACK For -403D  F   | 8 Pcs<br>8 Pcs<br>8 Pcs<br>8 Pcs<br>1 Pc |
| Center Rail   | 1 Pc                   | HARDWARE PACK For -402  K Wood Screw (M4*1")  L Allen Wrench (4mm) | 8 Pcs<br>1 Pc                            |

### **SAFETY WARNING:**

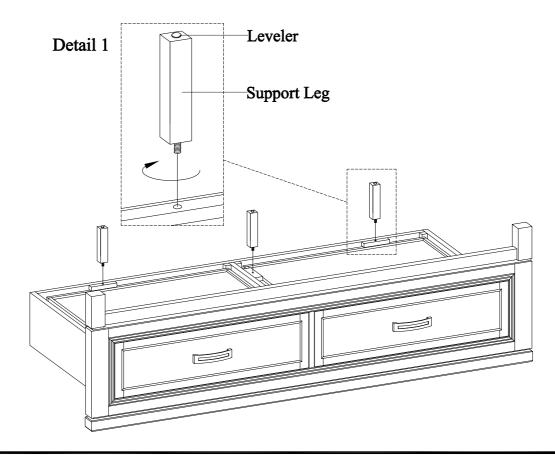


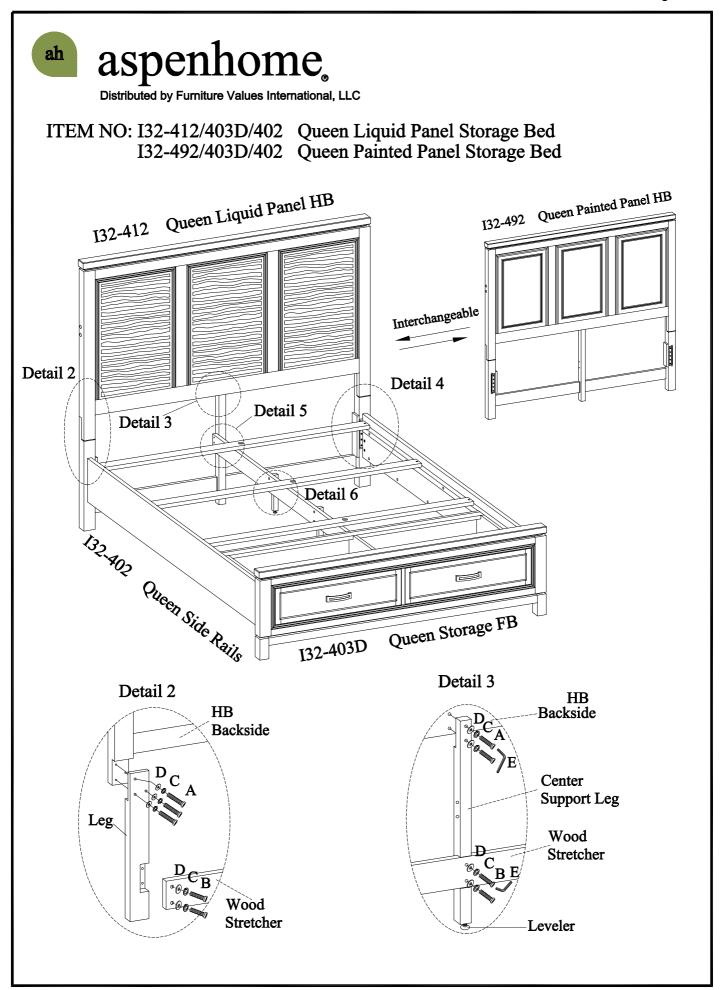




Distributed by Furniture Values International, LLC

ITEM NO: I32-412/403D/402 Queen Liquid Panel Storage Bed I32-492/403D/402 Queen Painted Panel Storage Bed

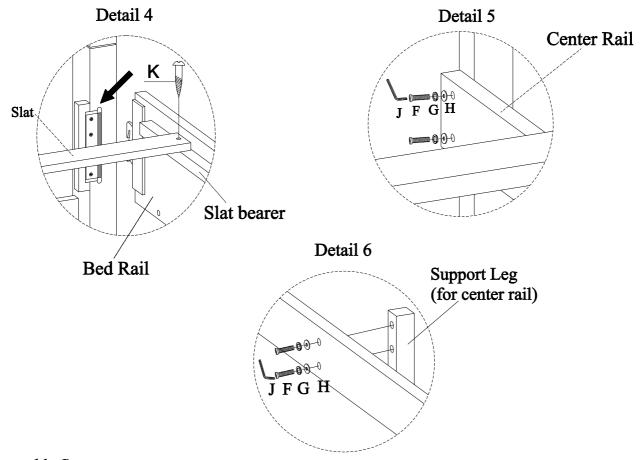

- 1. Assemble support legs (for pedestal) to footboard. See detail 1.
- 2. Attach legs to headboard using 6 bolts A, and attach wood stretcher to the legs using 2 bolts B as shown in detail 2. Then attach center support leg to the headboard using 2 bolts A and to the wood stretcher using 2 bolts B. See detail 3. Use an Allen Wrench to tighten all the bolts.
- 3. Hook the side rails to the headboard and footboard as shown in detail 4.
- 4. Assemble center rail to the headboard center support leg and footboard using 4 bolts F, see detail 5.
- 5. Assemble 2 support legs (for center rail) to the center rail using 4 bolts F, see detail 6.
- 6. Locate the slats on the slat bearers with proper distance. Then attach the slats to the slat bearers with wood screws (K), as shown in detail 4.
- 7. Adjust the levelers on bottom of support legs when necessary.
- 8. Put the decking on the bed, secure decking to the slats with wood screws (I) through the pre-drilled holes in the decking as shown above.

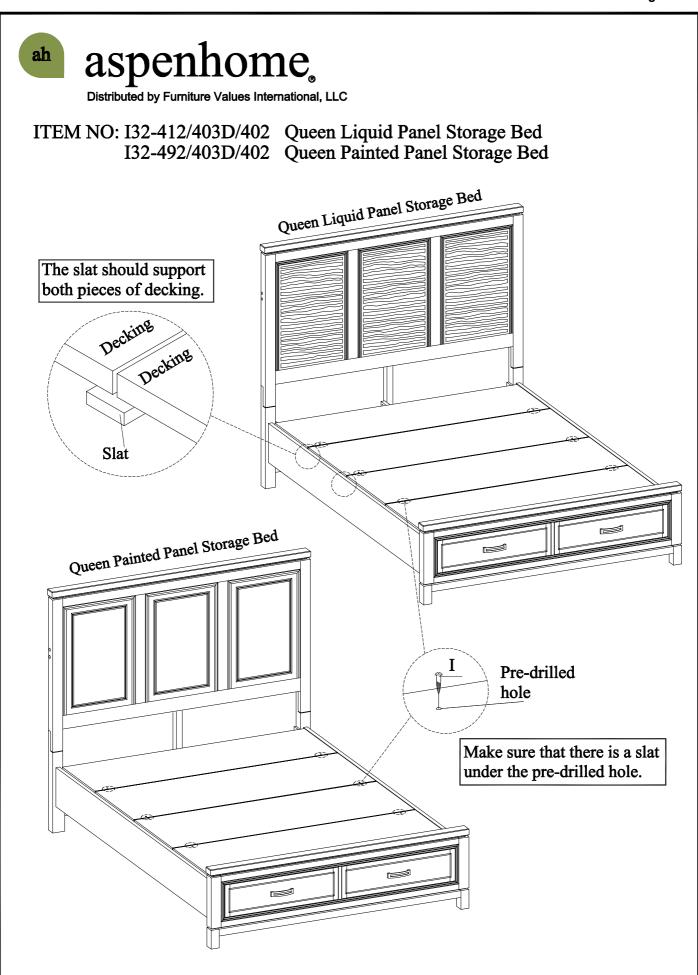




Distributed by Furniture Values International, LLC


ITEM NO: I32-415/407/406 & 415/407/410 King/Cal King Liquid Panel LP Bed I32-495/407/406 & 495/407/410 King/Cal King Painted Panel LP Bed

| COMPONENTS LIST -415/495 |              | HARDWARE PACK For -415/495    |        |
|--------------------------|--------------|-------------------------------|--------|
| Headboard                | 1 Pc         | A Bolt (Ø5/16"*2")            | 8 Pcs  |
| Left Leg                 | 1 Pc         | Bolt (Ø5/16"*1-1/2")          | 6 Pcs  |
| Right Leg Wood Stretcher | 1 Pc<br>1 Pc | C   O Lock Washer (Ø5/16")    | 14 Pcs |
| Center Support Leg       | 1 Pc         | D @ Flat Washer (Ø5/16"*3/4") | 14 Pcs |
| COMPONENTS LIST -407     |              | E Allen Wrench (4mm)          | 1 Pc   |
| Footboard                | 1 Pc         | HADDWADE DACK For 406/410     |        |
| Support legs (for slats) | 5 Set        | F                             | 10 Pcs |
| COMPONENTS LIST -406     |              | G Allen Wrench (4mm)          | 1 Pc   |
| Bed rails                | 2 Pcs        | • 7 mon wronon (4mm)          | 110    |
| Slats                    | 5 Pcs        |                               |        |
| COMPONENTS LIST -410     |              |                               |        |
| Bed rails                | 2 Pcs        |                               |        |
| Slats                    | 5 Pcs        |                               |        |
| Center Rail (long)       | 1 Pc         |                               |        |
| Magnetic Plate           | 4 Pcs        |                               |        |

#### **SAFETY WARNING:**

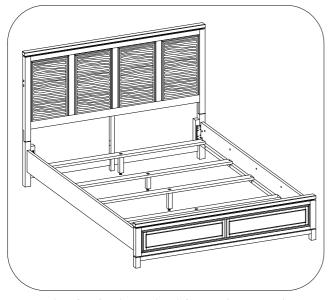

King/Cal King Liquid Panel LP Bed

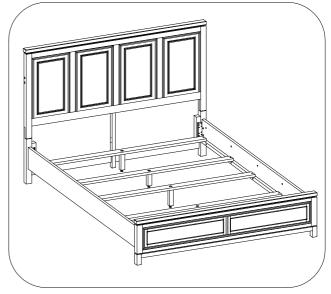



King/Cal King Painted Panel LP Bed




Distributed by Furniture Values International, LLC

ITEM NO: I32-415/407/406 & 415/407/410 King/Cal King Liquid Panel LP Bed I32-495/407/406 & 495/407/410 King/Cal King Painted Panel LP Bed

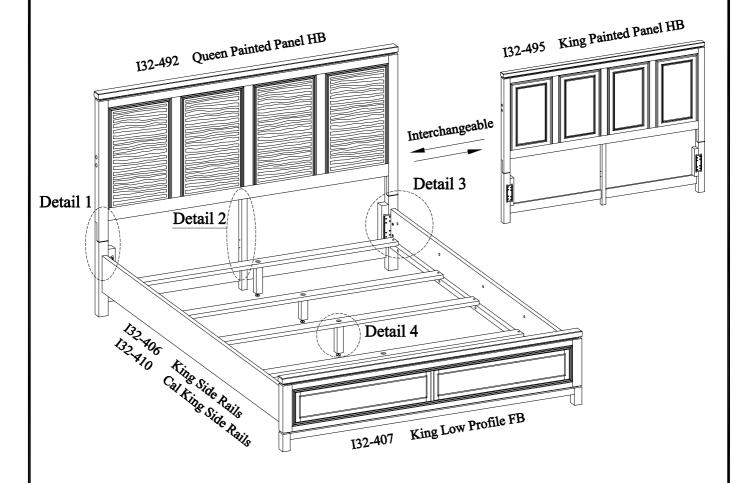

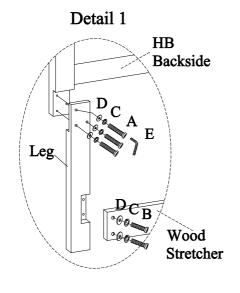


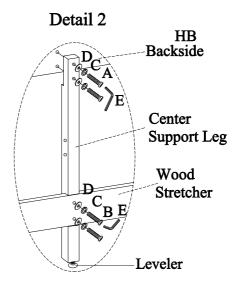



Distributed by Furniture Values International, LLC

ITEM NO: I32-415/407/406 & 415/407/410 King/Cal King Liquid Panel LP Bed I32-495/407/406 & 495/407/410 King/Cal King Painted Panel LP Bed

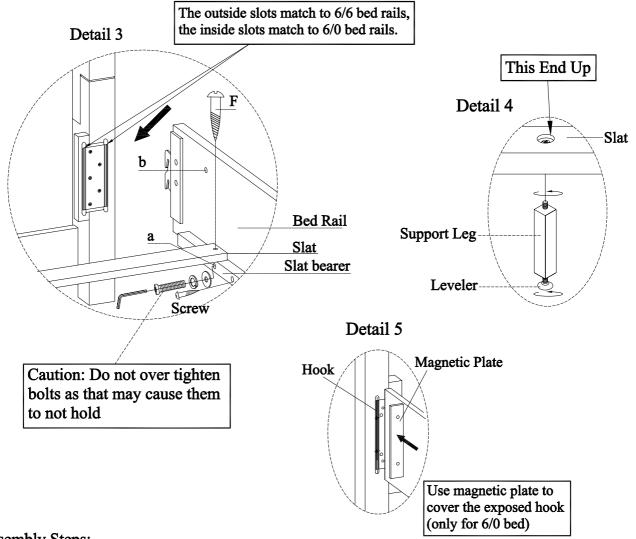

- 1. Attach legs to headboard using 6 bolts A, and attach wood stretcher to the legs using 2 bolts B as shown in detail 1. Then attach center support leg to the headboard using 2 bolts A and to the wood stretcher using 2 bolts B. Use an Allen Wrench to tighten all the bolts. See detail 2.
- 2. The slat bearers have been attached in the position b. You have to move your slat bearers in to position a. Remove the bolts (10pcs) and screws (8pcs) from the slat bearers to the side rails. Then re-attach the slat bearers to the side rails with bolts, lock washers, flat washers and screws. See detail 3.
- 3. Hook the side rails to the headboard and footboard as shown in detail 3.
- 4. Assemble the support legs with leveler to the slats as shown in detail 4, and attach the slats to the slat bearer equally with wood screws (F), as shown in detail 3. Adjust the levelers on bottom of support legs when necessary.




Distributed by Furniture Values International, LLC

ITEM NO: I32-415/407D/406 & 415/407D/410 King/Cal King Liquid Panel Storage Bed I32-495/407D/406 & 495/407D/410 King/Cal King Painted Panel Storage Bed

| COMPONENTS LIST -415/495       |              | HARDWARE PACK For -415/495    |             |
|--------------------------------|--------------|-------------------------------|-------------|
| Headboard                      | 1 <b>P</b> c | A Bolt (Ø5/16"*2")            | 8 Pcs       |
| Left Leg                       | 1 Pc         | B Bolt (Ø5/16"*1-1/2")        | 6 Pcs       |
| Right Leg                      | 1 Pc         | C                             | 14 Pcs      |
| Wood Stretcher                 | 1 Pc         | l                             | 14 Pcs      |
| Center Support Leg             | 1 <b>Pc</b>  | 1                             |             |
| COMPONENTS LIST -406           |              | E Allen Wrench (4mm)          | 1 Pc        |
| Bed rails                      | 2 Pcs        | HARDWARE PACK For -407D       |             |
| Slats                          | 5 Pcs        | F Bolt (Ø5/16"*1-1/2")        | 8 Pcs       |
| COMPONENTS LIST -410           | 0 D          | G O Lock Washer (Ø5/16")      | 8 Pcs       |
| Bed rails                      | 2 Pcs        | H @ Flat Washer (Ø5/16"*3/4") | 8 Pcs       |
| Slats                          | 5 Pcs        | _ 0 11at (Vasio) (05/10 5/1)  | 6 Pcs       |
| Center Rail (long)             | 1 Pc         | I ⇔ Wood Screw (M4*1")        |             |
| Magnetic Plate                 | 4 Pcs        | J Allen Wrench (4 mm)         | 1 Pc        |
| COMPONENTS LIST -407D          |              | HARDWARE PACK For -406/410    |             |
| Footboard                      | 1 Pc         | K ⇔ Wood Screw (M4*1")        | 10 Pcs      |
| Support legs (for center rail) | 2 Pcs        |                               |             |
| Support leg (for pedestal)     | 3 Pcs        | L Allen Wrench (4mm)          | 1 <b>Pc</b> |
| Decking                        | 3 Pcs        |                               |             |
| Decking (Filler)               | 2 Pcs        |                               |             |
| Center Rail (short)            | 1 Pc         |                               |             |


### **SAFETY WARNING:**

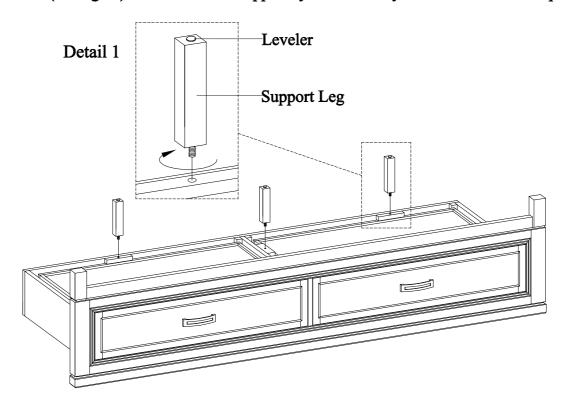




Distributed by Furniture Values International, LLC


ITEM NO: I32-415/407D/406 & 415/407D/410 King/Cal King Liquid Panel Storage Bed I32-495/407D/406 & 495/407D/410 King/Cal King Painted Panel Storage Bed

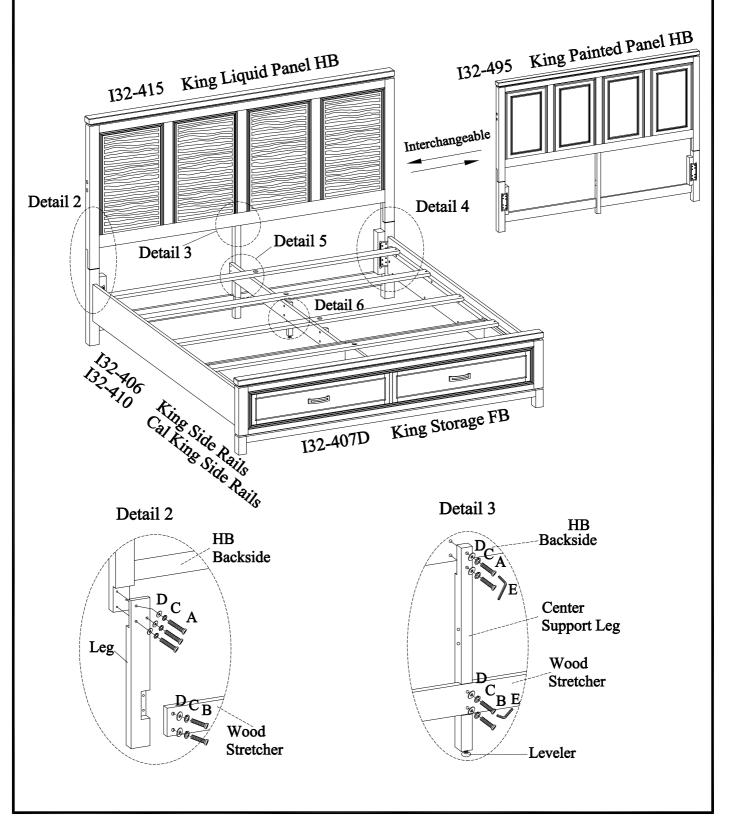






Distributed by Furniture Values International, LLC

ITEM NO: I32-415/407D/406 & 415/407D/410 King/Cal King Liquid Panel Storage Bed I32-495/407D/406 & 495/407D/410 King/Cal King Painted Panel Storage Bed

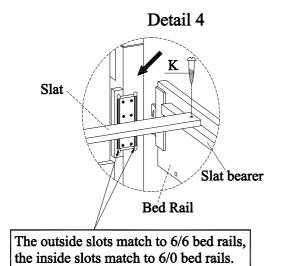

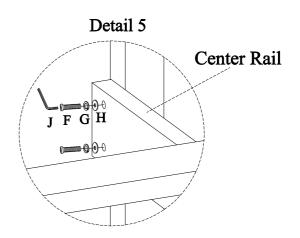

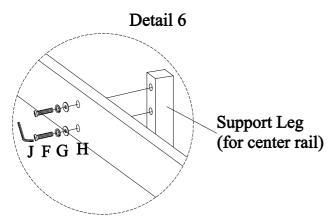

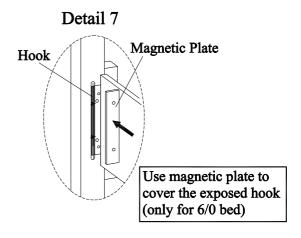

- 1. Assemble support legs (for pedestal) to footboard. See detail 1.
- 2. Attach legs to headboard using 6 bolts A, and attach wood stretcher to the legs using 2 bolts B as shown in detail 2. Then attach center support leg to the headboard using 2 bolts A and to the wood stretcher using 2 bolts B. See detail 3. Use an Allen Wrench to tighten all the bolts.
- 3. Hook the side rails to the headboard and footboard as shown in detail 4.
- 4. Assemble center rail to the headboard center support leg and footboard using 4 bolts F, see detail 5.
- 5. Assemble 2 support legs (for center rail) to the center rail using 4 bolts F, see detail 6.
- 6. Locate the slats on the slat bearers with proper distance. Then attach the slats to the slat bearers with wood screws K, as shown in detail 4.
- 7. Adjust the levelers on bottom of support legs when necessary.
- 8. Put the decking on the bed, secure decking to the slats with wood screws (I) through the pre-drilled holes in the decking as shown above. When the filler is used in 6/0 Cal King bed, please use a utility knife to cut off the small piece and discard from the notch.



Distributed by Furniture Values International, LLC

ITEM NO: I32-415/407D/406 & 415/407D/410 King/Cal King Liquid Panel Storage Bed I32-495/407D/406 & 495/407D/410 King/Cal King Painted Panel Storage Bed

