

# CLA-024-102H/F/R-122H/F/R BOTERO QUEEN/KING BED

## CARACOLE CLASSIC

### ASSEMBLY INSTRUCTIONS

TWO (2) PEOPLE AND PHILIP'S SCREWDRIVER REQUIRED

PLEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

- 1) Connect the side rails and headboard / footboard by bolt (F).
- 2) Assemble the side rails and headboard / footboard using the curved washer (A), flat washer (B), lock washer (C), and nut (D) tighten with wrench provided (E), as shown in Diagram A.
- 3) Attach the center support rail on the Cleat of headboard & footboard, Using Philips' screw driver to tighten the screw (N )as shown in diagram C.
- 4) Attach the bed slats on the center support rail and cleat of side rails then using Philips' screw driver to tighten the screw (N )as shown in diagram D.
- 5)The bed slats are adjustable and you can move it to another location by Wrench provided (M )as shown in Diagram B.

\*\*\* NOTE KEEP THIS SHEET!!! \*\*\*

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Caracole International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

| Part Description              | CLA-024-102<br>QUEEN BED |     | CLA-024-122<br>KING BED |     |
|-------------------------------|--------------------------|-----|-------------------------|-----|
|                               |                          | QTY | Part No.                | QTY |
| Headboard (1)                 | CLA-024-102-H            | 1   | CLA-024-122-H           | 1   |
| Footboard (2)                 | CLA-024-102-F            | 1   | CLA-024-122-F           | 1   |
| Side Rail (3)                 | CLA-024-102-R            | 2   | CLA-024-122-R           | 2   |
| Center Support Rail (4)       | CLA-024-102-R            | 1   | CLA-024-122-R           | 2   |
| Slat (5)                      | CLA-024-102-F-3067       | 12  | CLA-024-122-F-3067      | 12  |
| RTA Hardware(6)               | CLA-024-102-H-30444      | 1   | CLA-024-122-H-30444     | 1   |
| RTA Hardware(7)               | CLA-024-102-R-30443      | 1   | CLA-024-122-R-30443     | 1   |
| RTA Hardware(8)               | CLA-024-102-R-3001       | 1   | CLA-024-122-R-3001      | 1   |
| Adjustable Cleat on Side Rail | CLA-024-102-R-30442      | 2   | CLA-024-122-R-30442     | 2   |
| Adjustable Cleat on Headboard | CLA-024-102-H-30441      | 1   | CLA-024-122-H-30441     | 2   |
| Adjustable Cleat on Footboard | CLA-024-102-H-30441      | 1   | CLA-024-122-H-30441     | 2   |
| RTA Hardware(9)               | CLA-024-102-F-3001       | 1   | CLA-024-122-F-3001      | 1   |

| RTA Hardware for Center Support Rail of QN Bed (6) |                               |      |  |
|----------------------------------------------------|-------------------------------|------|--|
| NO.                                                | Hardware List                 | Q'ty |  |
| G                                                  | Bolt(1/4"x44MM)               | 4    |  |
| H                                                  | Flat Washer(5/16"xR8x1.5mm)   | 4    |  |
| I                                                  | Lock Washer(5/16"xR6.5x1.5mm) | 4    |  |



| RTA Hardware for Center Support Rail of KG Bed (6) |                               |      |  |
|----------------------------------------------------|-------------------------------|------|--|
| NO.                                                | Hardware List                 | Q'ty |  |
| G                                                  | Bolt(1/4"x44MM)               | 8    |  |
| H                                                  | Flat Washer(5/16"xR8x1.5mm)   | 8    |  |
| I                                                  | Lock Washer(5/16"xR6.5x1.5mm) | 8    |  |


| RTA Hardware For Side rail (8) |                    |      |  |
|--------------------------------|--------------------|------|--|
| NO.                            | Hardware List      | Q'ty |  |
| A                              | Curved Washer      | 8    |  |
| B                              | Flat Washer(5/16") | 8    |  |
| C                              | Lock Washer(5/16") | 8    |  |
| D                              | Nut                | 8    |  |
| E                              | Wrench             | 1    |  |
| F                              | Bolt (5/16"x85MM)  | 8    |  |
| M                              | Wrench             | 1    |  |

| RTA Hardware for adjustable side rail cleat (7) |                               |      |  |
|-------------------------------------------------|-------------------------------|------|--|
| NO.                                             | Hardware List                 | Q'ty |  |
| G                                               | Bolt(1/4"x44MM)               | 12   |  |
| H                                               | Flat Washer(5/16" R8x1.5mm)   | 12   |  |
| I                                               | Lock Washer(5/16"xR6.5x1.5mm) | 12   |  |

| RTA Hardware for bed slats of QN Bed (9) |                 |    |  |
|------------------------------------------|-----------------|----|--|
| N                                        | Screw(4.2x32MM) | 58 |  |

| RTA Hardware for bed slats of KG Bed (9) |                 |    |  |
|------------------------------------------|-----------------|----|--|
| N                                        | Screw(4.2x32MM) | 72 |  |

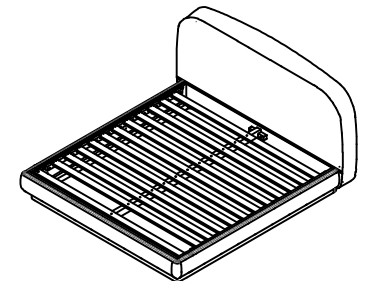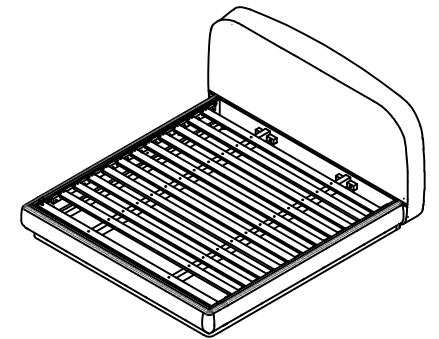

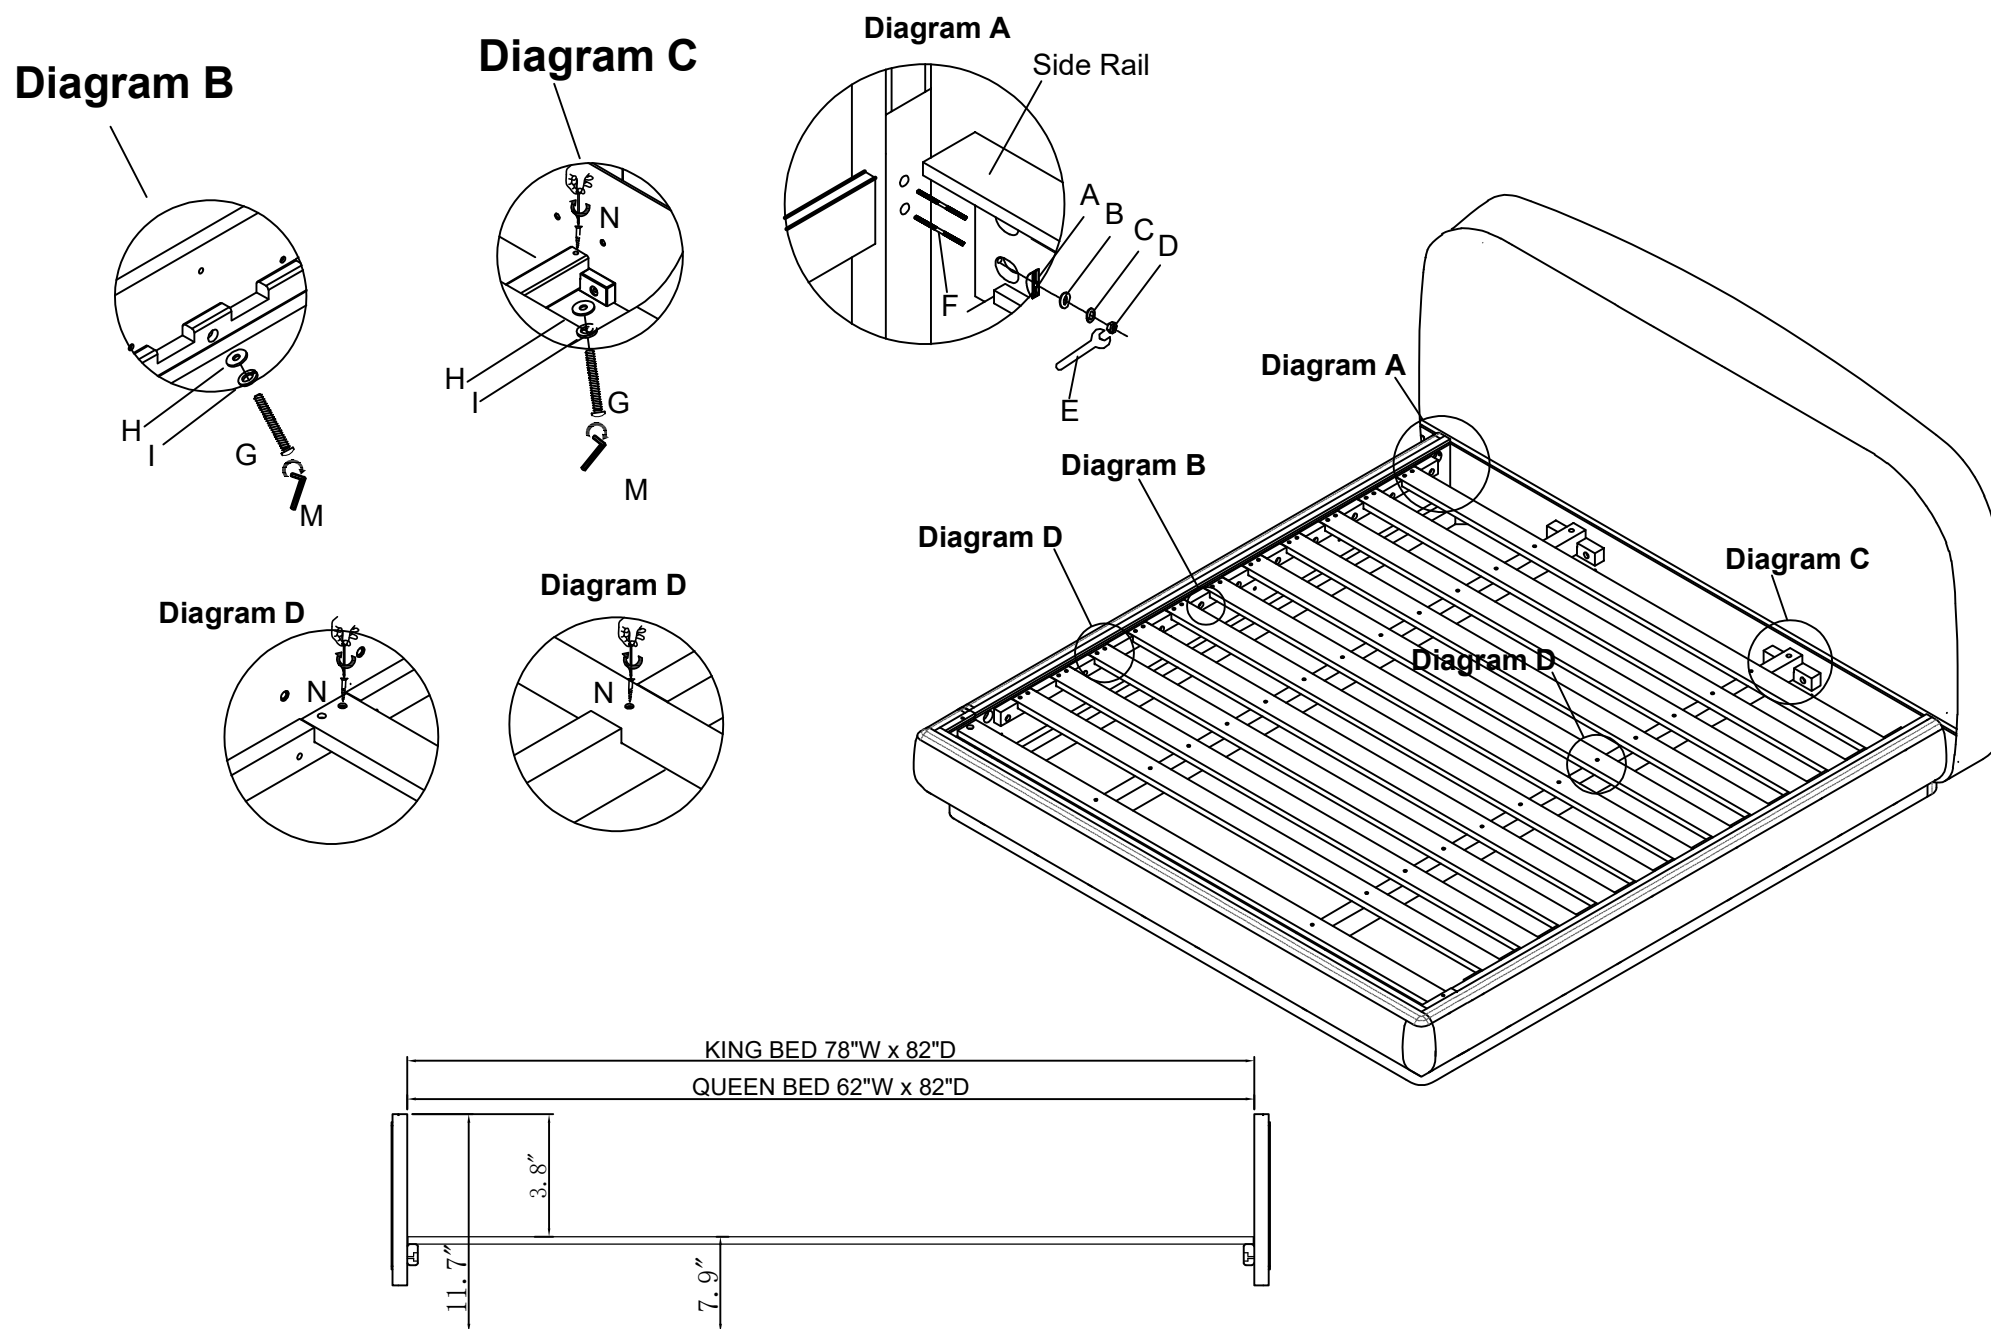

# BED MATTRESS DIAGRAM

3 of 3

## BEDDING SPECIFICATIONS

CLA-024-122 Dimension of the true mattress opening: 82" x 78"

Bed slats: 77.8" x 3" x 0.9"

CLA-024-102 Dimension of the true mattress opening: 82" x 62"

Bed slats: 61.9" x 3" x 0.9"

Side rail width: 4"

Height from the floor to bottom of the side rail: 0"

Height from the floor to top of slat: 7.9" (for low setting) or 10.8" (for high setting)

Height from the top of slats to top of side rail: 3.8" (for low setting) or 0.9" (for high setting)

Height from the top of side rail to bottom of headboard pad: 0"

Be sure to adhere to these BEDDING SPECIFICATIONS in order to avoid the possibility of faling or entrapment THESE SPECIFICATIONS MUST BE STRICTLY ADHERE TO!

