

Fire Garden™


Outdoor Linear Fire Pit Burner

Manual

36" Linear Fire Pit Burner	94900430
60" Linear Fire Pit Burner	94900447
72" Linear Fire Pit Burner	94900310
96" Linear Fire Pit Burner	94900460
120" Linear Fire Pit Burner	94900465



Listed by
Omni-Test Laboratories, Inc.
Report # 0028GM127S
ANSI Z21.97-2017 /CSA 2.41-2017, CSA 2.17-2017
Outdoor Decorative Gas Appliances

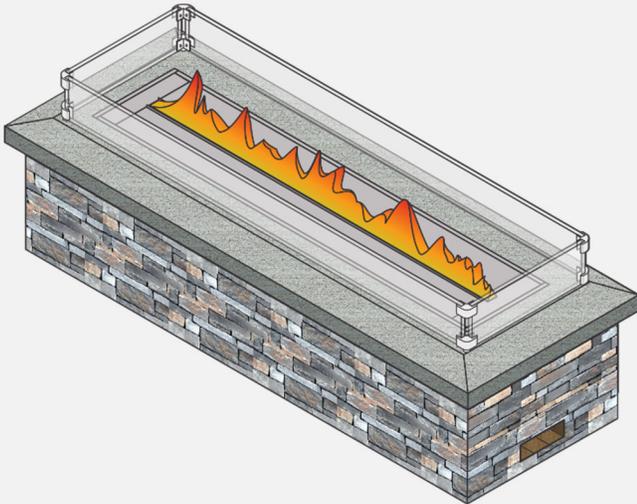

⚠ DANGER
FIRE OR EXPLOSION HAZARD
If you smell gas:

- Shut off gas to the appliance.
 - Extinguish any open flame.
 - If odor continues, leave the area immediately.
 - After leaving the area, call your gas supplier or fire department.
- Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

⚠ WARNING
Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

⚠ WARNING: For outdoor use only. Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

⚠ WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment.

⚠ WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

INSTALLER: Leave this manual with the appliance.
CONSUMER: Retain this manual for future reference



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car, or home.

French language manuals at outdoorfiregarden.com. Manuels de langue Française à outdoorfiregarden.com

Overview

This manual details the installation, operation, and routine maintenance of the Outdoor Linear Fire Pit Burners.

Listing Details

This appliance was tested to ANSI Z21.97-2017 / CSA 2.41-2017 “Outdoor Decorative Gas Appliances”, CSA 2.17-2017 - “Gas-Fired Appliances for Use at High Altitudes”. The listing label is chained to the appliance. A copy is shown to the right.

Important Registration & Service Info

No other appliance has the same serial number as yours. The serial number is on the safety label attached by a chain under the media screen. This serial number will be needed in case you require service of any type. To receive full warranty coverage, you will need to show evidence of the date of purchase. Visit traviswarranty.com to register your appliance. If any service issues arise, contact your dealer for assistance.

National Fireplace Institute



NATIONAL FIREPLACE INSTITUTE
CERTIFIED
www.nficertified.org

We suggest that our gas hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Gas Specialists.

Dealer Information

Please record your dealer information here for future reference:

Dealer Name: _____
 Dealer Address: _____
 Dealer E-Mail: _____
 Dealer Phone #: _____

CALIFORNIA RESIDENTS



WARNING: This product can expose you to chemicals including Carbon Monoxide and Benzene, which are known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Serial Number



	LP
NG	LP
Input Rating (BTU/h) Orifice Size	7" wc 11" wc 7" wc 11" wc 6" wc 10" wc
Manifold Pressure	
Max. Inlet Pressure	
Min. Inlet Pressure	

GAS RATING
 Input Rating (BTU/h)
 Orifice Size
 Manifold Pressure
 Max. Inlet Pressure
 Min. Inlet Pressure

Tested to: ANSI Z21.97-2017 / CSA 2.41-2017 “Outdoor Decorative Gas Fireplace”, “CSA 2.17-2017 - “Gas-Fired Appliances for Use at High Altitudes”, Suitable for use in elevations of 0-4500 ft (0-1370 m). Electrical Rating: 120 VAC., 60 Hz, 0.9 Amps (Electrical rating for the basic model only: 24 VAC., 60 Hz, 1.6 Amps.)
 For outdoor installation only. The gas supply must be turned off at the LP-gas supply cylinder when this appliance is not in use (if applicable). Cover must be removed when burner is in operation.

MANUFACTURE DATE:

<input type="checkbox"/> 2023	<input type="checkbox"/> Jan.	<input type="checkbox"/> Apr.	<input type="checkbox"/> Jul.	<input type="checkbox"/> Oct.
<input type="checkbox"/> 2024	<input type="checkbox"/> Feb.	<input type="checkbox"/> May	<input type="checkbox"/> Aug.	<input type="checkbox"/> Nov.
<input type="checkbox"/> 2025	<input type="checkbox"/> Mar.	<input type="checkbox"/> Jun.	<input type="checkbox"/> Sep.	<input type="checkbox"/> Dec.

Min. Clearances to Combustible Materials*
 *See manual for further details

Overview.....	2	Using More than One 24-volt Appliance	29
Listing Details	2	Wiring Multiple Transformers to One Switch... 29	
Important Registration & Service Info	2	Wiring Multiple Appliances to One Transformer 30	
Safety Precautions	4	Daisy-Chain Example	30
Features:	5	Direct-Run Example.....	30
Installation Options:	5	Daisy-Chain Wire Length Chart.....	31
Electrical Specifications:	5	Direct-Run Wire Length Chart	32
Appliance Weight:.....	5	Wiring Examples:.....	32
Gas Specifications:.....	5	Daisy-Chain Installations:	32
Linear Fire Pit Burner Dimensions:.....	6	Direct Run Installations:.....	32
Installation Warnings:	9	Steps for Finalizing the Installation	33
Recommended Order of Installation	9	Crushed Glass Installation.....	33
Packing List	9	Tumbled Stone Installation	34
Additional Items Required.....	10	Assembling the Glass Wind Guard (36" and 60" units).....	35
Assembling the Burner (72", 96" & 120" UNITS ONLY).....	11	Assembling the Glass Wind Guard (72", 96" & 120" units).....	36
Weatherproofing the Installation	13	Before the First Fire.....	38
Appliance Placement Requirements.....	13	Operating Instructions	38
Clearances	14	Location of Controls.....	39
Minimum Framing Dimensions	15	Maintaining Your Appliance	40
Landscaping Block Enclosures.....	16	Accessing Components	41
Enclosure Finish Material - Minimum Dimensions	17	Removing the Media Trays	41
Enclosure Ventilation Requirements.....	18	Accessing the Pressure Tap.....	42
Enclosure Ventilation Grills.....	19	Removing the Burner.....	42
Landscaping Block Enclosure Ventilation ...	19	Accessing Pilot Components	42
Gas Line Requirements.....	20	Winterizing the Appliance	43
LP Conversion	21	Yearly Service Procedure.....	43
Electrical Connection Requirements.....	22	Pilot Service.....	43
24VAC Transformer	22	Replacement Parts List	44
Single Appliance Installations.....	23	Troubleshooting Table.....	45
24v Single Appliance Transformer (sku 94800833).....	23	Warranty	46
Multiple Appliance Installations.....	25	Wiring Diagram.....	47
24v Multiple Appliance Transformer (sku 94800830).....	25	Index.....	48
Wiring Installation	27		

- ! **CAUTION - Do not attempt to light the appliance if the burner is covered in snow or debris.**
- ! **This appliance must be installed in accordance with all local codes if any; if not, follow ANSI Z223.1.**
- ! **This appliance must only be used outdoors in a well-ventilated area. It may not be used in a building, garage, or other enclosed space.**
 - This appliance is not for use with solid fuel.
 - The appliance must be kept clean and free of leaves and debris to ensure safe operation.
 - Any hose or gas supply line that is damaged or shows evidence of excessive abrasion or wear must be replaced prior to the use of the appliance.
 - If using a gas supply line to the appliance, make sure it is properly located away from any walkway or in an area where it may be subject to accidental damage.
 - Educate all children and adults about the dangers of the appliance. Young children should be supervised when they are in the same area as the appliance. Do not let children play with the appliance.
 - This unit must be installed and repaired by a qualified installer to prevent the possibility of an explosion. Your dealer will know the requirements in your area and can inform you of those people considered qualified. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required due to excessive debris from leaves, dirt, insects, etc.
 - Do not use this appliance if any part has been underwater. Immediately call a qualified service technician to inspect the appliance and replace any part of the control system and any gas control that has been underwater.
 - The instructions in this manual must be strictly adhered to. Do not use makeshift methods or compromise in the installation. Improper installation will void the warranty and safety listing.
 - This appliance is approved for either natural gas (NG) or propane (LP). Burning the incorrect fuel will void the warranty and safety listing and may cause an extreme safety hazard. Direct questions about the type of fuel used to your dealer. A label is placed on the control panel to show which fuel the appliance is designed for.
- Do not place clothing or other flammable items on or near the appliance.
- Contact your local building officials to obtain a permit and information on any installation restrictions or inspection requirements in your area.
- Any screen or guard removed for servicing must be replaced prior to operating the appliance.
- If the flame becomes sooty, dark orange in color, or extremely tall, do not operate the appliance. Call your dealer and arrange for proper servicing.
- Do not operate the appliance if it is not operating properly in any fashion or if you are uncertain. Call your dealer for a full explanation of your appliance and what to expect.
- Do not store or use gasoline or other flammable liquids in the vicinity of this appliance.
- Never remove, replace, modify, or substitute any part of the appliance unless instructions are given in this manual for routine maintenance and cleaning. A trained technician must do all other work. Do not modify or replace orifices.
- Allow the appliance to cool before carrying out any maintenance or cleaning.
- Operate the appliance according to the instructions included in this manual.
- If the burner does not start correctly turn the gas off at the gas control valve and call your dealer for service.
- Do not use this appliance to cook food.
- Instruct everyone in the house on how to shut the gas off to the appliance and at the gas main shutoff valve. The gas main shutoff valve is usually next to the gas meter or propane tank and requires a wrench to shut off.
- Do not operate the appliance during a lightning storm or a possible lightning storm.
- Do not operate the appliance during high wind conditions.
- Do not install in or on recreational vehicles and/or boats.
- Do not throw this manual away. This manual has important operating and maintenance instructions that you will need at a later time. Always follow the instructions in this manual.
- **Travis Industries, Inc. grants no warranty, implied or stated, for the installation or maintenance of your appliance, and assumes no responsibility for any consequential damage(s).**

Features:

- Electronic Ignition (switch turns appliance on or off)
- Tempered glass wind guard
- Stainless Steel Construction
- Automatic Gas Shutoff Valve for Safety

Installation Options:

- For Outdoor Installation Only
- For Fixed Gas Line Installations Only

Electrical Specifications:

24 VAC., 60 Hz, 1.6 Amps.

Appliance Weight:



36" Linear Fire Pit Burner	30 lbs (13.6kg)
60" Linear Fire Pit Burner	50 lbs (22.7kg)
72" Linear Fire Pit Burner	60 lbs (27.2kg)
96" Linear Fire Pit Burner	80 lbs (36.3kg)
120" Linear Fire Pit Burner	100 lbs (45.4kg)

Gas Specifications:



All Linear Fire Pit Burners	Gas Pressures	NG	LP
	Manifold Pressure	7" wc	11" wc
	Max. Inlet Pressure	7" wc	11" wc
	Min. Inlet Pressure	6" wc	10" wc
36" Linear Fire Pit Burner	Input Rating	NG	LP
	Input Rating (BTU/h)	65,000	65,000
	Orifice Size (DMS)	(1) - #29	(1) - #41
60" Linear Fire Pit Burner	Input Rating	NG	LP
	Input Rating (BTU/h)	120,000	120,000
	Orifice Size (DMS)	(2) - #30	(2) - #43
72" Linear Fire Pit Burner	Input Rating	NG	LP
	Input Rating (BTU/h)	132,000	132,000
	Orifice Size (DMS)	(2) - #29"	(2) - #41
96" Linear Fire Pit Burner	Input Rating	NG	LP
	Input Rating (BTU/h)	185,000	185,000
	Orifice Size (DMS)	(2) - #30 (1) - #29	(2) - #43 (1) - #41
120" Linear Fire Pit Burner	Input Rating	NG	LP
	Input Rating (BTU/h)	240,000	240,000
	Orifice Size (DMS)	(4) - #30	(4) - #43

Linear Fire Pit Burner Dimensions:



36" Linear Fire Pit Burner

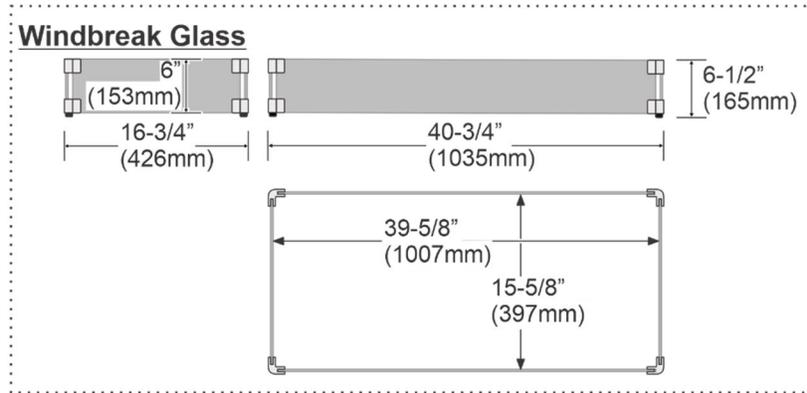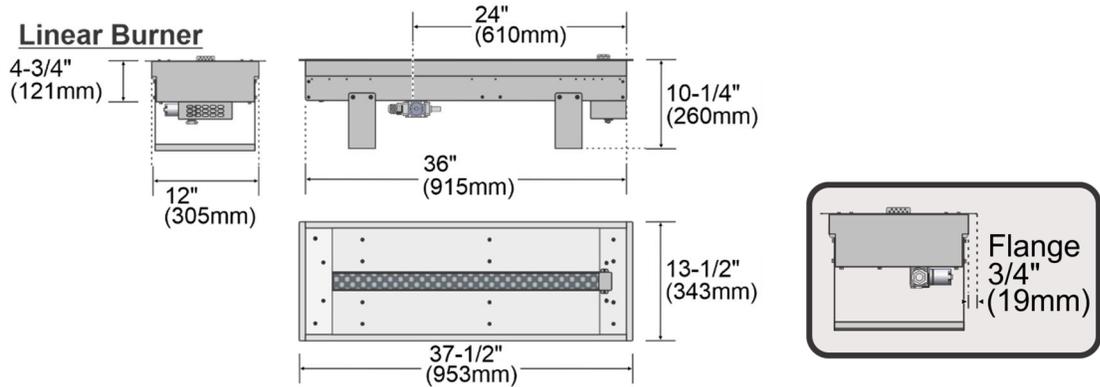




60" Linear Fire Pit Burner

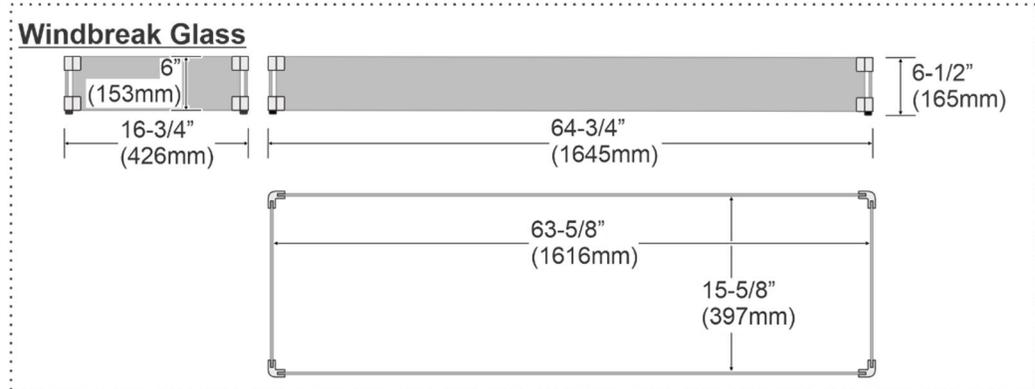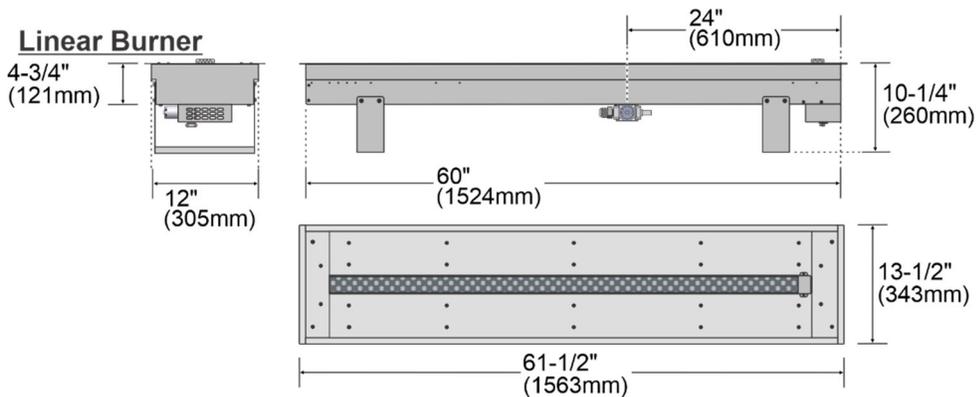

72" Linear Fire Pit Burner

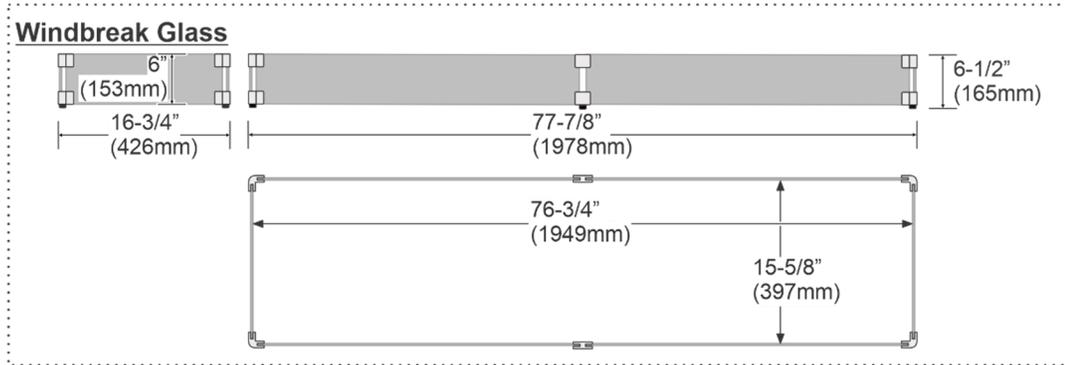
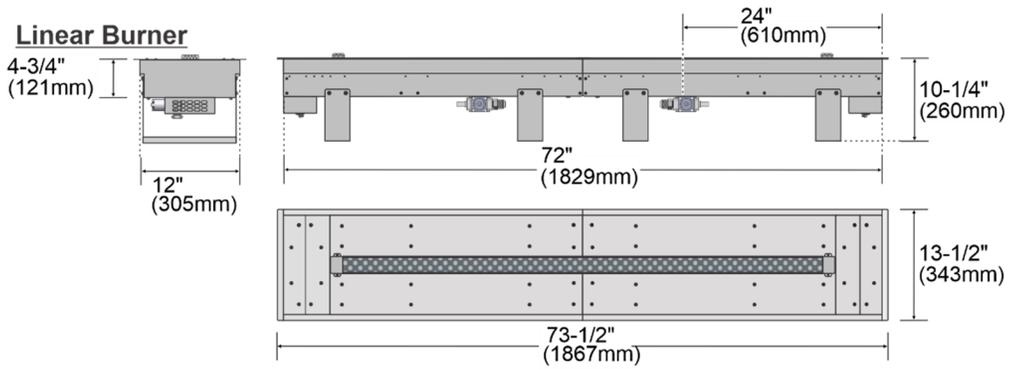


96" Linear Fire Pit Burner

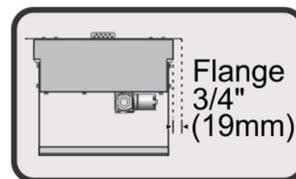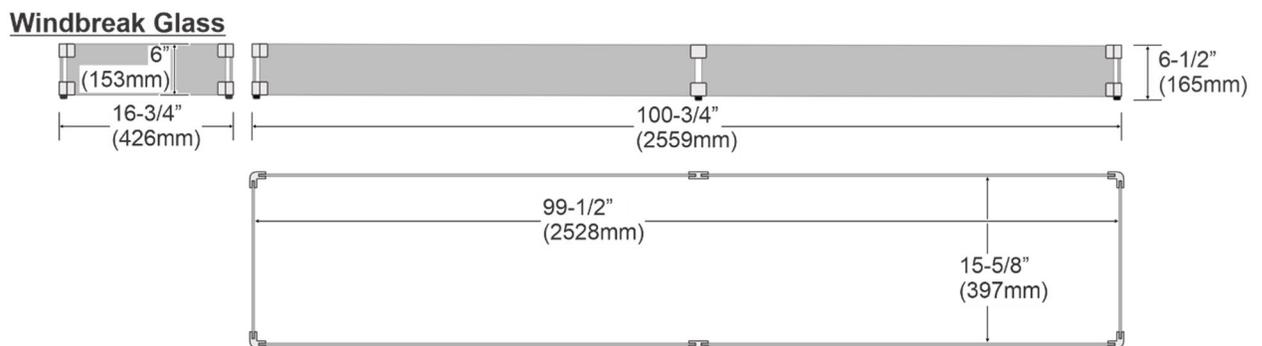
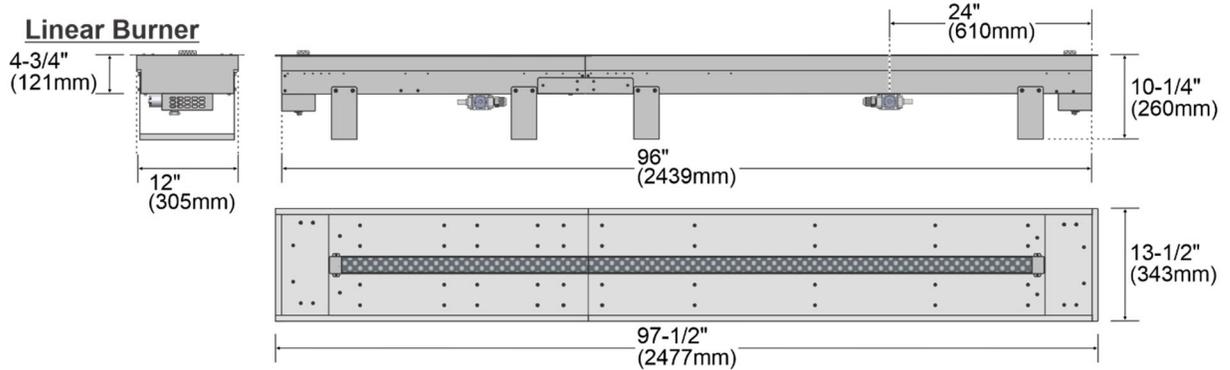


120" Linear Fire Pit Burner

Linear Burner

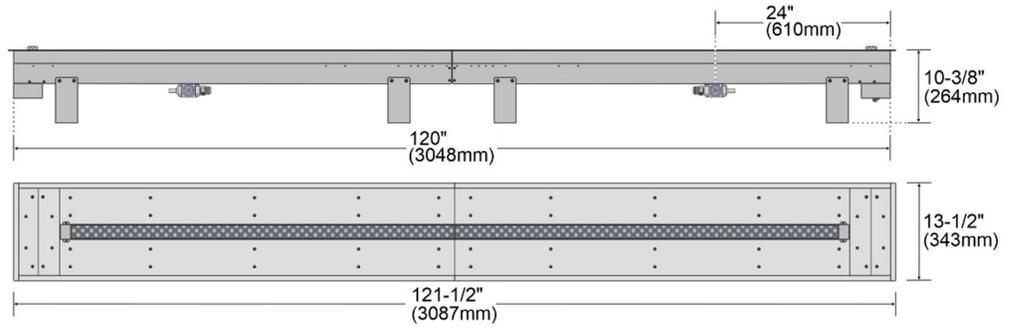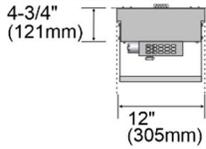

Windbreak Glass

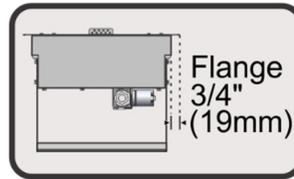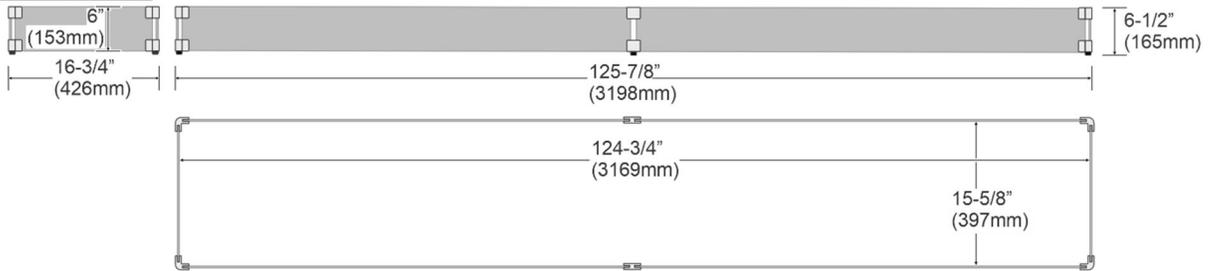

Installation Warnings:

- ! This appliance is designed for outdoor use only, in well-ventilated areas.
- ! Failure to follow all of the requirements may result in property damage, bodily injury, or even death.
- ! This appliance must be installed by a qualified installer.
- ! This appliance is designed to operate on natural gas, or propane (LP).
- ! This appliance requires a switched, 110v AC, GFCI (ground-fault circuit interrupter) protected power supply. This circuit provides power to the 24v AC transformer.
- ! Notify your insurance company before hooking up this appliance. All relevant information on the appliance is located on page 2, *Important Information*. You provide them page 2.
- ! The requirements listed below are divided into sections. All requirements must be met simultaneously. The order of installation is not rigid – the qualified installer should follow the procedure best suited for the installation.
- ! Media MUST be installed prior to operation in order to avoid damage to the appliance.

Recommended Order of Installation

1. **CAREFULLY PLAN THE INSTALLATION.** Determine the location of the Linear Fire Pit Burner and the controls. Make sure all clearances are met, (see page 14).
2. Frame the Linear Fire Pit Burner enclosure (see page 14)
3. Supply Gas: The appliance requires:
 - 65,000 BTU input (natural gas or LP) for a 36" Linear Fire Pit Burner.
 - 120,000 BTU input (natural gas or LP) for a 60" Linear Fire Pit Burner
 - 132,000 BTU input (natural gas or LP) for a 72" Linear Fire Pit Burner
 - 185,000 BTU input (natural gas or LP) for a 96" Linear Fire Pit Burner
 - 240,000 BTU input (natural gas or LP) for a 120" Linear Fire Pit Burner

A 34-inch flex line and 3/4" MPT (male pipe thread) x flare fitting adapter are provided to assist connection from the supply line to the appliance valve. Before turning the gas on to the appliance, leak-test all gas line connections. Convert the appliance to LP gas if applicable.
4. Supply Electrical: The appliance uses 24VAC power and draws approximately 1.6 amps - Make sure the circuit and wiring are appropriately sized (see diagrams starting on pg. 29.). If multiple appliances are powered through a single switch the control modules for each of the individual appliances may be daisy-chained together. Make sure to leave slack in the electrical line so the appliance or Linear Fire Pit Burner tray can be removed for service.
5. Bleed the gas line and start the appliance by switching on the electrical power to the control module. Leak test the gas lines. Verify the appliance works correctly and that there are no gas leaks.
6. Finalize the installation. Install the enclosure facing, glass wind guard, and crushed glass or stone media.
7. Give the manual to the homeowner and explain the operation of the appliance.

Packing List

- 34" Long 1" gas flex line and adapter
- Glass Wind Guard and brackets – 36", 60 & 72" units - (2) sides and (2) ends. 96" & 120" units - (4) sides and (2) ends.
- LP Conversion Kit - see "LP Conversion" on page 21 for details.
- Wall Switch and wall switch cover.
- Gas Key Valve with Chrome Flange
- 3" & 18" Gas Key
- (2) Enclosure Vents

Additional Items Required

- Gas Line Equipment (pipe, pipe fittings, pipe dope, etc.)
- 24volt transformer
 - Travis Industries provides the following transformer options:
 - Travis Industries 24V AC Single Appliance Transformer (94800833)
NOT COMPATIBLE WITH 72", 96" OR 120" Liner Burners
 - Travis Industries 24V AC Multiple Appliance Transformer (94800830)
- Low voltage wire (from the transformer to the appliance)
- High voltage wire (from house circuit to transformer)
- Weatherproof enclosure for wall switch (only needed if the switch is to be installed outdoors).
- Media (Crushed Glass or Tumbled Stones)

WARNING

The use of porous media materials such as lava rock in this appliance may create a hazardous condition. When moisture that has penetrated the small crevices of porous media such as lava rock is heated, the steam produced can cause the material to eject itself from the appliance and could cause injury and/or property damage.

Travis Industries does not recommend or encourage the use of any media in this appliance except that which has been tested and is provided through an authorized Travis Industries dealer.

Travis Industries offers the following Crushed Glass Options:

- Platinum sku# 94500580
- Cobalt sku# 94500582
- Bronze sku# 94500581
- Black sku# 94500583

NOTE: The part numbers provide 10 lbs. of crushed glass so make sure to order the appropriate number of boxes of the desired part number (see chart below).

Appliance	Amount of Media needed	# of boxes needed
36" Linear Fire Pit Burner	15 lbs. (6.8kg)	2
60" Linear Fire Pit Burner	25 lbs. (11.34kg)	3
72" Linear Fire Pit Burner	30 lbs. (13.6kg)	3
96" Linear Fire Pit Burner	35 lbs. (15.9kg)	4
120" Linear Fire Pit Burner	50 lbs. (22.68kg)	5

Travis Industries offers the following Stone Option:


- Tumbled Stone - Small sku# 94500985
- Tumbled Stone - Large sku# 94500986

NOTE: The part numbers above provide 10 lbs. of small and 20 lbs. of large Tumbled Stone, respectively. Make sure to order the appropriate number of boxes for the appliance (see chart below).


Appliance	Amount of Media needed	# of 94500985 needed	# of 94500986 needed
36" Linear Fire Pit Burner	30 lbs. (13.61 kg) small & 20 lbs. large (9.07 kg)	3	1
60" Linear Fire Pit Burner	50 lbs. (22.68 kg) small & 20 lbs. large (9.07 kg)	5	1
72" Linear Fire Pit Burner	60 lbs. (27.22 kg) small & 40 lbs. large (18.14 kg)	6	2
96" Linear Fire Pit Burner	80 lbs. (36.29 kg) small & 40 lbs. large (18.14 kg)	8	2
120" Linear Fire Pit Burner	100 lbs. (45.36 kg) small & 40 lbs. large (18.14 kg)	10	2

Assembling the Burner (72", 96" & 120" UNITS ONLY)


1. Set the two halves of the fire pit burner end to end with the pilot assemblies on the outside ends (marked side 1 and side 2 on the box). Leave a gap between the two halves to allow access. Each half of the fire pit will have a yellow and a yellow & white striped wire protruding from the tray. Use one of the two jumpers included in the hardware pack to connect the yellow from one half of the fire pit to the yellow from the other half of the fire pit. Repeat with the yellow & white striped wires.

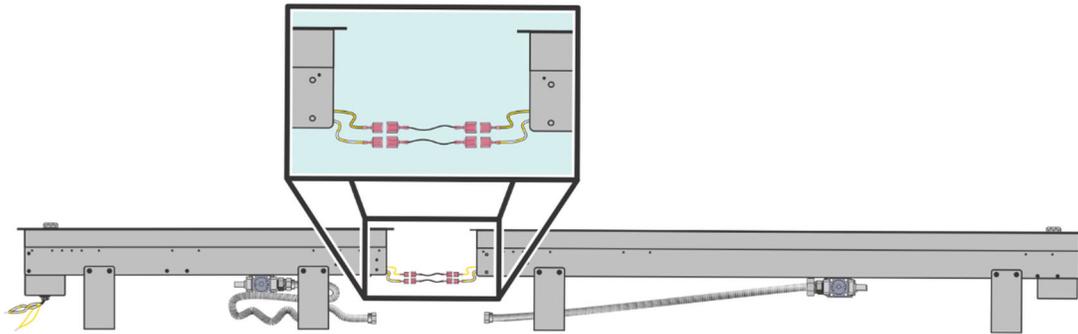

2. Once the wires are connected, slide the two halves of the fire pit together making sure not to pinch the wires between them.

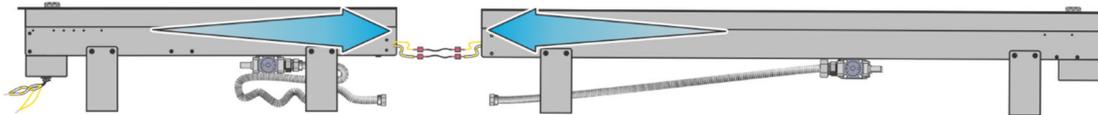

3. Using the included center bracket, connect the two halves of the firepit as shown below. Use a 1/4" nut driver to secure the two halves to the center bracket with the (20) stainless steel bolts included in the hardware pack.

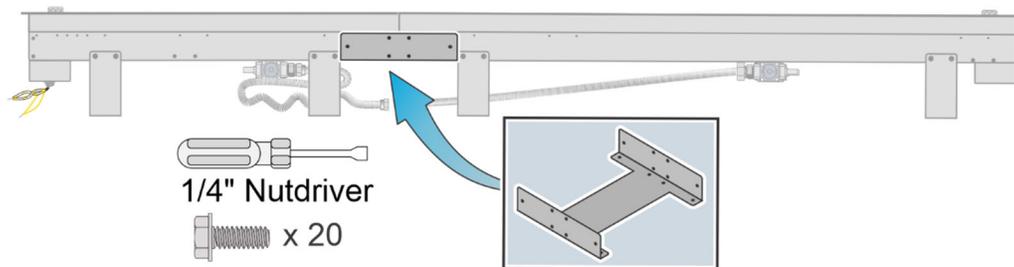


12


Installation (qualified installers only)

- Use two crescent wrenches to install the included flex line with an attached tee to the flex from each of the fire pits gas control valves. The fittings are compression fittings so **do not use pipe dope or tape to make these connections.**

NOTE: Make sure to leak-test all gas connections before putting the appliance into service.

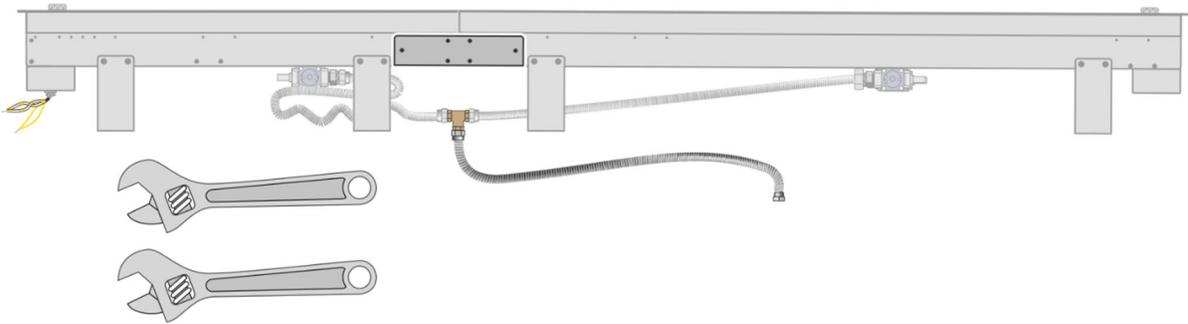

- Connect the power from the 24VAC transformer to the two twisted pairs of wires that protrude from the end of side 1 of the appliance.

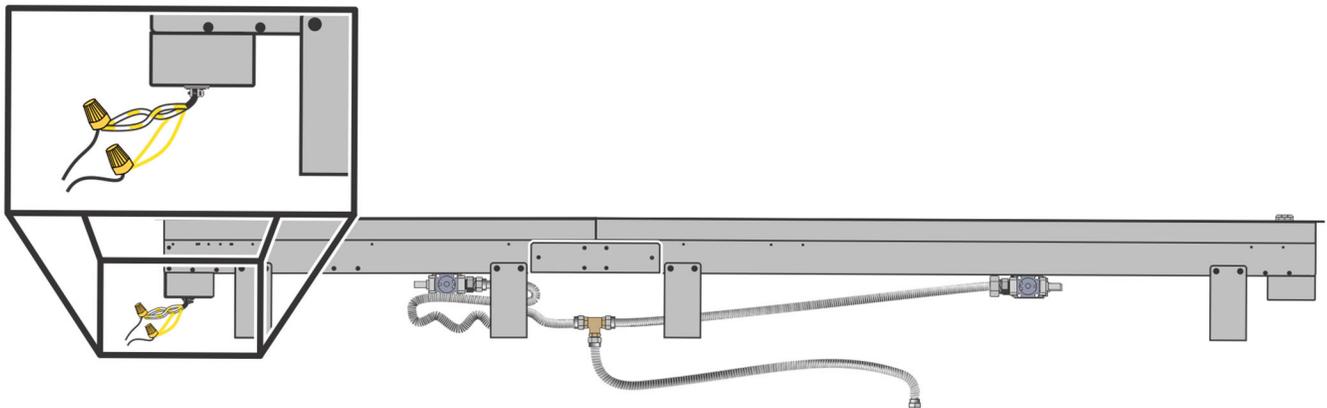

Weatherproofing the Installation

This appliance is designed to withstand being installed outdoors in the elements; however, the enclosure will need to be designed and constructed to withstand the same. The builder must provide a means for water to escape the enclosure that is appropriate and specific to the site of the installation. This may necessitate improving ground drainage, the fabrication of a drain pan, the creation of weep holes in the base of the enclosure, or building a roof over the appliance (covers over the appliance must meet all the requirements detailed in this manual).



Appliance Placement Requirements

! For Outdoor Use Only. Install in well-ventilated areas.

! WARNING !

The appliance is considered to be “outdoors” if installed with shelter no more inclusive than:

- Walls on all sides, but with no overhead cover.
- Within a partial enclosure that includes an overhead cover and no more than two sidewalls. The sidewalls may be parallel, as in a breezeway, or at right angles to each other.

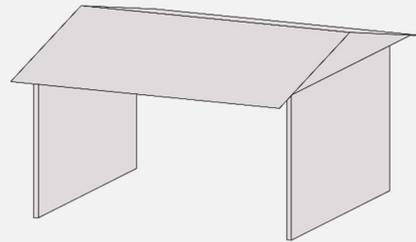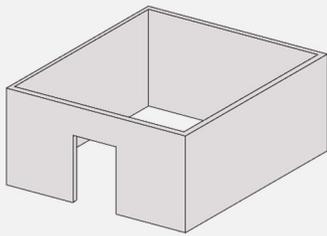


- Within a partial enclosure that includes an overhead cover and three sidewalls, as long as 30 percent or more of the wall area of the enclosure is permanently open.

To calculate

- multiply the length of the walls by the height of the walls to get square feet.
- Add the square feet of all 3 walls together.
- Multiply the total by 0.3 to get the amount of square feet required to be open.

Wall 1 - L x H =		ft ²
Wall 2 - L x H =		ft ²
Wall 3 - L x H =		ft ²
Wall 4 – Must Be Open		
Combined Total =		ft ²

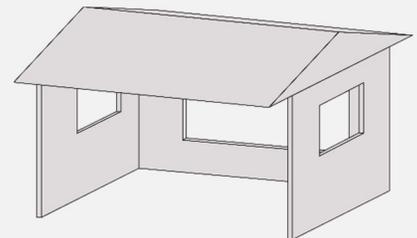

Take the combined total above and multiply by 0.3 to get 30% of the combined total which is the **MINIMUM** open space required for all windows and doors combined (must be open at all times - no operable doors or glass coverings). If the openings are screened, **check with the local authority having jurisdiction before proceeding.**

- The appliance must be installed on a level surface capable of supporting the appliance's weight.
- The appliance must be placed directly on a wood or non-combustible surface.
- The appliance should be located out of traffic and away from furniture and draperies.
- The distance from the top of the burner to a ceiling above the appliance must be a minimum of 65" (1651mm) for 36", 60", or 72" appliances and 75" (1905mm) for 96" & 120" appliances.

Do Not Locate the Appliance:



- In high-traffic areas.
- Under or near trees, plants, and buildings where debris may constantly fall into the appliance. Excessive debris will require high maintenance and/or cause malfunctioning of the appliance.
- In places where people, children, and pets may contact the appliance. Guards or fences around the appliance in these locations are recommended.
- In places where the controls beneath the appliance may be submerged underwater. Submerging any part of its controls may require the complete replacement of the controls.

Clearances

36", 60" & 72" Linear Fire Pit Burners ONLY

Linear Burners
36" Linear Burner
60" Linear Burner
72" Linear Burner



**NO COMBUSTIBLES
ALLOWED IN THE
SHADED AREA**

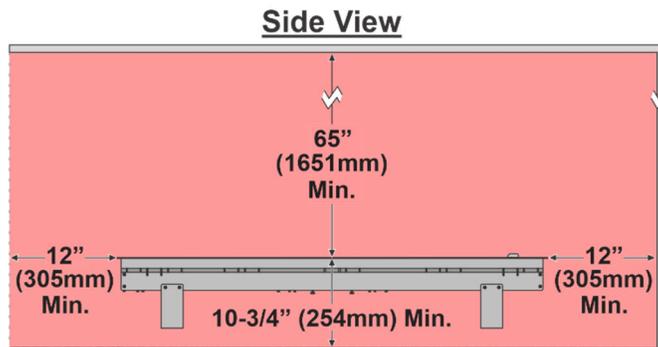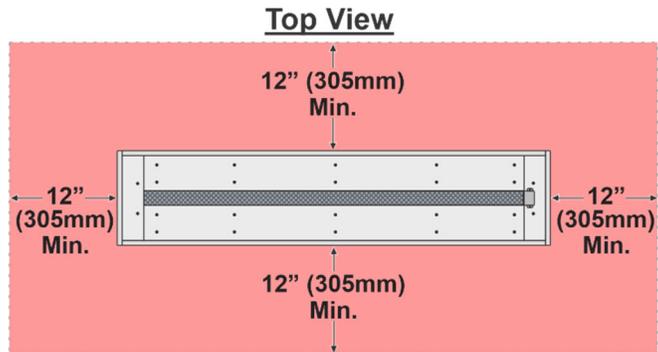


96" & 120" Linear Fire Pit Burner ONLY

Linear Burners
96" Linear Burner
120" Linear Burner

**NO COMBUSTIBLES
ALLOWED IN THE
SHADED AREA**

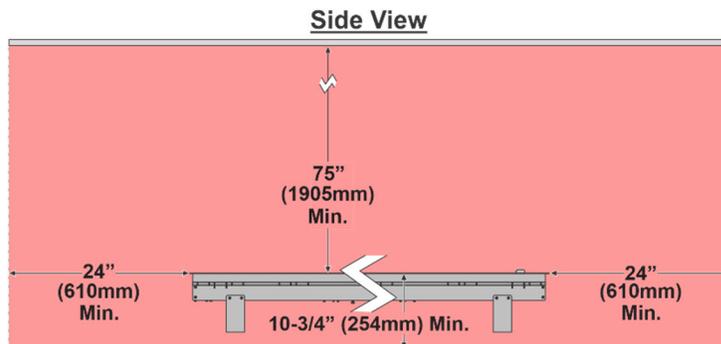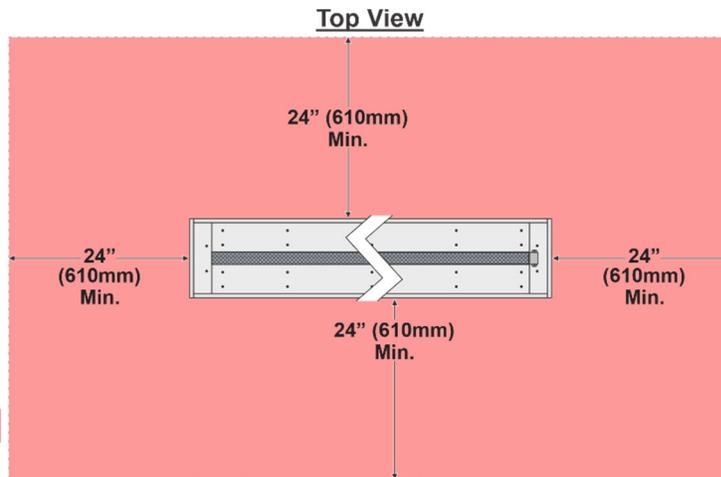


Minimum Framing Dimensions

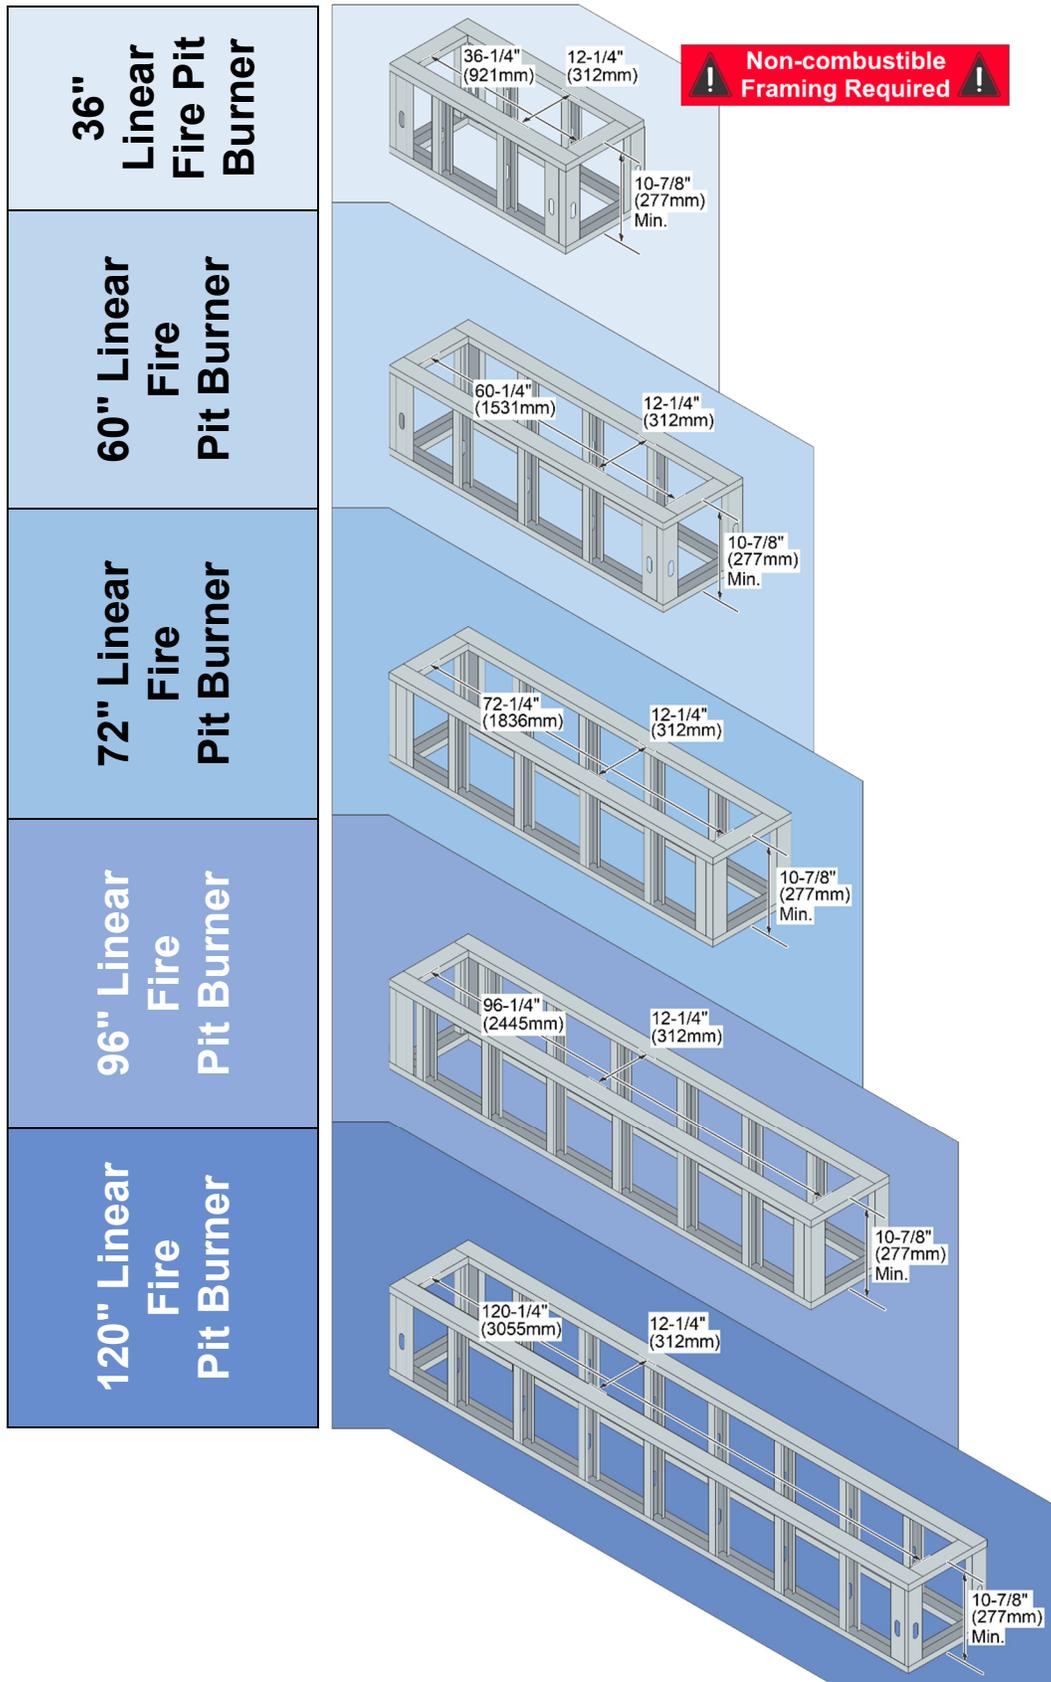

Landscaping Block Enclosures

Landscaping blocks may be used to create the enclosure for the linear burner. There are two options for how the pit fits the enclosure. Before building the enclosure, you will need to decide how you would like the fire pit to rest on the brick. The dimensions for the enclosure will vary slightly depending on this decision (see dimensions below).

- **Standard Installations** where the outer flange of the linear burner rests on the top surface of the block or capstone and the glass wind guard sits on the same surface.
- **Recessed Installations** use brackets that are installed under the top course of block or the capstone. When installed in this manner, the outer flange of the linear burner fits inside the enclosure opening and rests on the brackets rather than the capstone.

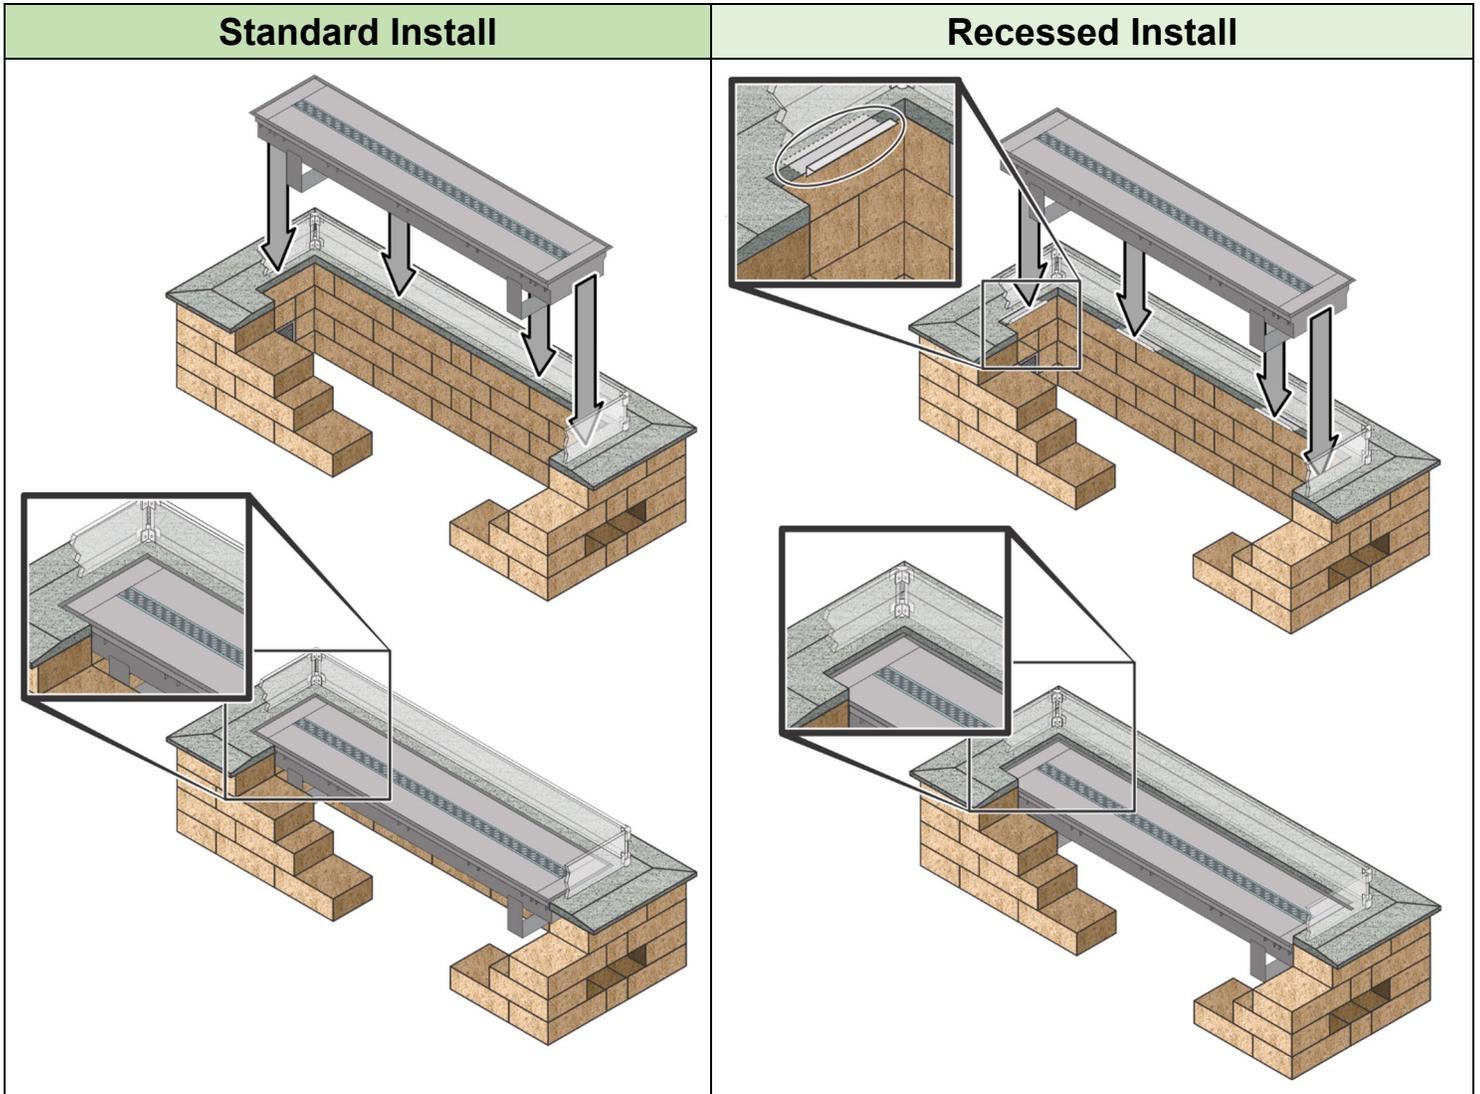

Dimensions for Landscaping Block Enclosures (Standard & Recessed)


	36" Linear Fire Pit Burner	60" Linear Fire Pit Burner	72" Linear Fire Pit Burner	96" Linear Fire Pit Burner	120" Linear Fire Pit Burner
Standard Install	36-1/4" x 12-1/4"	60-1/4" x 12-1/4"	72-1/4" x 12-1/4"	96-1/4" x 12-1/4"	120-1/4" x 12-1/4"
Recessed Install	37-3/4" x 13-3/4"	61-3/4" x 13-3/4"	73-3/4" x 12-3/4"	97-3/4" x 13-3/4"	121-3/4" x 13-3/4"

Enclosure Finish Material - Minimum Dimensions

The glass wind guard **must be used for all firepit installations**. The wind guard rests on top of the finish material installed on the top of the fire pit enclosure. The minimum surface needed for the wind guard to be properly supported is shown below.

NOTE: Keep the size of the finish material in mind when planning your installation and before building the enclosure. You may need to increase the framing dimensions to achieve the desired finish appearance and properly support the material.

NOTE: The dimensions shown below are the MINIMUM to accommodate the glass wind guard. You may choose to make the top surface larger to create more of a usable table surface.

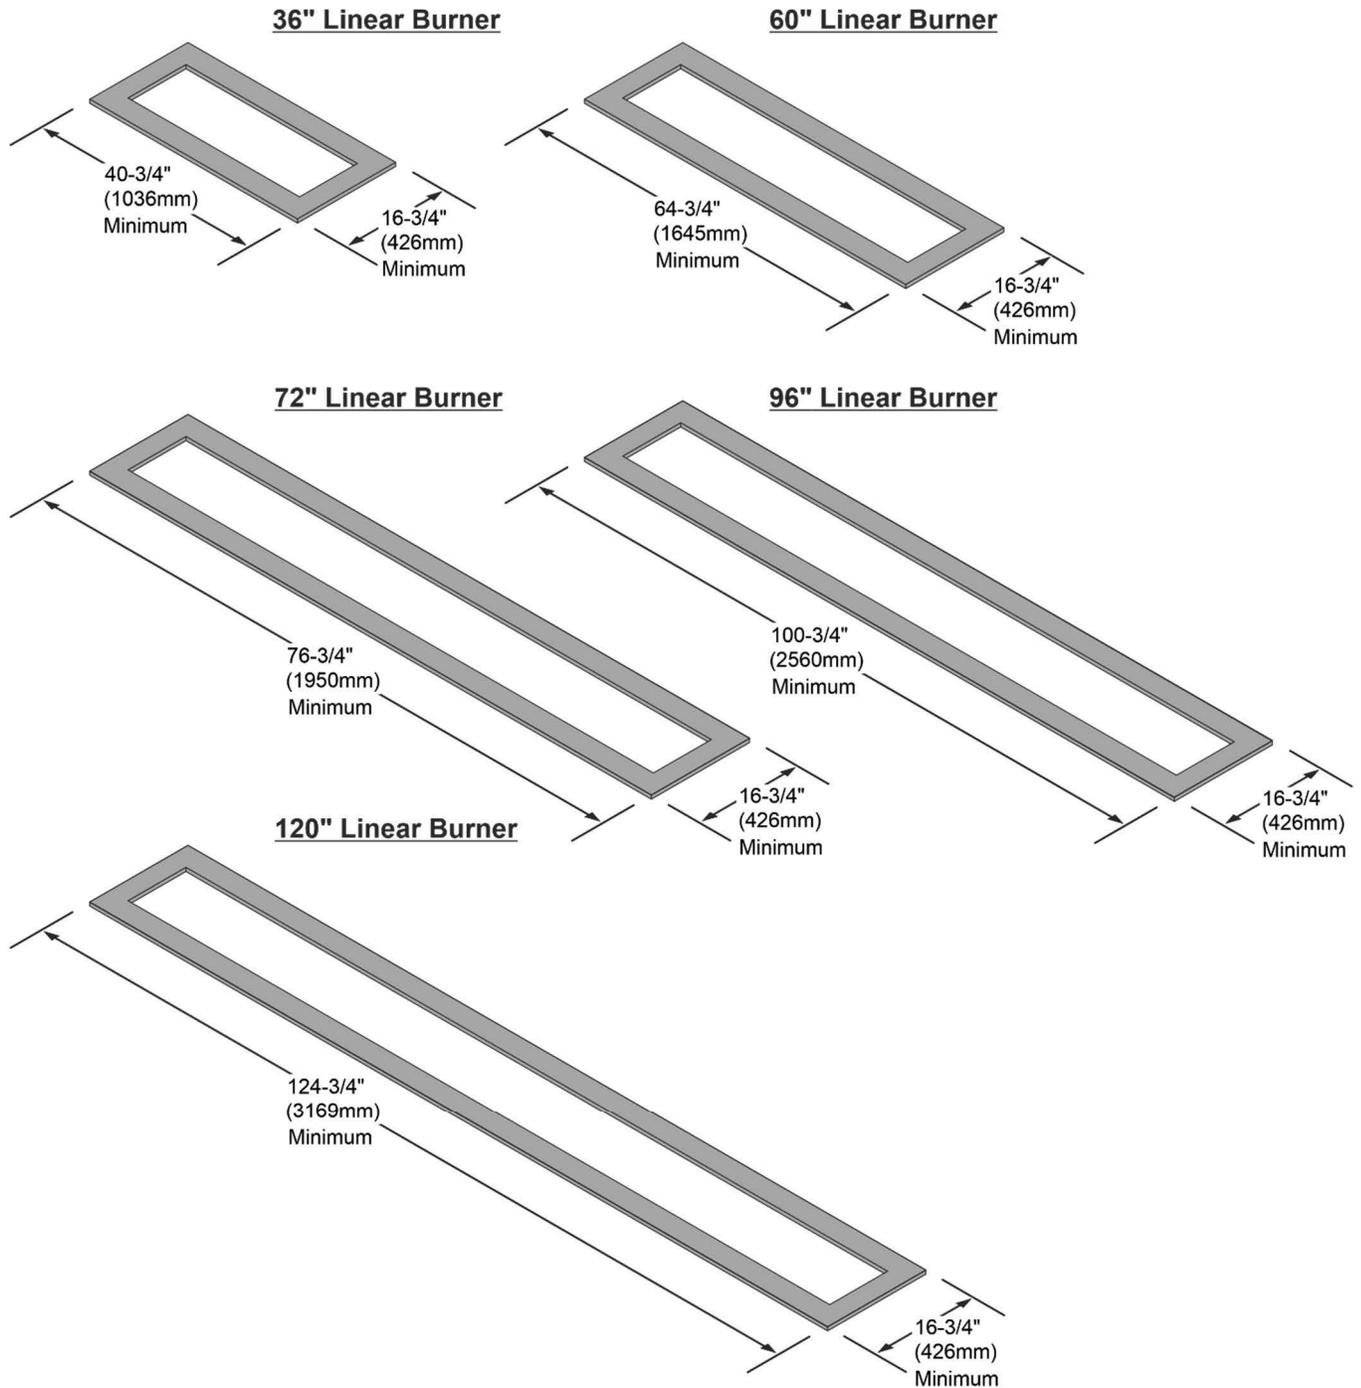

Enclosure Ventilation Requirements


The Linear Fire Pit burner enclosure must be ventilated to properly cool the fire pit (see illustration below for details).

! WARNING !

The chase must be ventilated in accordance with the requirements listed below to allow the appliance to cool. Failure to provide this ventilation will create a severe fire risk. **The ventilation grills must be installed within 24" of the appliance AND as low on the enclosure as possible.**

Enclosure Ventilation Overview

- The Linear Fire Pit Burner enclosure must have at least (2) vents. The vents must be on opposite sides of the enclosure from each other (either on the ends (a) or along the sides (b)). Each vent must provide a minimum of **9 square inches** of free area.

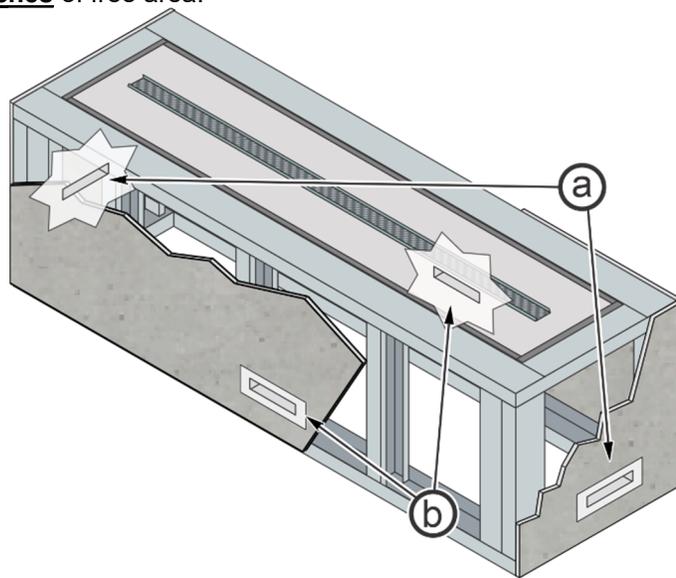

Example: If (w) = 4" and (h) = 2"

4" x 2" = 8 square inches
8" < 9" (the minimum)




NOT LARGE ENOUGH

Example: If (w) = 12" and (h) = 2"

2" x 12" = 24 square inches
24" > 9" (the minimum)




LARGE ENOUGH

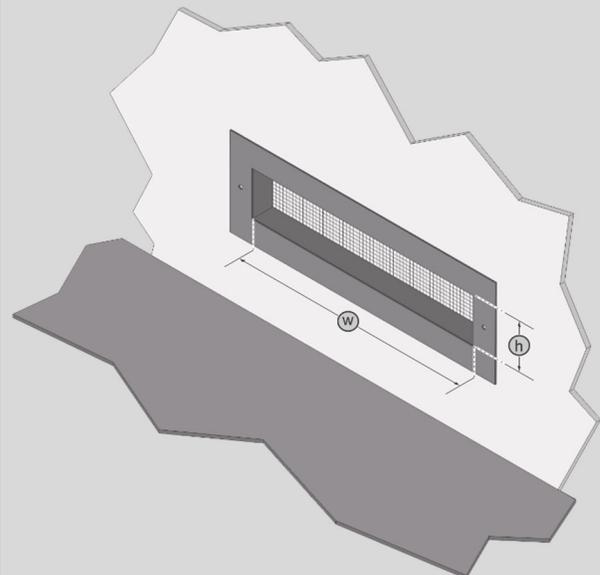

Enclosure Ventilation Grills



- Use grills to ventilate the enclosure. The grills must provide 18 square inches of free area opening (9 square inches each) into the enclosure cavity. The grills must be located within 24" of the appliance.
- The grills must be attached directly to the enclosure cavity.
- The grills must have 1/4" screen to prevent debris, etc. from entering the enclosure.
- The grills should not be placed in a location where they could become blocked.
- The ventilation air for the enclosure **MUST** be drawn from outdoor air only.
- The opening into the enclosure must be a minimum of 1-1/2" (39mm) and a maximum of 3-3/8" (86mm) from the floor of the enclosure (see right).
- Facing may be applied over the flange of the grills but cannot protrude over the screened opening.
- The grills may be painted.
- The grills must be located within 24" of the appliance.

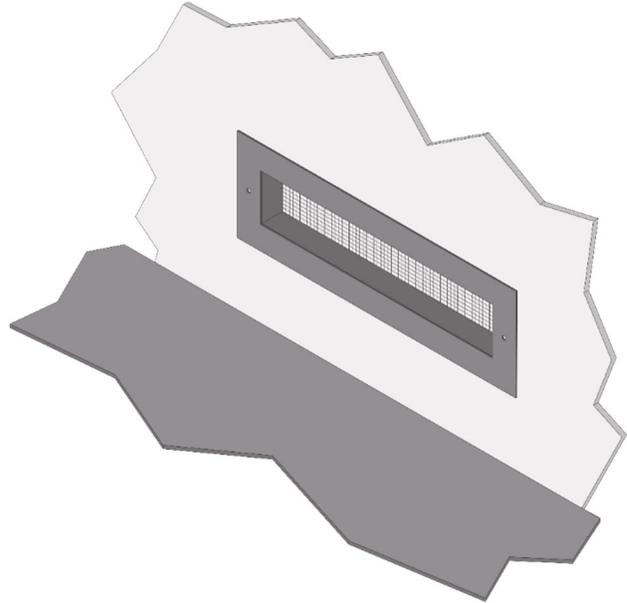

Landscaping Block Enclosure Ventilation

If using landscaping block to build the enclosure use the included block enclosure ventilation assemblies to provide the **required** ventilation for the enclosure.

- **The assemblies must be located within 24" of the appliance and as low on the enclosure as possible.**
- The assemblies have a screen on one side of the opening. Install the screen side facing the inside of the enclosure so it is less visible.
- The assemblies are approximately 1/2 the depth of a standard block. We recommend installing it so the edge of the assembly is flush with the inside edge of the enclosure. This will also help make the ventilation assembly less visible.
- The ventilation air for the enclosure **MUST** be drawn from outdoor air only.
- The grills must be kept free from vegetation or debris that can restrict the flow of air.
- The assemblies must be installed directly opposite each other.

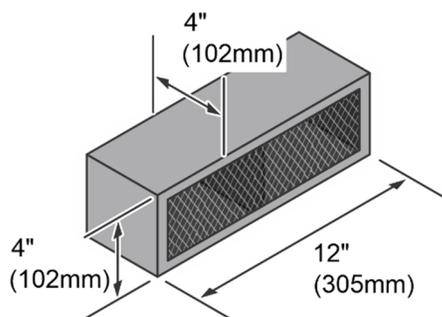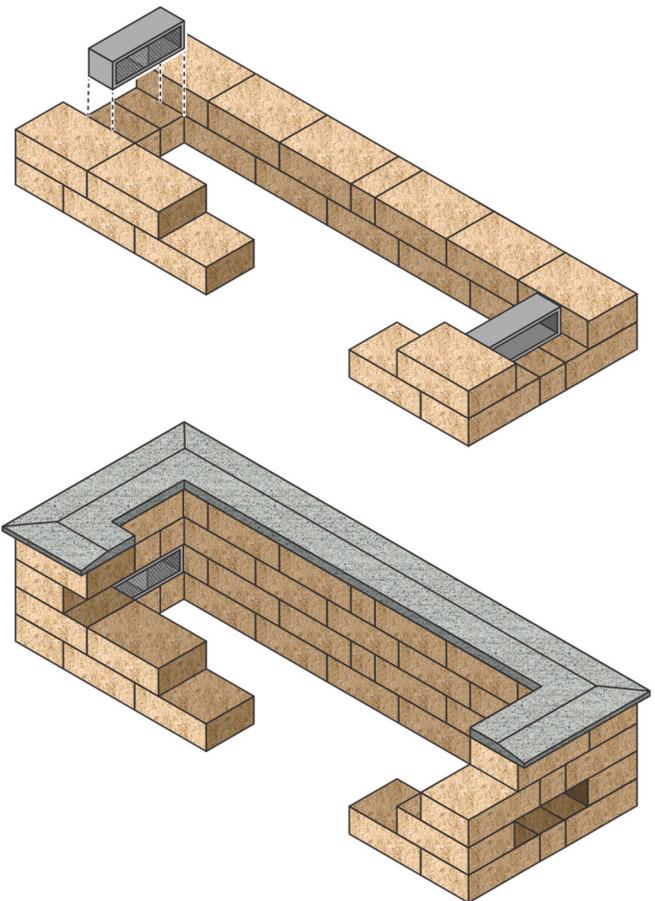

Gas Line Requirements

MASSACHUSETTS INSTALLATIONS - WARNING:

THIS PRODUCT MUST BE INSTALLED BY A LICENSED PLUMBER OR GAS FITTER WHEN INSTALLED WITHIN THE COMMONWEALTH OF MASSACHUSETTS.

OTHER MASSACHUSETTS CODE REQUIREMENTS:

- Flexible connector must not be longer than 36 inches.
- Shutoff must be a "T" handle gas cock.
- Only direct vent sealed combustion products are approved for bedrooms or bathrooms.
- Fireplace dampers must be removed or welded in the open position prior to the installation of a fireplace insert or gas log.
- A carbon monoxide (CO) detector is required in the same room as the appliance.




! The gas line must be installed in accordance with all local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, International Fuel Gas Code, Natural Gas, and Propane Installation Code, CSA B149.1, or Propane Storage and Handling Code, B149.2, as applicable. Consult your local gas supplier or propane gas dealer for code regulations and recommended procedures.

! The appliance and gas control module must be disconnected from the gas supply piping during any pressure testing of that system at test pressures in excess of 1/2 psig. For pressures less than 1/2 psig, isolate the gas supply piping by closing the manual shut-off valve.

! Leak test all gas line joints and the gas control valve prior to and after starting the Linear Fire Pit Burner.

Gas Line Connection

- Installation must be performed by a qualified installer, service agency, or the gas supplier (In Massachusetts a licensed plumber/gasfitter).
- An accessible manual gas shutoff valve is required on the gas supply to the appliance and must be installed upstream of the appliance gas valve. Check with the local authority having jurisdiction for any additional requirements.
- The supply regulator (the regulator that attaches directly to the residence inlet or the propane tank) should supply gas at the required input pressure detailed in the section "LP Conversion" on page 5. Contact the local gas supplier if the regulator is at an improper pressure.
- The gas should be stubbed into the area under the appliance indicated by the shaded boxes (see diagrams to the right and below).
- If the gas stub is located within 25" of the appliance gas valve the included flex will provide sufficient length to make the connection (see right). If the gas stub is located in the stripped areas additional gas pipe will need to be supplied by the installer.
- The appliance comes with a 34" flex.
- Connect the incoming gas line to the flex (the flex accepts 3/4" MPT)

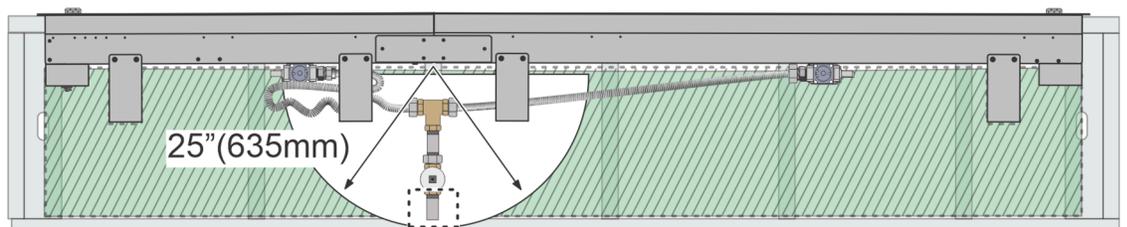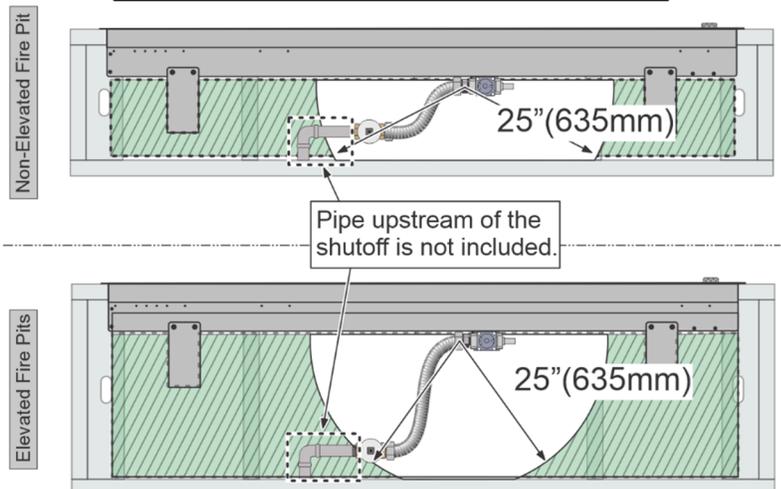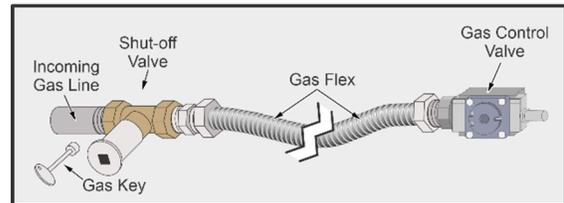

LP Conversion

The appliance is configured for NG gas from the factory but comes with a kit to convert the unit from natural gas to propane

The LP conversion kit contains:



	Qty.	Size
36" Linear Fire Pit Burner	(1)	#41
60" Linear Fire Pit Burner	(2)	#43
72" Linear Fire Pit Burner	(2)	#41
96" Linear Fire Pit Burner	(2)	#43
	(1)	#41
120" Linear Fire Pit Burner	(4)	#43

! WARNING !


This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion, or production of carbon monoxide may result causing property damage, personal injury, or loss of life. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.

- Remove the glass wind guard and glass media (if already installed).
- Remove the media trays (see "Removing the Media Trays" section on page 41)
- Convert the appliance using the instructions to the right.


- Remove the manifold cover(s) and gasket(s) that are around the burner orifice(s).
- Use an adjustable wrench to support the manifold while removing each orifice with a 1/2" wrench.

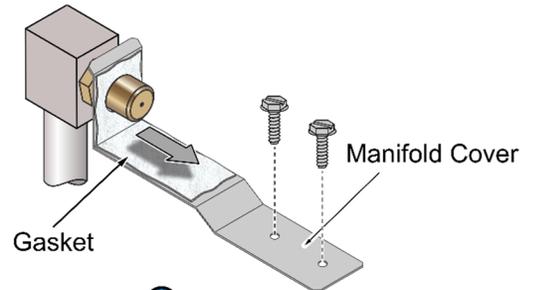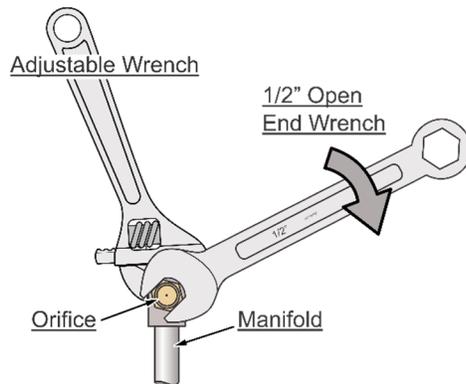


Apply thread sealant to the LP orifices prior to installation. Use the chart in the "Gas Specifications" section to determine the correct orifices.

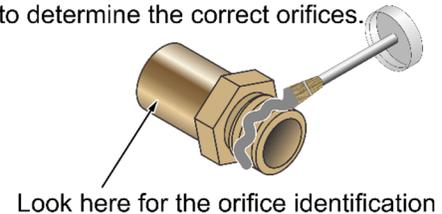

- Screw each LP orifice until orifice protrudes 15/16" (23.8mm) indicating full insertion (use wrench to support manifold when re-attaching orifice).

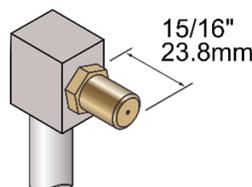

- Do not reinstall the manifold covers & gaskets when using LP gas

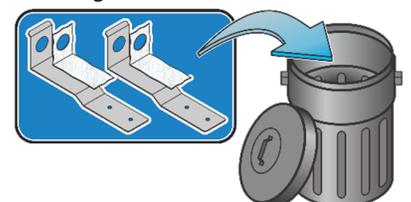

Electrical Connection Requirements

- ! The appliance, when installed, must be electrically grounded in accordance with local codes, or in the absence of local codes with the National Electrical Code, ANSI/NFPA 70; or the Canadian Electrical Code, CSA C22.1
- ! The electrical line must be installed by a qualified installer and must meet all local codes. Consult your local building official for code regulations and recommended procedures.
- ! The 24VAC transformer may require a circuit protected by a GFCI (see local building codes).
- ! Use a transformer to convert 120VAC power to 24VAC power for the appliance. Supply the transformer with 120VAC at approximately 0.9 amps - make sure the circuit and wiring is appropriately sized. The power supply must be routed through a switch to turn the appliance on and off (see pg. 47). Multiple Travis Industries, Inc. 24-volt appliances may be placed on a single circuit. Each appliance uses 24VAC at approximately 1.6 amps - Make sure the circuit and wiring is appropriately sized (see diagrams starting on pg. 29.). If multiple appliances are powered through a single switch the control modules for each of the individual appliances may be daisy-chained together.

24VAC Transformer

- This appliance must be used with a 24VAC switched circuit. The transformer is sold separately.
- Travis Industries offers the following two transformers:
 - 94800833 Powers (1) 24VAC appliance (120v input only). See the instruction sheet included with the transformer for details.
 - 94800830 Powers (1) to (6) 24VAC appliances (120v input only with 26v and 28v output leads). See the instruction sheet included with the transformer for details.

**Important Information**

Some jurisdictions and commercial applications require an emergency shutoff for the appliance. If a shutoff is required, we recommend the shutoff shown to the left (or equivalent).

SCHNEIDER ELECTRIC Push Button Control Station
Mfr. Model: XALD164H29H7
Contact Rating: 10A @ 600V AC

Refer to the switch manufacturer's instructions, the National Electric Code, and the local authority having jurisdiction for proper installation or any additional requirements.

Single Appliance Installations

When installing a single appliance, we recommend using the Single Appliance Transformer (sku 94800833). This transformer can only power a single appliance. If powering multiple appliances with a single transformer use the higher capacity transformer (sku 94800830).

24v Single Appliance Transformer (sku 94800833)

NOT COMPATIBLE WITH 72", 96" OR 120" Liner Burners



Hazardous Voltage can shock, burn, or cause death. Disconnect all input power before installing or maintaining this equipment.


Compatibility

This transformer is designed for the Fire Garden 24v single control module appliances. It is not designed for 2017 (or earlier) Tempest 120v torches.

This transformer is rated for 120VAC, 60Hz, 50W input, and 24VAC output. The transformer will power (1) appliance. See the section "Wire Length Chart" for additional details.

NOTE: The wire after the transformer box is allowed for direct bury installation. Check with the local authority having jurisdiction before installing in this manner.

Dimensions

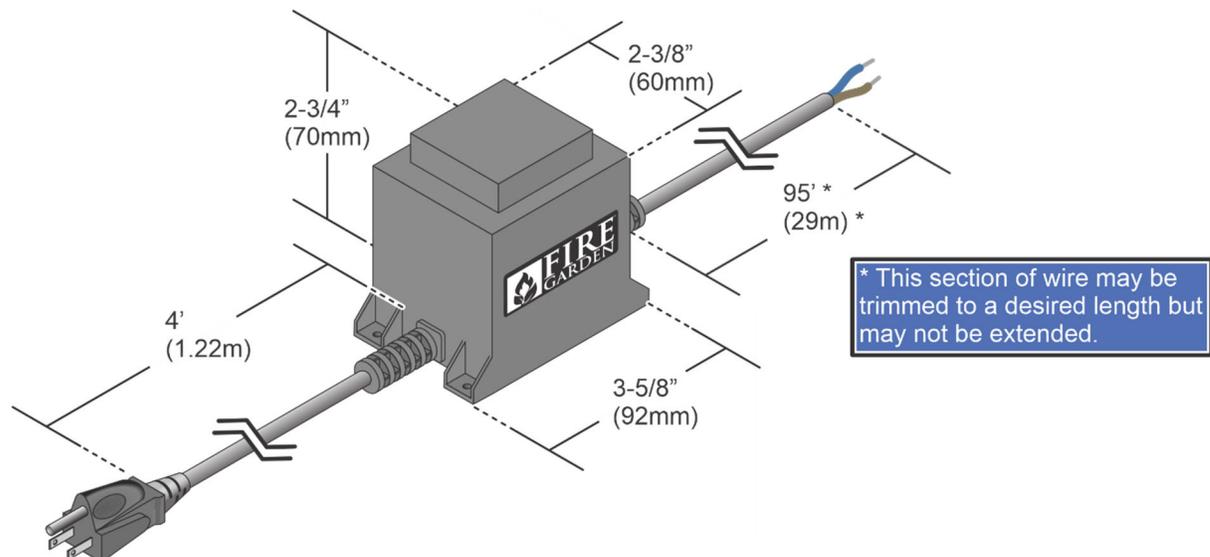

Warnings



NOTE: Disconnect power at the service breaker prior to installing the transformer. After installation, restore power to the transformer and test both the incoming and outgoing circuits.




Installation should only be performed by a qualified electrician or installer (consult local codes). Use suitable connectors when wiring the transformer (silicone-filled wire nuts).

Mounting Requirements


- This transformer is intended to be plugged into a standard household GFCI-protected outlet.
- The transformer is wet-rated and can be exposed outdoors.
- If this transformer will be used on an outdoor outlet, the outlet must have a weatherproof receptacle cover.

Wiring Diagrams

- The transformer is plugged into a GFCI-protected, switched outlet. The two-conductor low voltage wire is connected to the yellow and white wires from the control module. Polarity does not matter for any of these connections.

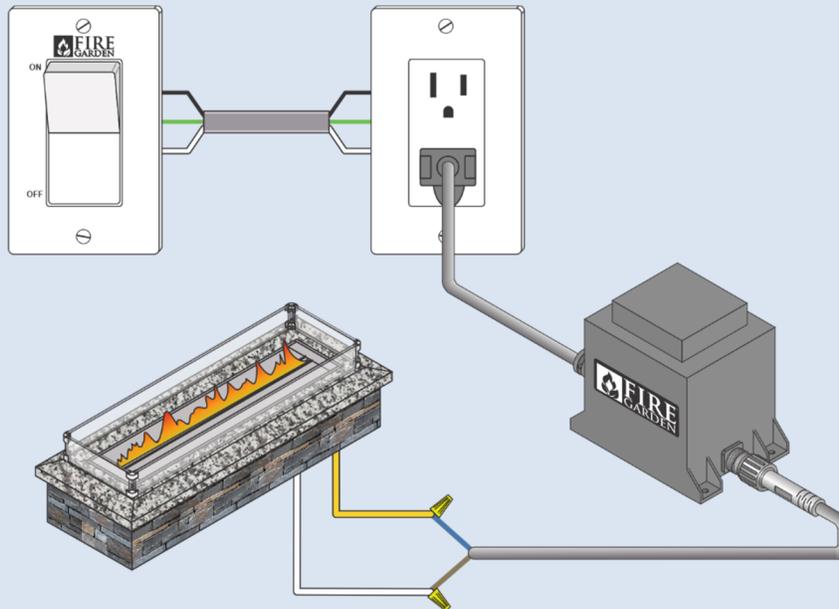

- The transformer is plugged into a GFCI-protected, non-switched outlet. One low-voltage conductor is interrupted by a switch. The low-voltage conductors are then attached to the yellow and white wires from the control module. Polarity does not matter for any of these connections.

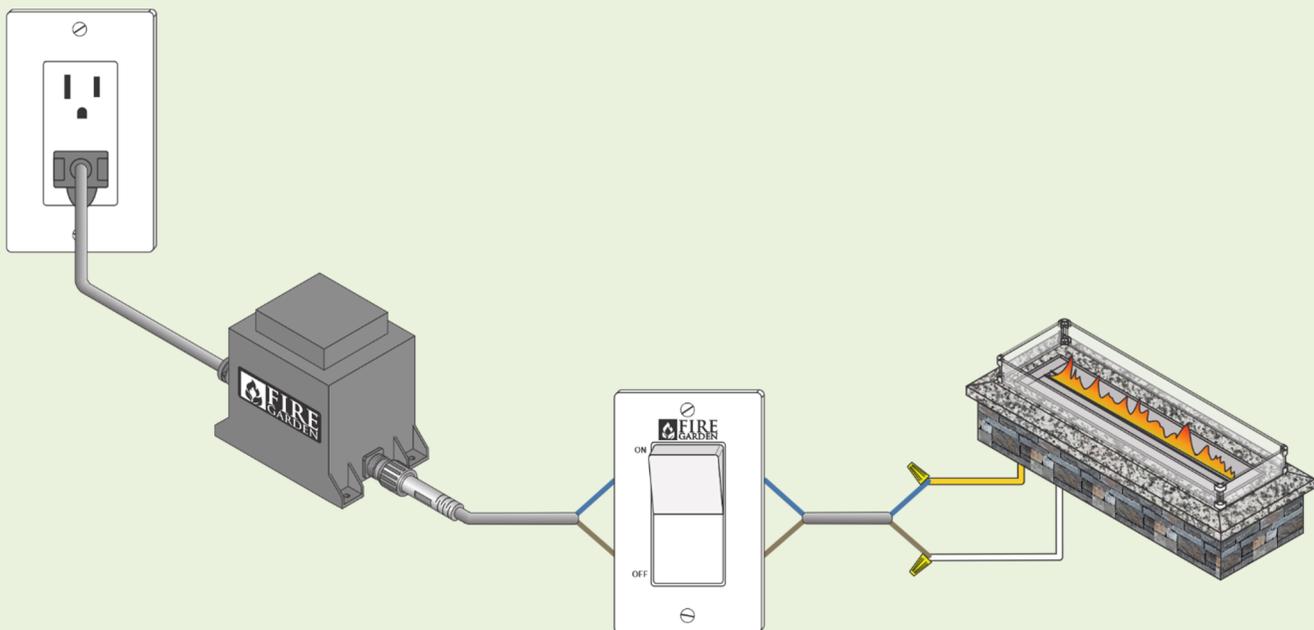

Multiple Appliance Installations

When installing more than one 24v appliance, use the large 24v Appliance Transformer (sku 94800830). This transformer is capable of powering up to (6) 24v Fire Garden outdoor appliances.

24v Multiple Appliance Transformer (sku 94800830)




Hazardous Voltage can shock, burn, or cause death. Disconnect all input power before installing or maintaining this equipment.

Compatibility

This transformer is designed for the Fire Garden 24v appliances. It is not designed for 2017 (or earlier) Tempest 120v torches.

This transformer is rated at 300 VA. The transformer will power up to (6) appliances. See the section "Wire Length, Wire Gauge, and Voltage Settings" for additional details.


Wiring Diagram 120V

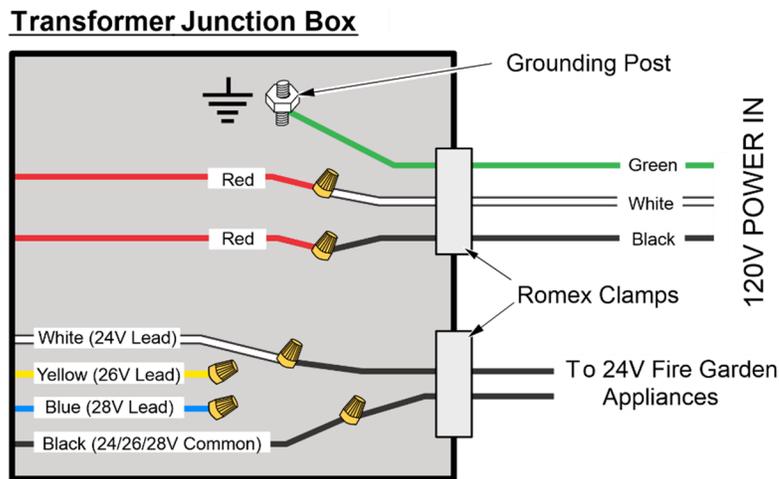

NOTE: In this example the 24V Lead is used.

WARNING: Make sure to put wirenuts on un-used power leads (in this example the 26V and 28V Leads)

Dimensions

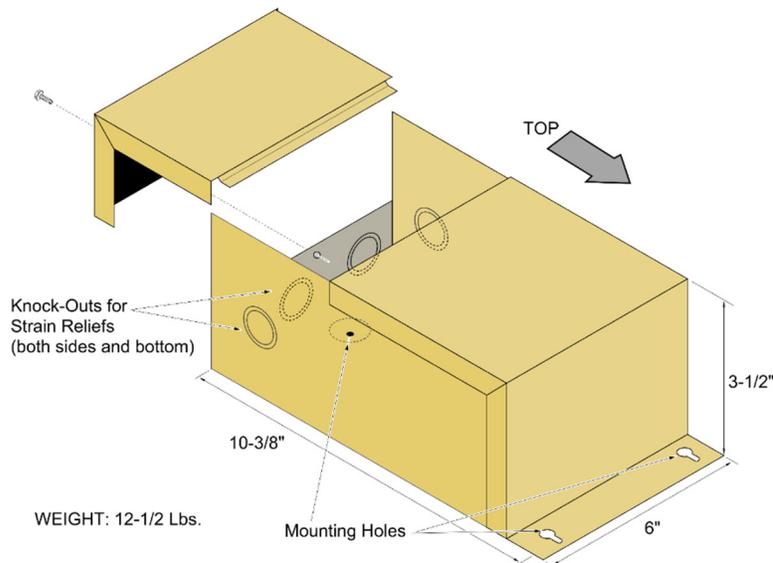

Mounting Requirements

- Transformer weighs approximately 12-1/2 lbs. Make sure the mounting location provides sufficient support.
- The transformer is rated for damp locations.
- Do not place the transformer where it will become submerged.
- We suggest placing the transformer out of direct contact with the elements (rain, snow, sun, etc.) to extend longevity.
- Consult your local building department for requirements in your area pertaining to the mounting and installation of this transformer.

Voltage Settings, Number of Appliances, and Wire Configuration

Voltage Setting: This transformer has three different voltage leads: 24v; 26v; and 28v. Refer to the wire length charts (either direct-run or daisy-chain) to determine which voltage lead you should use.

Why Does the Transformer Have Multiple Voltage Leads?

The wires from the transformer to the 24 appliances create additional resistance. The longer the wire length, the more resistance is created. The smaller the wire diameter (larger-number gauge), the more resistance is created. If your installation creates additional resistance, you will need to use a higher voltage lead to overcome the voltage drop the resistance creates. The Fire Garden appliances must receive a minimum of 21v.


Number of Appliances: This transformer is rated 300 VA and may be used on (1) to (6) - 24v appliances. The higher the number of appliances, the higher the amp load. The higher the amp load, the higher the voltage drop. You must know the number of appliances on the transformer before wiring.

Wire Configuration - Direct-Run vs Daisy-Chain Installations: How you wire the appliances to the transformer affects the maximum length of wire and wire gauge. Make sure to determine the wire configuration before installation. NOTE: You may use both direct-run and daisy-chain configurations just make sure the number of appliances is (6) or less per transformer.

Wiring Installation

- We recommend outdoor-suitable connectors (silicone-filled wire connectors, dielectric grease, etc.) on the power-in connections to the control module to prevent corrosion.
-

- Remove the (2) ¼" screws that secure the media tray ends to the media tray sides (set aside for reinstallation). Remove the media tray end with the pilot cover attached.

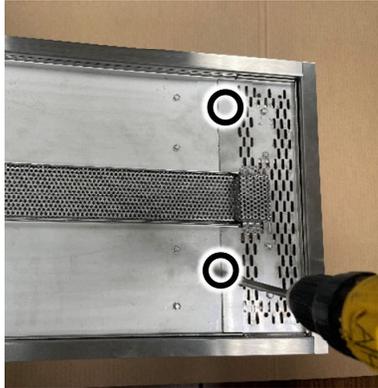



- Reach into the electrical box below the pilot assembly and retrieve the free ends of the yellow and yellow/white striped wires from the control module.




- Route the wires from the 24VAC transformer through the strain relief at the bottom of the electrical box (below the pilot). Use listed low voltage wiring. Make sure to provide slack in the electrical line for removal and service.



- Use wire nuts to connect the wires from the 24VAC transformer to the yellow and the yellow/white striped wires on the control module (polarity does not matter for this connection). When the connections are secure, coil the wires and push them back into the electrical box.

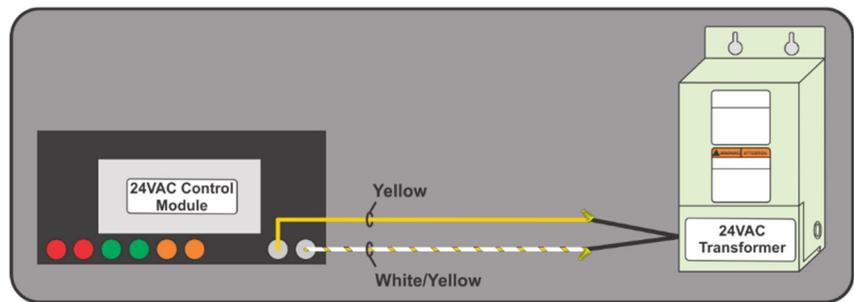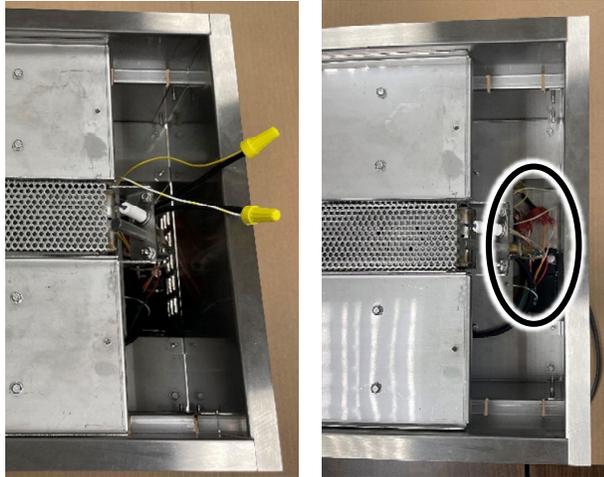

- Reinstall the media tray cover and pilot shield and secure them to the appliance with the two screws removed in the first step.

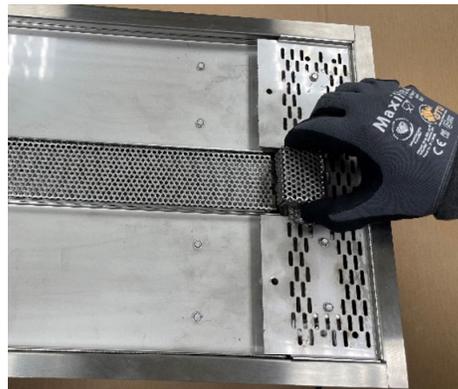


- The appliance uses approximately 40 watts during startup (1.6 amps at 24 VAC). Make sure the circuit and wires are sized appropriately. The appliance requires a minimum of 22 VAC to operate (if the voltage drops below this, the appliance may not start).

Using More than One 24-volt Appliance

Travis Industries, Inc. manufactures additional 24-volt appliances that can add to the ambiance of your outdoor space (Tempest Torch™, Tempest Lantern™. Visit tempesttorch.com for more details). If using more than one appliance, make sure to think about how the appliances will be used and if they need to be able to be controlled separately or if it would be more convenient to control them all using one switch. The following pages show examples of multi-appliance installation options using one switch and powering more than one appliance using the same transformer. If you are planning an installation using two or more appliances, be sure to pay close attention to the wiring sizing detailed in this section.

Wiring Multiple Transformers to One Switch


- Multiple 24VAC transformers may be wired to a single switch (see diagram below).

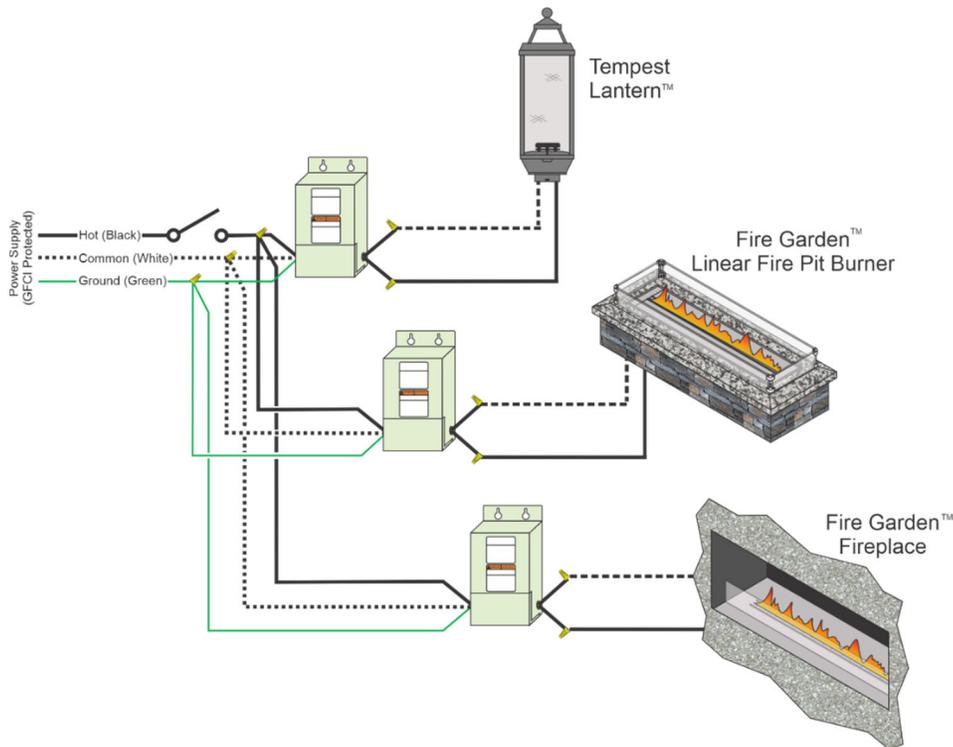


Wiring Multiple Appliances to One Transformer

The manner in which you wire the appliances to the transformer affects the maximum length of wire and wire gauge. Make sure to determine the wire configuration before installation. NOTE: You may use both direct-run and daisy-chain configurations.

Daisy-Chain Example

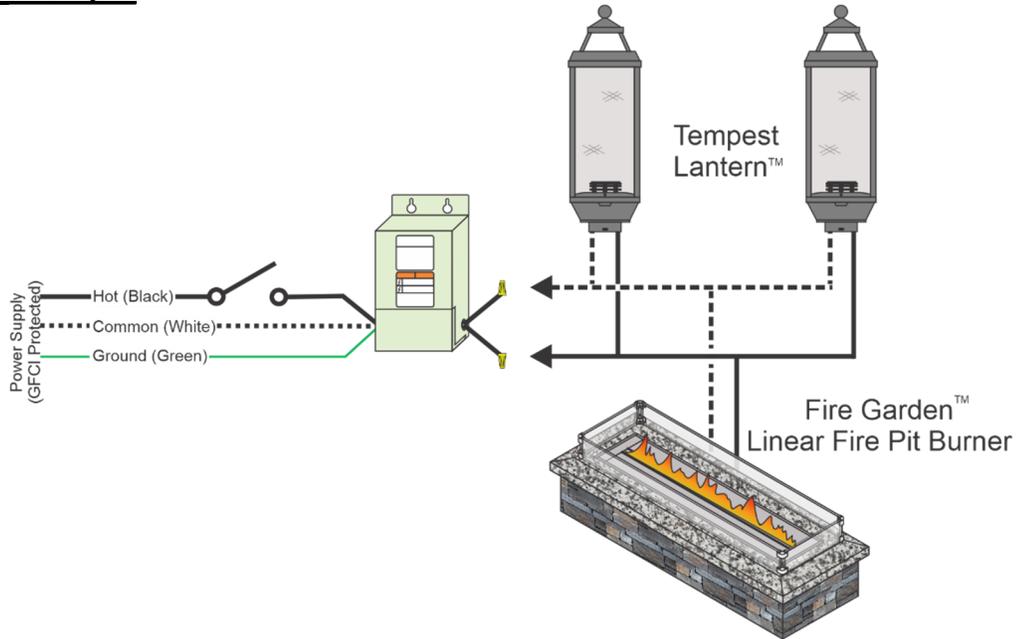

Direct-Run Example

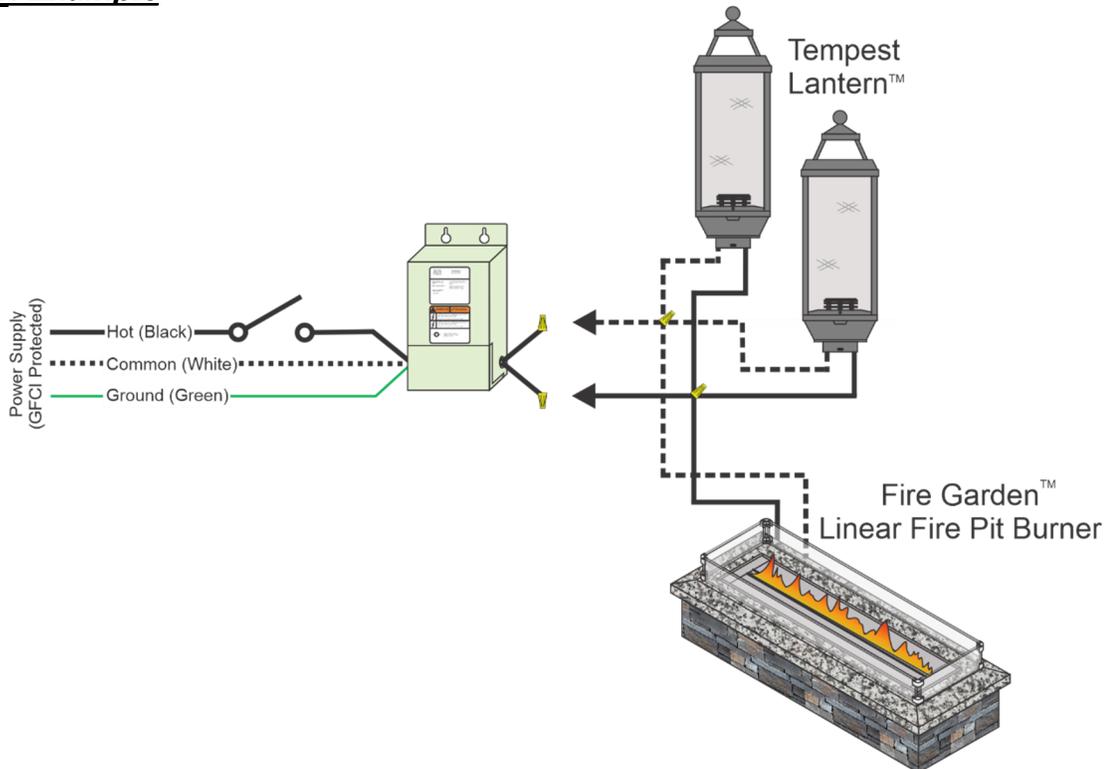


Daisy-Chain Wire Length Chart

This type of wire configuration allows for multiple Travis Industries 24-volt products to be wired in a series, reducing the amount of wire used. Use the charts below to determine the correct wire gauge and length. In the example below, the transformer has 2 Linear Fire Pit Burners and a lantern on one branch.

How to Calculate Wire

Length:

Add together all of the wire length(s) used for the entire installation. If you have one 80' length and three 20' lengths, your wire length would be 140'.

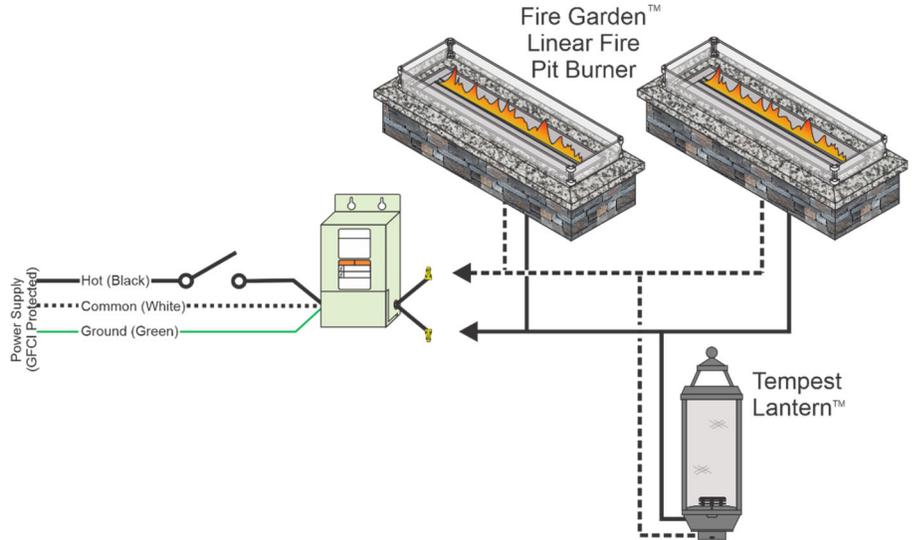

24 Volt Lead

Wire		# of appliances on branch				
		2	3	4	5	6
14 GA	min	0'	0'	0'	0'	0'
	max	113'	71'	49'	37'	28'
12 GA	min	0'	0'	0'	0'	0'
	max	173'	108'	75'	55'	43'
10 GA	min	0'	0'	0'	0'	0'
	max	266'	165'	115'	85'	65'

26 Volt Lead*

Wire		# of appliances on branch				
		2	3	4	5	6
14 GA	min	27'	10'	1'	0'	0'
	max	184'	118'	85'	65'	51'
12 GA	min	41'	16'	2'	0'	0'
	max	281'	179'	129'	99'	79'
10 GA	min	63'	23'	3'	0'	0'
	max	432'	276'	198'	151'	121'


28 Volt Lead*

Wire		# of appliances on branch				
		2	3	4	5	6
14 GA	min	104'	62'	40'	27'	19'
	max	242'	157'	113'	88'	71'
12 GA	min	160'	94'	61'	41'	28'
	max	369'	238'	173'	134'	108'
10 GA	min	245'	144'	93'	63'	43'
	max	566'	366'	266'	206'	165'

* Not available on some transformers.

Direct-Run Wire Length Chart

This type of wire configuration allows for long distances between the transformer and the appliances (see illustration below). Use the charts below to determine the correct wire gauge and length.

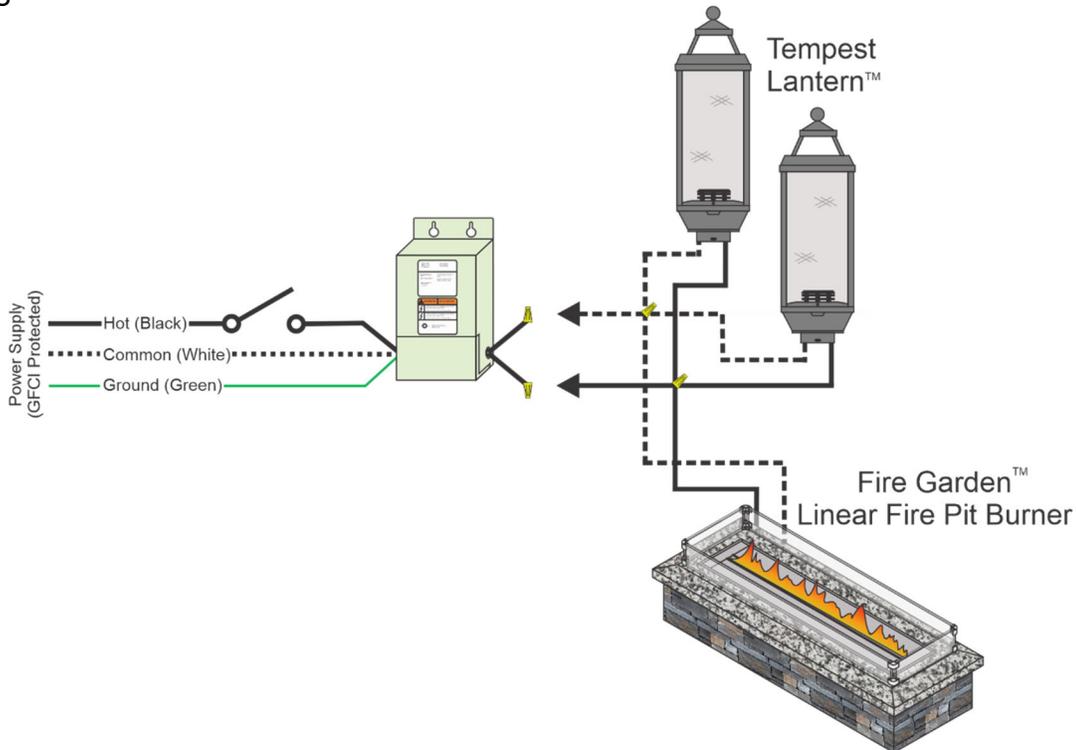

24 Volt Lead

Wire		
14 GA	min	0'
	max	242'
12 GA	min	0'
	max	369'
10 GA	min	0'
	max	566'

26 Volt Lead*

Wire		
14 GA	min	79'
	max	384'
12 GA	min	120'
	max	584'
10 GA	min	184'
	max	897'

28 Volt Lead*

Wire		
14 GA	min	234'
	max	499'
12 GA	min	356'
	max	760'
10 GA	min	548'
	max	1168'

* Not available on some transformers.

Wiring Examples:

Daisy-Chain Installations:

- When using 3 appliances on one branch, 14 ga wire, and 150' of wire, use the 28V Lead.
- When using 4 appliances on one branch, 10 ga wire, and 100' of wire, use the 24V Lead.

Direct Run Installations:

- When using an appliance on a 200' run, 14 ga wire, use the 24V Lead.
- When using 6 appliances, each on a 200' run, 14 ga wire, use the 24V Lead.

How to Determine Wire Gauge: When purchasing your wire, it should include a wire gauge (the larger the number, the smaller the diameter wire). The wire will also be printed with a gauge number (e.g. AWG#14 = 14 gauge, 10AWG = 10 gauge, etc.). Do not use wires of dissimilar gauges (do not use 14 gauge & 10 gauge wire on the same transformer).

Steps for Finalizing the Installation

1. If using propane (LP) gas, convert the appliance (prior to installing the crushed glass).
2. We recommend you purge the gas line at this time.
3. Leak test all gas joints.
4. Install the burner (if removed for converting to LP gas).
5. Install the crushed glass or Tumbled Stone media.
6. Test burn the appliance.
7. Apply finish material to the enclosure.
8. Assemble the glass wind guard (do not install the wind guard until the last step).
9. Install the glass wind guard.

Crushed Glass Installation

Crushed glass is placed over the burners and center media trays. Use only ¼" crushed glass from Travis Industries and/or other media specifically approved by Travis Industries.

Placing Crushed Glass on the Burner and Center Media Trays

Glass Quantity Needed	36" Linear Fire Pit Burner	15 lbs. (6.8kg)
	60" Linear Fire Pit Burner	25 lbs. (11.34 kg)
	72" Linear Fire Pit Burner	30 lbs. (13.6kg)
	96" Linear Fire Pit Burner	35 lbs. (15.88 kg)
	120" Linear Fire Pit Burner	50 lbs. (22.64 kg)


**1 Level Cup (8 fl. oz.) (240ml) = 0.95 lbs.
So...1 Slightly Rounded Cup = 1 lb.**



Determine the amount of glass needed for the Linear Fire Pit Burner being installed. Set this glass aside in portions to allow for an even amount of glass to be placed over the surface of the burner and media tray.

NOTE: It is better to install too little glass than too much.

- (a) Open up a bag of crushed glass and pour it evenly onto the burner and media trays. Use a brush or glove to evenly distribute the glass over the surface.

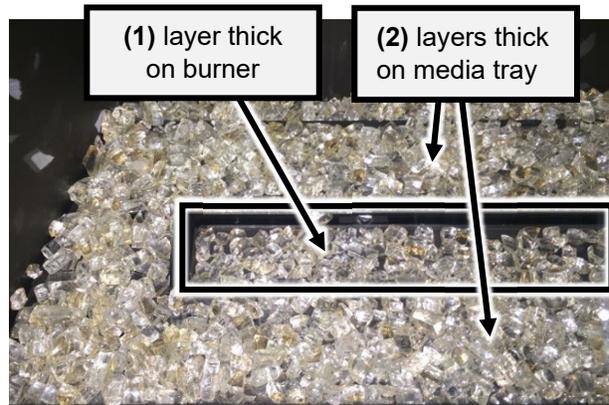

- (b) Spread an even layer of crushed glass over the media tray and burner. The glass must be only (1) layer thick on the burner but can be (2) layers thick on the media tray. Excessive glass placed on the burner may cause poor burn characteristics and can lead to sooting and/or delayed ignitions.

Tumbled Stone Installation


Tumbled Stone may be placed over the burners and media trays. Only use the Tumbled Stone media kit from Travis Industries. The amount of stone indicated on the chart below refers to the small stones used to cover the burner and media tray. Large stones may be placed anywhere over the media tray but should not be installed over the burner and are not included in the recommended weights in the chart below.

Placing Tumbled Stone on the Burner and Media Trays

Tumbled Stone Quantity Needed	36" Linear Fire Pit Burner	30 lbs. (13.61 kg) small & 20 lbs. large (9.07 kg)
	60" Linear Fire Pit Burner	50 lbs. (22.68 kg) small & 20 lbs. large (9.07 kg)
	72" Linear Fire Pit Burner	60 lbs. (27.22 kg) small & 40 lbs. large (18.14 kg)
	96" Linear Fire Pit Burner	80 lbs. (36.29 kg) small & 40 lbs. large (18.14 kg)
	120" Linear Fire Pit Burner	100 lbs. (45.36 kg) small & 40 lbs. large (18.14 kg)

NOTE: We recommend painting the burner and media tray with black high temperature stove paint prior to installing the stones in order to disguise the stainless steel so it is not as noticeable between the stones.

- Determine the amount of small stones needed for the appliance being installed. Distribute the stones to disguise the stainless steel. The stones may be placed in a double layer over the media tray but should be only a single layer over the burner.
- Large stones may be placed anywhere on the media tray that is aesthetically pleasing but should not be placed over the burner.

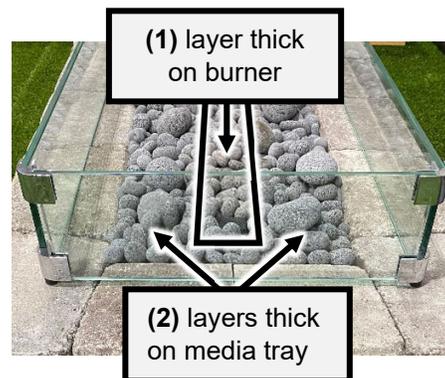

Assembling the Glass Wind Guard (36" and 60" units)

The fire pit wind guard must be used for all fire pit installations. The wind guard consists of the following parts:


- (4) top brackets
- (4) bottom brackets with rubber feet
- (2) glass end panels
- (2) glass side panels

Assemble the wind guard following the steps below.

NOTE: Assemble the wind guard assembly on a flat surface and use (2) people to lift it assembled wind guard and set it in place around the linear burner.


1. Lay the glass panels out on cardboard or another soft surface that can support the full length and width of the glass and protect them.

2. Attach the (2) top and (2) bottom brackets as shown to the right (the bottom brackets have rubber feet on them, the top brackets do not). Use a standard screwdriver to secure the brackets to the glass panel (Take care not to overtighten). Repeat this step with the second end piece of glass.

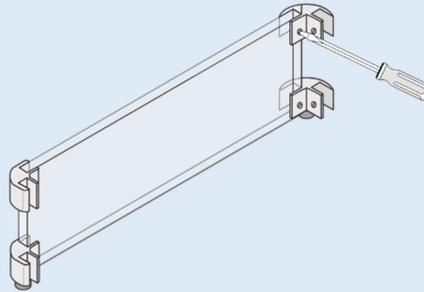


3. Slide the end panels onto the properly oriented side panels and secure the brackets to the glass as shown to the right.

NOTE: There are Fire Garden logos on the side pieces of glass. The logos should be in the lower right corner when the glass is oriented properly.

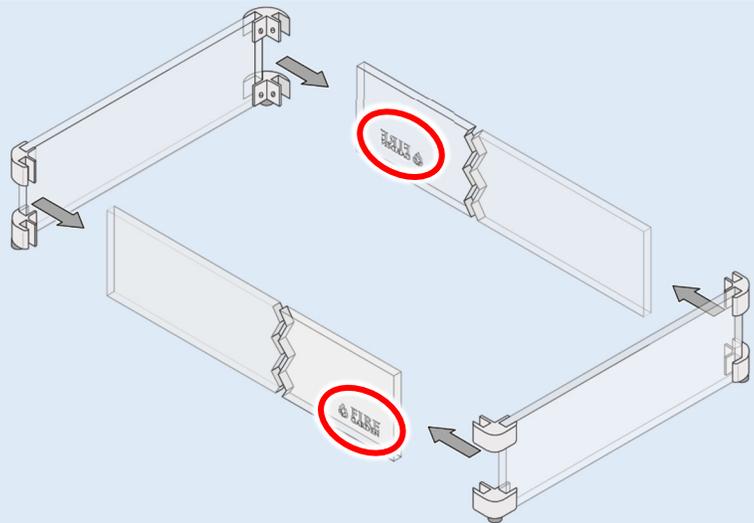

4. When all the clamps are secure use (2) people to lift the assembly and place it on the finish material around the Linear Fire Pit Burner. Measure the distance from the edges of the pit to the edges of the glass to ensure that it is centered.

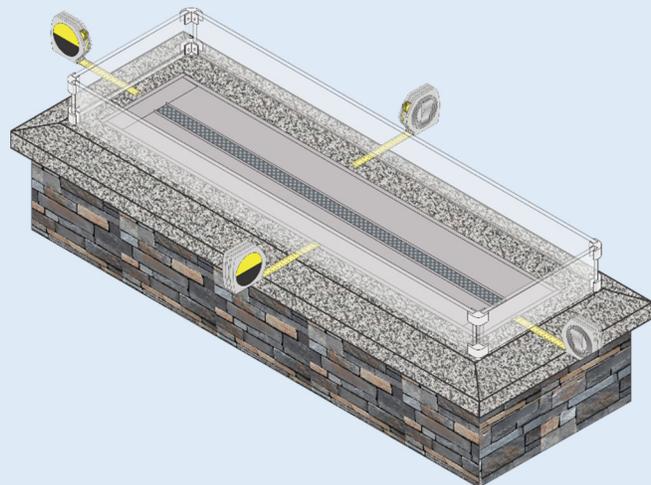

Assembling the Glass Wind Guard (72", 96" & 120" units)

The fire pit wind guard must be used for all fire pit installations. The wind guard consists of the following parts:


- (4) top corner brackets
- (4) bottom corner brackets with rubber feet
- (2) top middle brackets
- (2) bottom middle brackets with rubber feet
- (2) glass end pieces
- (2) glass side pieces with Fire Garden logos
- (2) glass side pieces without logos.

Assemble the wind guard following the steps below.


NOTE: Assemble the wind guard assembly on a flat surface and use (2) people to lift it assembled wind guard and set it in place around the linear burner.

1. Lay the glass panels out on cardboard or another soft surface that can support the full length and width of the glass and protect them.

2. Attach the (2) top and (2) bottom corner brackets as shown to the right (the bottom brackets have rubber feet on them, the top brackets do not). Use a standard screwdriver to secure the brackets to the glass panel (Take care not to overtighten). Repeat this step with the second end piece of glass.

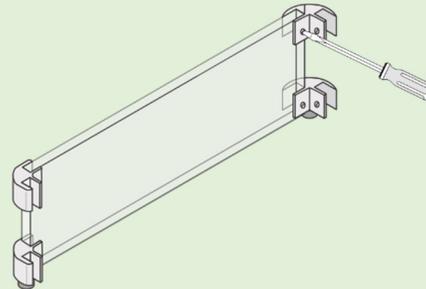


3. Attach the (2) top and (2) bottom middle brackets as shown to the right (the bottom brackets have rubber feet on them, the top brackets do not). Use a standard screwdriver to secure the brackets to the glass panel (Take care not to overtighten). Repeat this step with the second end piece of glass.

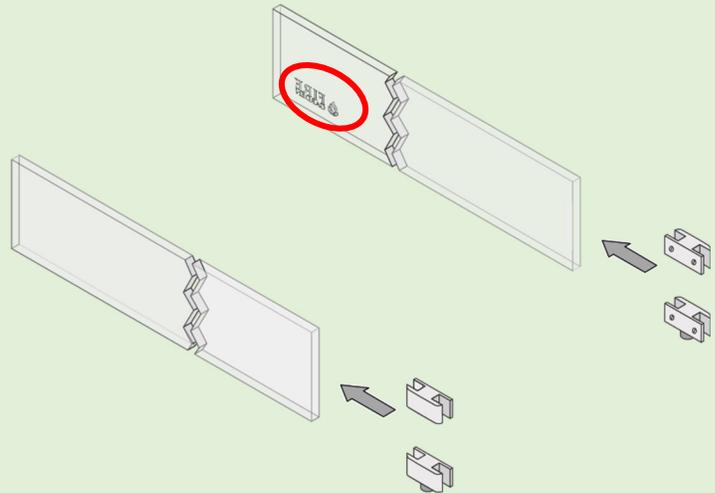

NOTE: There are Fire Garden logos on (2) of the (4) side pieces of glass. For this step, Make sure to use one with the logo and one with no logo. When installing the brackets on the glass panel with the logo, make sure that the brackets are on the opposite end from the logo (see illustration to the right).


4. Place the side glass panels from the previous step into the corner brackets previously installed onto one of the end panels. Use a standard screwdriver to secure the brackets to the glass panel (Take care not to overtighten). Repeat this step with the second end piece of glass.

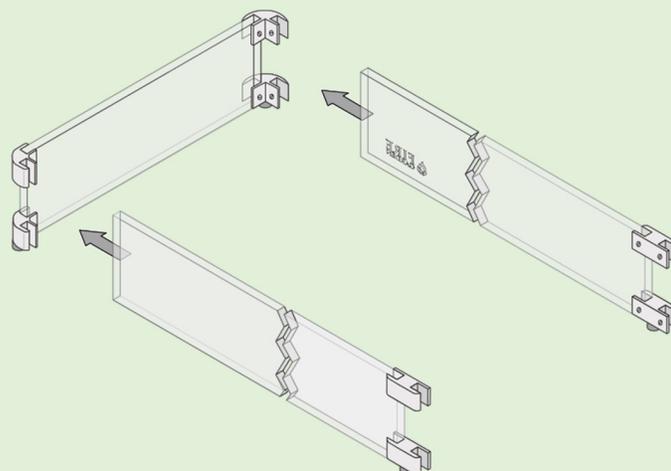


NOTE: Make sure the logo is readable when looking at the outside of the wind guard.

5. Repeat the step above with the (2) side panels without the middle brackets and the other end panel.


NOTE: Make sure that the logo is on the opposite side as the one in the previous step and is readable when looking at the outside of the wind guard.

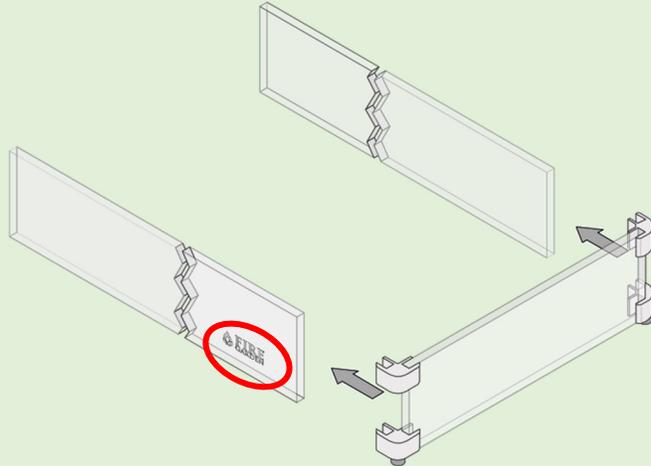

6. Put the (2) halves of the wind guard together and secure them by tightening the set screws on the center brackets. Make sure not to overtighten the screws.

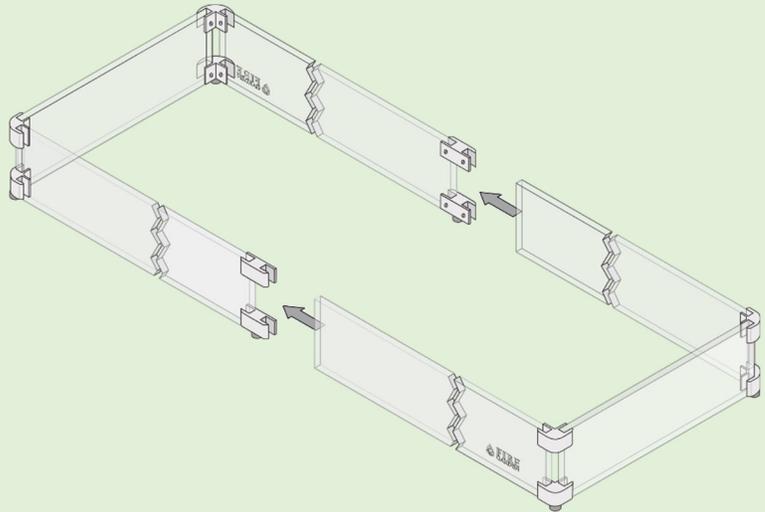

6. When all the clamps are secure use (2) people to lift the assembly and place it on the finish material around the Linear Fire Pit Burner. Measure the distance from the edges of the pit to the edges of the glass to ensure that it is centered.

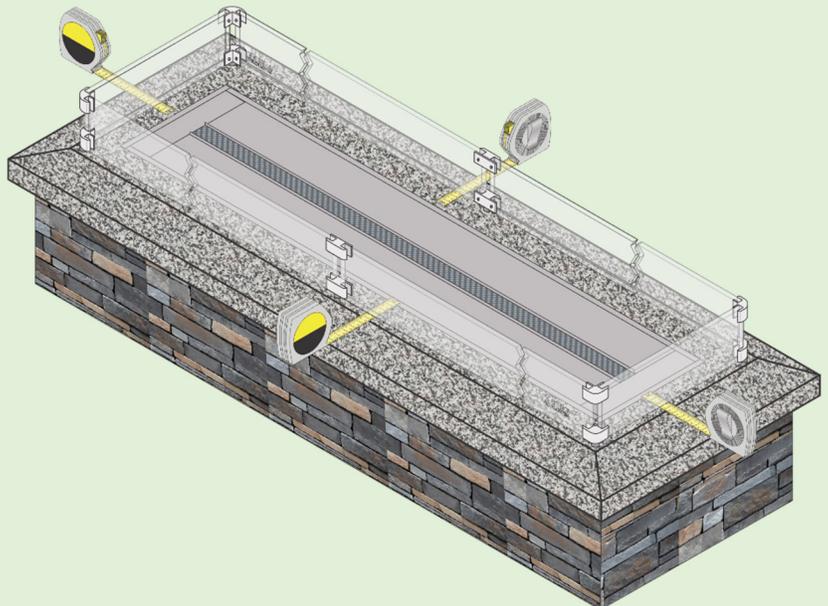

Before the First Fire

- ! Read this entire manual before you use your new appliance, especially the section "Safety Precautions" on page 4. Failure to follow the instructions may result in property damage, bodily injury, or even death.
- ! Remove any cover from the appliance prior to operation.
- ! Inspect the appliance to make sure it is free of debris or objects that may have fallen into the appliance prior to operation.
- ! Inspect the appliance, burner, and supply lines for any damage prior to operation. The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. Use only Travis Industries replacement burners.
- ! It may be difficult to see the burner operating in direct sunlight.

Operating Instructions

WARNING: This gas appliance is automated; it runs off an electric ignition system and may not be lit with a lighter or matches.

How your appliance works

Ignition

When you switch the appliance on, electrical power is supplied to the control module, starting the ignition sequence. During ignition, the igniter will heat up. Gas is then turned on to the appliance. The appliance will ignite, and the thermopile will signal the control module that the appliance is lit, and the igniter will then turn off.

NOTE: In rare cases, the appliance will fail to light. In these cases, the appliance will wait 30 seconds, then re-start the 30-second ignition sequence. The control module will try to restart the appliance a total of 3 times. If it fails to light after three tries, the appliance will then shut off. To re-start, turn the switch off, wait 5 minutes, then turn the switch on.

Appliance in Operation

The appliance, once lit, will stay lit until the switch is turned off. If the gas flow is interrupted, or if wind blows out the flame, the fireplace will start the 1-1/2 minutes (90 second) ignition sequence.


Safety Circuit

Each appliance has a built-in safety circuit that only allows gas to flow during the ignition sequence and when the appliance is lit. This prevents gas buildup. The safety circuit relies upon a thermopile to keep the gas valve open. If the flame goes out the control module will shut the gas off, then try to relight the appliance. Your appliance can not be operated manually if a problem persists consult the troubleshooting guide (pg. 45) and call a qualified service technician if needed.


Location of Controls

- Use the wall switch to supply power to the appliance. The appliance will automatically light when power is supplied (The location of the switch is specific to your installation).


Off

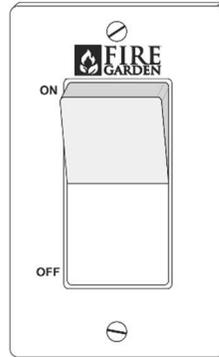

On

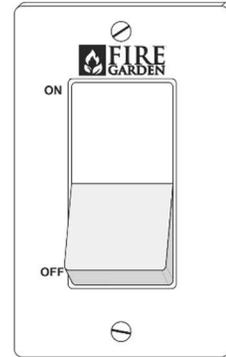

- If the wall switch will be located where it is not protected from precipitation, it must be installed in a weather resistant enclosure (not included).

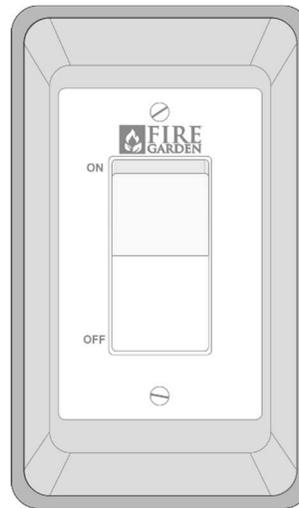

Maintaining Your Appliance

! **Failure to inspect and maintain may lead to malfunctioning of the appliance and potentially dangerous situations.**


- Inspect the appliance prior to each use.
- Keep the appliance clean and remove any debris that collects in or on the appliance. Inspect for spiders and insects, they may clog burner ports or air inlets and need to be removed before using.
- Have the appliance inspected by a qualified service technician annually.
- The stainless steel burner top will discolor – this is normal.

Your appliance is designed to be easily cleaned and maintained. The most common maintenance that your appliance will require is cleaning the glass wind guard. Clean with glass cleaner or warm soapy water. The wind guard glass on the appliance is tempered and designed for safety. If the glass breaks it will shatter into small square pieces similar to a car window. It is special glass and if you break one or need to replace a piece of glass, use only 3/8" thick tempered glass supplied by your Fire Garden™ dealer.

Glass Cleaning

The appliance must be completely cool before cleaning the glass.

The glass may be cleaned with a non-abrasive cleaner. To clean the inside of the glass, remove the glass, place it on a non-scratching surface, and clean the inside surface.

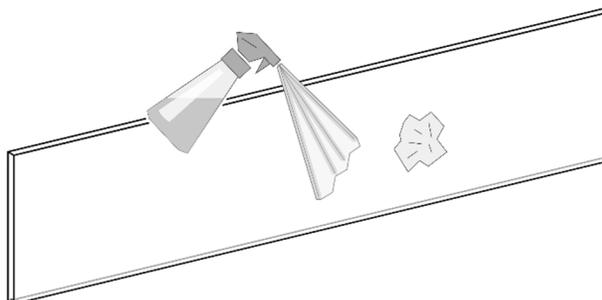

Accessing Components

! WARNING !

Disconnect power before attempting maintenance or repair.


The gas valve and electrical components are located under the burner tray. To access the components, follow the steps below.

Removing the Media Trays



- Remove the glass wind guard and all the crushed glass media (if already installed).



- Remove the (4) 1/4" screws that secure the media tray ends to the media tray sides (2 on each end). Lift the media tray end pieces out of the appliance and set them aside for reinstallation.

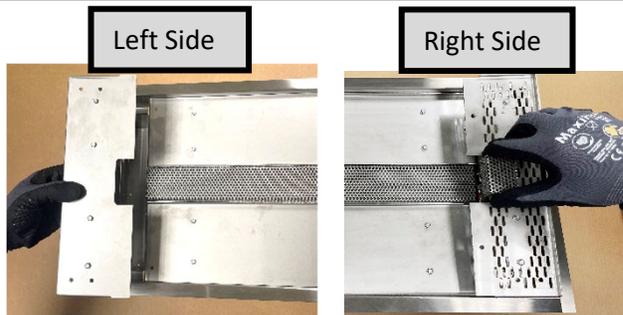


- Remove all the screws from the media tray(both sides) and remove the trays.

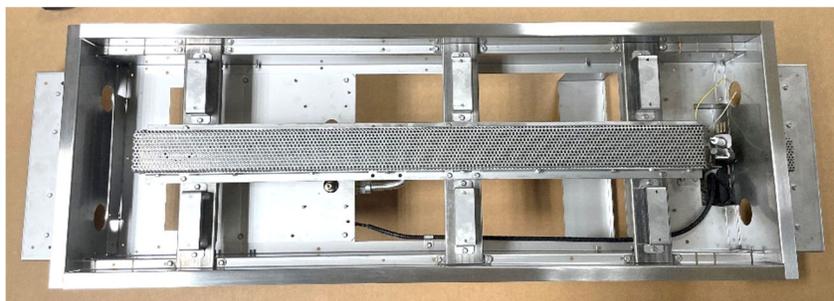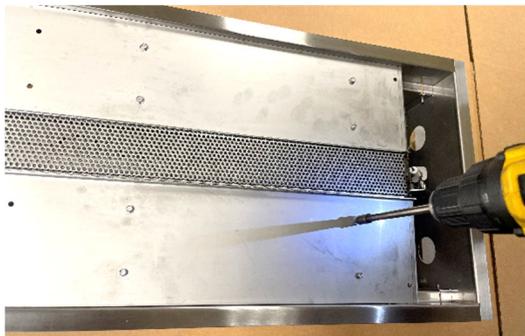

Accessing the Pressure Tap


NOTE: If you are accessing the pressure tap to take a manifold pressure reading only, it is now accessible and you do not need to remove the rest of the burner. **If you are trying to gain access to the other components, skip this step and proceed to the next section.**

- Locate the pressure tap shown to the right. It is approximately in the center of the appliance.
- Use a manometer to test the gas manifold gas pressure.

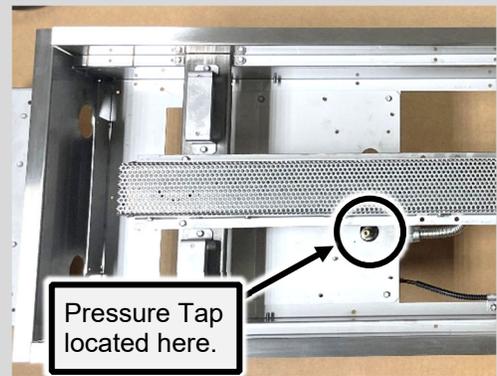
**Removing the Burner**

NOTE: If you are accessing the gas or electrical connections you do not need to remove anything else on the top portion of the burner tray. **If you are trying to gain access to the orifice(s) to convert the appliance to LP gas, follow the steps below.**


- Remove the screws that secure the burner to the tray assembly (8 for a 36", 12 for a 60", 16 for a 72", 20 for a 96" & 24 for a 120" appliance). Set screws aside for reinstallation.

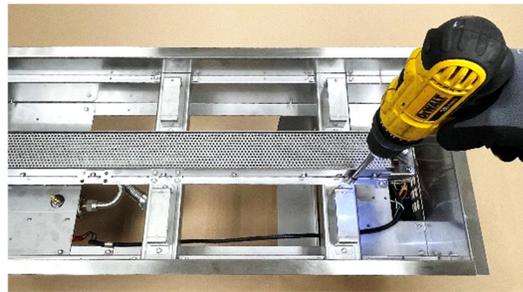

- Lift the burner out of the appliance and set it aside for reinstallation.

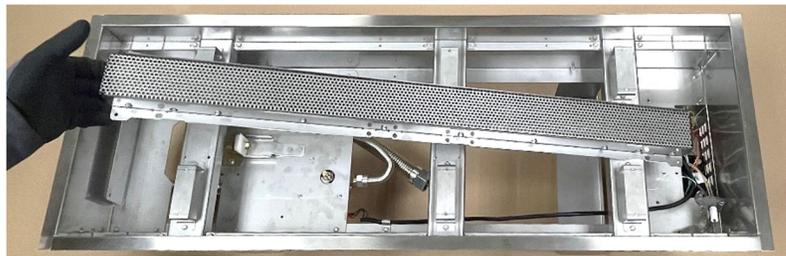**Accessing Pilot Components**

- Remove the (2) 1/4" screws that secure the media tray end to the media tray sides. Lift the media tray end piece out of the appliance and set it aside for reinstallation.

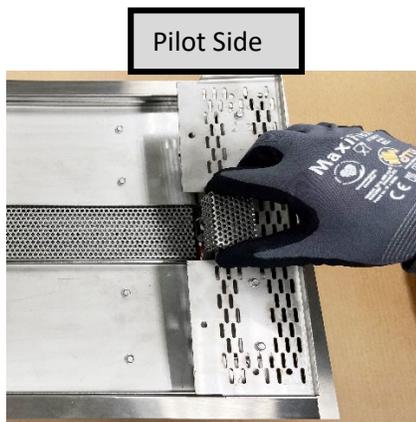

- Use an 11/32" nut driver to remove the nut that secures the thermopile and a 1/4" nut driver to remove the nut that secures the ignitor. Disconnect the component wires from the control module and remove them from the appliance.



- Once maintenance or testing of components is complete, follow the above steps in reverse to return the appliance to its proper configuration.


Winterizing the Appliance

! WARNING !

THE GAS MUST BE TURNED OFF IF A COVER IS INSTALLED ON THE APPLIANCE.

In areas where the appliance may not be used in winter, or for an extended period, you may wish to cover the appliance. If a cover is used, you **MUST** shut off gas to the appliance. This will ensure the appliance is not accidentally turned on or started with debris or snow inside the appliance.

Failure to turn off the gas when the appliance is covered can create a severe safety hazard and may result in property damage, personal injury, or loss of life.

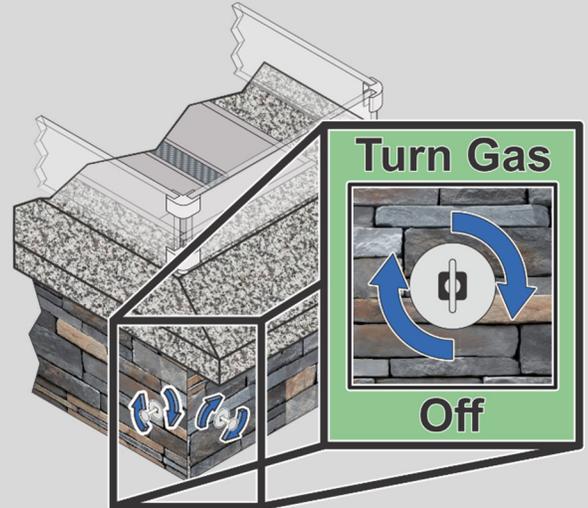

Yearly Service Procedure

DANGER HIGH VOLTAGE: Disconnect power before attempting maintenance or repair.

- Failure to inspect and maintain the appliance may lead to improper combustion and a potentially dangerous situation. We recommend the following procedures be done by a qualified technician.

THIS APPLIANCE IS NOT USER SERVICEABLE: Contact your dealer for service.

Pilot Service


Shut off the gas to the appliance and let it cool for 15 minutes. Remove crushed glass. If excessive sooting is found, the appliance will require adjustment. Contact your dealer.

Inspect the burner and remove any debris.

- Make sure the burner is not warped, cracked, or damaged.
- Check the firebox and area around the pilot to make sure there is no warping or damage.
- If any problem is found, discontinue use and contact your dealer for service.
- Replace the crushed glass.

Check the gas control valve and the gas lines. If damage is found, discontinue use and contact your dealer for service.

Start the main burner. After 15 minutes, the flames should be orange/yellow. If the appliance is not burning correctly, contact your dealer for service. If the igniter is not getting hot or lighting the appliance properly contact your dealer for service.

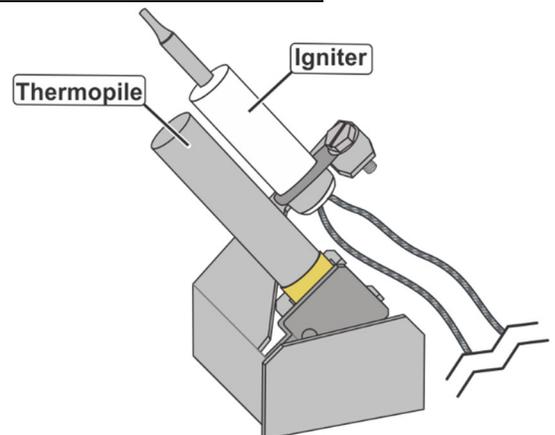

Replacement Parts List

Caution: Use only Travis Industries replacement parts. Do not use substitute materials.

Warning: Do not operate the appliance with the glass wind guard removed, cracked, or broken. Replacement of the glass should be done by a licensed or qualified service person.

Replacement Parts	
36" Linear Burner – WIND GUARD GLASS - FRONT/REAR - 38-7/8" x 6" (Qty 1)	250-05774
60" Linear Burner - WIND GUARD GLASS - FRONT/REAR - 62-7/8" x 6" (Qty 1)	250-05708
72" Linear Burner - WIND GUARD GLASS - FRONT/REAR - 37-1/4" x 6" <u>NO LOGO</u> (Qty 1)	250-06437
72" Linear Burner - WIND GUARD GLASS - FRONT/REAR - 37-1/4" x 6" <u>WITH LOGO</u> (Qty 1)	250-06436
96" Linear Burner - WIND GUARD GLASS - FRONT/REAR - 49-1/8" x 6" <u>NO LOGO</u> (Qty 1)	250-06199
96" Linear Burner - WIND GUARD GLASS - FRONT/REAR - 49-1/8" x 6" <u>WITH LOGO</u> (Qty 1)	250-06198
120" Linear Burner - WIND GUARD GLASS - FRONT/REAR - 122-7/8" x 6" <u>NO LOGO</u> (Qty 1)	250-06020
120" Linear Burner - WIND GUARD GLASS - FRONT/REAR - 122-7/8" x 6" <u>WITH LOGO</u> (Qty 1)	250-05973
WIND GUARD GLASS - SIDE - 14-7/8" x 6" (Qty 1)	250-05707
GAS CONTROL VALVE	250-05704
THERMOPILE	250-04550
IGNITER	250-04549
CONTROL MODULE	250-05703
BURNER ORIFICE - (#29)	250-05772
BURNER ORIFICE - (#30)	250-04091
BURNER ORIFICE - (#41)	250-04625
BURNER ORIFICE - (#43)	250-00398
WALL SWITCH	250-00778
WALL SWITCH COVER PLATE	250-05821

Contact your local Fire Garden™ dealer to purchase replacement parts.

Troubleshooting Table

Problem:	Possible Cause:	Don't Call for Service Until You:
Appliance Does Not Light and igniter does not Glow Red	<ul style="list-style-type: none"> • Electrical Power Off • Igniter burned out • Burner or burner orifice may be dirty or blocked 	<p>Verify power is on and check the circuit breaker or GFCI.</p> <p>Replace Igniter</p> <p>Contact your dealer for details on removing any debris (spider webs, etc.) from the burner and orifice area.</p>
Appliance Does Not Light and Igniter Glows Red	<ul style="list-style-type: none"> • Gas is Off • Not enough electrical current to the appliance 	<p>Turn Gas On (check shut-off valve)</p> <p>Voltage must be checked with power draw (appliance in startup)</p>
Appliance Lights During Ignition Sequence then Goes Out During Normal Operation	<ul style="list-style-type: none"> • Dirty Air Channel or Burner • Thermopile has worn out 	<p>Remove the glass and clean soot from burner, and any air channels. If problem persists, contact the dealer for service.</p> <p>Replace thermopile</p>
Flames are too short	<ul style="list-style-type: none"> • The gas supply pressure to the appliance is too low. 	<p>Depleted LP cylinder.</p> <p>Gas supply lines or gas regulators do not have enough capacity. This may be due to other appliances in the house using up the available capacity, e.g., pool heaters, furnaces, hot water tanks, etc.</p>
Glass is Sooting	<ul style="list-style-type: none"> • Burner or burner orifice may be dirty or blocked • Windy Condition 	<p>Contact your dealer for details on removing any debris (spider webs, etc.) from the burner and orifice area.</p> <p>Wind will influence the flame quality and, if persistent, may lead to sooting on the glass.</p>

Limited Warranty

Register your TRAVIS INDUSTRIES, INC. Limited 7 Year Warranty online at traviswarranty.com. TRAVIS INDUSTRIES, INC. warrants this gas appliance (appliance is defined as the equipment manufactured by Travis Industries, Inc.) to be defect-free in material and workmanship to the original purchaser from the date of purchase as follows:

Check with your dealer in advance for any costs to you when arranging a warranty call.
Mileage or service charges are not covered by this warranty. This charge can vary from store to store.

Warranty Period				Component
90 Days.		1 yr.		
Parts	Labor	Parts	Labor	
✓	✓	✓	✓	Burner Assembly Burner Pan Assembly, Main Burner Orifice
✓	✓			Electrical Assembly (within appliance structure) Wire harness, Transformer (sku# 94800830 if purchased with the appliance)
✓	✓			Gas Control Assembly Solenoid, Ignition control module, Hot surface igniter, Thermopile
✓	✓			Accessories Wind Guard Glass (Thermal shock only)
✓	✓			One-Way Freight Allowance One-way freight allowance on pre-authorized repair done at the factory is covered.
✓				All replacement parts purchased beyond the warranty period


CONDITIONS & EXCLUSIONS

- This new gas appliance must be installed by a qualified gas appliance technician. It must be installed, operated, and maintained at all times in accordance with the instructions in the Owner's Manual. Any alteration, willful abuse, accident, neglect, alteration, misapplication, or misuse of the product shall nullify this warranty.
- This warranty is non-transferable and is made to the ORIGINAL purchaser, provided that the purchase was made through an authorized TRAVIS dealer.
- Discoloration and some minor expansion, contraction, or movement of certain parts and resulting noise, is normal and not a defect and, therefore, not covered under warranty. The installer must ensure the appliance is burning as per the rating tag at the time of installation. Overfiring (operation above the listed BTU rate) of this appliance can cause serious damage and will nullify this warranty.
- This warranty does not cover damage to the finish, such as scratches, dents, discoloration, rust, or other weather damage, after purchase.
- Travis Industries will not be responsible for inadequate performance caused by environmental conditions such as nearby trees, buildings, rooftops, wind, hills, or mountains, or other influences from mechanical systems such as fans, etc.
- This Warranty is void if:
 - The unit has been operated in atmospheres contaminated by chlorine, fluorine, or other damaging chemicals.
 - The unit is subject to submersion in water.
- Exclusions to this warranty include: injury, loss of use, damage, failure to function due to accident, negligence, misuse, improper installation, alteration or adjustment of the manufacturer's settings of components, lack of proper and regular maintenance, damage incurred while the appliance is in transit, alteration, or act of God.
- This warranty excludes damage caused by normal wear and tear, such as discoloration. Also excluded is damage to the unit caused by abuse, improper installation, modification of the unit, drilling of the orifices, or the use of fuel other than that for which the unit is configured. Units are shipped for either natural gas or propane. Confirm fuel configuration with your installer.
- Damage to stainless steel surfaces caused by fingerprints, scratches, melted items, or other external sources left on the stainless steel from the use of cleaners is not covered in this warranty.
- TRAVIS INDUSTRIES, INC. is free of liability for any damages caused by the appliance, as well as inconvenience expenses and materials. Incidental or consequential damages are not covered by this warranty. In some states, the exclusion of incidental or consequential damage may not apply.
- This warranty does not cover any loss or damage incurred by the use or removal of any component or apparatus to or from the gas appliance without the express written permission of TRAVIS INDUSTRIES, INC., and bearing a TRAVIS INDUSTRIES, INC. label of approval.
- Any statement or representation of TRAVIS products and their performance contained in TRAVIS advertising, packaging literature, or printed material is not part of this warranty.
- This warranty is automatically voided if the appliance's serial number has been removed or altered in any way.
- No dealer, distributor, or similar person has the authority to represent or warrant TRAVIS products beyond the terms contained within this warranty. TRAVIS INDUSTRIES, INC. assumes no liability for such warranties or representations.
- Travis Industries will not cover the cost of the removal or re-installation.
- If for any reason any section of this warranty is declared invalid, the balance of the warranty remains in effect and all other clauses shall remain in effect.
- THIS WARRANTY IS THE ONLY WARRANTY SUPPLIED BY TRAVIS INDUSTRIES, INC., THE MANUFACTURER OF THE APPLIANCE. ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, ARE HEREBY EXPRESSLY DISCLAIMED AND PURCHASER'S RECOURSE IS EXPRESSLY LIMITED TO THE WARRANTIES SET FORTH HEREIN.**

IF WARRANTY SERVICE IS NEEDED:

- If you discover a problem that you believe is covered by this warranty, you MUST REPORT it to your TRAVIS dealer WITHIN 30 DAYS, giving them proof of purchase, the purchase date, and the model name and serial number.
- Travis Industries has the option of either repairing or replacing the defective component.
- If your dealer is unable to repair your appliance's defect, he may process a warranty claim through TRAVIS INDUSTRIES, INC., including the name of the dealership where you purchased the appliance, a copy of your receipt showing the date of the appliance's purchase, and the serial number on your appliance. At that time, you may be asked to ship your appliance, freight charges prepaid, to TRAVIS INDUSTRIES, INC. TRAVIS INDUSTRIES, INC., at its option, will repair or replace, free of charge, your TRAVIS appliance if it is found to be defective in material or workmanship within the time frame stated within this warranty. TRAVIS INDUSTRIES, INC. will return your appliance, freight charges prepaid by TRAVIS INDUSTRIES, INC., to your regional distributor, or dealership.

Wiring Diagram

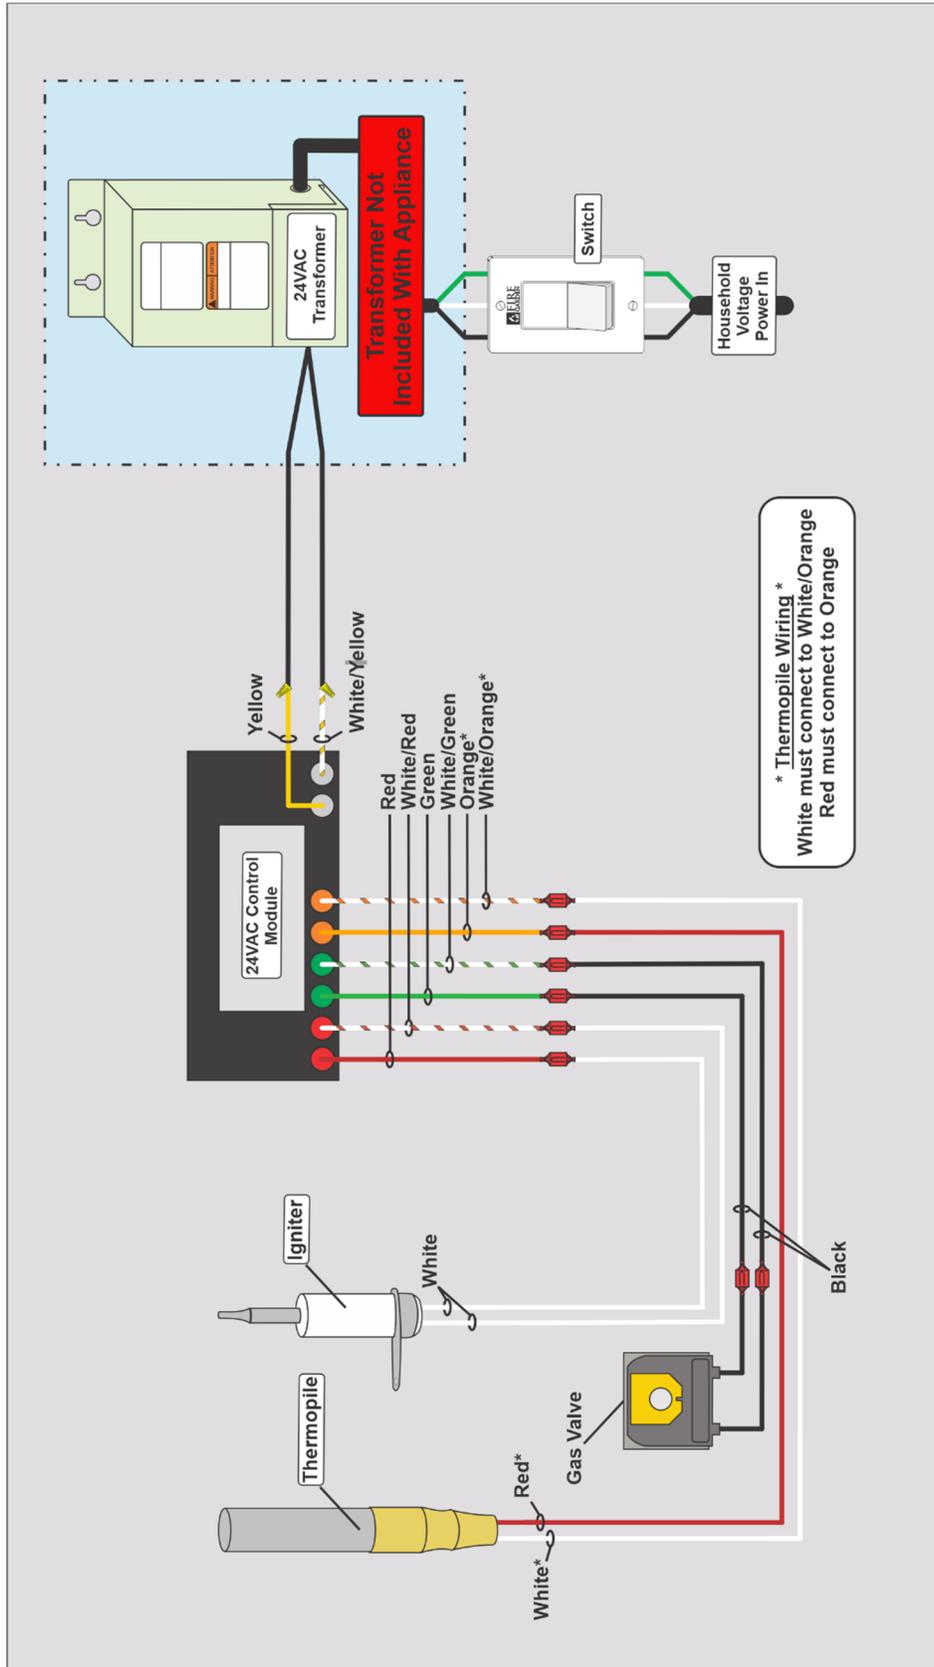

Accessing Components	41	Installation Warnings	9
Additional Items Required	10	Landscaping Block Enclosures	16
Appliance Placement Requirements	13	Location of Controls	39
Appliance Weight	5	LP Conversion	21
Assembling the Burner	11	Maintaining Your Appliance	40
Assembling the Wind Guard	35	Minimum Framing Dimensions	15
Before the First Fire	38	Multiple Appliances to One Transformer	30
Clearances	14	Multiple Transformers to One Switch	29
Crushed Glass Installation	33	Operating Instructions	38
Daisy-Chain Wire Length Chart	31	Packing List	9
Dimensions	6	Recommended Order of Installation	9
Direct-Run Wire Length Chart	32	Replacement Parts List	44
Electrical Connection Requirements	22	Steps for Finalizing the Installation	33
Electrical Specifications	5	Troubleshooting Table	45
Enclosure Ventilation Requirements	18	Tumbled Stone Installation	34
Gas Line Requirements	20	Using More than One 24-volt Appliance	29
Gas Specifications	5	Winterizing the Appliance	43
Glass Cleaning	40	Yearly Service Procedure	43