



Description

The Crestron® CLW-DELVEX-E and CLW-DELVEX-P are Cameo® in-wall ELV dimmers designed for dimming electronic low voltage lighting, supporting lighting loads such as tungsten-halogen, incandescent, and dimmable LED replacement lamps. Versatile and affordable, the CLW-DELVEX-E and CLW-DELVEX-P feature field-replaceable, engravable buttons and can be configured with various button layouts and designer colors.

The CLW-DELVEX-E and CLW-DELVEX-P are functionally identical. For simplicity within this guide, the term “CLW-DELVEX-E/P” is used except where noted.

CLW-DELVEX-E/P Specifications

SPECIFICATION	DETAILS
Load Rating	
Load Type	Incandescent, tungsten-halogen, electronic low voltage transformers for low voltage halogen or LED, electronic CFL, dimmable 2-wire fluorescent ballast, dimmable Edison Screw Base LED
Maximum Load	500 VA/watts*
Minimum Load	25 watts
Power Requirements	120 Vac, 50/60 Hz, line power (A dedicated neutral wire is required.)
Enclosure	1-gang mountable in a 3 1/2 inch (89 mm) deep electrical box; Requires decorator style faceplate (not included)
Environmental	
Temperature	32° to 104°F (0° to 40°C)
Humidity	10% to 90% RH (non-condensing)

* Derating applies for multigang installations. Refer to “Multigang Installations” for more information.

Additional Resources

Visit the product page on the Crestron website (www.crestron.com) or scan the QR code to the right for additional information and the latest firmware updates.



CLW-DELVEX-E



CLW-DELVEX-P

Installation

WARNING: To avoid fire, shock, or death, turn off power at circuit breaker or fuse and test that power is off before wiring!

WARNING: New installations should be checked for short circuits prior to installing a CLW-DELVEX-E/P dimmer. With the power off, close the circuit and then restore power. If the lights do not work, or a breaker trips, check and correct the wiring or fixture (if necessary). Install the dimmer only when the short is no longer present. The warranty is void if the dimmer is installed and operated with a shorted load.

CAUTION: TO REDUCE THE RISK OF OVERHEATING AND POSSIBLE DAMAGE TO OTHER EQUIPMENT, DO NOT INSTALL TO CONTROL A RECEPTACLE, A MOTOR-OPERATED APPLIANCE OR A TRANSFORMER-SUPPLIED APPLIANCE.

ATTENTION: GRADATEURS COMMANDANT UN BALLAST-AFIN DE RÉDUIRE LE RISQUE DE SURCHAUFFE ET LA POSSIBILITÉ D'ENDOMMAGEMENT À D'AUTRES MATÉRIELS, NE PAS INSTALLER POUR COMMANDER UNE PRISE, UN APPAREIL OPÉRÉ DE MOTEUR OU UN APPAREIL ALIMENTÉ PAR UN TRANSFORMATEUR.

NOTES: Observe the following points.

- Codes: Install in accordance with all local and national electrical codes.
- Installation: This product should be installed by a qualified electrician.
- Wiring: Use copper wire only. For supply connections, use wire rated for at least 75°C (167°F)
- Lamp Type: For use with permanently installed incandescent, electronic low voltage halogen or LED, tungsten-halogen, or dimmable CFL only.
- Temperature: For use where temperatures are between 32° to 104°F (0° to 40°C).
- Electrical Boxes: Devices mount in standard electrical boxes. For easy installation, Crestron recommends using 3 1/2 in (89 mm) deep electrical boxes. Several devices can be installed in one electrical box (multigang). This requires derating of the dimming device. For a smooth appearance, one-piece multigang faceplates (not supplied) can be installed.
- Switches: Mechanical 3- or 4-way switches do not work with CLW-DELVEX-E/P dimmers.
- Spacing: If mounting one device above another, leave at least 4 1/2 in (115 mm) vertical space between them.

- Low Voltage Applications: Use with electronic low voltage transformers only.


Do not use any magnetic low voltage transformers.

Operation of a low voltage circuit with all lamps inoperative or removed may result in current flow in excess of normal levels. To avoid transformer overheating and premature transformer failure, Crestron recommends the following:

- > Do not operate low voltage circuits without operative lamps in place.
- > Replace burned-out lamps as quickly as possible.
- > Use transformers that incorporate thermal protection to prevent transformer failure due to overcurrent.

Install the CLW-DELVEX-E/P dimmer.

- Turn the power off at the circuit breaker.
- Wire the device as shown in the following diagram.

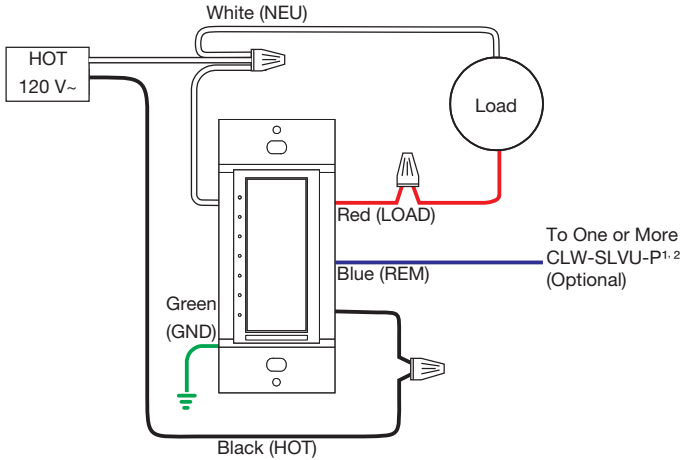


Connection	Wire Gauge	Wire Color
HOT	16 AWG	Black
NEU	16 AWG	White
LOAD	16 AWG	Red
REM	16 AWG	Blue
GND	16 AWG	Green

- Push all power wires back into the electrical box and fasten the device to the electrical box with the provided screws.
- Attach a decorative faceplate.
- Ensure all buttons, including the air-gap switch and program button, actuate without sticking.
- Restore power at the circuit breaker.

Changing the Button Assemblies

The button assembly can be removed and replaced with other button assemblies.


- Remove the button assembly by squeezing the sides of the bezel near the bezel snaps.

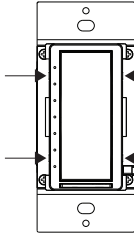

Squeeze at arrow points and pull to remove the button assembly.


NOTE: When the button assembly is removed, power to the unit and load is removed automatically.

- Remove the button from the front of the button assembly.

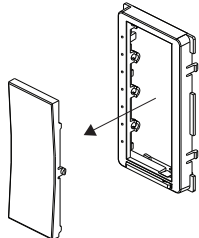


Gently spread the frame apart to remove the buttons.

- Insert the new buttons through the front of the bezel and snap them into place. Ensure that the LED strip is on the left side.

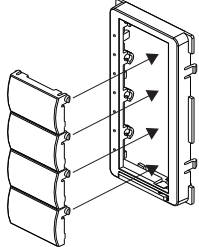


Gently spread the frame apart to insert the buttons.

- Attach the button assembly to the device. Ensure that the LED strip is on the left side.

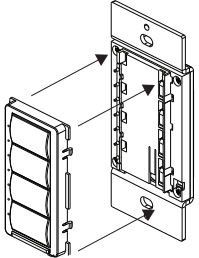

- Once power has been restored, press and hold the program button. After 5 seconds, the LEDs associated with the old button layout begin to flash. Continue to hold the button and proceed to step 6.

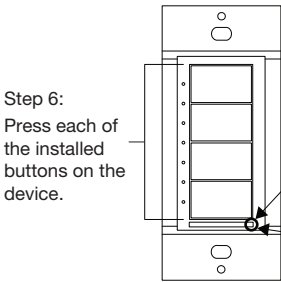

Step 6:
Press each of the installed buttons on the device.

Step 5:
Press and hold the program button.

Step 7:
Release the program button to save the settings.

- While holding the program button, press all of the buttons in the new layout. The LED next to the pressed button lights.

NOTE: If the rocker switch is installed, press the top and bottom of the rocker.

- After all of the buttons have been pressed, release the program button to save the settings.

NOTE: Changing the button configuration alters the device's behavior. Refer to the "Default Button Functions" for details.


Multigang Installations

In multigang installations, several devices are grouped horizontally in one electrical box. For a smooth appearance, one-piece multigang faceplates (not supplied) can be installed.

NOTE: When installing into a multigang box, do not fully tighten devices to the box until the faceplate has been aligned.

The load capacity for each device in the electrical box must be derated. Refer to the following diagrams for derating information.

Derating Information for CLW-DELVEX-E/P Dimmers

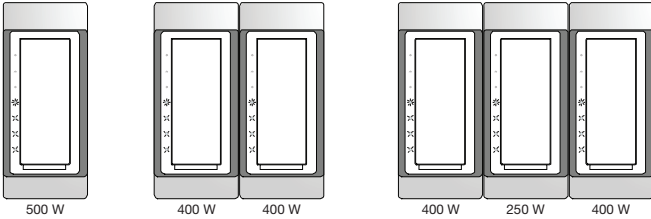

Operation


NOTE: Before using the CLW-DELVEX-E/P, ensure the device is using the latest firmware. Check for the latest firmware for the CLW-DELVEX-E/P at www.crestron.com/firmware. Firmware is loaded onto the device using Crestron Toolbox™.

NOTE: The device may be warm during operation. This is normal.

Basic Operation

The CLW-DELVEX-E/P is shipped with a rocker switch already installed. In this configuration, the unit functions as shown below.

NOTE: Operation described in this guide assumes the CLW-DELVEX-E/P is operating in Local mode (without the use of a control system). The device can also operate in Remote mode, in which button behavior is dictated entirely by the control system program.

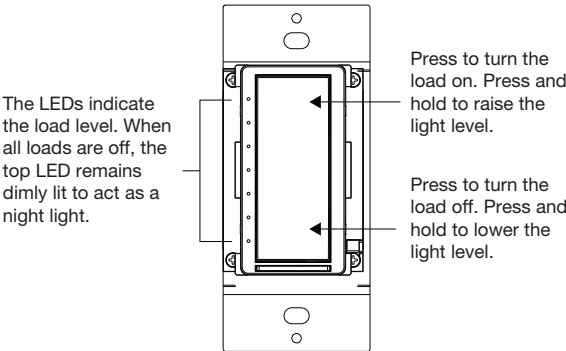

The LEDs indicate the load level. When all loads are off, the top LED remains dimly lit to act as a night light.


Press to turn the load on. Press and hold to raise the light level.

Press to turn the load off. Press and hold to lower the light level.

- CLW-DELVEX-P only.
- For details, refer to the CLW-SLVU-P Installation Guide (Doc. 7364) at www.crestron.com/manuals.

Disconnecting Power

Power to the dimmer and load can be disconnected by pushing on the air-gap switch.

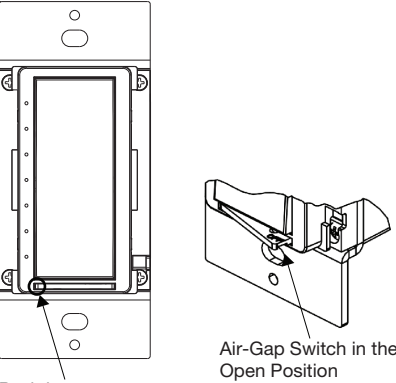

Push here to open the air-gap switch.

NOTE: If the dimmer remains powered after the air-gap is opened, the HOT and DIM terminals have been connected in reverse. Turn off power at the circuit breaker or fuse and adjust the connections.

NOTE: Power to the load is automatically disconnected when the button assembly is removed. For instructions on removing the button assembly, refer to “Changing the Button Assemblies.”

Setting Preset Levels


The CLW-DELVEX-E/P can recall and store up to three presets depending on the installed button configuration.

Set a preset level:

- Adjust the light level to the desired level.
- Enter Programming mode by quickly pressing the program button as shown below. Buttons that are capable of storing a preset will flash their LEDs.

NOTE: Programming mode is disabled when the load is off.
- Press and hold the desired preset button until the LED blinks (approximately two seconds). Release the button to store the new level.

If a button is not pressed, the device exits Programming mode after approximately five seconds.

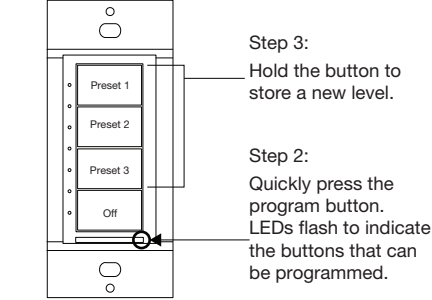


NOTE: A delayed off can be added via control system programming.


Default Button Functions

The figures below illustrate the default functions available for each physical button configuration and press or hold actuation sequence.


Single Button Press

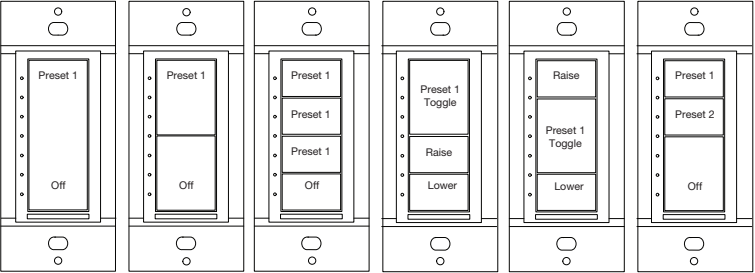

Double Button Press (Press Twice within 1/2 Second)

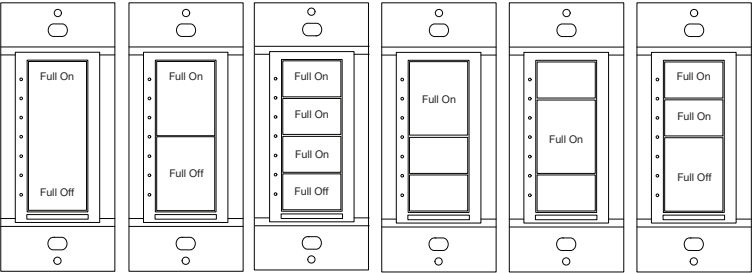

Single Button Press and Hold (Hold for More than 1/2 Second)

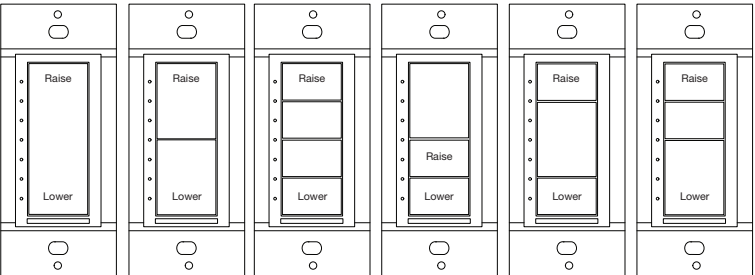

Wireless Communications

The device connects to the Crestron network via the infiNET EX® communications protocol. Use the procedures outlined below to join or leave an infiNET EX network and to verify communications between the device and the control system.

Joining an infiNET EX Network

Before a device can be used in a lighting system, it must first join an infiNET EX network by being acquired by an infiNET EX gateway.

NOTE: A device can be acquired by only one gateway.

- Put the infiNET EX gateway into Acquire mode from the unit itself or from Crestron Toolbox, as described in its manual at www.crestron.com/manuals.

NOTE: In an environment where multiple gateways are installed, only one gateway should be in Acquire mode at any time.
- Place the device into Acquire mode.
 - Tap the top button three times, and then press and hold it down (tap-tap-tap-press+hold) until the top LEDs on the device flash once (this can take up to 10 seconds).
 - Release the button to start the acquire process. The top LED blinks slowly to show that the device is actively scanning the infiNET EX network.
 - The top two LEDs turn on for 5 seconds to show that the device has been successfully acquired to the infiNET EX network.
 - The top LED blinks fast to indicate that the device was not successfully acquired by the infiNET EX network. Press the top button to acknowledge failure to acquire the infiNET EX network. Ensure the gateway is in Acquire mode and within range before attempting the acquire process again.
- Once all devices have been acquired, take the gateway out of Acquire mode. Refer to the gateway’s manual for details.

Leaving an infiNET EX Network

To leave an infiNET EX network, put the device into Acquire mode, as described in “Joining an infiNET EX Network” above, when no gateway is in Acquire mode.

Verifying Communications Status

To check the communications status of the device, tap the top button three times and then press and hold it down (tap-tap-tap-press+hold) for up to 2 seconds. The LED blinks to indicate the communications status. Refer to the following table for details.

LED	COMMUNICATIONS STATUS
Turns on for 5 seconds	The device is communicating with the control system.
Blinks three times	The device is communicating with the gateway, but the gateway is not communicating with the control system.
Blinks twice	The device was previously joined to the network but is not communicating with the gateway.
Blinks once	The device is not joined to the network.

Troubleshooting

The following table provides corrective action for possible trouble situations. If further assistance is required, please contact a Crestron customer service representative.

CLW-DELVEX-E/P Troubleshooting

TROUBLE	PROBABLE CAUSE(S)	CORRECTIVE ACTION
The dimmer does not function.	The dimmer is not receiving line power.	Verify that the power connections are correct and that the circuit breaker is closed.
	The load is not operational (e.g., lamps are burned out).	Verify that the load is operational and that the air-gap switch is closed.
	The device is in Remote mode.	Check the SIMPL program to verify the operating mode.
	The neutral wire is not connected to the dimmer.	Connect a dedicated neutral wire to the dimmer.
The dimmer does not dim to a low level or flickers when dimmed.	The lamps connected may be better suited to an alternate dimming mode.	Switch dimmer to use Alternate Dimming Mode. Contact Crestron Technical Support or refer to Online Help Answer ID 5520.

This product conforms to UL STD 1472; certified to CSA STD C22.2 No. 184.1.



FCC ID: Contains EROCWD6790

Compliance Statement (Part 15.19)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Warning (Part 15.21)

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

RF Exposure (OET Bulletin 65)

To comply with FCC’s RF exposure limits for general population / uncontrolled exposure, this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed at patents.crestron.com.

Crestron, the Crestron logo, Cameo, Crestron Toolbox, and infiNET EX are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. UL and the UL logo are either trademarks or registered trademarks of Underwriters Laboratories, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

This document was written by the Technical Publications department at Crestron.

©2015 Crestron Electronics, Inc.

Crestron Electronics, Inc.
15 Volvo Drive Rockleigh, NJ 07647
Tel: 888.CRESTRON
Fax: 201.767.7576
www.crestron.com

Operations & Installation Guide - DOC. 7334D
(2033164)
04.15

Specifications subject to change without notice.